



# **FUN INDUSTRIES XTREME CHA-CHING™ ASSEMBLY MANUAL**

Thank you for purchasing one of our Cha-Ching™ line of puck drop games. The following pages will help you assemble your new machine and provide you with some promotion ideas. You may call our toll-free number below during normal business hours for technical assistance.



627 15th Ave.  
East Moline, IL 61244  
Toll-free 1-800-747-1144  
Local 309-755-5021  
Fax 309-755-1684

# ASSEMBLY INSTRUCTIONS

1. After opening the crate door (fig. A), carefully slide the machine parts on the top shelf out (fig. B & C) and rest them on the lid of the crate ( fig. D). Make sure to grab the wood when pulling the parts out and not the black plastic filler panels (fig. B).



Fig. A

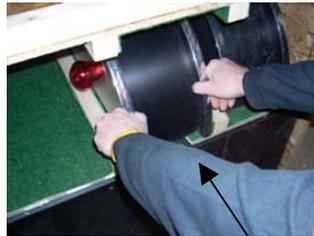


Fig. B

Do Not Grab  
Plastic Filler Panels



Fig. C



Fig. D

2. Grab the base of the main machine through the handle hole cut in the crate shelf (fig. E) and slide the machine just short of being completely out of the crate (fig. F). Now have an assistant help you stand the machine upright (fig.G).



Fig. E



Fig. F



Fig. G

3. Remove the legs from the rear of the machine (fig. H) and attach them to the sides of the unit with 4 screws and washers per leg. Make sure the leg with the round pass through hole is mounted to the side of the machine with the matching hole (fig. I).



Fig. H



Fig. I

Pass Through Hole

4. Have an assistant help you lift the top center section into place on the machine. Position this section so the chasing lights are facing forward. Make sure the section sits down completely into the notches on the main machine, is flush with each end and you do not pinch any wiring (fig.J).



Fig. J

5. Open the rear bottom cabinet door. Use an assistant and stand the left trim section next to the machine, feed the wiring connector into the bottom cabinet through the thru hole in the leg (fig. K) and connect to the matching connector in the machine base (fig. L). Connect the two connectors at the top of the trim section to the two connectors in the top center section (fig. M). Align the side section with the top section and set in place on top of the leg. Attach the left section with 3 screws and washers through the holes in the rear of the machine (fig. N). Also attach 2 screws and washers to the top section before continuing.



Fig. K

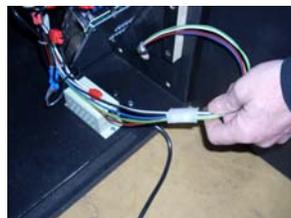


Fig. L



Fig. M



Fig. N

6. Your machine should now resemble figure “O”. Using an assistant, stand the right side trim section next to the machine with the chasing lights facing forward. . Attach the wiring connectors from the side section to the top section (fig. P). Lift the section up on the lower leg and press into place. Attach with 3 screws and washers from the rear of the machine. Your machine should now be fully assembled (fig. Q).



Fig. O



Fig. P



Fig. Q

7. Feed the main power cord through the slot cut in the rear cabinet door, leaving the knot in the cord inside the machine to prevent it from being pulled out (fig. R). Plug in the cord and adjust the speed of your lighting with the small controller inside the rear of the cabinet (fig. S).



Fig. R

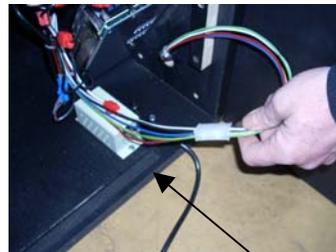



Fig. S

Lighting Controller

## REPACKING

When repacking your machine into the crate, make sure to place the pieces as illustrated below.

Slide top trim in with lighting up and towards center of crate

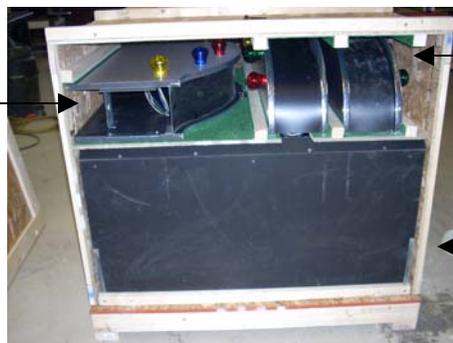

Slide side trim in bottom first with lighting facing away from each other

Slide machine in head first on its back

Your machine has been shipped with several player pucks and extra prize plaques. These prize plaques light when a puck enters the slot above the plaque. Removing the screw on the front of the plaques will allow access to the bulb and changing of the plaque. The fluorescent pin board lamp can be removed easily as well for bulb replacement by snapping it in and out of the metal clips holding it to the cabinet.

Use your imagination to create new and exciting games for future promotions such as “Stack 1, 2 or 3”, “Tic-Tac-Toe” or various spelling or matching games. Custom printed plaques and pucks are available now. Check our website for new “add-on” game overlays that may become available in the future.

## **ATTENTION**

Static electricity may become an issue with your pucks dropping through the playfield smoothly at times. This problem can be rectified by rubbing a fabric softener sheet over the surface of the pucks or by spraying them with an anti-static spray.