

Users Manual


SUMMIT MODEL

COIN OP SYSTEM




*TWICE THE FUN
IN HALF THE SPACE*



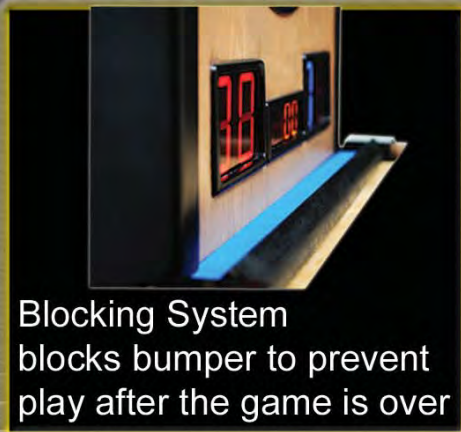

 - TWICE THE FUN IN HALF THE SPACE - ONLY 7 FEET LONG PLAYS LIKE A LONG TABLE.
- EASY INSTALLATION
- COIN OP IS EASILY INSTALLED
- GREAT ROI: GET YOUR INVESTEMENT BACK IN MONTHS
- SECURE METER READING SYSTEM: RETAINS HISTORIC



SNAP-BACK SHUFFLEBOARD ®

SUMMIT MODEL

Optional Coin Op System

ing



Solid wood cradle



 
Milled solid wood legs

NG. (7' * 4' * 32")



Coin collector

S
CAL MONEY COLLECTION DATA








Parts/Screws/Bolts/Accessories/Tools List

I. Parts



No	Name	Quantity	Specification (mm)	Location	Picture
1	Cash box	1		Coin op system box	
2	Cash box holder	1		Long box	
3	Motor box	1		Small box	
4	Pivot box	1		Small box	
5	Blocker	1		Long box	

II. Screws and bolts




No	Name	Quantity	Function	Location	Picture	Tools you can use
1-1	M8*16 with washer	2	Attaching cash box to the cradle	Small box		6mm Allen wrench
1-2	M6*16	4	Attaching cash box to the holder	Small box		5mm Allen wrench
3-1	M4*16	2	Attaching the motor box & pivot box to cradle	Small box		Phillips Head screw driver
4-1	M4*16	2	Attaching the motor box & pivot box to cradle	Small box		Phillips Head screw driver
5-1	M3*6	2	Attaching the blocker to motor box & pivot box	Small box		Phillips Head screw driver



III. Accessories

No.	Name	Quantity	Specification (mm)	Location	Picture
1	Cable No.1	1		Small box	
2	Cable No.2	1		Small box	

IV. Tools

No.	Name	Quantity	Function	Location	Picture
1	5mm Allen wrench	1	Attaching M6 screws	Box No. 1	
17-1	6mm Allen wrench	1	Attaching M8 screws	Box No. 1	
19-1	Phillips Head screw driver	1	1) Attaching receptor 4-in-one fasteners into the playing surface; 2) unscrew the screws on the Box No. 2 to open the box	Box No. 1	



How to install

1. Connect the blocker with the motor box and the pivot box and fasten them with the screws.
2. Insert cable No.1 into the connector at the bottom of the motor box.



3. Position the two side ramps away from the rear of the table to enable installation of the blocking system. The attaching screws at the bottom of the cradle should be removed for this step.
4. Let the cable pass through the hole at the bottom of the cradle. Then insert the blocking system just in front of the rear of the cradle.



5. Insert the pins of the pivot box into the positioning hole in the cradle and fasten both the motor box and the pivot box to the cradle with screws.






6. And then move the ramps toward the rear of the table until they are next to the blocking system and tighten them with screws.




7. Insert the other end of cable No.1 into the socket next to the power box.


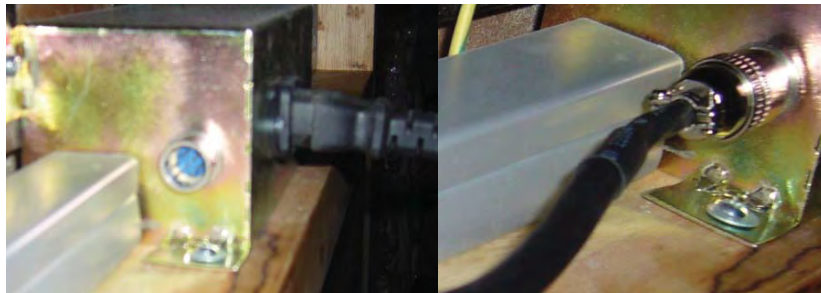


8. Install the cash box holder between the two front legs by using the bolts to attach the holder. The front wood shelf which comes with the Summit model Snap-Back Shuffleboard table will not be used with the coin operation system, so you may choose to discard it or store it.



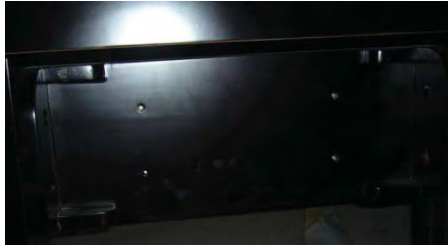

9. Open the cash box, lift it up and attach it to the holder by using the bolts. Tighten the bolts with the Allen Wrench to make sure the cash box is tightly attached to the holder. Then fasten the screws on the top. Close the door.

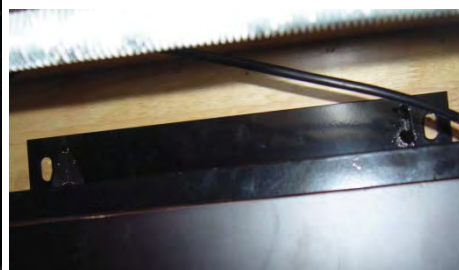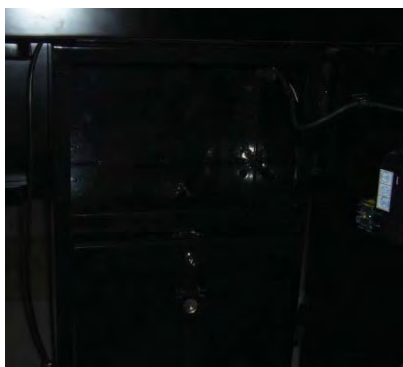

10. Insert cable No.2 into the connector on the cash box, and the other end into the socket near the red button box (left side, under cradle).





11. Turn on the power

Default Settings:

01 Price to start game: \$1.50

02 Playing time for game start: 15 minutes (900 seconds)

03 Minimum payment for more playing time: \$ 0.50

04 Additional playing time for minimum payment: 5 minutes (300 seconds)

For most situations, the default settings will be satisfactory, and you should be able to start immediately by using them. However, if you prefer to modify the cost of play, or the playing time allowed, you can modify the default amounts by changing the Function Settings, as follows:



Function Settings:

Open the back of the scoreboard and push the button on the left side to keep the lights on during this process. The function settings are modified by pushing the buttons on the back of the electronic board inside the scoreboard case.

1. Press PRO for 3 seconds to enter Programming Mode.
2. To set the price required to start play(function 01), press “+” to select functional code “01”, which will be shown on the red LEDs at the front of scoreboard.
3. Press SET for 1.5 seconds. The right digit of the yellow light flashes.
4. Press “+” or “-” to adjust the amount of money needed to start the game. You can push "+" repeatedly until you reach the total amount, or you can push "+" until this digit is OK, then press "set" quickly to move to the next digit. That digit is set by pushing "+" or "-" until the correct number is shown, then the next digit can be set by pressing "set" quickly. When you finish setting the amount, press SET for 1.5 seconds to save the settings.
5. Apply the same procedures to function 02, 03 and 04. Note that all times (function 02 and 04) must be entered in seconds. For example, each minute must be entered as 60 seconds, so 5 minutes must be entered as 300 seconds.



Other Notes:

1. If more function settings are required, please contact Mega Mania Diversions, LLC for further information.
2. If no operation is executed within 1minute, the system will go back to the normal setting automatically.





Mega Mania Diversions, LLC

888 322 9076

www.megamaniadiversions.com

sales@megamaniadiversions.com

