



Assembly Instructions

Thank you for purchasing a Shelti product. All of us at Shelti want you to be completely satisfied with your Thunderdome Dome Hockey game, so feel free to contact us for help with the assembly of your product, Shelti parts, or other information you may require.

Tools Required:

- 14mm Wrench or Socket (Included)
- 12mm Wrench or Socket (Included)
- 4mm Hex Wrench (Included)
- Phillips Head Screw Driver
- Level

Step #1 - Remove Parts from Box

Remove the pedestal from its box. Locate and remove the leg levelers and bolt package.


<u>Contents</u>	<u>Part Number</u>	<u>Quantity</u>
Dome Hockey Cabinet	TD-DPA-0	1
Split Pedestal	TD-PDA-1	1
Accessory Package	TD-ASA-0	1
Assembly Instructions	210-0144-0	1

Accessory Package Contents

Leg Levelers	201-0074-0	4
Cabinet Bolt - Hex Head M8x55mm (1 Extra)	301-0043-0	11
Cabinet Washer - M8 (1 Extra)	303-0025-0	11
Hex Wrench - 4 mm	205-0057-0	1
Electronic Scoring Unit	210-0145-0	1
Flat Head Screw - Phillips Head M5x12mm	301-0044-0	2
9/16 Washer - M6 (Not needed)	303-0026-0	2
Nut - M5	302-0016-0	2
Rounded Head Screw - Phillips Head M3x14mm	301-0045-0	1
Washer - M5	303-0027-0	1
Dome Hockey Puck (1" Dia.)	210-0131-0	3
Pedestal Bolt	301-0058-0	8
Pedestal Washer	303-0030-0	16
Pedestal Nut	302-0022-0	8
Thunderdome Side Label	217-0002-0	2


Step #2 - Assemble the Pedestal

Bolt both pedestal halves together with a bolt, two washers and a nut for each of the eight holes as shown. Lay the pedestal on its side and have someone hold the bolt from the opposite side while you over tighten the nut.

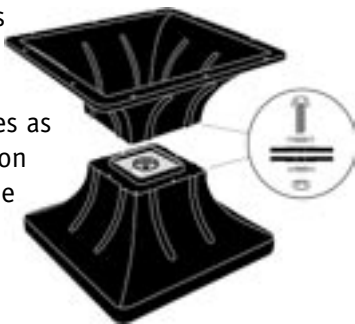


Step #3 - Attach the Leg Levelers

Attach all four leg levelers into the bottom of the assembled pedestal. Screw them in clockwise all the way, but do not tighten them.

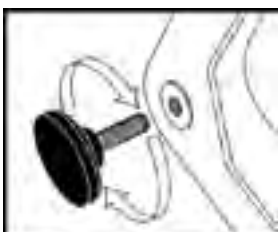

Step #4 - Hook up the Power Cords

Thread the AC adapter cord (black arrow below) through the bottom of the pedestal (fig. A) and through the hole drilled into the wooden speaker bracket (fig. B). Carefully place the top half of the game on to the pedestal. Have someone hold it at an angle so you can access the inside. Take the power cord and plug it in to the hole located on the underside of the playfield cabinet (fig. C).

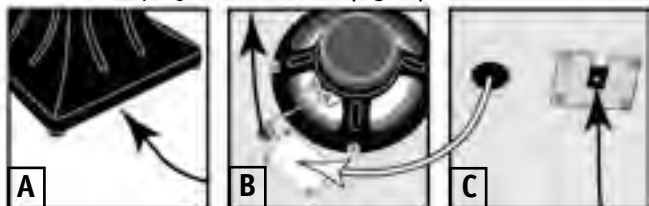

Take the wire that is taped to the bottom of the playfield cabinet and plug it in to the hole located by the speaker (shown above with the white arrow).

Step #5 - Attach Cabinet

Carefully move the top half of the game on to the pedestal. Note that the end with the handles lines up with the side of the pedestal with (2) bolt holes. Using (10) hex head bolts and washers, secure both halves together.



Step #6 - Attach Optional Stickers


Attach one sticker on each side of the cabinet as shown above. Peeling away half of the back at a time makes it a little easier to locate the center.

Step #7 - Level the Playfield

Using the provided Hex wrench, remove the two bolts on the corners of the dome on the handle side. Lift the dome to access the inside by pulling up on the handle. Do not allow the dome to swing all the way open without supporting it. Place a level across, lengthwise, and diagonally into the four corners. Raise and lower the appropriate leg leveler.

Step #8 - Attach the Electronic Scoring Unit

Locate the four wires coming out of the hole located on the hinge side of the dome. Plug them into the scoring unit as shown. Note that two wires look identical. Switch locations if you score and it credits the opposing team.

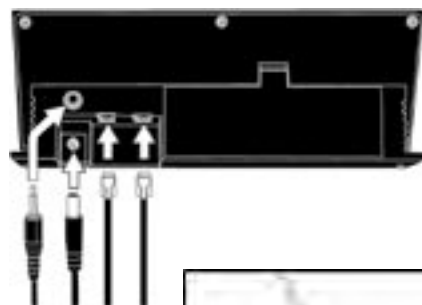

Bolt the scoring unit to the edge of the dome using the (2) nuts and bolts provided. Slip the bolt through the bottom of the dome and scoring unit and tighten with the bolt and a phillips head screwdriver. Be careful not to pinch the wires for the scoring unit in the dome when lifting it. Attach the final screw and washer through the front of the unit. Slip the screw through the small hole in the dome from the inside and tighten.

Step #9 - Operating the Scoring Unit

Turn the power switch to "on". Select desired game option. By default, it begins with the 15 minute game option.



To change the game option, push the "select" button. There are seven total options including "Free play" which has no time limit or scoring limit. After choosing a game option, push the "Start" button to begin. To start over, press the "Reset / Start" button again. The volume switch has three settings: High, Low and Off.

Step #10 - Ejecting Puck Into Play

Push the green button located at either playing position to eject the puck. Do not put more than one puck in the game at a time as the puck ejection mechanism will jam. Push the Red button to play a sound effect.



333 Morton Street
Bay City, Michigan 48706
Phone: 989-893-1739
Fax: 989-893-1809
www.shelti.com
info@shelti.com

