

ASSEMBLY INSTRUCTIONS

65" VIDEO GAME CABINET



1950 Swarthmore Ave. Lakewood, NJ 08701



Place the shipping pallet near the location where the game is to be installed and carefully remove the shipping carton.



Image of boxed game.



Pallet with carton removed

Carefully unpack and confirm that the following components are included.

- Console assembly
- Pedestal assembly
- Marquee assembly
- Side light pillars (x2)
- Horizontal square tubes (x2)
- Monitor service hatches (x2 and attached to monitor)
- Wire box cover (attached to pedestal)
- Monitor housing assembly

See the following photos for reference.




WIRE BOX COVER



SIDE PILLARS (x2)

Side light pillars

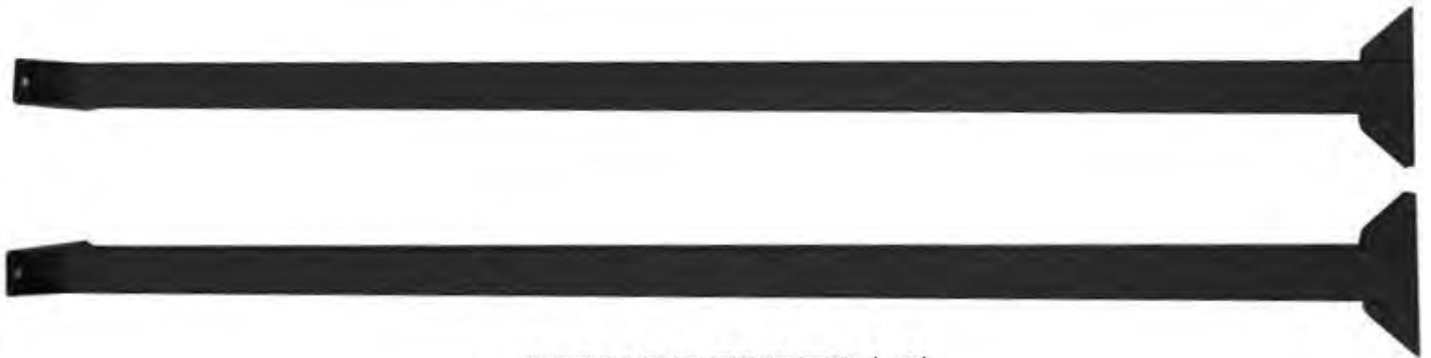

SQUARE TUBES (x2)



PEDESTAL
ASSEMBLY



CONSOLE ASSEMBLY





MARQUEE ASSEMBLY



Unloop the two harnesses on the front of the pedestal assembly and feed the wires through the horizontal tubes. Attach the tubes to the pedestal assembly using the nuts and washers attached to the pedestal.




Place the console in front of the tubes, and feed the wires through the holes in the console. Remove the bolts and washers from the console and place console up against the horizontal tubes. Then bolt the tubes to the console. Be careful not to pinch the wiring.

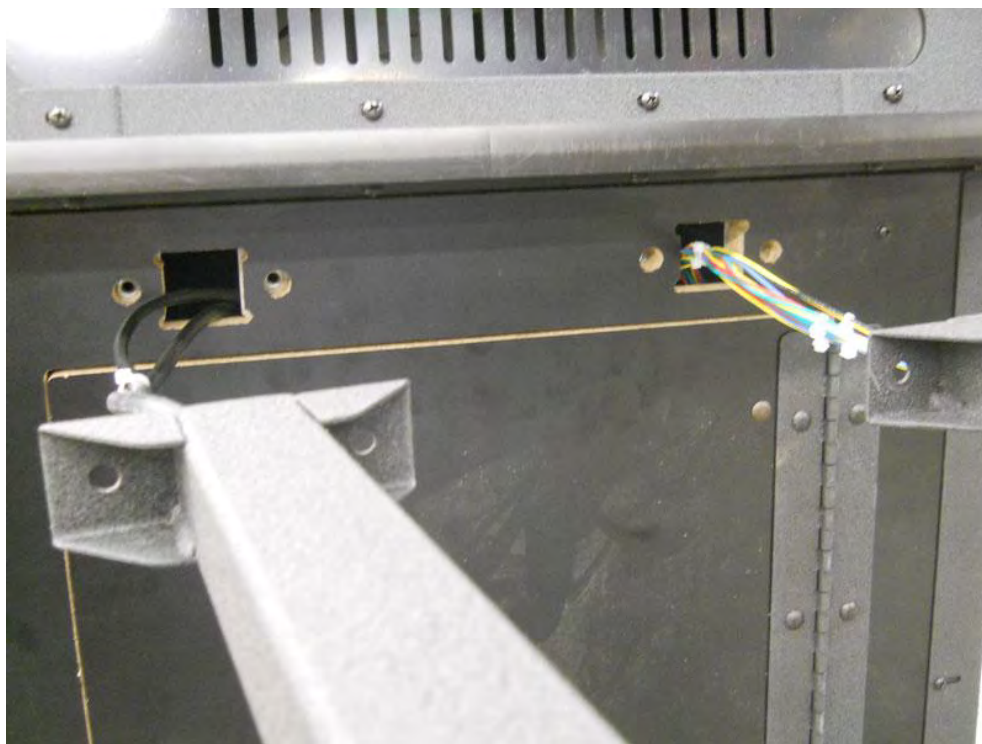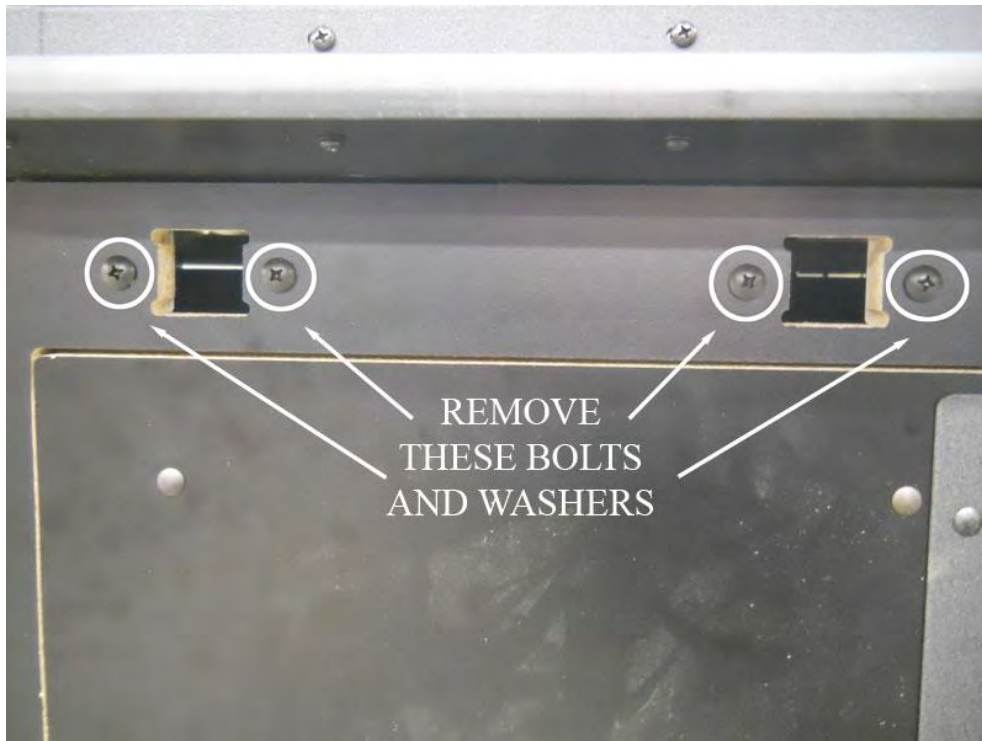

Now connect the harnessing that goes from the pedestal to the console. There is an HDMI connector, an AC power connector, and 3 other harnesses. They are shown in the following photos.

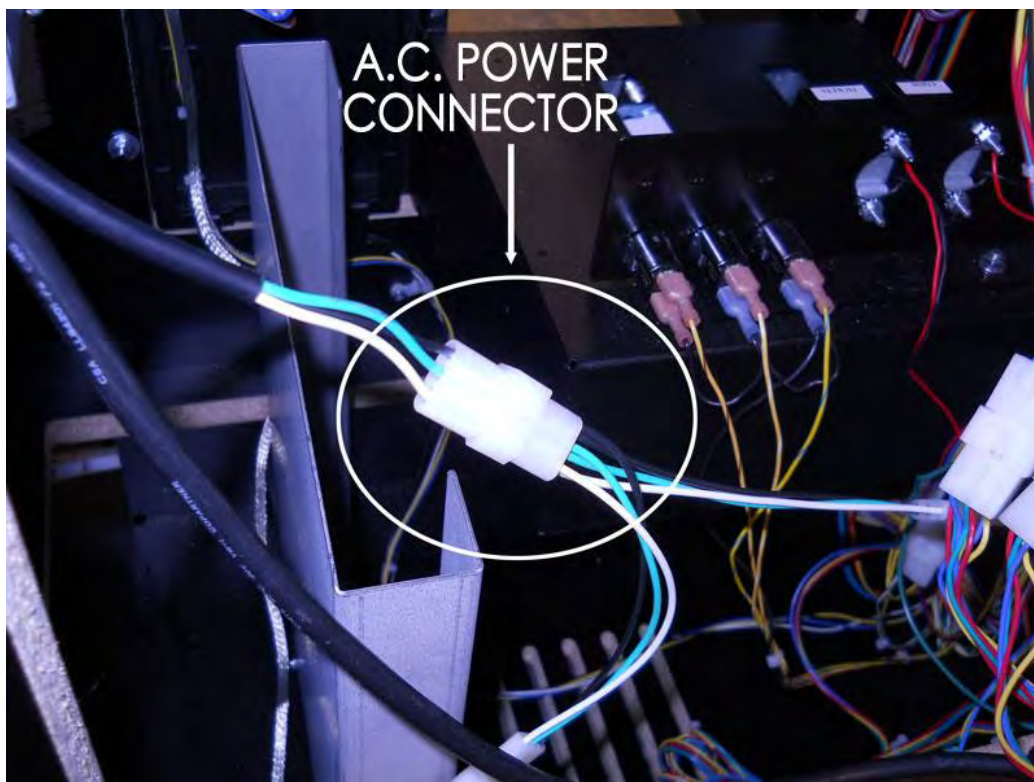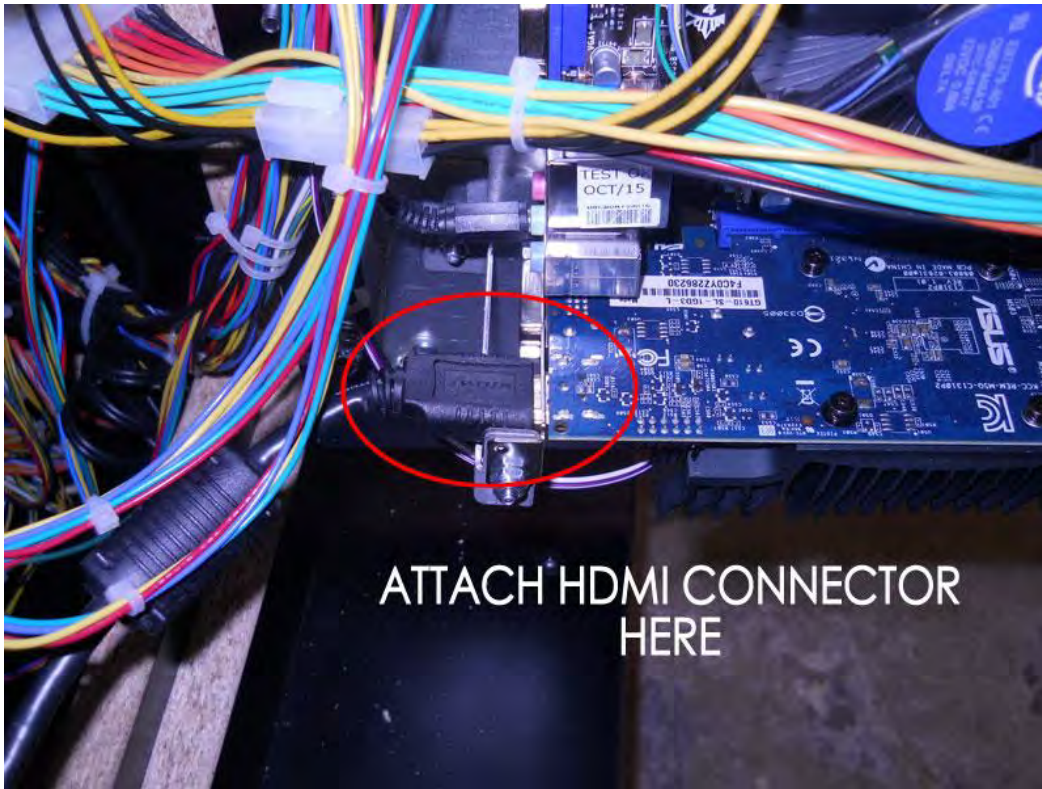

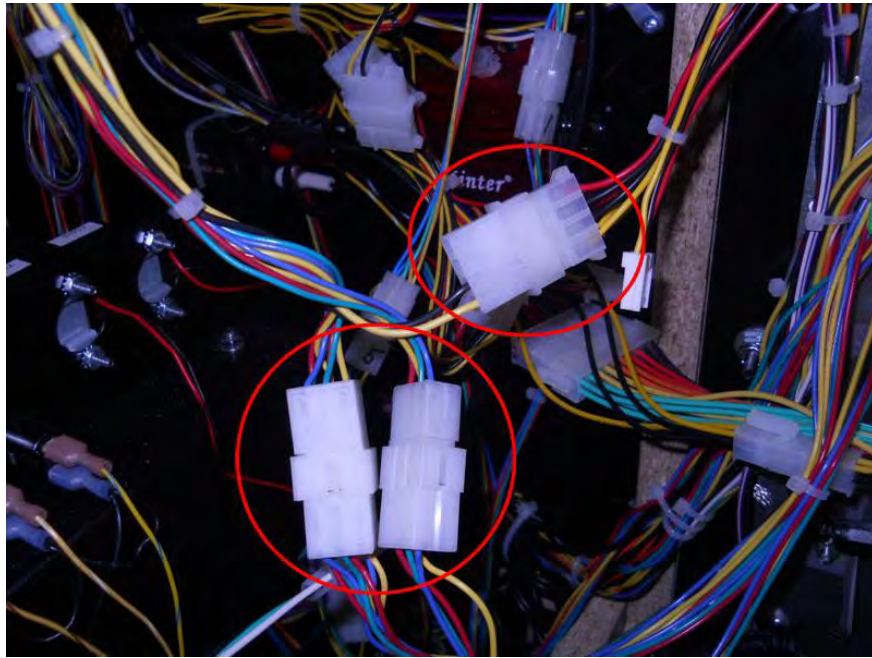

Now that the pedestal is securely attached to the console, you can now install the monitor.


WARNING: TO AVOID DAMAGE OR INJURY, DO NOT INSTALL THE MONITOR HOUSING TO THE PEDESTAL UNLESS THE CONSOLE IS SECURELY ATTACHED IN ORDER TO STABILIZE THE ASSEMBLY.

Place some foam, bubble wrap or cardboard over the horizontal tubes to prevent scratches.

Open the box containing the monitor assembly. Remove the two bolts and washers, and the two screws, as shown in the following photo.




Place the monitor box in front of the console. Using at least two people, with at least one on each side, carefully lift the monitor (using side handles) over the control panel and bring it towards the pedestal.

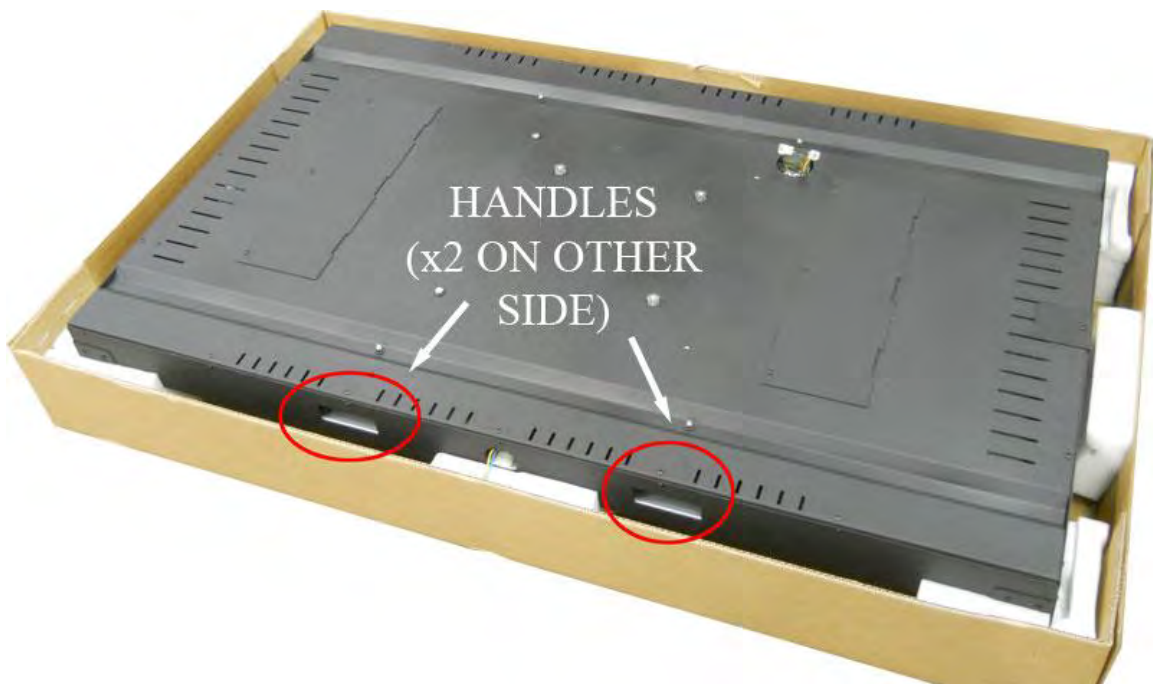







The two weld nuts circled in the picture will slide into the slots on the pedestal.

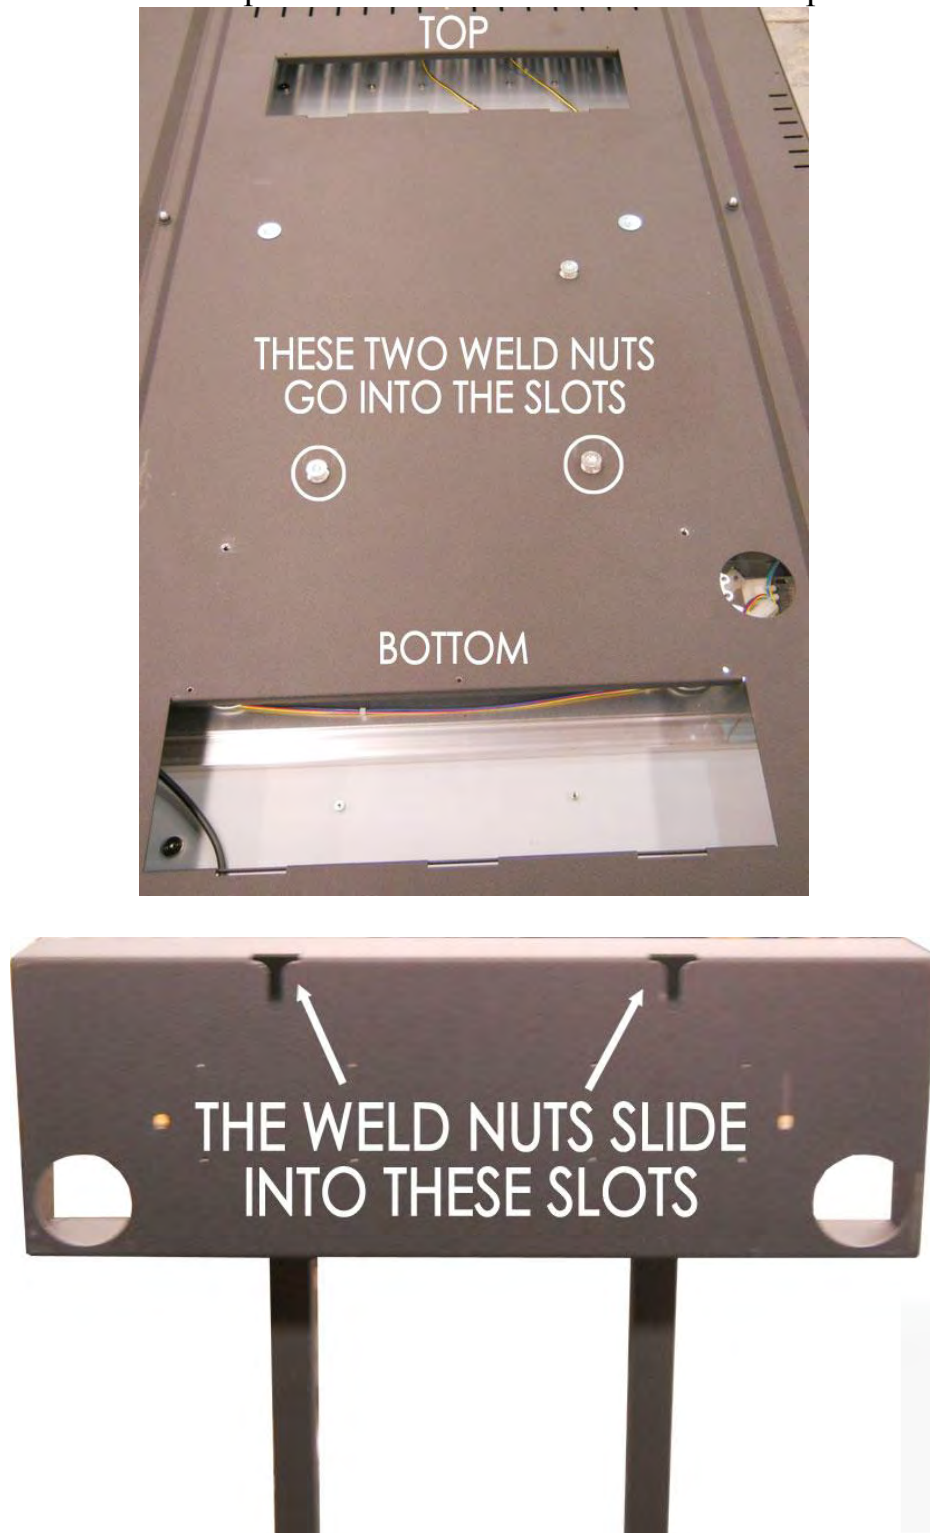



Remove the wire box cover, and use the bolts that you took out of the monitor to secure the assembly to the mounting. Do not tighten completely.

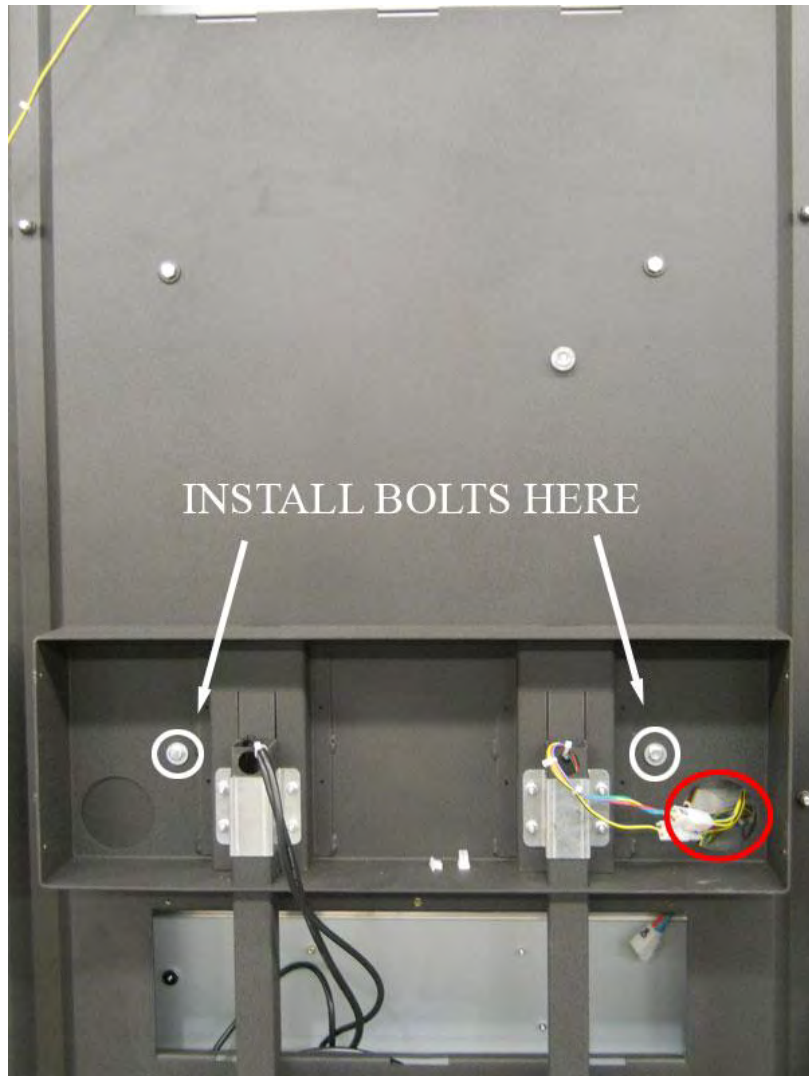


Install the two bottom screws that you removed from the monitor housing earlier through the bottom mounting brackets.

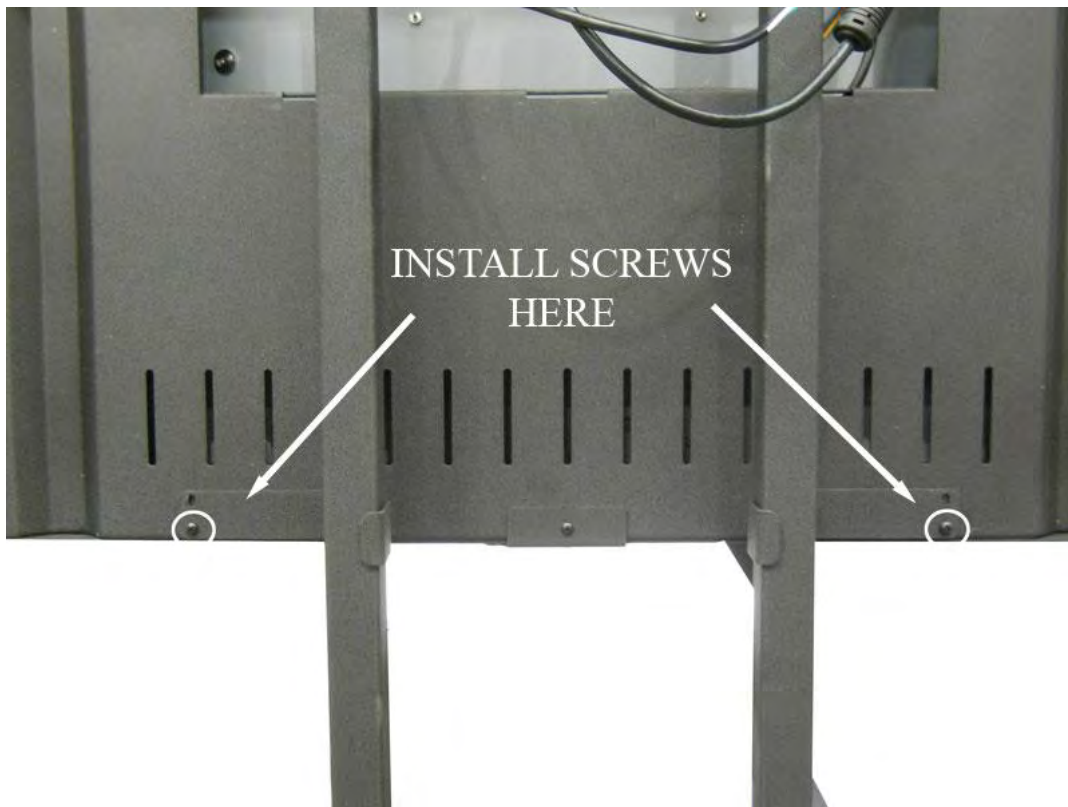

Remove the service hatches and connect the four harness connectors by feeding the wires through the hole on the right side (circled in red in the previous photo). The following photos show the connections. Tuck all of the extra wire into the monitor housing.

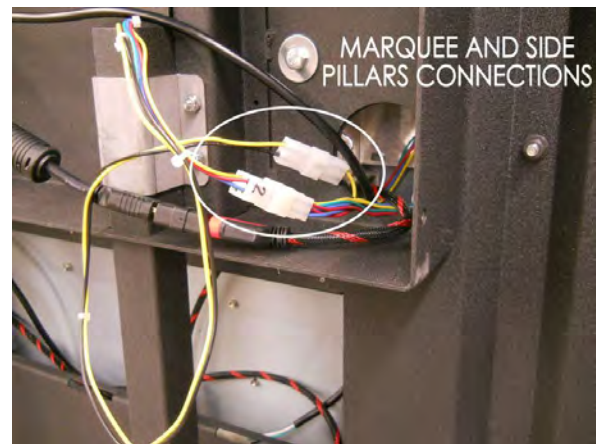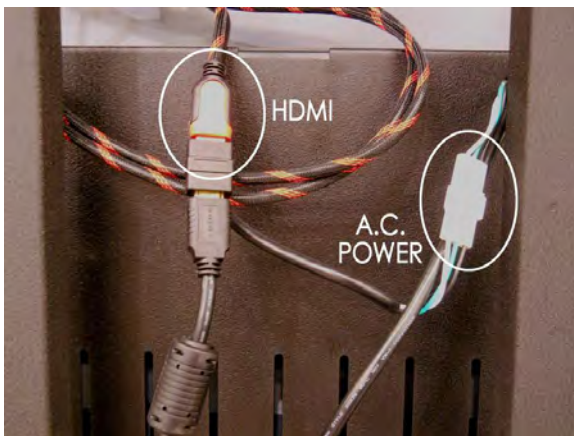


Remove the screws along the sides of the monitor and use them to connect each of the side pillar harnesses to the sides of the monitor housing.

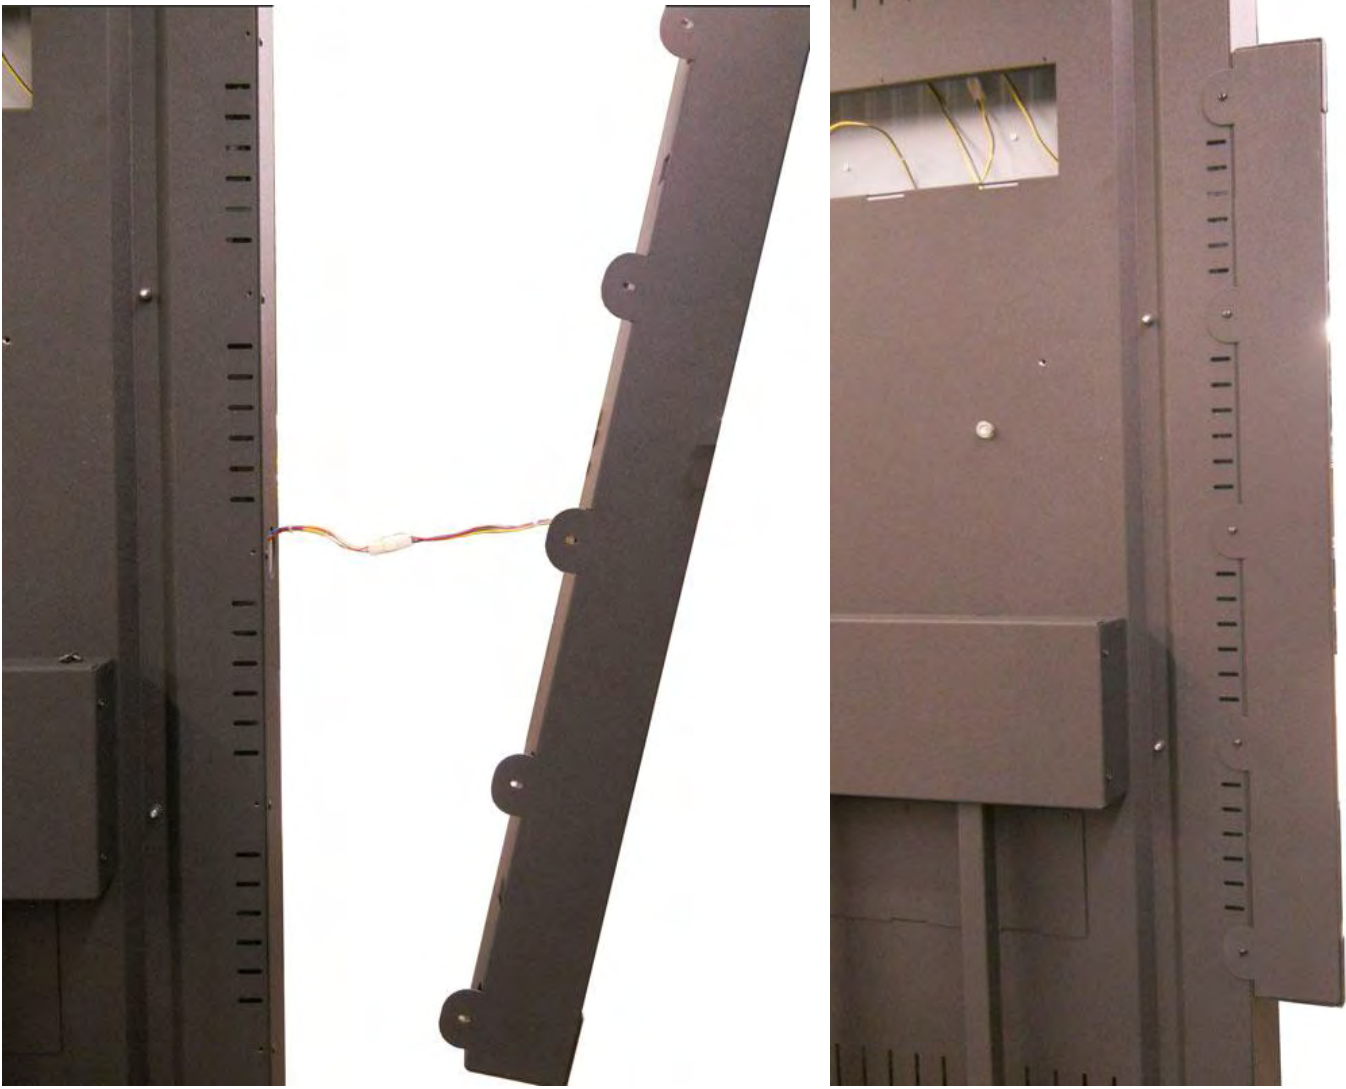


Slightly loosen the screws holding the brackets on the marquee to help align during installation. Connect the marquee power to the harness inside the monitor housing.




Secure the marquee using the 8-32 1/2" screws. Tighten all screws.

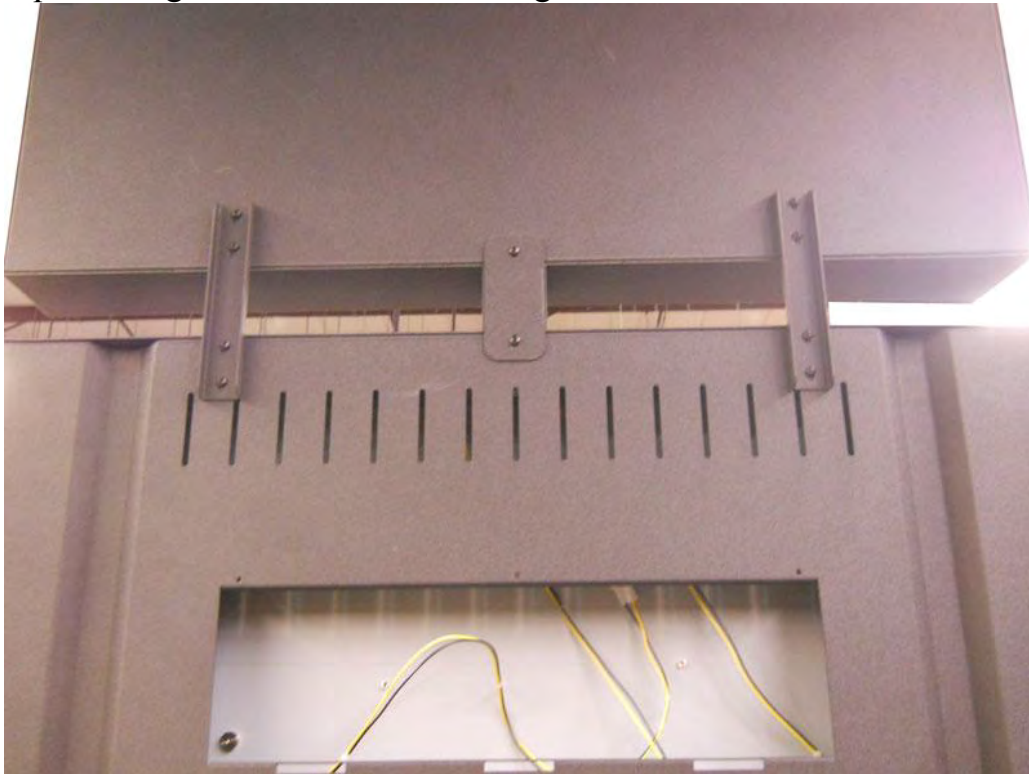

Reinstall the monitor service hatches, and install the wire box cover using the 8-32 1/2" screws.

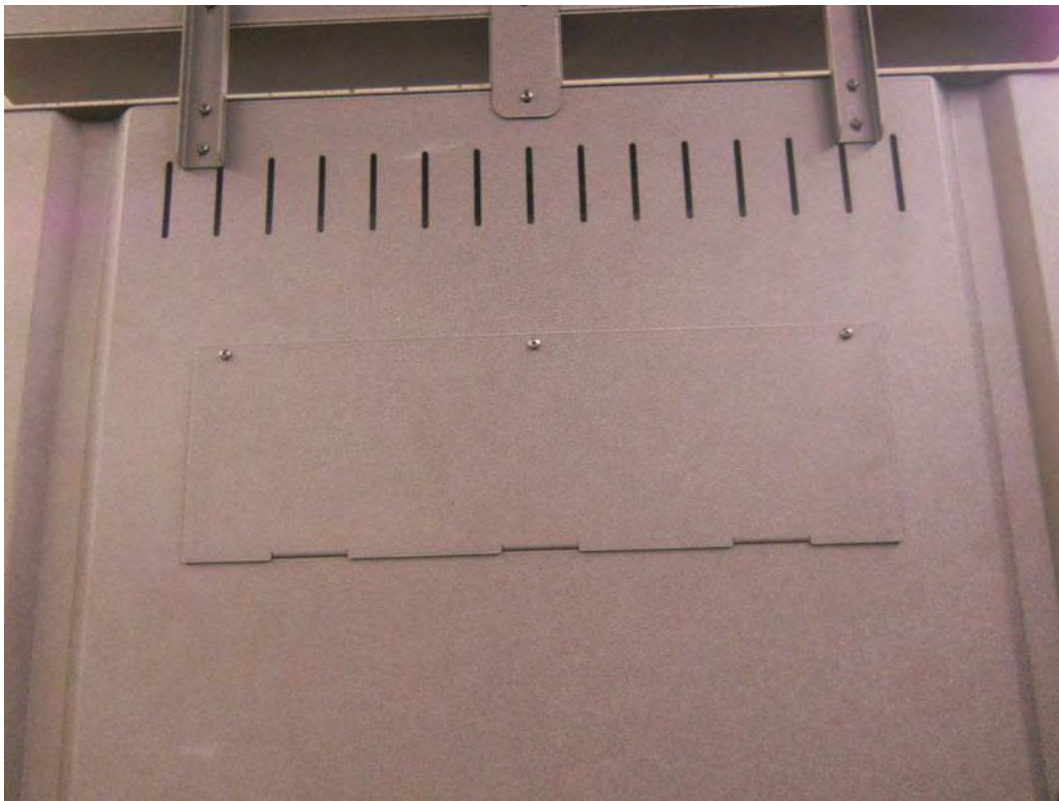

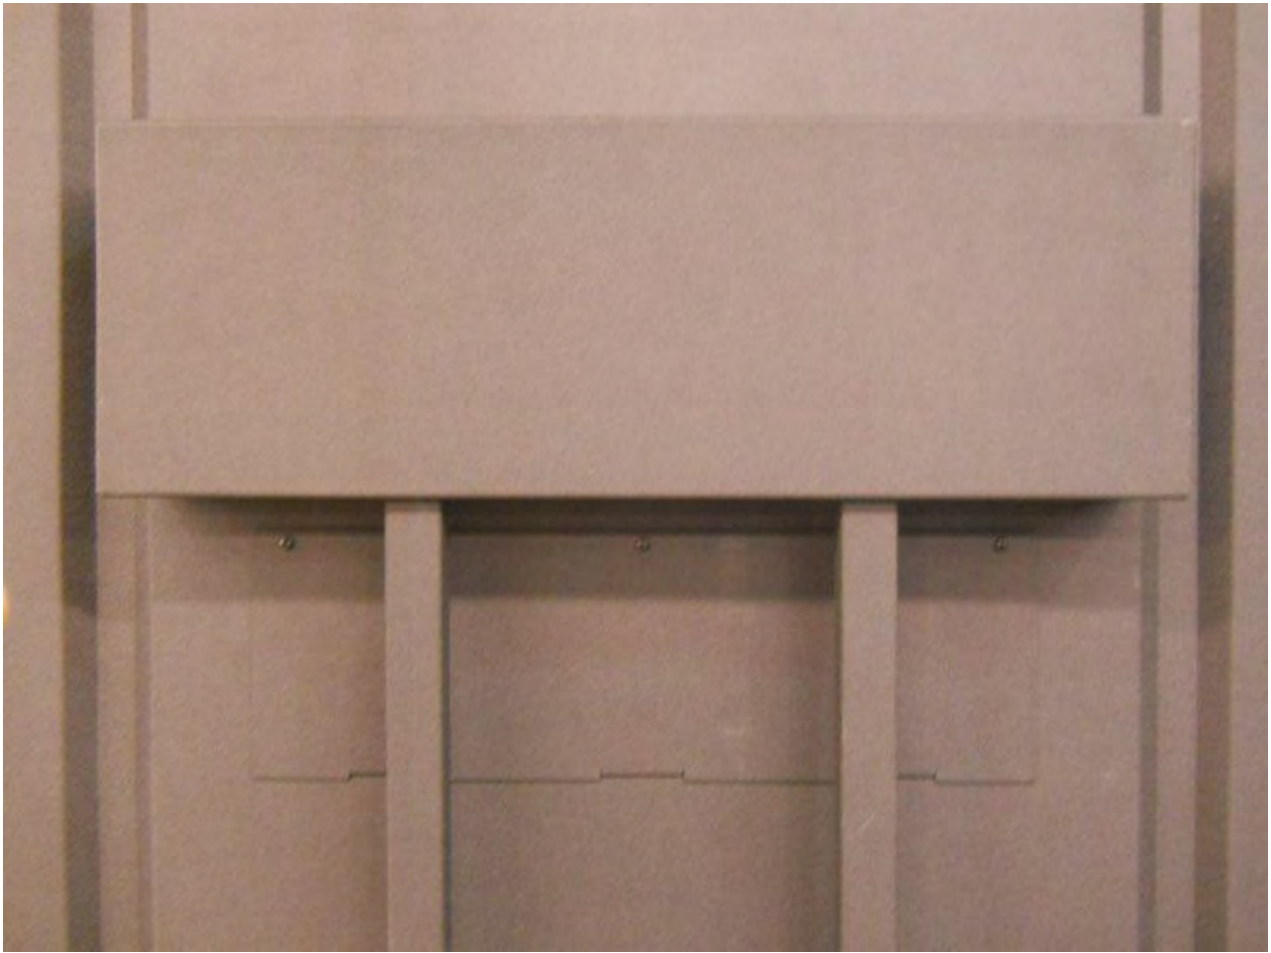

When the game is placed in its final position, lock the casters to prevent the game from moving. You can now connect the AC power cord to the game and turn the power on.

If you have any questions or problems, call Coastal Amusements at +1-732-905-6662. Technicians are available Monday through Friday from 08:00 to 16:30 EST.