


namco®

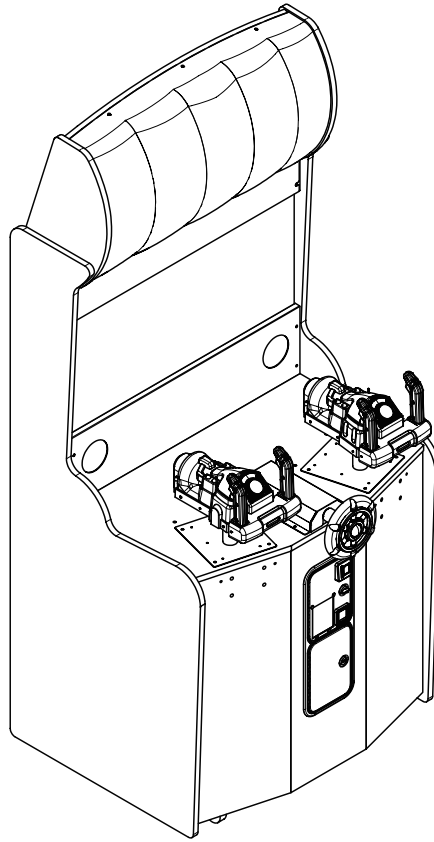

DEADSTORM PIRATES UPRIGHT

OPERATION MANUAL

The actual product may differ slightly from the illustrations in this manual.

WARNING

- To ensure safe operation of the game machine, be sure to read this Operation Manual before use.
- Keep this Operation Manual in a safe place for quick access whenever needed.

NAMCO BANDAI Games Inc.

INTRODUCTION

Thank you for purchasing the "DEAD STORM PIRATES MINI" game machine (hereafter referred to as the "machine").

This operation manual describes:

- How to install, operate, relocate, transport, maintain and discard of the machine safely and properly
- How to operate the machine correctly and make full use of its features
- How to ensure safety of players and bystanders

Inquiries regarding this machine and its repair

- For further information about the machine and its repair, contact your distributor.

The software included in the machine is protected by copyright laws. The software must not be copied, modified, distributed publicly, or used for purposes other than the operation of this game machine. Violators of copyright laws may be subject to criminal penalties. Do not use the storage media containing software in any other game machine; otherwise, machine malfunctions may result.

This machine uses the following licenses.

This software uses fonts produced by Fontworks Inc.
Fontworks, and font names are trademarks or registered trademarks of Fontworks Inc.

This software uses fonts produced by JIKJISOFT Inc.
JIKJISOFT and font names are trademarks or registered trademarks of JIKJISOFT Inc.

PolycomR G.722.1 Annex C audio coding technology

This machine uses Protocol Buffers - Google's data interchange format.
Protocol Buffers - Google's data interchange format is used under the Apache License.

Copyright 2008, Dave Benson.

Licensed under the Apache License, Version 2.0 (the "License"); you may not use this file except in compliance with the License.

You may obtain a copy of the License at

<http://www.apache.org/licenses/LICENSE-2.0>

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either expressed or implied.

See the License for the specific language governing permissions and limitations under the License.

Apache License
Version 2.0, January 2004
<http://www.apache.org/licenses/>

TERMS AND CONDITIONS FOR USE, REPRODUCTION, AND DISTRIBUTION

1. Definitions.

“License” shall mean the terms and conditions for use, reproduction, and distribution as defined by Sections 1 through 9 of this document.

“Licensor” shall mean the copyright owner or entity authorized by the copyright owner that is granting the License.

“Legal Entity” shall mean the union of the acting entity and all other entities that control, are controlled by, or are under common control with that entity. For the purposes of this definition, “control” means (i) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (ii) ownership of fifty percent (50%) or more of the outstanding shares, or (iii) beneficial ownership of such entity.

“You” (or “Your”) shall mean an individual or Legal Entity exercising permissions granted by this License.

“Source form” shall mean the preferred form for making modifications, including but not limited to software source code, documentation source, and configuration files.

“Object form” shall mean any form resulting from mechanical transformation or translation of a Source form, including but not limited to compiled object code, generated documentation, and conversions to other media types.

“Work” shall mean the work of authorship, whether in Source or Object form, made available under the License, as indicated by a copyright notice that is included in or attached to the work (an example is provided in the Appendix below).

“Derivative Works” shall mean any work, whether in Source or Object form, that is based on (or derived from) the Work and for which the editorial revisions, annotations, elaborations, or other modifications represent, as a whole, an original work of authorship. For the purposes of this License, Derivative Works shall not include works that remain separable from, or merely link (or bind by name) to the interfaces of, the Work and Derivative Works thereof.

“Contribution” shall mean any work of authorship, including the original version of the Work and any modifications or additions to that Work or Derivative Works thereof, that is intentionally submitted to Licensor for inclusion in the Work by the copyright owner or by an individual or Legal Entity authorized to submit on behalf of the copyright owner. For the purposes of this definition, “submitted” means any form of electronic, verbal, or written communication sent to the Licensor or its representatives, including but not limited to communication on electronic mailing lists, source code control systems, and issue tracking

INTRODUCTION

systems that are managed by, or on behalf of, the Licensor for the purpose of discussing and improving the Work, but excluding communication that is conspicuously marked or otherwise designated in writing by the copyright owner as "Not a Contribution."

"Contributor" shall mean Licensor and any individual or Legal Entity on behalf of whom a Contribution has been received by Licensor and subsequently incorporated within the Work.

2. **Grant of Copyright License.** Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable copyright license to reproduce, prepare Derivative Works of, publicly display, publicly perform, sublicense, and distribute the Work and such Derivative Works in Source or Object form.
3. **Grant of Patent License.** Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable (except as stated in this section) patent license to make, have made, use, offer to sell, sell, import, and otherwise transfer the Work, where such license applies only to those patent claims licensable by such Contributor that are necessarily infringed by their Contribution(s) alone or by combination of their Contribution(s) with the Work to which such Contribution(s) was submitted. If You institute patent litigation against any entity (including a cross-claim or counterclaim in a lawsuit) alleging that the Work or a Contribution incorporated within the Work constitutes direct or contributory patent infringement, then any patent licenses granted to You under this License for that Work shall terminate as of the date such litigation is filed.
4. **Redistribution.** You may reproduce and distribute copies of the Work or Derivative Works thereof in any medium, with or without modifications, and in Source or Object form, provided that You meet the following conditions:
 1. You must give any other recipients of the Work or Derivative Works a copy of this License; and
 2. You must cause any modified files to carry prominent notices stating that You changed the files; and
 3. You must retain, in the Source form of any Derivative Works that You distribute, all copyright, patent, trademark, and attribution notices from the Source form of the Work, excluding those notices that do not pertain to any part of the Derivative Works; and
 4. If the Work includes a "NOTICE" text file as part of its distribution, then any Derivative Works that You distribute must include a readable copy of the attribution notices contained within such NOTICE file, excluding those notices that do not pertain to any part of the Derivative Works, in at least one of the following places: within a NOTICE text file distributed as part of the Derivative Works; within the Source form or documentation, if provided along with the Derivative Works; or, within a display generated by the Derivative Works, if and wherever such third-party notices normally appear. The contents of the NOTICE file are for informational purposes only and do not modify the License. You may

add Your own attribution notices within Derivative Works that You distribute, alongside or as an addendum to the NOTICE text from the Work, provided that such additional attribution notices cannot be construed as modifying the License.

You may add Your own copyright statement to Your modifications and may provide additional or different license terms and conditions for use, reproduction, or distribution of Your modifications, or for any such Derivative Works as a whole, provided Your use, reproduction, and distribution of the Work otherwise complies with the conditions stated in this License.

5. Submission of Contributions. Unless You explicitly state otherwise, any Contribution intentionally submitted for inclusion in the Work by You to the Licensor shall be under the terms and conditions of this License, without any additional terms or conditions. Notwithstanding the above, nothing herein shall supersede or modify the terms of any separate license agreement you may have executed with the Licensor regarding such Contributions.
6. Trademarks. This License does not grant permission to use the trade names, trademarks, service marks, or product names of the Licensor, except as required for reasonable and customary use in describing the origin of the Work and reproducing the content of the NOTICE file.
7. Disclaimer of Warranty. Unless required by applicable law or agreed to in writing, the Licensor provides the Work (and each Contributor provides its Contributions) on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either expressed or implied, including, without limitation, any warranties or conditions of TITLE, NON-INFRINGEMENT, MERCHANTABILITY, or FITNESS FOR A PARTICULAR PURPOSE. You are solely responsible for determining the appropriateness of using or redistributing the Work and assume any risks associated with Your exercise of permissions under this License.
8. Limitation of Liability. In no event and under no legal theory, whether in tort (including negligence), contract, or otherwise, unless required by applicable law (such as deliberate and grossly negligent acts) or agreed to in writing, shall any Contributor be liable to You for damages, including any direct, indirect, special, incidental, or consequential damages of any character arising as a result of this License or out of the use or inability to use the Work (including but not limited to damages for loss of goodwill, work stoppage, computer failure or malfunction, or any and all other commercial damages or losses), even if such Contributor has been advised of the possibility of such damages.
9. Accepting Warranty or Additional Liability. While redistributing the Work or Derivative Works thereof, You may choose to offer, and charge a fee for, acceptance of support, warranty, indemnity, or other liability obligations and/or rights consistent with this License. However, in accepting such obligations, You may act only on Your own behalf and on Your sole responsibility, not on behalf of any other Contributor, and only if You agree to indemnify, defend, and hold each Contributor harmless for any liability incurred by, or claims asserted against, such Contributor by reason of your accepting any such warranty or additional liability.

INTRODUCTION

This machine uses MXML.
MXML is used under the MIT License.

MXML License

Copyright (c) 2003 Matthew Riek

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE

Regarding the licenses and trademarks pertaining to SYS357 (Rack Assy), see <http://www.bandainamcogames.co.jp/am/vg/S357-license/>.

The names of systems and products that are used in the game machine or mentioned in this operation manual but are not described in the above URL are generally trademarks or registered trademarks of their respective companies.

1. SAFETY PRECAUTIONS – Be sure to read these instructions to ensure safety –


Instructions to the owner

- If you entrust another party to perform installation, operation, relocation, transportation, maintenance or discarding of the machine, instruct the concerned party to read and observe all the instructions and precautions in this operation manual regarding the particular action to be taken.

1-1 Magnitudes of risk

On the labels attached to the machine and in this operation manual, precautions regarding safety and property damage are classified as shown below in accordance with the magnitude of the particular risk.

 **WARNING** : Failure to avoid the indicated risk may result in death or serious injury.

 **CAUTION** : Failure to avoid the indicated risk may result in minor injury or property damage.

Notes related to machine functions but not to safety are marked with the following indication.



NOTICE : Note related to product function or protection.

1-2 Definition of the term “technician”

This operation manual is written for arcade personnel. However, the sections marked “To be conducted by a technician only” in the table of contents are written for technicians. These tasks should be conducted by technicians only.

Technician: A person engaged in machine design, manufacture, inspection or maintenance service for a manufacturer of amusement equipment, or a person who has technical knowledge related to electricity, electronics or mechanical engineering at a level equal to or higher than that of a technical high school graduate and is engaged routinely in the maintenance and management (including repair) of amusement machines.

1. SAFETY PRECAUTIONS

1-3 Top-priority safety precautions

WARNING


- Should any abnormality occur, turn off the power switch immediately to stop operating the machine. Then, unplug the power cord plug from the AC outlet. Operating the machine without correcting abnormalities can result in a fire or accident.
- Some monitor sections remain hot or charged with high voltage even after the power switch is turned off. Do not touch the monitor unnecessarily in order to avoid electric shock and burns.
- Dust accumulated on the power cord plug may cause a fire. Check the power cord plug regularly and remove dust.
- Insert the power cord plug firmly into the AC outlet. Poor contact may cause overheating that can lead to a fire or burns.
- A damaged power cord can cause a fire, electric shock or electrical leakage. Observe the following cautions.
 - Keep the power cord away from heating devices.
 - Do not twist the power cord.
 - Do not bend the power cord forcibly.
 - Do not alter the power cord.
 - Do not bundle the power cord.
 - Do not pull the power cord. (Always unplug by holding the power cord plug, and avoid pulling the power cord.)
 - Do not place anything on the power cord.
 - Do not get the power cord caught by the machine, other equipment or wall.
 - Do not do anything else that might damage the power cord.
- Do not wet the power cord or power cord plug with water. Water can cause electric shock or electrical leakage.
- Do not touch the power cord plug with a wet hand. Doing so can result in electric shock.
- The machine's rated power supply voltage and maximum consumption current are 120 VAC and 14 A, respectively. To prevent fire and electric shock, be sure to use interior wiring that conforms to these power supply specifications.
- Operate the machine with a power supply voltage in the range of 110 to 120 VAC. Operating the machine with a supply voltage outside the specified range may cause a fire or electric shock. To ensure that the machine operates in optimum condition, maintain the power supply at 120 VAC.
- To ensure safe operation of the machine, be sure to conduct the pre-service check (see P. 16 "7-3 Pre-service check") and maintenance (see P. 46 "8B. Maintenance") described in this manual. Failure to conduct the pre-service check or maintenance can result in an accident.
- Use consumables and service parts (including fasteners) specified by our company. To order parts, contact your distributor.
- Do not convert the machine without permission. Do not perform any work that is not described in this operation manual. Unauthorized conversion of the machine may create unforeseen hazards.
- When transferring the ownership of the machine, be sure to provide this operation manual together with the game machine.

1-4 Description of warning labels attached to the machine

WARNING

- The warning labels describe important safety precautions. Be sure to observe the following:
 - To ensure that the warning labels attached to the machine are easily legible, install the machine at an appropriate location with ample illumination, and keep the labels clean at all times. Also, make sure that the labels are not hidden behind another game machine or other objects.
 - Do not remove or alter the warning labels.
 - If the warning labels become excessively dirty or damaged, replace them with new labels. To order warning labels, contact your distributor.

■ Back side

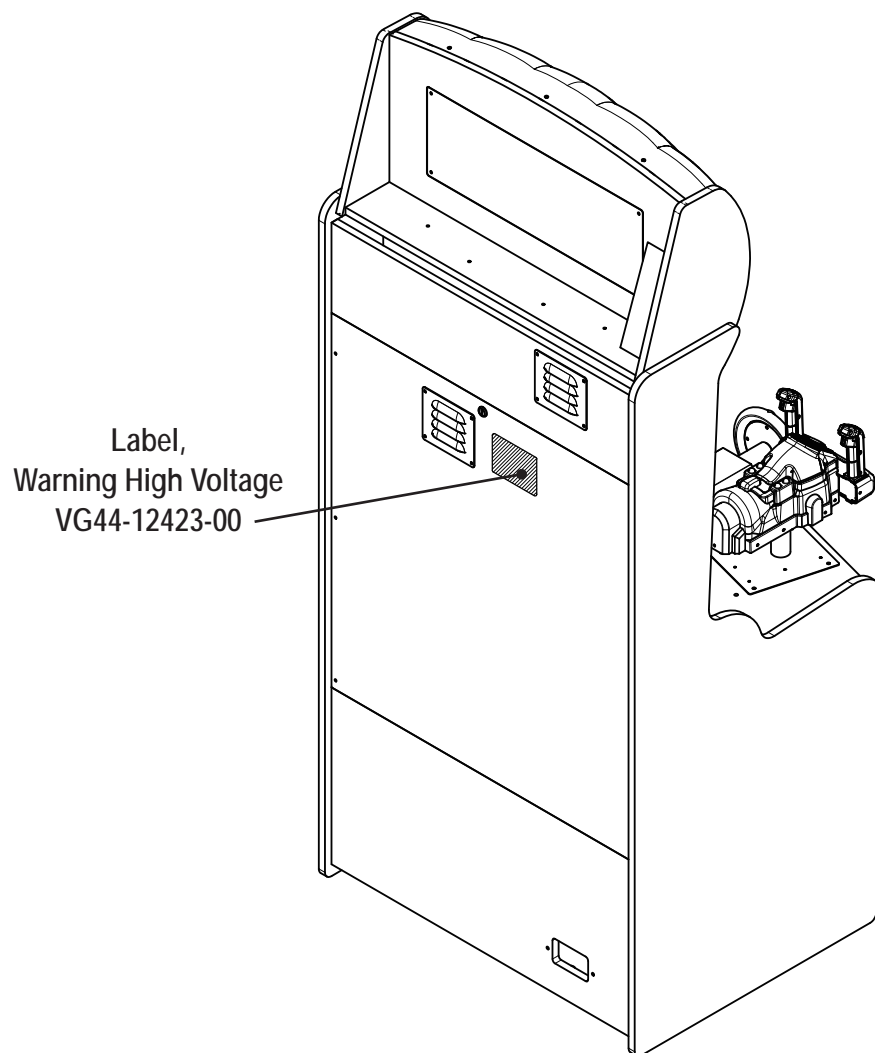

MEMO

CONTENTS

INTRODUCTION

1. SAFETY PRECAUTIONS - Be sure to read these instructions to ensure safety -	1
1-1 Magnitudes of risk	1
1-2 Definition of the term "technician"	1
1-3 Top-priority safety precautions	2
1-4 Description of warning labels attached to the machine	3
2. SPECIFICATIONS	8
3. CHECKING THE PACKAGE CONTENTS	9
4. OVERALL CONSTRUCTION (Names of Parts)	10
5. INSTALLATION AND CARRY-IN PASSAGE CONDITIONS	11
5-1 Installation conditions	11
5-1-1 Locations to avoid	11
5-1-2 Play zone for installed machine	12
5-2 Required dimensions of carry-in passage (such as doors and corridors)	12
6. MOVING AND TRANSPORTING	13
6-1 Moving (on the floor)	13
6-2 Transportation	13
7. OPERATION	14
7-1 People who shouldn't play	14
7-2 Safety precautions to be observed by players	15
7-3 Pre-service check	16
7-3-1 Safety check (before power ON)	16
7-3-2 Operation check (after power ON)	17
7-4 How to play	18
(1) Basic rules	18
(2) Operating method	18
(3) Explanation of the game system	18
(4) Start button	19
7-5 Explanation of the power switch and adjustment switches	20
7-5-1 Power switch location and turning on the switch	20
7-5-2 Adjustment switches	21
7-6 Test mode	22
7-6-1 Description of the menu screen (MENU)	22
7-6-2 Game fee setting (COIN OPTIONS)	23
7-6-3 Game detail setting (GAME OPTIONS)	24

CONTENTS


7-6-4	Switch/sensor test (I/O TEST)	25
(1)	I/O PCB CHECK	26
(2)	SWITCH TEST	27
(3)	GUN TEST	28
(4)	GUN CALIBRATION	29
(5)	STEERING TEST	30
(6)	OUTPUT TEST	31
7-6-5	Monitor adjustment (MONITOR TEST)	32
(1)	GAMMA ADJUST	33
7-6-6	Sound adjustment (SOUND TEST)	34
7-6-7	Game data display/initialization (BOOKKEEPING)	35
7-6-8	Initialization and others (OTHERS)	36
(1)	HDD CHECK	37
(2)	BACK UP MEMORY INITIALIZE	38
(3)	CLOCK SETTING	39
7-6-9	Software update	40
7-7	Error display (for the arcade operator)	41
7-8	Gun Assy adjustment (initialization) after parts replacement	43
7-8-1	Initializing the volumes in the Gun Assys	43
8.	MANUAL FOR THE TECHNICIAN – To be conducted by a technician only –	44
8A.	Setup - To be conducted by a technician only -	44
8A-1	Adjusting level adjusters	44
8A-2	Connecting the power cord and ground lead	45
8B.	Maintenance – To be conducted by a technician only –	46
8B-1	Inspection and maintenance	46
8B-1-1	Inspection items	46
8B-2	Troubleshooting	47
8B-2-1	General	48
8B-2-2	Cabinet Assy	48
8B-2-3	Gun Assy	49
8B-2-4	Wheel Assy	49
8B-2-5	Marquee Assy	49
8B-3	Error display (for the technician)	50
8B-4	Removing and installing Assys and parts	51
8B-4-1	Cabinet Assy	51
(1)	Replacing the Rack Assy	51
(2)	Replacing the power supplies	53
(3)	Replacing the Bass Amp PC Board	54
(4)	Replacing the LCD monitor	55
(5)	Replacing the USIO PC Board	58
(6)	Replacing the Gun Drive PC Board	59
8B-4-2	Gun Assy	60
(1)	Replacing and installing the Gun Assy	60

CONTENTS

(2) Replacing the volume (for left-right).....	61
(3) Replacing the volume (for up-down).....	62
(4) Replacing the microswitch.....	66
(5) Replacing the trigger and spring.....	67
(6) Replacing the illuminated switch/LED lamp in the Start button.....	68
(7) Replacing the vibration unit.....	70
(8) Replacing the gun harness 3d.....	73
(9) Replacing the gun harness 5.....	75
8B-4-3 Wheel Assy.....	76
(1) Removing and installing the Wheel Assy.....	76
(2) Replacing the photosensor (for wheel).....	77
(3) Replacing the wheel.....	79
8B-4-4 Marquee Assy.....	80
(1) Replacing the fluorescent lamps.....	80
 9. DISCARDING THE MACHINE.....	 81
 10. PARTS LISTS.....	 82
10-1 Cabinet Assy.....	82
10-2 Gun Assy.....	84
10-3 Wheel Assy.....	86
10-4 Service Plate Assy.....	87
10-5 Cord Box Assy.....	87
10-6 Marquee Assy.....	88
10-7 Other parts.....	88
 11. WIRING DIAGRAMS.....	 89

2. SPECIFICATIONS

- | | |
|---------------------------------|----------------------------------|
| (1) Rated power supply | 115 \pm 5 VAC (60 Hz) |
| (2) Maximum power consumption | 600 W |
| (3) Maximum current consumption | 5 A |
| (4) Coin box capacity | Approx. 3,000 coins |
| (5) Display device | LCD monitor (32" screen) |
| (6) Dimensions | 34.8"(W) x 36.7" (D) x 89.6" (H) |
| (7) Weight | Approx. 500 lbs. |

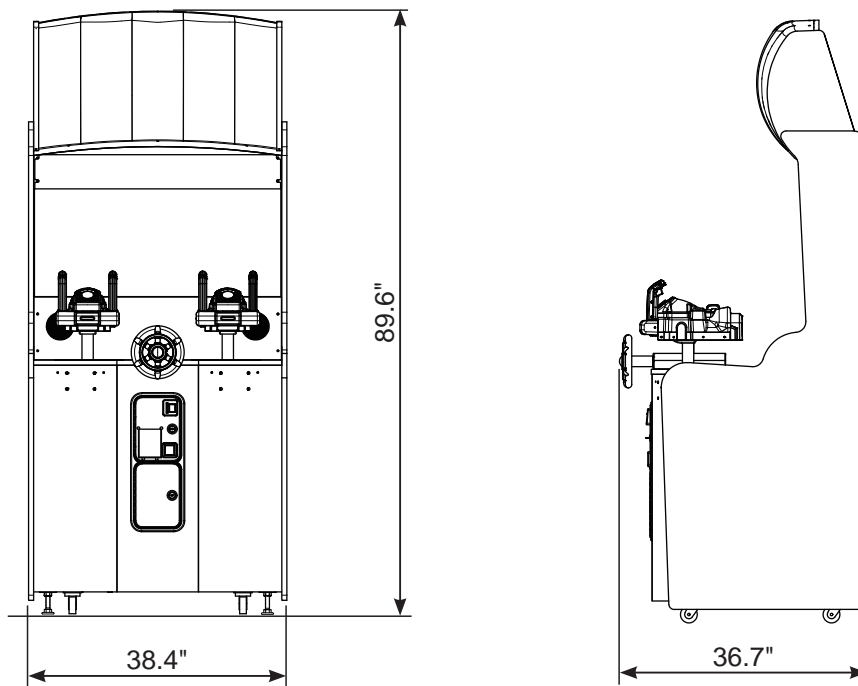

3. CHECKING THE PACKAGE CONTENTS







The product packages shipped from the factory contain the following components and parts.



- Make sure that all the items shown below are contained in the product packages.
- If any item is missing, contact your distributor.


• Package Dimensions : 60" (W) x 31" (D) x ?" (H)

• Accessory list


No.	Name	Specification	Qty.
1	Operation Manual (this manual)		1
2	Maintenance key		2
3	Cash box key		2
4	Coin door key		2
6	Torx wrench	M5, T25 	1
7	Power Cord		1

4. OVERALL CONSTRUCTION (Names of Parts)

■ General view (front side)

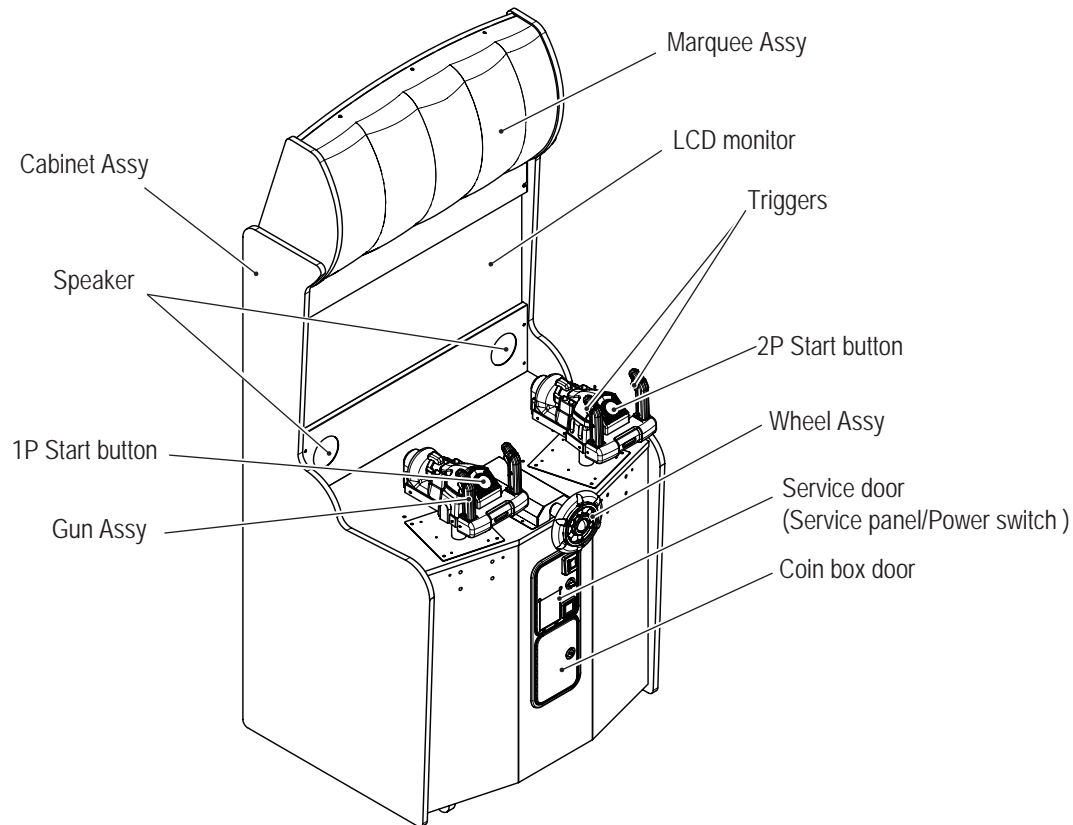

■ General view (rear side)

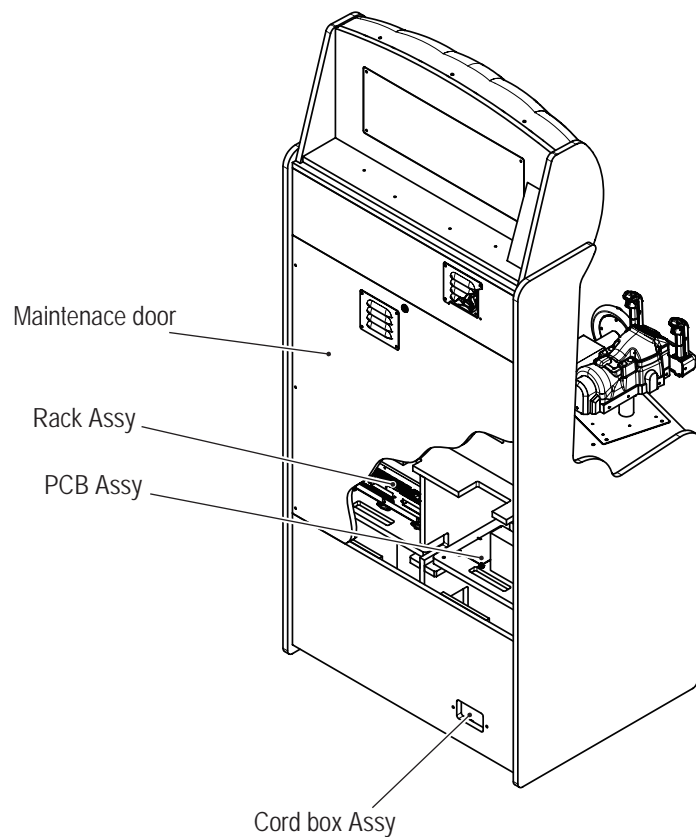

5. INSTALLATION AND CARRY-IN PASSAGE CONDITIONS

WARNING

- Install the machine according to the instructions and procedures specified in this operation manual. Failure to follow the specified procedures may result in a fire, electric shock, injury or machine malfunctions.
- Insert the power cord plug firmly into the AC outlet. Poor contact may cause overheating that can lead to a fire or burns.
- Be sure to connect the ground lead. If the ground lead is not connected, electric shock can result in case of electrical leakage. (See P. 45 "8A-2 Connecting the power cord and ground lead.")
- Install the machine securely by using the level adjusters. Unstable machine installation can result in an accident or injury. (See P. 44 "8A-1 Adjusting level adjusters.")

5-1 Installation conditions

WARNING

- Do not place items near the vent holes on the rear panel of the Monitor Assy of the game machine, or block them with a wall. If those openings are blocked, the inside of the machine becomes extremely hot, and fire or malfunction may result.

5-1-1 Locations to avoid

WARNING


- The machine is designed for indoor use. Never install the machine outdoors or at any of the following places:
 - Place in direct sunlight
 - Place exposed to rain or water leakage
 - Damp place
 - Dusty place
 - Close to heating devices
 - Hot place
 - Extremely cold place
 - Place where dew condensation may occur due to temperature differences
 - Place where the machine may become an obstruction in emergencies (such as near emergency exit), or place where fire extinguisher or similar equipment is installed
 - Unstable place or location where vibrations are produced

5. INSTALLATION AND CARRY-IN PASSAGE CONDITIONS

5-1-2 Play zone for installed machine



- Provide a space of at least 20" between the rear side of the machine and the wall or another machine in order to turn the power switch ON/OFF and open the Maintenance panel.
- The vent holes on the rear side of the machine must not be blocked.
- The distance from the floor to the ceiling must be at least 95".

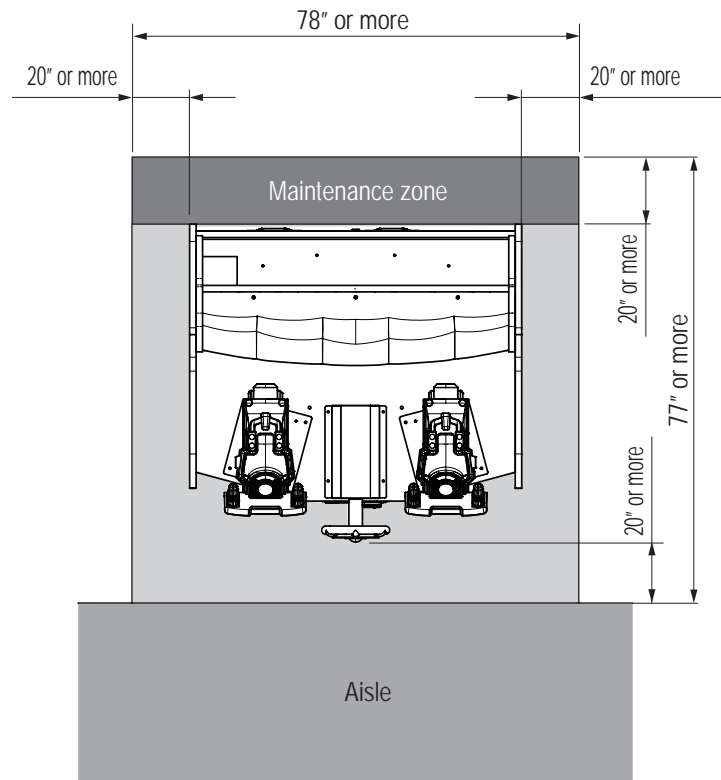

5-2 Required dimensions of carry-in passage (such as doors and corridors)

Remove the Wheel Assy to carry the narrow passage. The dimensions of the Cabinet without the Wheel Assy is 34.8" (W) x 33.7" (D) x 89.6" (H).

6. MOVING AND TRANSPORTING

WARNING

- Do not leave the machine on a slope. If the machine is left on a slope, it may tip over and cause an unexpected accident.

6-1 Moving (on the floor)



NOTICE


- Carefully transport the machine in order to prevent damage to the machine.
- Do not apply excessive force to plastic parts since they can break easily.
- Even when moving the machine a short distance, be sure to raise the **level adjusters all the way**. (See P. 44 “8A-1 Adjusting level adjusters.”)
- Be sure to turn off the power switch before moving the machine.
- Carefully handle power cord. (See P.45 “8A-2 Connecting the power cord and ground lead.”)

6-2 Transportation

6-2-1 Manual transportation (carrying on stairs, etc.)

WARNING

- When carrying the machine manually, make sure that six people are available. Attempting to carry the machine with fewer people can result in an accident or injury.

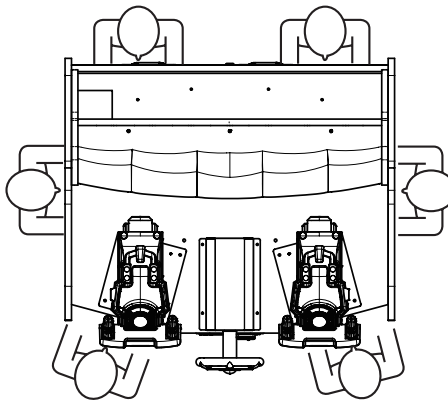

NOTICE

- Avoid dropping to the machine when lowering the machine from a step.

7. OPERATION

WARNING

- Some monitor sections remain hot or charged with high voltage even after the power switch is turned off. Do not touch the monitor unnecessarily in order to avoid electric shock and burns.
- **Dust accumulated on the power cord plug may cause a fire. Check the power cord plug regularly and remove dust.**
- **Insert the power cord plug firmly into the AC outlet. Poor contact may cause overheating that can lead to a fire or burns.**
- Be sure to check that the machine has been installed according to the instructions and procedures specified in this operation manual (see P. 14 “5. INSTALLATION AND CARRY-IN PASSAGE CONDITIONS”) before operating the machine. If the machine is not installed properly, fire, electric shock, injury or equipment malfunction can occur.
- The warning labels describe important safety precautions. Be sure to observe the following:
 - To ensure that the warning labels attached to the machine are easily legible, install the machine at an appropriate location with ample illumination and keep the labels clean at all times. Also, make sure that the labels are not hidden behind another game machine or other objects.
 - Do not remove or alter the warning labels.
 - If the warning labels become excessively dirty or damaged, replace them with new labels. To order warning labels, contact your distributor.
- To ensure safe operation of the machine, be sure to conduct the pre-service check (see P. 16 “7-3 Pre-service check”) and maintenance (see P. 46 “8B. Maintenance”) described in this manual. Failure to conduct the pre-service check or maintenance can result in an accident.

7-1 People who shouldn't play

CAUTION

- To ensure safety of players and prevent accidents, do not allow the following people to play the game machine.
 - People who are sick or recovering from injury
 - People with heart conditions
 - People in poor physical condition
 - People under the influence of alcohol
 - Pregnant women
 - People who do not observe the warnings indicated on the machine

7-2 Safety precautions to be observed by players

CAUTION

- If a player becomes sick due to light stimulation or game images, have the person stop playing the game immediately and let him/her rest.
- In rare cases, stimulation by lights or video images can cause convulsions or loss of consciousness. If this happens, advise the player to consult a doctor as soon **as possible. When pre-school children play, request that their parents or guardians** keep an eye on them.

7. OPERATION

7-3 Pre-service check

Check the following items before commencing operation.

If any problem is found, take corrective measures by referring to "8B-2 Troubleshooting" on page 47.

7-3-1 Safety check (before power ON)

WARNING

- **To prevent accidents and injury, be sure to conduct the pre-service check described in "7-3-1 Safety check (before power ON)" on page 16 before commencing operation.**
- **To prevent accidents and injury, be sure to check that the machine is not installed in a place described in "5-1-1 Locations to avoid" on page 11 before commencing operation.**
- **Operating the machine with damaged, broken or deteriorated parts, or with incorrectly installed parts can cause injury to players or people near the machine. If an abnormality is found, replace defective parts immediately. To order parts, contact your distributor.**

- (1) Are all warning indications in place? (See P. 3 "1-4 Description of warning labels attached to the machine.")
- (2) Are the warning indications legible? (See P. 3 "1-4 Description of warning labels attached to the machine.")
- (3) Are all level adjusters adjusted properly? (See P. 44 "8A-1 Adjusting level adjusters.")
- (4) Is the specified play zone provided? (See P. 12 "5-1-2 Play zone of installed machine.")
- (5) Are the power cord and communication cable routed so that they will not cause players or other customers to trip?
- (6) Is the power cord securely connected to the AC outlet, and is the power input socket securely connected to the machine? (See P. 45 "8A-2 Connecting the power cord and ground lead.")
- (7) Is the power cord plug free of dust? (See P. 45 "8A-2 Connecting the power cord and ground lead.")

Check the following items after turning on the power switch. If an abnormality is found, turn off the power switch immediately to stop operating the machine. Then, unplug the power cord from the AC outlet and contact your distributor.

- (8) Is any part of the power cord or plug abnormally hot?
- (9) Does touching the machine give an electric shock?
- (10) Is there a burning smell, abnormal noise or vibration?
- (11) Are there any other signs of abnormality or malfunction?

7-3-2 Operation check (after power ON)

Check the following items in the Test mode. (See P. 21 "7-5-2 Adjustment switches.")

- (1) Check the lamps for proper operation. (Do the fluorescent lamps and Start buttons light?)
(See P. 25 "7-6-4 Switch/sensor test (I/O TEST).")
- (2) Check the Start buttons for proper operation.
(See P. 25 "7-6-4 Switch/sensor test (I/O TEST).")
- (3) Check the wheel for proper operation.
(See P. 25 "7-6-4 Switch/sensor test (I/O TEST).")
- (4) Check the guns for proper operation.
(See P. 25 "7-6-4 Switch/sensor test (I/O TEST).")
- (5) Check the displayed image. (Does the monitor show images properly?)
(See P. 32 "7-6-5 Monitor adjustment (MONITOR TEST).")
- (6) Check the sound. (Is sound produced by each speaker?)
(See P. 34 "7-6-6 Sound adjustment (SOUND TEST).")

7. OPERATION

7-4 How to play

(1) Basic rules

1. Players shoot approaching enemy pirates and monsters.
2. The player's life level decreases when the player is struck by a sword or bitten. If the player fails to turn the wheel as instructed when it is necessary to do so, the life level also decreases. When the life level decreases to 0, the game ends.
3. When a circular target mark appears on an enemy's body or on the weapon thrown by an enemy, shoot and destroy it.
4. There are two types of target marks: normal target marks and gold target marks. A gold target mark appears on a strong and powerful enemy who is difficult to destroy. Use "united shots" to destroy a strong and powerful enemy. (See P. 18 "7-4 (3) Explanation of the game system.")
5. When two people are playing the game, the rating of the combination play of the two players is displayed on the result screen. The combination play rating becomes higher when the players use united shots effectively to destroy enemies and operate the wheel skillfully to evade danger.

(2) Operating method

1. Shooting the golden gun — Pull the trigger on the gun-shaped controller (Gun Assy) to shoot. When the trigger is held, the gun shoots consecutively.
2. Shooting the cannon — When the weapon changes to a cannon, pull the trigger to shoot the cannon. To shoot the cannon continuously, it is necessary to pull the trigger after each shot, unlike the golden gun. Also, there will be a time delay between shots.
3. Turning the wheel — It is necessary to turn the wheel to navigate the ship or dodge the enemy's attack in some situations during the game. Turn the wheel according to the instructions displayed on the screen to evade danger.

(3) Explanation of the game system

1. United shot

By aligning the gunsights of the two guns on a target, players can launch a united shot that is more powerful than an ordinary shot. When shooting united shots, the gunsight on the screen becomes larger and the color of the shots and the shooting sound also change.

Use united shots to destroy enemies with a gold target mark. Other enemies can also be destroyed more easily when united shots are used.

2. Power-up shot

When a player shoots a green gem placed on a ship or in the pirates' hide-out, the gun of the player who shot the gem increases in power and is able to destroy many enemies with each shot.

3. Red cask

The red casks placed on a ship or in pirates' hide-out explode when shot. By shooting a red cask near enemies, the cask explodes and destroys the enemies nearby.

4. Treasure box

When a player shoots a treasure box on a ship or in the pirates' hide-out, the player gains additional points.

5. Selection of treasure box

In the event indicated "TREASURE HUNT," a player selects one from two or three treasure boxes shown on the screen and shoots it. If the shot treasure box contains an item, the player's life level increases.

6. Continuity roulette

When two people are playing the game, a player's life level will increase if the other player plays the Continuity game, the other player's life level also increases.

The amount of life level increase is determined by the roulette that appears in the Continuity game.

The roulette stops after a certain time, but it can be stopped by pressing the Start button.


(4) Start button

1. The game starts on the side on which the Start button is pressed.
When the left-side Start button is pressed, the player plays the game as Eric (red).
When the right-side Start button is pressed, the player plays the game as Leah (blue).
2. A player can join the game anytime during the game.
3. When the message, "Press the Start button to skip," appears during a demo scene between game scenes, pressing the Start button skips the demo scene.

7. OPERATION

7-5 Explanation of the power switch and adjustment switches


7-5-1 Power switch location and turning on the switch

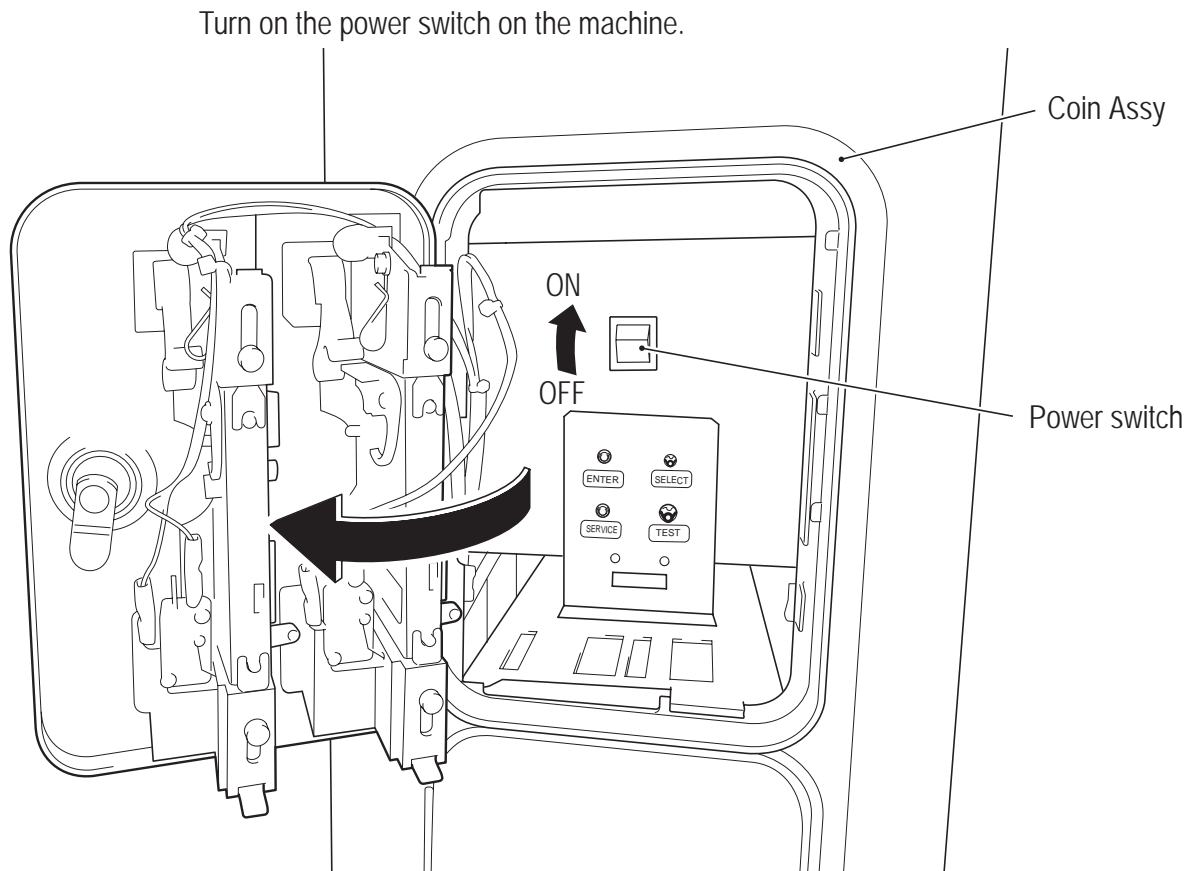

- Be sure to complete the installation and setup of the machine before turning on the power switch.
- **When turning the power switch on or off, wait at least 30 seconds** between switch operations. Do not repeat turning the power switch on and off unnecessarily. Repeated on/off operations can cause damage to the data in the backup memory.

7-5-2 Adjustment switches

Open the service door to gain access to the adjustment switches.

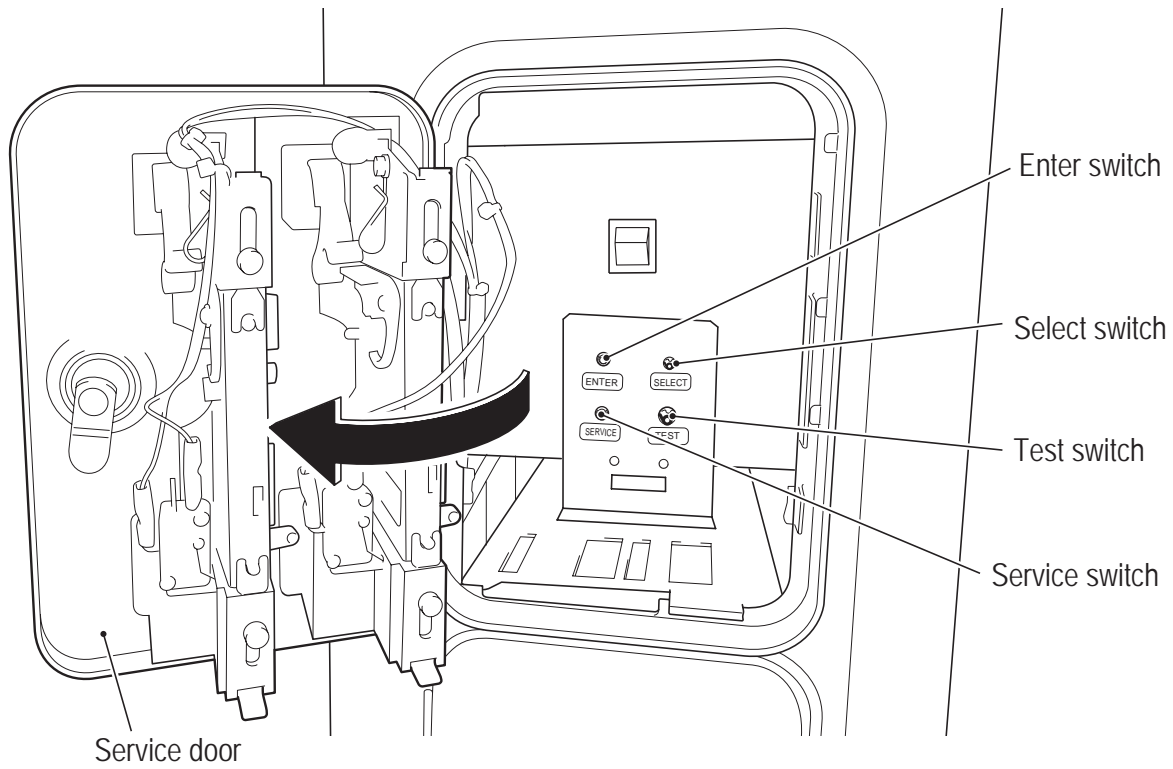

(a) Service switch

Press this switch to increase the credit count without activating the coin counter.

(b) Select switch

In the Test mode, flip this switch up or down to select an item or setting (numeric value).

(c) Test switch

Set this switch to ON to activate the Test mode. The Test mode is used to test the monitor ,the sound, etc.. (See P. 22 "7-6 Test mode.")

(d) Enter switch

After selecting an item or setting (numeric value) with the Select switch, press this switch to enter or execute the selection.


7. OPERATION

7-6 Test mode

7-6-1 Description of the menu screen (MENU)

- 1

Unlock the service door and set the Test switch to ON. (See P. 21 “7-5-2 Adjustment switches.”)
The Menu screen appears on the monitor.

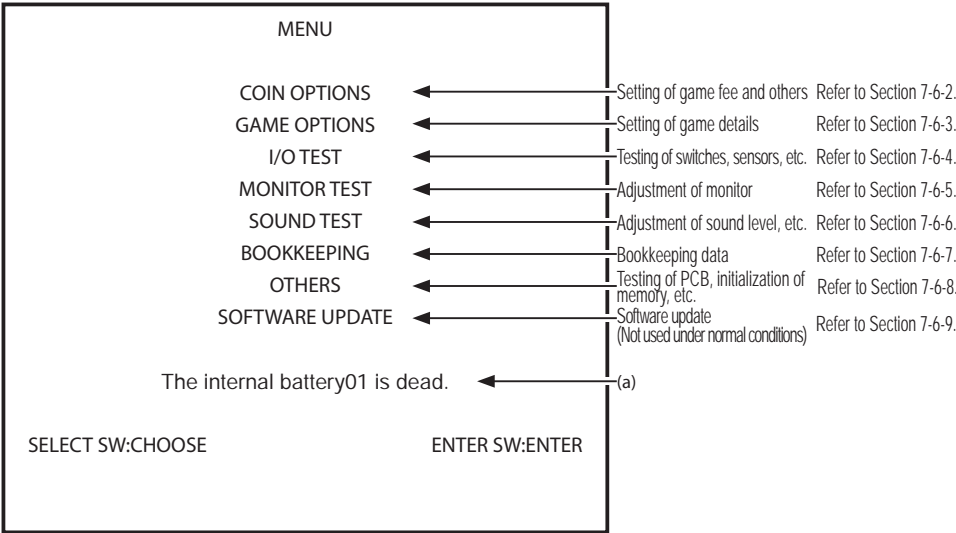

Menu screen

Item	Description
(a) This error message appears when the internal battery of the Rack Assy runs out. (The number shown immediately after “battery” may be “02” in some cases.)	When this message appears, turn off the power switch and wait for about 10 minutes. Then, turn on the power switch again. If an error message, “BACKUP MEMORY ERROR,” appears during the startup, set the Test switch to ON to activate the Test mode and initialize the backup memory (see P 36 “7-6-8 (2) BACKUP MEMORY INITIALIZE.”). If the same error is generated after the power switch is turned off and on again, the internal battery may be low in capacity or defective.

- 2

Flip the Select switch up or down to select an item. The selected item blinks.
* When “EXIT” is displayed on the screen, selecting “EXIT” and entering the selection returns the display to the previous screen.
- 3

Press the Enter switch to enter the selection.
- 4


When the selection is entered, the screen shows the applicable setting items.
- 5

After all adjustments are completed, set the Test switch to OFF.
The display returns to the game screen.

7-6-2 Game fee setting (COIN OPTIONS)

This screen is used to set the game fee, etc..

- 1
- Select “COIN OPTIONS” in the Menu screen and press the Enter switch. (See P. 22 “7-6 -1 Description of the menu screen (MENU).”)
The Coin Options screen appears on the monitor.

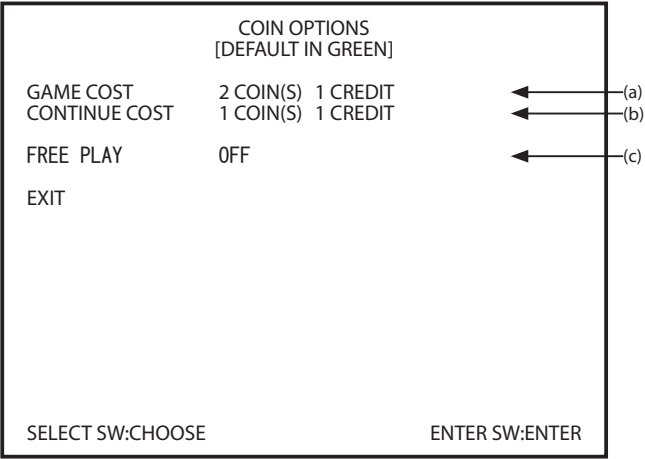

Coin Options screen

Item	Description	Default setting
(a) GAME COST	Set the number of coins required to play the game. 1 to 19 coins	2
(b) CONTINUE COST	Set the number of coins required to play Continuity game. 1 coin to the value entered in GAME COST The value set in CONTINUE COST cannot be larger than the value set in GAME COST. If the value in GAME COST is reduced to a value lower than the value in CONTINUE COST, the value in CONTINUE COST is automatically changed to the same value set in GAME COST.	1
(c) FREE PLAY	ON (Free play available) OFF(Free play unavailable)	OFF


- 2
- Flip the Select switch up or down to select an item.
The selected item blinks.
- 3
- Press the Enter switch to enter the selection.
- 4
- After the selection is entered, change the setting using the Select switch.
- 5
- After the setting has been changed, press the Enter switch to return to the item selection screen.
- 6
- To return to the Menu screen, select “EXIT” and press the Enter switch.

7. OPERATION

7-6-3 Game detail setting (GAME OPTIONS)

This screen is used to set game details.

- 1
- Select “GAME OPTIONS” in the Menu screen and press the Enter switch. (See P. 22 “7-6 -1 Description of the menu screen (MENU).”)
The Game Options screen appears on the monitor.
Parameters in default setting are indicated in green.

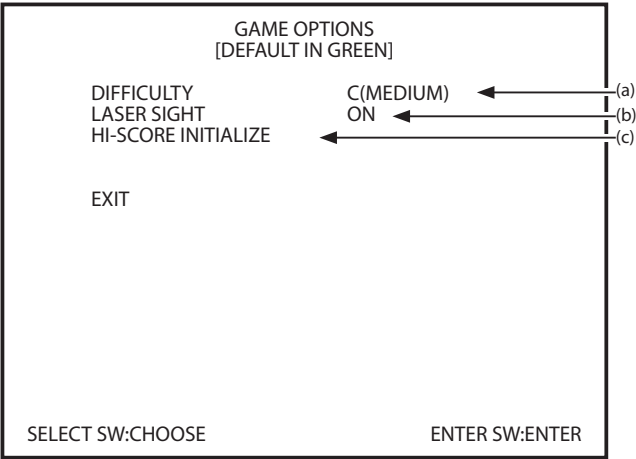

Game Options screen


Item	Description	Default setting
(a) DIFFICULTY	Set the game difficulty level. A (VERY EASY) B (EASY) C (MEDIUM) D (HARD) E (VERY HARD)	C (MEDIUM)
(b) LASER SIGHT	Shows a line from the gun to the crosshair aim to assist player.	ON
(c) HI-SCORE INITIALIZE	Initializes the stored high score data. When this item is selected and entered, the screen displays a message, “HI-SCORE INITIALIZE?,” and prompts for the input of “YES” or “NO.” NO: Returns to the item selection screen without initializing the high score data. YES: Initializes the high score data.	—

- 2
- Flip the Select switch up or down to select an item.
The selected item blinks.
- 3
- Press the Enter switch to enter the selection.
- 4
- After the selection is entered, change the setting using the Select switch.
- 5
- After the setting has been changed, press the Enter switch to return to the item selection screen.
- 6
- To return to the Menu screen, select “EXIT” and press the Enter switch.

7-6-4 Switch/sensor test (I/O TEST)

This screen is used to test the switches, etc..

- 1
- Select “I/O TEST” in the Menu screen and press the Enter switch. (See P. 22 “7-6-1 Description of the menu screen (MENU).”) The I/O Test screen appears on the monitor.

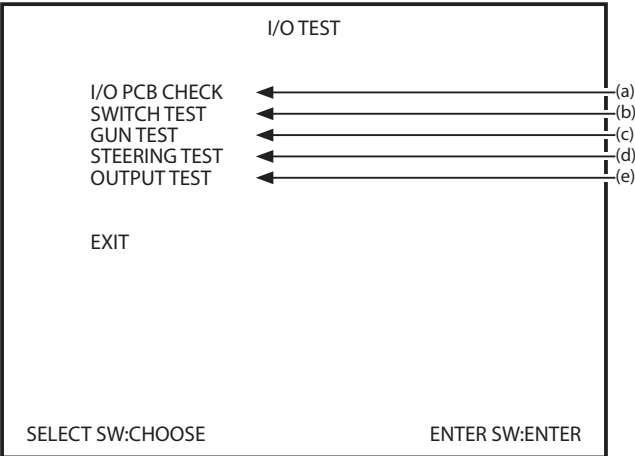

I/O Test screen


Item	Description
(a) I/O PCB CHECK	Checks the I/O PC Board.
(b) SWITCH TEST	Executes the switch input test.
(c) GUN TEST	Executes the Gun Assy test, initializes the Gun Assys.
(d) STEERING TEST	Executes the wheel test.
(e) OUTPUT TEST	Executes the illuminated button test and Gun Assy vibration test.

- 2
- Flip the Select switch up or down to select an item. The selected item blinks.
- 3
- Press the Enter switch to enter the selection. When the selection is entered, the screen shows the details of the selected item.
- 4
- To return to the Menu screen, select “EXIT” and press the Enter switch.

7. OPERATION

(1) I/O PCB CHECK

This screen is used to confirm the condition of the USIO PC Board.

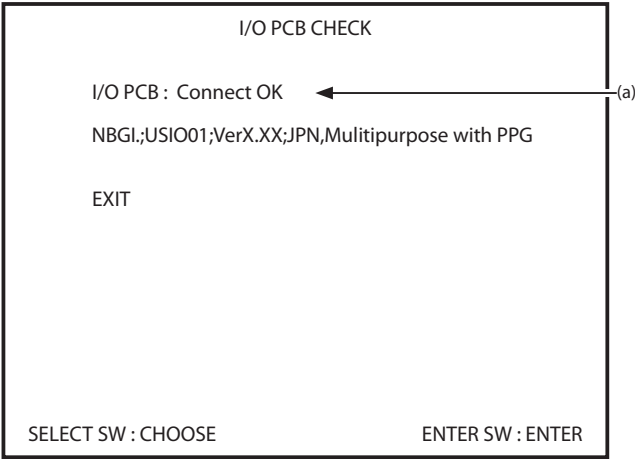

I/O PCB Check screen


Item	Description
(a) I/P PCB	Displays "CONNECT OK" when the PC Board is normal.

To return to the I/O Test screen, select "EXIT" and press the Enter button.

(2) SWITCH TEST

This screen is used to test the switches.

- 1** Select "SWITCH TEST" in the I/O Test screen and press the Enter switch. (See P. 25 "7-6-4 Switch/sensor test (I/O TEST).")
The Switch Test screen appears on the monitor.

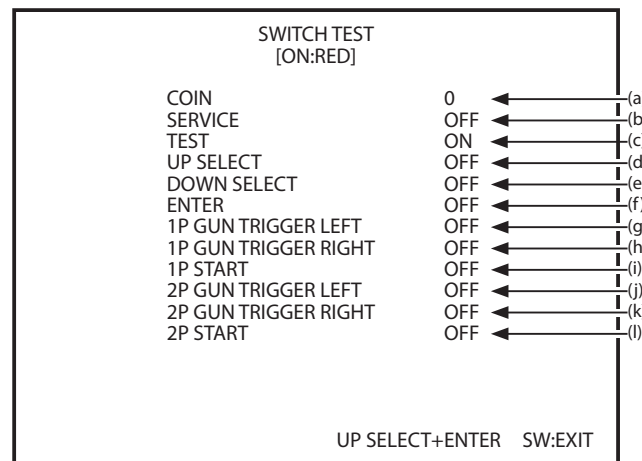

Switch Test screen

Item	Description
(a) COIN	The counter increments by 1 each time the coin switch receives input. When the counter value exceeds 255, it returns to 0. The coin counter also operates.
(b) SERVICE	Shows "ON" while the Service switch is pressed. (In the Test mode, pressing the switch does not add any credit.)
(c) TEST	Shows "ON" when the Test switch is set to ON. (Since the Test mode screen is being displayed, this indication always shows "ON.")
(d) UP SELECT	Shows "ON" while the Select switch is in the raised position
(e) DOWN SELECT	Shows "ON" when the Select switch is the lowered position.
(f) ENTER	Shows "ON" while the Enter switch is pressed.
(g) 1P GUN TRIGGER LEFT	Shows "ON" while the Trigger button (left) on the 1P-side Gun Assy is pressed.
(h) 1P GUN TRIGGER RIGHT	Shows "ON" while the Trigger button (right) on the 1P-side Gun Assy is pressed.
(i) 1P START	Shows "ON" while the 1P-side Start button is pressed.
(j) 2P GUN TRIGGER LEFT	Shows "ON" while the Trigger button (left) on the 2P-side Gun Assy is pressed.
(k) 2P GUN TRIGGER RIGHT	Shows "ON" while the Trigger button (right) on the 2P-side Gun Assy is pressed.
(l) 2P START	Shows "ON" while the 2P-side Start button is pressed.

- 2** Press each switch and check for proper operation.
- 3** To return to the I/O Test screen, hold the Select switch in the raised position and press the Enter switch.

7. OPERATION


(3) GUN TEST

This screen is used to test and initialize the gunsights of the Gun Assys and test the operation of the gun vibration units.



- After maintaining or replacing a Gun Assy or USIO PC Board, be sure to conduct the calibration described in “GUN CALIBRATION” on page 33.

- 1** Select “GUN TEST” in the I/O Test screen and press the Enter switch. (See P. 25 “7-6-4 Switch/sensor test (I/O TEST).”) The Gun Test screen appears on the monitor.

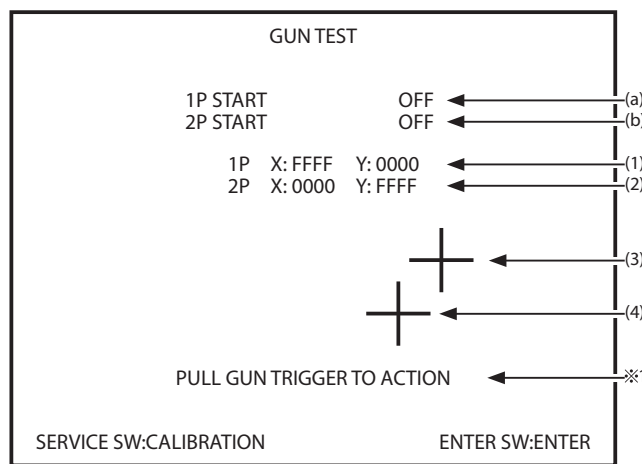

Gun Test screen

Item	Description
(a) 1P START	Shows the status of the Start button on the 1P-side Gun Assy. *2
(b) 2P START	Shows the status of the Start button on the 2P-side Gun Assy. *2
(1) 1P X-coordinate, Y-coordinate	Shows the X and Y coordinates of the crosshair aim of the 1P-side gun.
(2) 2P X-coordinate, Y-coordinate	Shows the X and Y coordinates of the crosshair aim of the 2P-side gun.
(3) Gun crosshairs (red)	Shows the crosshair aim of the 1P-side Gun Assy on the screen.
(4) Gun crosshairs (blue)	Shows the crosshair aim of the 2P-side Gun Assy on the screen.

*1 The vibration unit operates when the trigger on a Gun Assy is pulled.


*2 The Start button lights when it is pressed.

- 2** Loosen the wing bolt, move the service switch cover to a side, and press the Service switch to display the calibration setting screen. (See P. 29 “7-6-4 (4) GUN CALIBRATION.”)
- 3** To return to the I/O Test screen, press the Enter switch.

(4) GUN CALIBRATION

This screen is used to calibrate the Gun Assys.

- 1** Press the Service switch while the Gun Test screen is displayed. (See P. 28 "7-6-4 (3) GUN TEST.")
The Gun Calibration screen appears on the monitor.

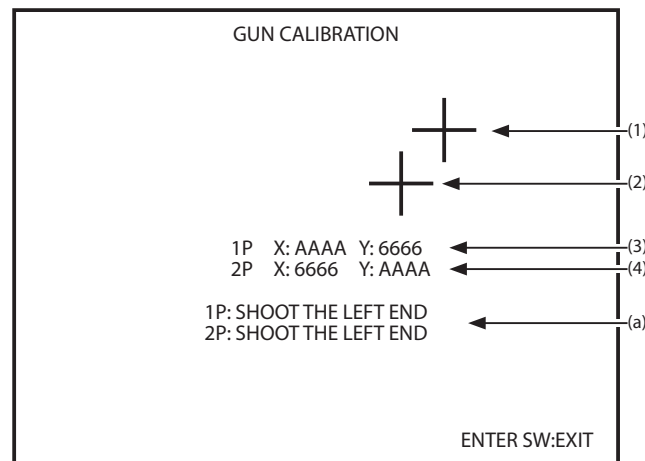

Gun Calibration screen

Item	Description
(1) Gun crosshairs (red)	Shows the location of the crosshairs of the 1P-side Gun Assy (after completion of adjustment).
(2) Gun crosshairs (blue)	Shows the location of the crosshairs of the 2P-side Gun Assy (after completion of adjustment).
(3) 1P X-coordinate, Y-coordinate	Shows the X and Y coordinates of the crosshairs of the 1P-side gun.
(4) 2P X-coordinate, Y-coordinate	Shows the X and Y coordinates of the crosshairs of the 2P-side gun.
(a) Displays the procedure for calibrating the gun	<p>Gun calibration can be performed by moving and operating each Gun Assy on the 1P and 2P sides as shown below.</p> <p>(1) [SHOOT THE LEFT END] Move the gun all the way to the left and press the Trigger button once.</p> <p>(2) [SHOOT THE RIGHT EDGE] Move the gun all the way to the right and press the Trigger button once.</p> <p>(3) [SHOOT THE TOP] Move the gun all the way to the top and press the Trigger button once.</p> <p>(4) [SHOOT THE BOTTOM] Move the gun all the way to the bottom and press the Trigger button once.</p> <p>(5) [FINISHED] The calibration has been completed. The adjustment data is saved and the crosshairs appear on the screen.</p>


- 2** Move the gun being calibrated all the way to the left and press the Trigger button once. The left limit position of the crosshairs is set.
- 3** In the same manner, press the Trigger button each time after moving the gun all the way to the right, to the top and then to the bottom.
- 4** To return to the Gun Test screen, press the Enter switch.

7. OPERATION

(5) STEERING TEST

This screen is used to test the sensor for detecting the wheel rotation.

- 1
- Select "STEERING TEST" in the I/O Test screen and press the Enter switch. (See P. 25 "7-6-4 Switch/sensor test (I/O TEST).")
The Steering Test screen appears on the monitor.

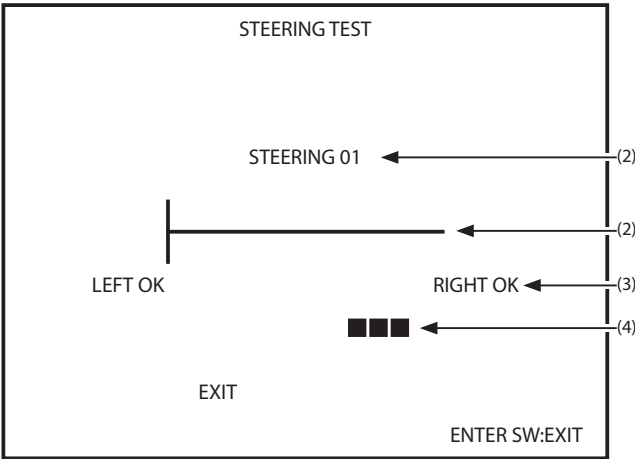

Steering Test screen

Item	Description
(1) Wheel counter	Displays the wheel count.
(2) Wheel bar	The bar graph shows the wheel movement detected by the sensor.
(3) Wheel sensitivity stability measurement	Displays "OK" when the wheel sensor is normal.
(4) Wheel rotation speed measurement	The wheel turning speed is indicated by the number of "■" marks.


- 2
- Turn the wheel to the left and then to the right to make sure that "OK" is displayed each time.
- 3
- To return to the I/O Test screen, press the Enter switch.

(6) OUTPUT TEST

This screen is used to conduct output tests.

- 1

Select "OUTPUT TEST" in the I/O Test screen and press the Enter switch. (See P. 25 "7-6-4 Switch/sensor test (I/O TEST).")
The Output Test screen appears on the monitor.

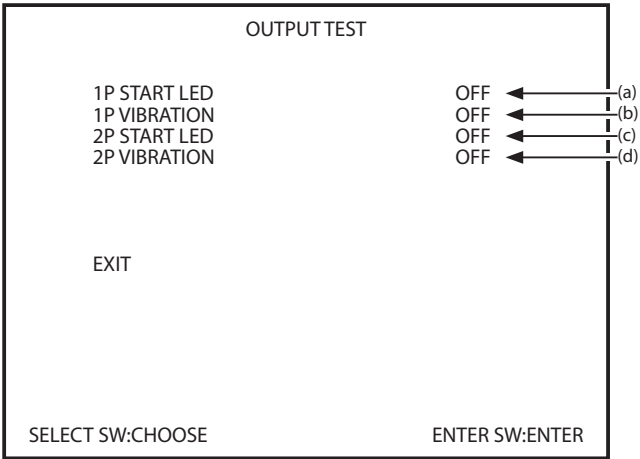

Output Test screen

Item	Description
(a) 1P START LED	When this item is set to "ON," the 1P-side Start button lights.
(b) 1P VIBRATION	When this item is set to "ON," the vibration unit of the 1P-side Gun Assy vibrates.
(c) 2P START LED	When this item is set to "ON," the 2P-side Start button lights.
(d) 2P VIBRATION	When this item is set to "ON," the vibration unit of the 2P-side Gun Assy vibrates.

- 2

Using the Select switch, select an item, and then press the Enter switch to enter the selection.
The selected item blinks.
- 3

Using the Select switch, select ON or OFF, and then press the Enter switch to enter the selection.
The selected item operates.
- 4

To return to the I/O Test screen, select "EXIT" using the Select switch, and press the Enter switch.


7. OPERATION

7-6-5 Monitor adjustment (MONITOR TEST)

This screen is used to adjust the monitor.

- 1

Select "MONITOR TEST" in the Menu screen and press the Enter switch. (See P. 22 "7-6 -1 Description of the menu screen (MENU).")
The Monitor Test screen appears on the monitor.

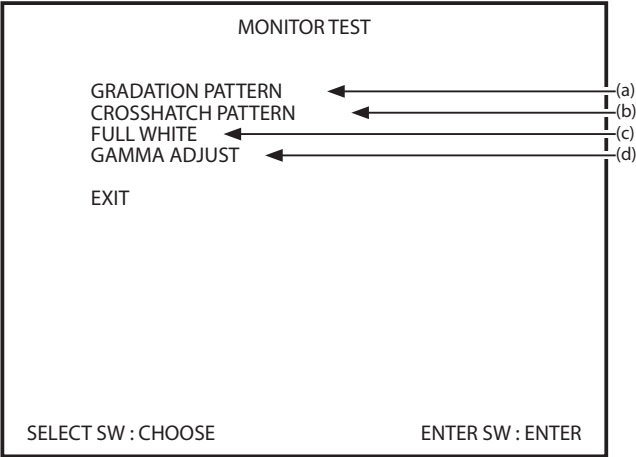

Monitor Test screen

Item	Description
(a) GRADATION PATTERN	Displays a 16-step gradation pattern.
(b) CROSSHATCH PATTERN	Displays a crosshatch pattern.
(c) FULL WHITE	Displays all-white screen.
(d) GAMMA ADJUST	Displays the gamma adjustment screen. (See P. 32 "7-6-5 (1) GAMMA ADJUST.")

- 2

Flip the Select switch up or down and select an item to be changed.
- 3

Press the Enter switch to display the test screen for the selected item.
- 4


To return to the Monitor Test screen, press the Enter switch again.
- 5

To return to the I/O Test screen, select "EXIT" and press the Enter switch.

(1) GAMMA ADJUST

This screen is used to adjust the gamma values (color).

- 1
- Select "GAMMA ADJUST" in the Monitor Test screen and press the Enter switch.
(See P. 32 "7-6-5 Monitor adjustment (MONITOR TEST).")
The Gamma Adjust screen appears on the monitor.

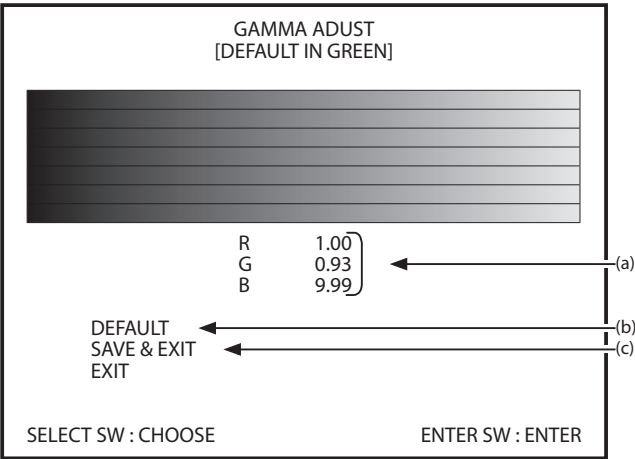

Gamma Adjust screen

Item	Description
(a) Gamma values	Change the gamma value for each of R, G and B. Each value can be adjusted in a range of 0.00 to 1.00 in intervals of 0.01. (The value increments or decrements by 0.1 when the Select switch is kept in the raised or lowered position.)
(b) DEFAULT	Returns all gamma values to 1.00 (default setting).
(c) SAVE & EXIT	Saves the settings and returns to the Monitor Test screen.

- 2
- Flip the Select switch up or down to select an item.
The selected item blinks.
- 3
- Press the Enter switch to enter the selected item. Selecting and entering the item (b) or (c) reflects the settings displayed on the screen. (Proceed to 4 when (a) is selected. Proceed to 6 when (b) is selected. When (c) is selected, the display returns to the Monitor Test screen.)
- 4
- Using the Select switch, adjust the gamma value.
- 5
- After changing the gamma values, press the Enter switch for selection of another item.
- 6
- To return to the Monitor Test screen, select "EXIT" and press the Enter switch.


7. OPERATION

7-6-6 Sound adjustment (SOUND TEST)

This screen is used to set the sound level and left/right output levels, as well as check the sound level (stereo check).

- 1** Select "SOUND TEST" in the Menu screen and press the Enter switch. (See P. 22 "7-6 -1 Description of the menu screen (MENU).")

The Sound Test screen appears on the monitor.

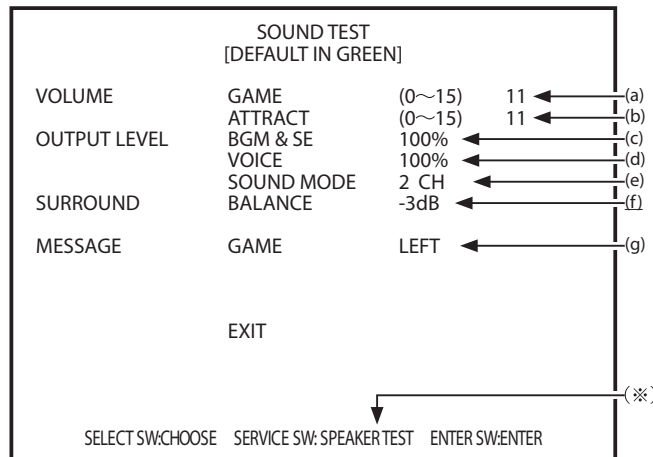

Sound Test screen

Item	Description	Default setting
(a) VOLUME GAME	Set the general sound level in the game mode. 0 (no sound) to 15 (max.)	11
(b) VOLUME ATTRACT	Set the general sound level in the Attract mode. 0 (no sound) to 15 (max.)	11
(c) BGM & SE	Set the sound output level of the background music and sound effects. 0 (no sound) to 100% (max.), 10% steps	100%
(d) VOICE	Set the sound output level of the characters' voices. 0 (no sound) to 100% (max.), 10% steps	100%
(e) SOUND MODE	5.1 CH/2.1 CH (This setting is not changed under normal conditions)	2.1 CH
(f) SURROUND BALANCE	<ul style="list-style-type: none"> If (e) indicates "5.1 CH," this item cannot be changed. If (e) indicates "2.1 CH," this item can be changed in 7 steps (-6 dB, -5 dB, -4 dB, -3 dB, -2 dB, -1 dB, 0 dB, 1 dB). 	FIX (5.1 ch) -3dB (2.1 ch)
(g) MESSAGE	Indicates the location of the speaker that is currently producing sound and its sound level setting.	

* When the Service switch is pressed, the speakers start producing sound in the following order.
Center → Front left → Front right → Rear left → Rear right → Woofer
When the Service switch is pressed with "VOLUME ATTRACT" selected, the speakers produce sound at the level set in "VOLUME ATTRACT."
If the Service switch is pressed when "VOLUME ATTRACT" is not selected, the speakers produce sound at the level set in "VOLUME GAME."

- 2** Flip the Select switch up or down and select an item to be changed.
- 3** Press the Enter switch to enter the selection.
- 4** After entering the selection, change the setting using the Select switch.
- 5** To return to the Menu screen, select "EXIT" and press the Enter switch.

7-6-7 Game data display/initialization (BOOKKEEPING)

This screen is used to display various game data.


- 1** Select "BOOKKEEPING" in the Menu screen and press the Enter switch. (See P. 22 "7-6 -1 Description of the menu screen (MENU).")
The Bookkeeping screen appears on the monitor.
- 2** To change the page, select "NEXT" or "PREVIOUS" using the Select switch, and then press the Enter switch.
- 3** Select "BOOKKEEPING INITIALIZE" and press the Enter switch. The screen shows "YES" and "NO." Select "YES" and press the Enter switch to clear data to default.
* Data can also be initialized by using "BACKUP MEMORY INITIALIZE" (see P. 36 "7-6-8 Initialization and others (OTHERS)") in the Others screen.
- 4** To return to the Menu screen, select "EXIT" and press the Enter switch.

7. OPERATION

7-6-8 Initialization and misc. setting (OTHERS)

This screen is used to initialize bookkeeping data (BOOKKEEPING), etc..

- 1
- Select "OTHERS" in the Menu screen and press the Enter switch. (See P. 22 "7-6-1 Description of the menu screen (MENU).")
The Others screen appears on the monitor.

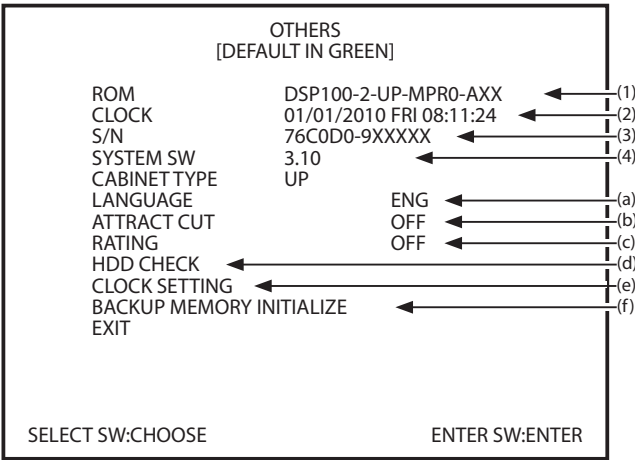

Others screen


Item	Description
(1) ROM	Shows the version of the program on the hard disk.
(2) CLOCK	Shows the internal clock time.
(3) S/N	Shows the software serial No. (Indicates "NO USB KEY" if the USB dongle is not installed.)
(4) SYSTEM SW	Shows the system software version.
(a) LANGUAGE	Shows the language setting. ("JPN" (Japanese))
(b) ATTRACT CUT	This is used to set whether to display the Attract demo scenes.
(c) RATING	This is used to set the color of damage display (OFF: Red, ON: Green).
(d) HDD CHECK	This is used for checking the hard disk. (See P. 37 "7-6-8 (1) HDD CHECK.")
(e) CLOCK SETTING	This is used to set the internal clock. (See. P. 39 "7-6-8 (3) CLOCK SETTING.")
(f) BACKUP MEMORY INITIALIZE	This is used to initialize the backup memory. (YES: Initialize, NO: Abort) (See P. 38 "7-6-8 (2) BACK UP MEMORY INITIALIZE.")

- 2
- Flip the Select switch up or down and select an item to be changed.
- 3
- Press the Enter switch to enter the selection.
- 4
- When (a), (b), (c) and (f) is selected, change the setting using the Select switch.
When (d) is selected, the screen displays the information of the selected item.
- 5
- To return to the Menu screen, select "EXIT" and press the Enter switch.

(1) HDD CHECK

This screen displays the HDD check result.

- 1
- Select “HDD CHECK” in the Others screen and press the Enter switch. (See P. 36 “7-6-8 Initialization and others (OTHERS).”)
The HDD Check screen appears on the monitor.

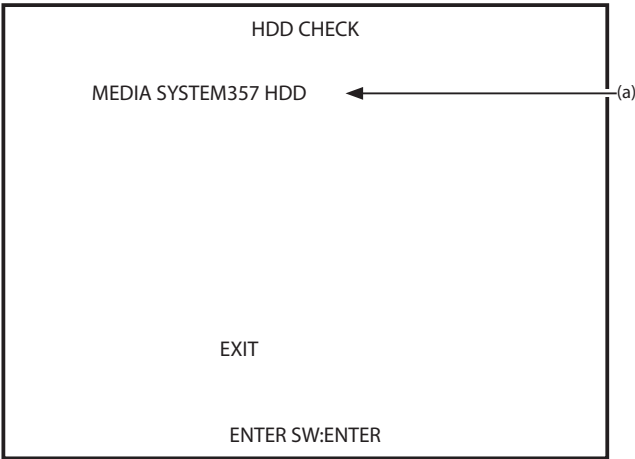

HDD Check screen

Item	Description
(a) SYSTEM 357 HDD	The installed hard disk is normal. If the above screen is not displayed, the hard disk or Rack Assy (SYS357) may be defective. Contact your distributor.


- 2
- To return to the Others screen, select “Exit” and press the Enter switch.

7. OPERATION

(2) BACK UP MEMORY INITIALIZE

This screen is used to initialize the backup memory.

- 1 Select “BACK UP MEMORY INITIALIZE” in the Others screen and press the Enter switch. (See P. 36 “7-6-8 Initialization and others (OTHERS).”)
- 2 Using the Select switch, select an item.
The selected item blinks.
- 3 Press the Enter switch to enter the selection.
When “BACK UP MEMORY INITIALIZE” is selected and entered, the screen displays “BACK UP MEMORY INITIALIZE” and prompts for the input of “YES” or “NO.”
Selecting “YES” starts the initialization process. When the initialization is finished, data in the memory return to default.
Select “BACK UP MEMORY INITIALIZE.”

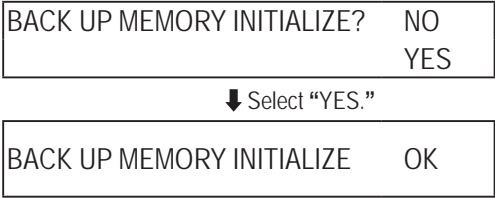


- 4 To return to the Menu screen, select “EXIT” and press the Enter switch.

(3) CLOCK SETTING

This screen is used to set the internal clock.

- 1 Select “CLOCK SETTING” in the Others screen and press the Enter switch. (See P. 36 “7-6-8 Initialization and others (OTHERS).”)
The Clock Setting screen appears on the monitor.

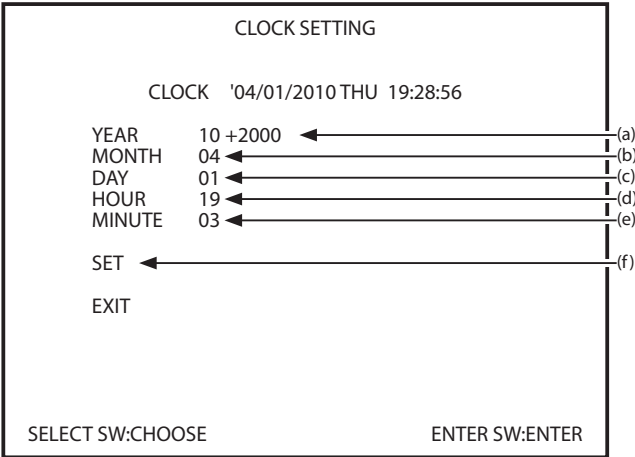

Clock Setting screen

Item	Description
(a) YEAR	Setting of the year (00 to 99)
(b) MONTH	Setting of the month (01 to 12)
(c) DAY	Setting of the day (01 to 31)
(d) HOUR	Setting of the hour (00 to 23)
(e) MINUTE	Setting of the minute (00 to 59)
(f) SET	Enter the clock settings. The values (1) through (e) are set in the internal clock.


- 2** Using the Select switch, select an item.
The selected item blinks.
- 3** Press the Enter switch to enter the selection.
- 4** After selecting an item, change the setting using the Select switch.
- 5** After changing the setting, press the Enter switch for selection of another item.
- 6** After changing the items (a) through (e), select “SET” and press the Enter switch to enter the settings in the internal clock. The clock starts from the set date/time at 00 second.
- 7** Select “EXIT” and press the Enter switch to return to the Menu screen.
Set the Test switch to OFF to return to the game screen, and then check to make sure that the clock displays the correct date/time.

7. OPERATION

7-6-9 Software update

This screen is used to update the software (not used under normal conditions).

- 1** Select “SOFTWARE UPDATE” in the Menu screen and press the Enter switch.
(See P. 22 “7-6 -1 Description of the menu screen (MENU).”)
The Software Update screen appears on the monitor

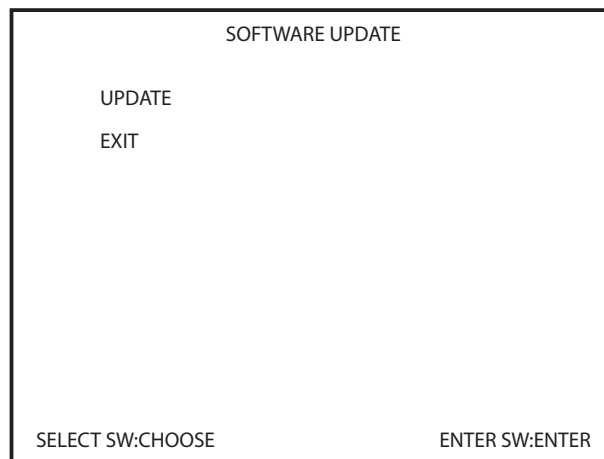

Software Update screen

- 2** To return to the Menu screen, select “EXIT” and press the Enter switch.

7-7 Error display (for the arcade operator)



- The following shows items to be checked by the arcade operator.
- If the same error indication remains after the appropriate countermeasure has been taken, set the Test switch to ON and then to OFF to cancel the error indication.

Error indication	Cause	Remedy
BATTERY02 ERROR	The Rack Assy PCB is defective.	Request a technician to correct the problem.
NOT CONNECT I/O-PCB	The USIO PC Board or its harness is defective.	Request a technician to correct the problem.
BACKUP MEMORY ERROR	The USIO PC Board is defective.	Request a technician to correct the problem.
	The data in the backup memory is damaged.	Initialize the backup memory. (See P. 36 "7-6-8Initialization and others (OTHERS).")
FIRMWARE ERROR	The USIO PC Board is defective.	Request a technician to correct the problem.
MEMORY ERROR	The USIO PC Board is defective.	Request a technician to correct the problem.
SYSTEM ERROR 01	The Rack Assy PCB is defective.	Request a technician to correct the problem.
SYSTEM ERROR 02	The Rack Assy PCB or hard disk is defective.	Request a technician to correct the problem.
SYSTEM ERROR 03	The Rack Assy PCB or hard disk is defective.	Request a technician to correct the problem.
SYSTEM ERROR 04	The Rack Assy PCB or hard disk is defective.	Request a technician to correct the problem.
USB-KEY ERROR(INVALID KEY)	The USB dongle is defective.	Request a technician to correct the problem.
	A wrong USB dongle is installed.	Request a technician to correct the problem.
USB-KEY ERROR(NO KEY)	The USB dongle is not installed.	Request a technician to correct the problem.
USB-KEY ERROR(IO ERROR)	The USB dongle is defective.	Request a technician to correct the problem.
	The Rack Assy PCB is defective.	Request a technician to correct the problem.
COIN ERROR1	The coin selector or its harness is defective.	Request a technician to correct the problem.
COIN ERROR2	The Service switch or its harness is defective.	Request a technician to correct the problem.
SERVICE PLAY (indicated at the Credit display location)	This error is indicated during a game play activated with the Service switch.	It is normal if the error is displayed during a game play activated with the Service switch.
	The Service switch or its harness is defective.	Request a technician to correct the problem.

7. OPERATION

Error indication	Cause	Remedy
ERROR 55	The data in the machine is damaged.	Contact your distributor.
	USB dongle of a different machine unit is installed.	Request a technician to correct the problem.

7-8 Gun Assy adjustment (initialization) after parts replacement



- Be sure to initialize the Gun Assys after replacing the Rack Assy (SYS357), USIO PC Board or Gun Assy or after initializing the backup data. If the Gun Assys are not initialized, the game machine will not operate properly.
- After initializing the Gun Assys, make sure that the guns operate properly by conducting the switch test (see P. 28 “7-6-4 (3) GUN TEST”).

7-8-1 Initializing the volumes in the Gun Assys


Initialize (calibration) the Gun Assys by referring to “7-6-4 (4) GUN CALIBRATION” on page 29.

8. MANUAL FOR THE TECHNICIAN – To be conducted by a technician only –

8A. Setup – To be conducted by a technician only –

8A-1 Adjusting level adjusters

- 1** Lower the four level adjusters until the casters are lifted about 0.2" from the floor, then turn the lock nuts all the way to lock the level adjusters.

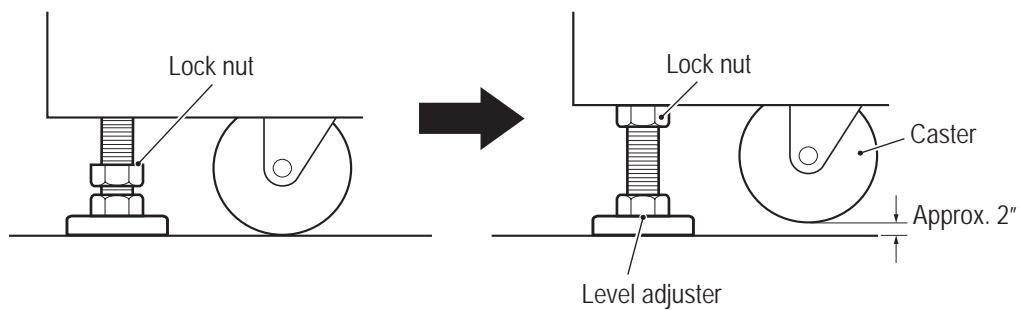


8A-2 Connecting the power cord and ground lead


WARNING

- Connect the ground lead using one of the following methods. If the machine is not grounded properly, electric shock can occur in the case of electrical leakage.

- 1** Insert the connector of the power cord to the power input section located on the lower rear side of the Monitor Assy.

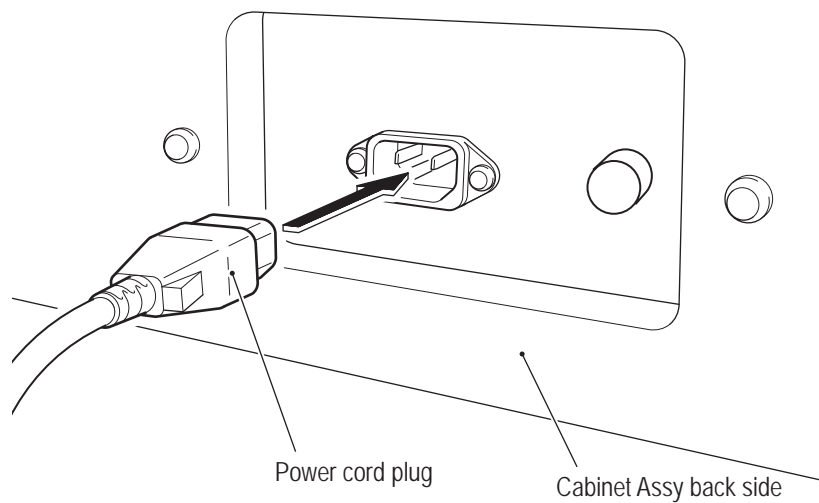

- 2** Insert the power cord plug into an AC outlet.

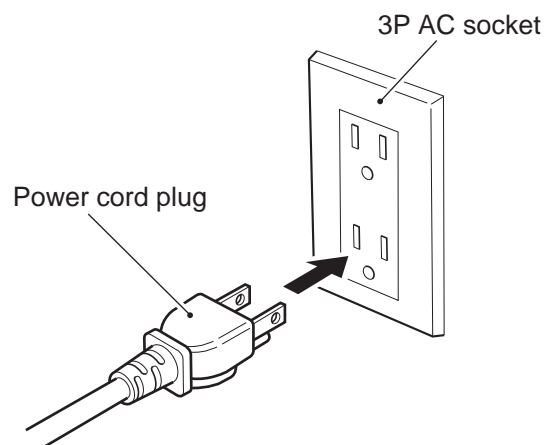

8B. Maintenance – To be conducted by a technician only –

8B. Maintenance – To be conducted by a technician only –

WARNING

- To protect the service staff and other people from electric shock, accident and injury, always turn off the power switch before conducting maintenance (troubleshooting, repair, etc.).
- Some monitor sections remain hot or charged with high voltage even after the power switch is turned off. Do not touch the monitor unnecessarily in order to prevent electric shock and burns.

8B-1 Inspection and maintenance

WARNING

- Conduct maintenance periodically. Failure to conduct periodic maintenance may result in accidents.

8B-1-1 Inspection items

Check the following inspection items regularly.

- (1) Inspection of level adjusters
 - Make sure that the machine is installed stably. (See P. 44 “8A-1 Adjusting level adjusters.”)
- (2) Inspection of power cord plug
 - Make sure that the power cord is connected firmly to the cord box section of the machine and the AC outlet.
 - If the connector sections are dusty, clean them.
 - Check the power cord for cracks and dirty sheath. If there is any abnormality in the power cord, replace it with a new cord.
- (3) Inspection of fasteners for tightness

Check the following screws and bolts for tightness. If any of them are loose, tighten firmly.

 - Gun Assy retaining bolts (See P. 60 “8B-4-2 (1) Replacing and installing the Gun Assy.”)
 - Wheel retaining bolts (See P. 76 “8B-4-3 (1) Removing and installing the Wheel Assy.”)
 - Marquee Assy retaining bolts (See P.55 “8B-4-1 (4) Replacing the LCD monitor.”)
 - Others

8B-2 Troubleshooting

WARNING

- To protect the service staff and other people from electric shock, accident and injury and to prevent damage to the electrical circuitry of the machine, always turn off the power switch before conducting the described task.
- If the generated problem symptom does not apply to any of the descriptions in Sections 8B-2-1 through 8B-2-5 or if the corrective action taken does not result in an improvement, turn off the power switch immediately to stop the machine operation, then contact your distributor. Operating the machine without correcting problems can result in an accident.

NOTICE

- In the event a machine malfunctions, check to make sure that all connectors are connected securely.
- If there is a problem in the Rack Assy (SYS357), Bass Amp PC Board, USIO PC Board or Gun Drive PC Board, the faulty parts must be repaired by our company. Never use a tester to conduct a continuity test. Internal voltage of a tester can damage ICs.
- When sending parts for repair, pack them carefully. When sending the Rack Assy (SYS357), Bass Amp PC Board, USIO PC Board or Gun Drive PC Board, cover it completely with sponge or bubble wrap and place it in a corrugated cardboard box to protect it against external impact.

8B. Maintenance – To be conducted by a technician only –

8B-2-1 General



- Before conducting troubleshooting, make sure that all connectors are connected firmly.

Symptom	Main cause	Remedy	Page
The machine does not start up.	The Rack Assy (SYS357) connector is disconnected.	Connect the connector securely.	Page 51
	The Rack Assy (SYS357) is defective.	Contact your distributor.	—
The machine does not operate stably, or it malfunctions.	The power supply voltage is outside the range of 110 to 120 VAC.	Disconnect large power consuming equipment (air conditioners, large rides, etc.) from the same power line, and ensure that the game machine receives the specified power supply voltage.	—
The machine turns off in the middle of operation.	The circuit protector was activated and turned off the power switch. * The circuit protector is designed to cut off the power supply when an abnormal current flows.	Turn on the power switch again. If the circuit protector is activated frequently, there is a problem in the machine. Contact your distributor.	—

8B-2-2 Cabinet Assy

Symptom	Main cause	Remedy	Page
There is no sound from the speakers.	The sound level is set very low.	Readjust the sound level.	Page 34
	The Rack Assy (SYS357) connector is disconnected.	Connect the connector securely.	Page 51
	The Bass Amp PC Board is defective.	Replace the Bass Amp PC Board.	Page 54
	The Rack Assy (SYS357) is defective.	Contact your distributor.	—
The monitor does not display images.	The connector is disconnected.	Connect the connector securely.	Page 51 Page 55
	The monitor is defective.	Replace the monitor.	Page 55
	The Rack Assy (SYS357) is defective.	Contact your distributor.	—
The monitor displays a blue screen.	The Rack Assy (SYS357) generated a startup error.	Turn off the power switch, wait for 30 seconds or more, and then turn on the power switch again.	Page 20
Operation is unstable, or malfunction occurs.	The power supply voltage is outside the range of 110 to 120 VAC.	Disconnect large power consuming equipment (air conditioners, large rides, etc.) from the same power line, and ensure that the game machine receives the specified power supply voltage.	—

8B-2-3 Gun Assy

Symptom	Main cause	Remedy	Page
The gun does not function.	The potentiometer has not been initialized.	Initialize the potentiometer.	Page 43
	The connector is disconnected.	Connect the connector securely.	Page 60 Page 61 Page 62
	The potentiometer is installed incorrectly.	Install the potentiometer correctly.	Page 61 Page 62
	The potentiometer is defective.	Replace the potentiometer.	Page 61 Page 62
The trigger does not function.	The connector is disconnected.	Connect the connector securely.	Page 66 Page 67
	The microswitch in the gun is defective.	Replace the microswitch.	Page 66
The Start button does not function.	The connector is disconnected.	Connect the connector securely.	Page 68
	The Start button is defective.	Replace the Start button.	Page 68
The gun does not vibrate.	The Gun Drive PC Board is defective.	Replace the Gun Drive PC Board.	Page 59
	The vibration unit is defective.	Replace the vibration unit.	Page 58

8B-2-4 Wheel Assy

Symptom	Main cause	Remedy	Page
The wheel does not function.	The connector is disconnected.	Connect the connector securely.	Page 76
	The photosensor (for wheel) is defective.	Replace the photosensor.	Page 77

8B-2-5 Marquee Assy

Symptom	Main cause	Remedy	Page
The fluorescent lamps do not light.	The connector is disconnected.	Connect the connector securely.	Page 80
	The fluorescent lamps are burnt out.	Replace the fluorescent lamps.	Page 80

8B. Maintenance – To be conducted by a technician only –

8B-3 Error display (for the technician)



- If the error indication remains after the appropriate countermeasure has been taken, set the Test switch to ON and then to OFF to cancel the error indication.

Displayed error indication	Cause	Remedy	Page
BATTERY02 ERROR	The Rack Assy PCB is defective.	Replace the Rack Assy.	Page 51
NOT CONNECT I/O-PCB	The USIO PC Board is defective.	Replace the USIO PC Board.	Page 58
	The USB cable is disconnected.	Connect the USB cable securely.	Page 58
BACKUP MEMORY ERROR	The USIO PC Board is defective.	Replace the USIO PC Board.	Page 58
	The data in the backup memory is damaged.	Initialize the backup memory.	Page 38
FIRMWARE ERROR	The USIO PC Board is defective.	Replace the USIO PC Board.	Page 58
MEMORY ERROR	The USIO PC Board is defective.	Replace the USIO PC Board.	Page 58
SYSTEM ERROR 01	The Rack Assy PCB is defective.	Replace the Rack Assy.	Page 51
SYSTEM ERROR 02	The Rack Assy PCB or hard disk is defective.	Replace the Rack Assy.	Page 51
SYSTEM ERROR 03	The Rack Assy PCB or hard disk is defective.	Replace the Rack Assy.	Page 51
SYSTEM ERROR 04	The Rack Assy PCB or hard disk is defective.	Replace the Rack Assy.	Page 51
USB-KEY ERROR(INVALID KEY)	A wrong USB dongle is installed.	Install the USB dongle for Dead Storm Pirates.	Page 51
USB-KEY ERROR(NO KEY)	The USB dongle is not installed.	Install the USB dongle for Dead Storm Pirates.	Page 51
USB-KEY ERROR(IO ERROR)	The USB dongle is defective.	Replace the USB dongle.	Page 51
	The Rack Assy is defective.	Replace the Rack Assy.	Page 51
COIN ERROR1	The coin mech is defective.	Replace the coin mech.	—
	The coin selector harness is defective.	Contact your distributor.	—
COIN ERROR2	The Service switch or its harness is defective.	Contact your distributor.	—
SERVICE PLAY (indicated at the Credit display location)	This error is indicated during a game play activated with the Service switch.	It is normal if the error is displayed during a game play activated with the Service switch.	—
	The Service switch or its harness is defective.	Contact your distributor.	—
ERROR 55	USB dongle of a different game machine unit is installed	Turn off the power switch. Replace the currently installed USB dongle with the one that was mounted on the machine when the machine was initially started for game play, then turn on the power switch.	Page 52

8B-4 Removing and installing Assys and parts

8B-4-1 Cabinet Assy

(1) Replacing the Rack Assy


WARNING

- To protect the service staff and other people from electric shock, accident and injury and to prevent damage to the electrical circuitry of the machine, always turn off the power switch before conducting the described task.


NOTICE

- The PC board can be easily damaged by static electricity. If the PC board is handled by a person charged with static electricity, parts mounted on the PC board can be damaged. Before touching the PC board, be sure to discharge static electricity from your body by touching grounded metal.

- 1** Turn off the power switch. (See P. 20 "7-5-1 Power switch location and turning on the switch.")
- 2** Using the provided maintenance key, unlock the Maintenance door, remove the two Torx bolts (M5 x 25), and then remove the Maintenance door.

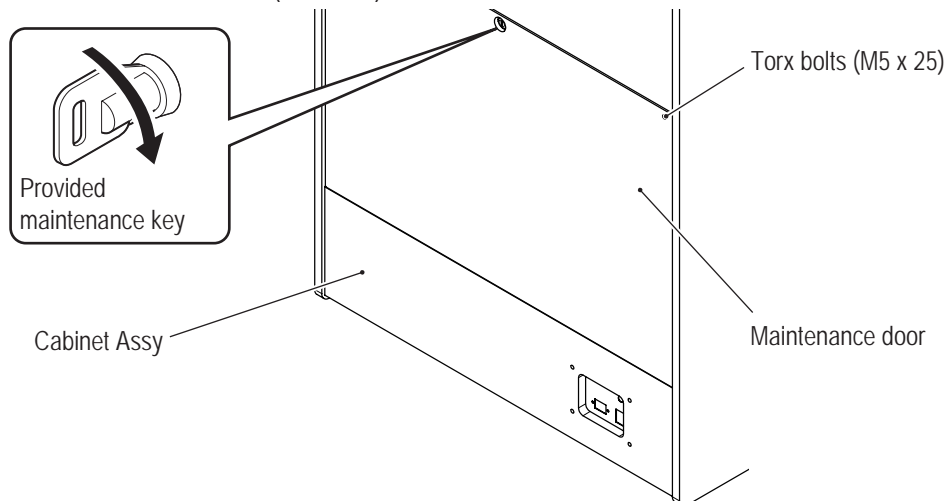


- 3** Remove the cord clip and disconnect the four connectors and one power cord.

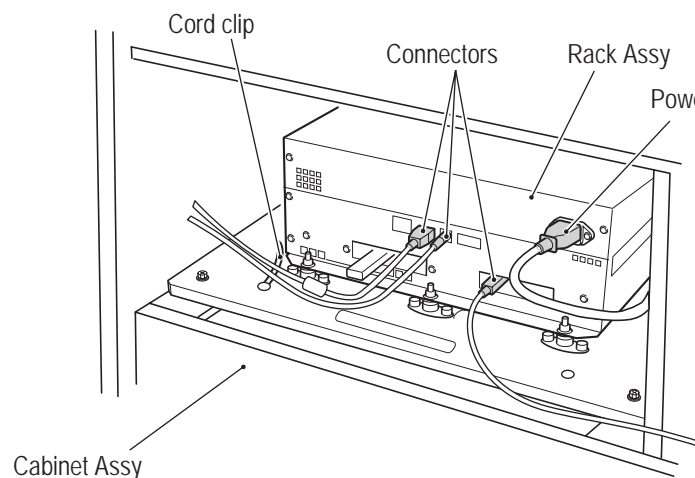


8B. Maintenance – To be conducted by a technician only –

- 4 Remove the two Phillips pan-head bolts (with flat and spring washers) (M5 x 45) and remove the rack base.

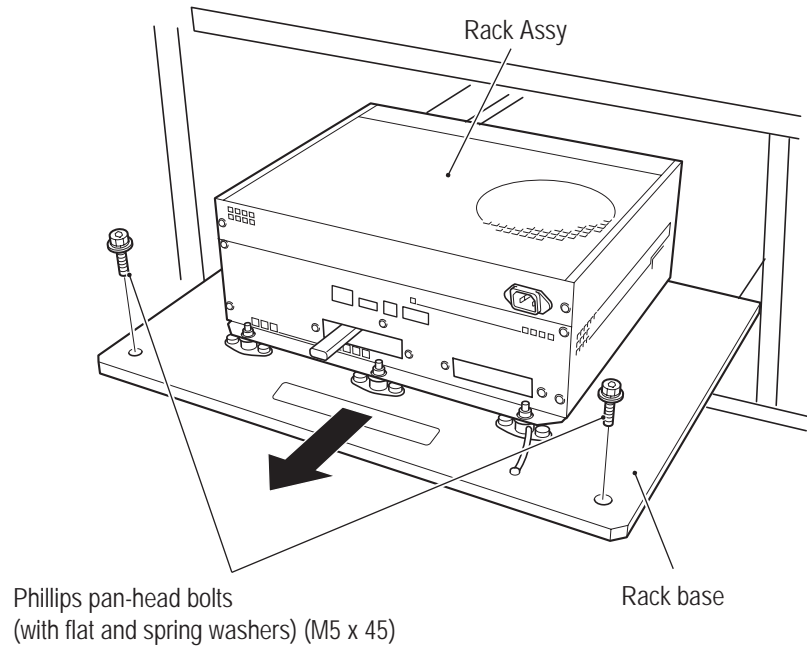

- 5 Loosen the three countersunk washer nuts (M6) in the back, remove the three countersunk washer nuts (M6) in the front, and then remove the Rack Assy.

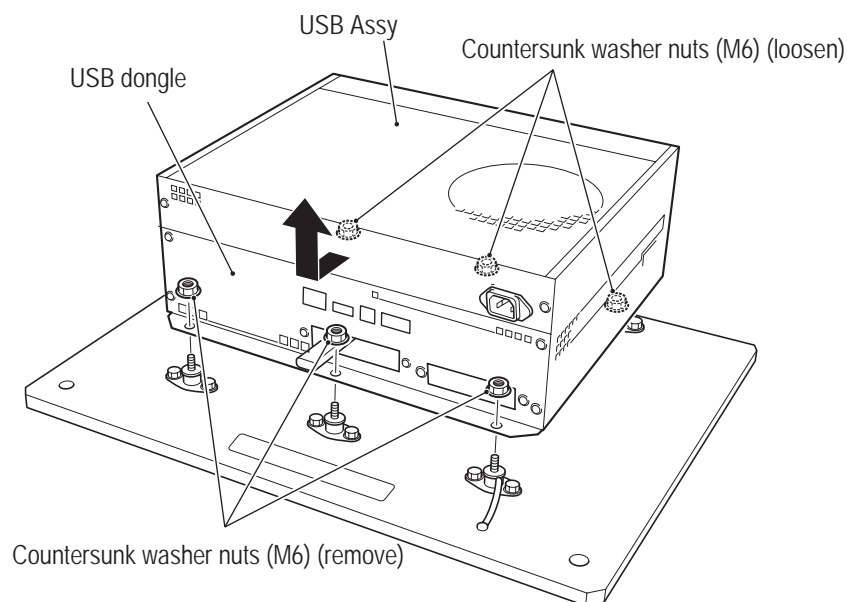

- 6 Remove the USB dongle and replace the Rack Assy.

- 7 To install, follow the removal sequence in reverse.



- During the installation, check the direction of each connector and insert **the connectors firmly until they lock securely into place.**
- During the installation, be careful not to pinch the connectors or harnesses.
- After the replacement, be sure to perform initialization. (See P. 43 "7-8 Gun Assy adjustment (initialization) after parts replacement.")

(2) Replacing the power supplies


WARNING

- To protect the service staff and other people from electric shock, accident and injury and to prevent damage to the electrical circuitry of the machine, always turn off the power switch before conducting the described task.

NOTICE

- The PC board can be easily damaged by static electricity. If the PC board is handled by a person charged with static electricity, parts mounted on the PC board can be damaged. Before touching the PC board, be sure to discharge static electricity from your body by touching grounded metal.


- 1** Turn off the power switch. (See P. 20 "7-5-1 Power switch location and turning on the switch.")
- 2** Remove the Maintenance door. (See P. 51 "8B-4-1 (1) Replacing the Rack Assy.")
- 3** Disconnect the connectors, remove the two Phillips pan-head bolts (with flat and spring washers) (M5 x 45). Then remove the PCB base.

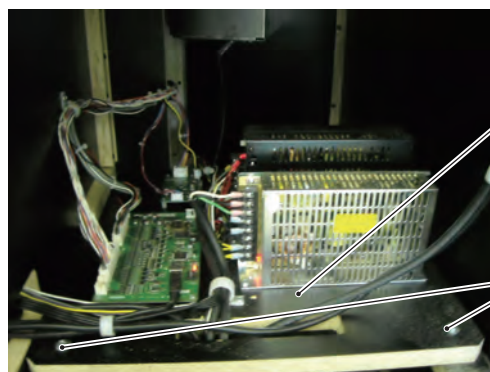

PCB base

Phillips pan-head
(with flat and spr

- 4** Disconnect the connectors from terminals and remove the phillips pan-head screws (M4 x 15), and then replace the power supply.

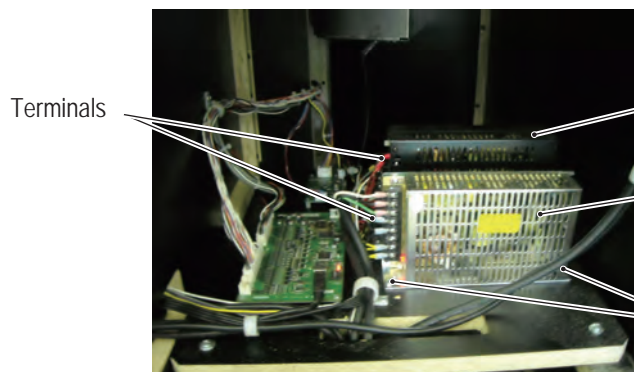

Terminals

Power supply (5V/12V)

Power supply (12V)

Phillips pan-head screws
(M4 x 15)

- 5** To install, follow the removal sequence in reverse.

8B. Maintenance – To be conducted by a technician only –

(3) Replacing the Bass Amp PC Board


⚠ WARNING

- To protect the service staff and other people from electric shock, accident and injury and to prevent damage to the electrical circuitry of the machine, always turn off the power switch before conducting the described task.

NOTICE

- The PC board can be easily damaged by static electricity. If the PC board is handled by a person charged with static electricity, parts mounted on the PC board can be damaged. Before touching the PC board, be sure to discharge static electricity from your body by touching grounded metal.

- 1** Turn off the power switch. (See P. 20 "7-5-1 Power switch location and turning on the switch.")
- 2** Remove the Maintenance door. (See P. 51 "8B-4-1 (1) Replacing the Rack Assy.")
- 3** Remove the PCB base. (See P. 53 "8B-4-1 (2) Replacing the power supplies.")
- 4** Disconnect the four connectors and remove the four phillips pan-head screws (M3 x 10), and then replace the Bass Amp PC Board.

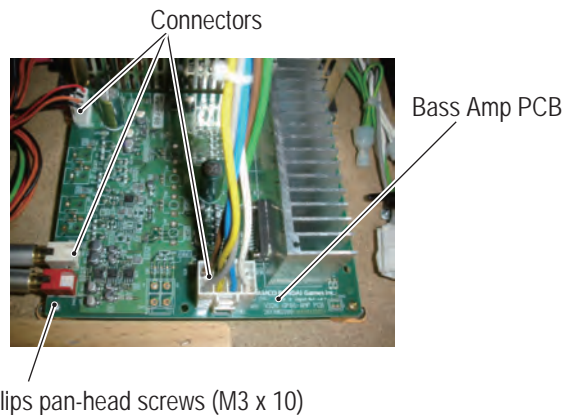

- 5** To install, follow the removal sequence in reverse.

(4) Replacing the LCD monitor

WARNING

- To protect the service staff and other people from electric shock, accident and injury and to prevent damage to the electrical circuitry of the machine, always turn off the power switch before conducting the described task.
- Some sections on the LCD monitor remain hot or charged with high voltage even after the power switch is turned off. In order to prevent burns, conduct the described task after the LCD monitor cools sufficiently.

CAUTION


- The LCD monitor weighs approximately 88 lbs.. It should be removed by two or more people in a large work area to prevent accidents.

NOTICE

- The PC board can be easily damaged by static electricity. If the PC board is handled by a person charged with static electricity, parts mounted on the PC board can be damaged. Before touching the PC board, be sure to discharge static electricity from your body by touching grounded metal.


- 1** Turn off the power switch. (See P. 20 "7-5-1 Power switch location and turning on the switch.")
- 2** Move the Monitor Assy to provide a sufficient work area in front of the Monitor Assy.
- 3** Remove the four Phillips hexagon-head bolts (M6 x 25), and then remove the Marquee Assy.

Phillips hexagon-head bolts (M6 x 25) (loosen)

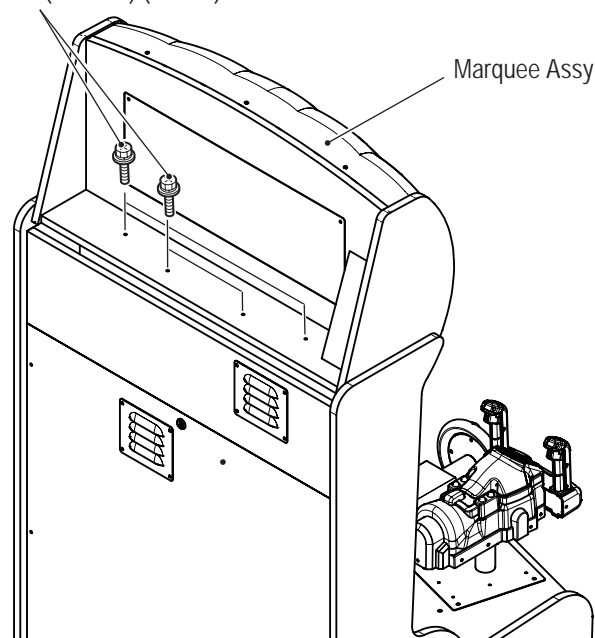


8B. Maintenance – To be conducted by a technician only –


- 4** Remove the eight Torx bolts (M5 x 15), and remove the Monitor cover A and B. Then remove the Monitor Glass.

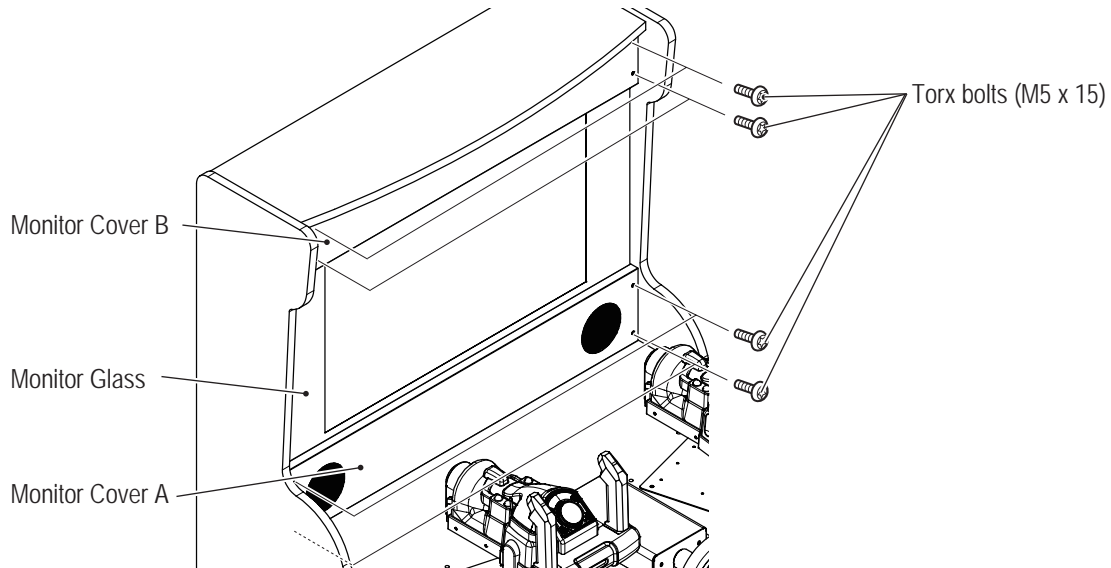

- 5** Remove the Maintenance door. (See P. 51 "8B-4-1 (1) Replacing the Rack Assy.") Then, disconnect the connector and the power cord from the rear side of the LCD monitor.

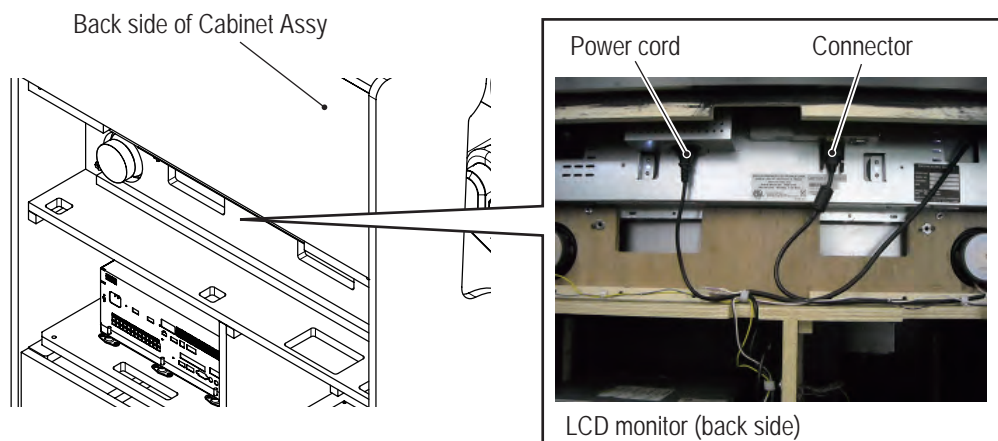


- 6** Remove the four Phillips hexagon-head bolts (M6 x 25), and then remove the LCD monitor.

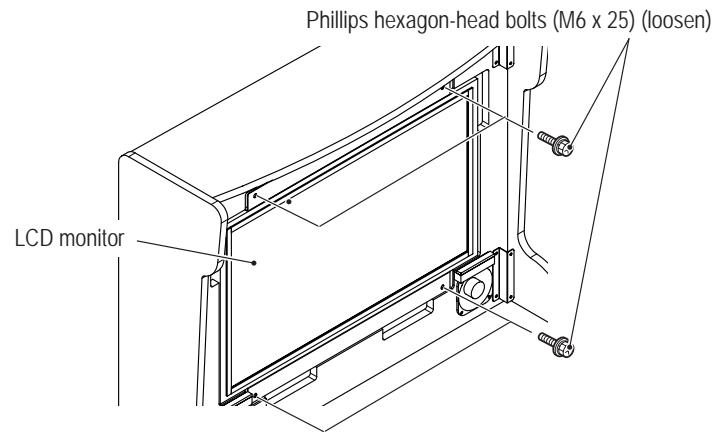

- Place the removed LCD monitor on bubble wrap or similar material to prevent scratching on the monitor surface.

- 7** Remove the four Phillips pan-head screws (with flat and spring washers) (M4 x 10), and remove two LCD brackets.

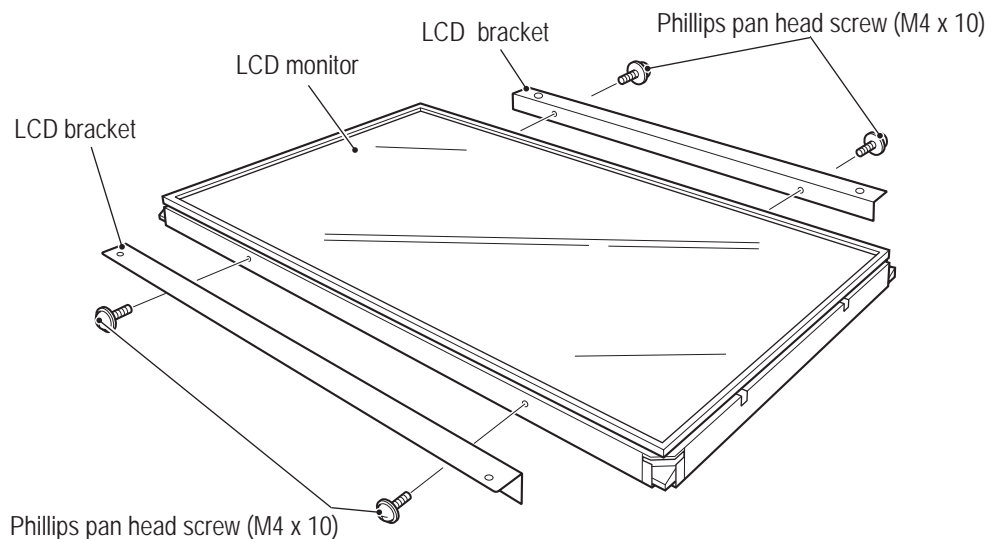

- 8** To install, follow the removal sequence in reverse.

8B. Maintenance – To be conducted by a technician only –

(5) Replacing the USIO PC Board


WARNING

- To protect the service staff and other people from electric shock, accident and injury and to prevent damage to the electrical circuitry of the machine, always turn off the power switch before conducting the described task.

NOTICE

- The PC board can be easily damaged by static electricity. If the PC board is handled by a person charged with static electricity, parts mounted on the PC board can be damaged. Before touching the PC board, be sure to discharge static electricity from your body by touching grounded metal.

- 1** Turn off the power switch. (See P. 20 "7-5-1 Power switch location and turning on the switch.")
- 2** Remove the Maintenance door. (See P. 51 "8B-4-1 (1) Replacing the Rack Assy.")
- 3** Remove the PCB base. (See P. 53 "8B-4-1 (2) Replacing the power supplies.")
- 4** Disconnect the three connectors and one USB connector.

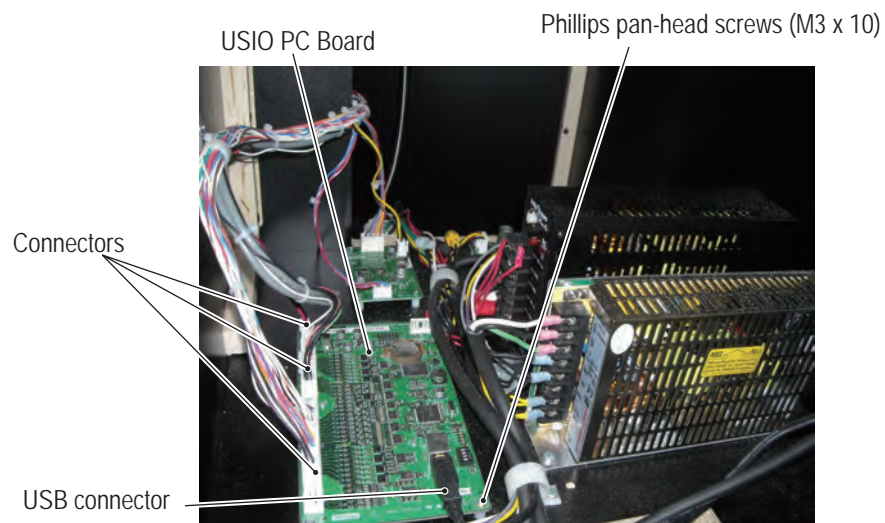

- 5** Remove the five Phillips pan-head screws (M3 x 10) and replace the USIO PC Board.
- 6** To install, follow the removal sequence in reverse.

NOTICE

- After the replacement, be sure to perform initialization. (See P. 43 "7-8 Gun Assy adjustment (initialization) after parts replacement.")

(6) Replacing the Gun Drive PC Board


WARNING

- To protect the service staff and other people from electric shock, accident and injury and to prevent damage to the electrical circuitry of the machine, always turn off the power switch before conducting the described task.

NOTICE

- The PC board can be easily damaged by static electricity. If the PC board is handled by a person charged with static electricity, parts mounted on the PC board can be damaged. Before touching the PC board, be sure to discharge static electricity from your body by touching grounded metal.

- 1** Turn off the power switch. (See P. 20 "7-5-1 Power switch location and turning on the switch.")
- 2** Remove the Maintenance door. (See P. 51 "8B-4-1 (1) Replacing the Rack Assy.")
- 3** Remove the PCB base. (See P. 53 "8B-4-1 (2) Replacing the power supplies.")
- 4** Disconnect the three connectors.

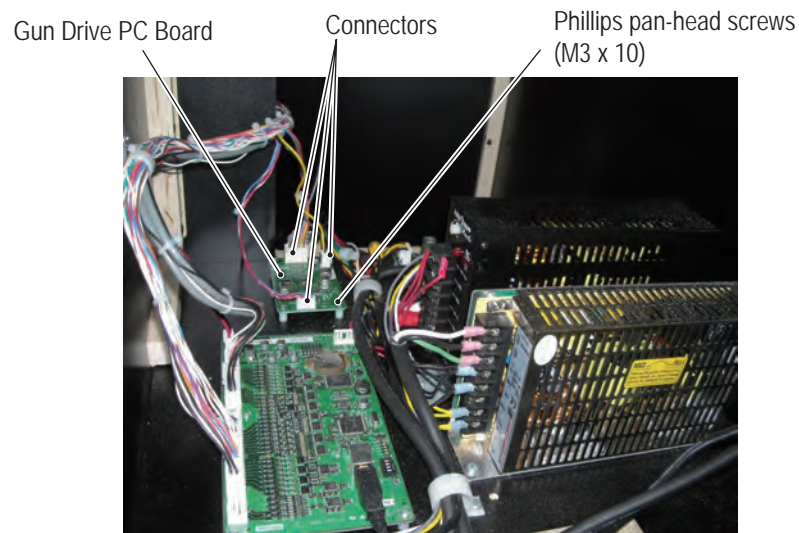

- 5** Remove the four Phillips pan-head screws (M3 x 10) and replace the Gun Drive PC Board.
- 6** To install, follow the removal sequence in reverse.

8B. Maintenance – To be conducted by a technician only –


8B-4-2 Gun Assy

(1) Replacing and installing the Gun Assy


WARNING

- To protect the service staff and other people from electric shock, accident and injury and to prevent damage to the electrical circuitry of the machine, always turn off the power switch before conducting the described task.

- 1** Turn off the power switch. (See P. 20 "7-5-1 Power switch location and turning on the switch.")
- 2** Remove four Torx bolts (M6 x 30), four Torx bolts with flat washers (M6 x 30).

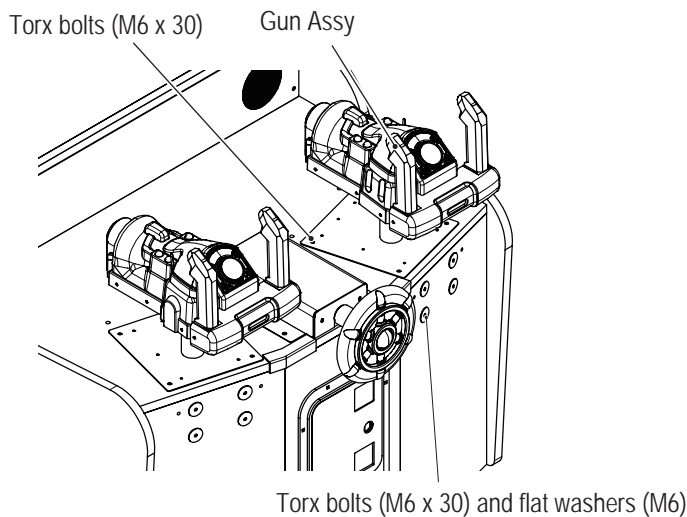

- 3** Lift the Gun Assy and disconnect the connector and the ground terminal. Then replace the Gun Assy.

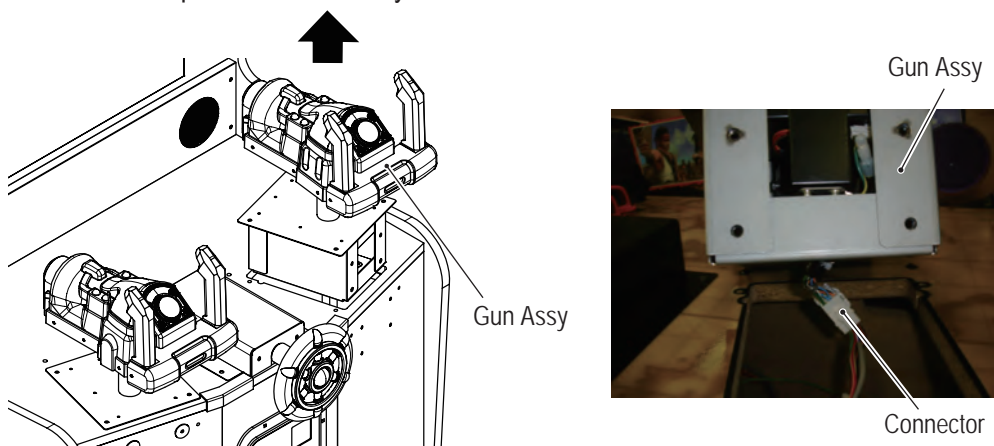

- 4** To install, follow the removal sequence in reverse.

NOTICE

- During the installation, check the direction of each connector and insert the connectors firmly until they lock securely into place.
- During the installation, be careful not to pinch the connectors or harnesses.
- After the replacement, be sure to perform initialization. (See P. 43 "7-8 Gun Assy adjustment (initialization) after parts replacement.")

(2) Replacing the volume (for left-right)

WARNING


- To protect the service staff and other people from electric shock, accident and injury and to prevent damage to the electrical circuitry of the machine, always turn off the power switch before conducting the described task.

- 1** Turn off the power switch. (See P. 20 "7-5-1 Power switch location and turning on the switch.")
- 2** Remove the Gun Assy. (See P. 60 "8B-4-2 (1) Replacing and installing the Gun Assy".)
- 3** Remove the four Flange socket bolts (M6 X 15) and remove the Gun base box.



Flange socket bolts (M6 x15) Gun base box

- 4** Loosen the cord clip and disconnect the connector. Then, remove the two Phillips pan-head screws (with flat and spring washers) (M4 x 12) and remove the potentiometer bracket.

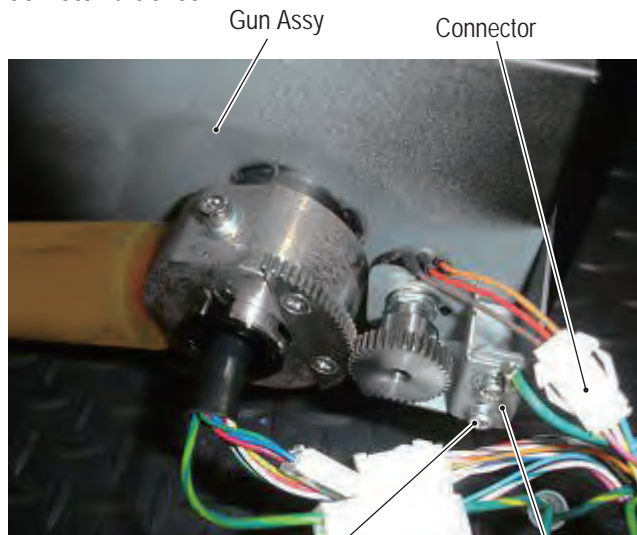


Phillips pan-head screw
(with flat and spring washers)
(M4 x 15)


Volume bracket

8B. Maintenance – To be conducted by a technician only –

- 5 Loosen the double-point screw (M4 x 6) and remove the potentiometer gear.
* When installing the potentiometer gear, align the black dot on the potentiometer gear with the terminal connected with the red harness of the potentiometer.

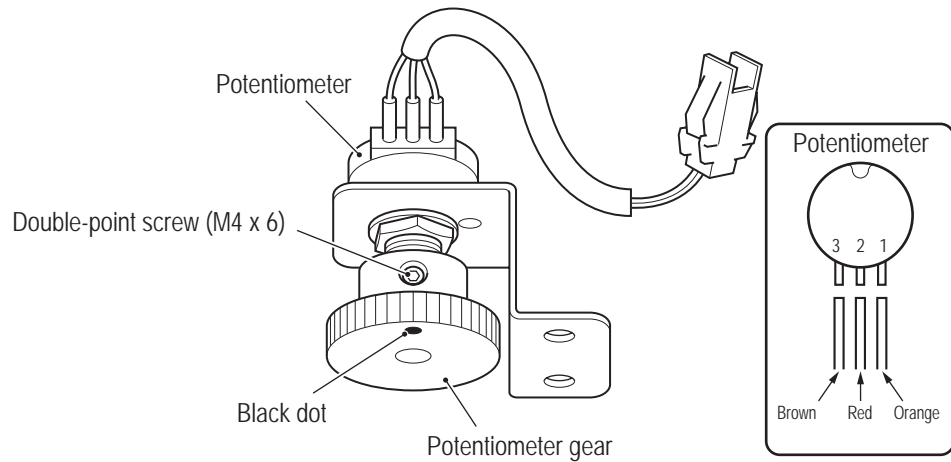

- 6 Remove the hexagon nut, spring washer and flat washer, and then remove the potentiometer from the potentiometer bracket.

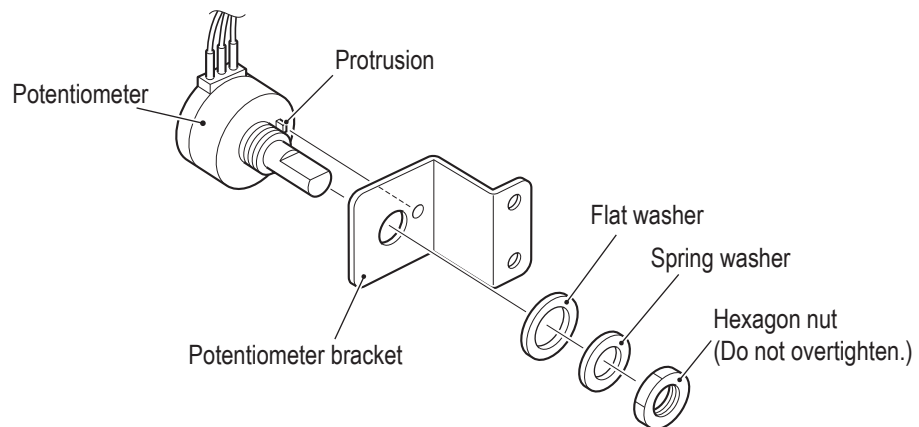

- 7 Replace the potentiometer.



- The potentiometer (for up-down) is the same in external appearance. Before replacing, check the harness colors.

- 8 To install, follow the removal sequence in reverse.




- Do not let the harness get caught between the gears.



* Do not let the harness get caught between the gears.

- When installing the potentiometer, align the flat section on the potentiometer shaft with the position of the double-point screw.

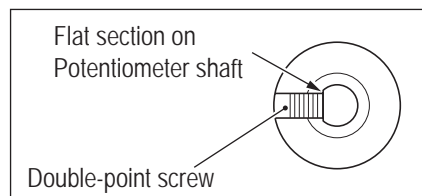

- After the replacement, be sure to perform initialization. (See P. 43 "7-8 Gun Assy adjustment (initialization) after parts replacement.")


8B. Maintenance – To be conducted by a technician only –

(3) Replacing the potentiometer (for up-down)


WARNING

- To protect the service staff and other people from electric shock, accident and injury and to prevent damage to the electrical circuitry of the machine, always turn off the power switch before conducting the described task.


- 1** Turn off the power switch. (See P. 20 "7-5-1 Power switch location and turning on the switch.")
- 2** Remove the switch bezel. (See P. 68 "8B-4-2 (6) Replacing the illuminated switch/LED lamp in the Start button" **2** and **3**.)
- 3** Remove the nine button-head bolts (M4 x 10) and remove the gun cover.

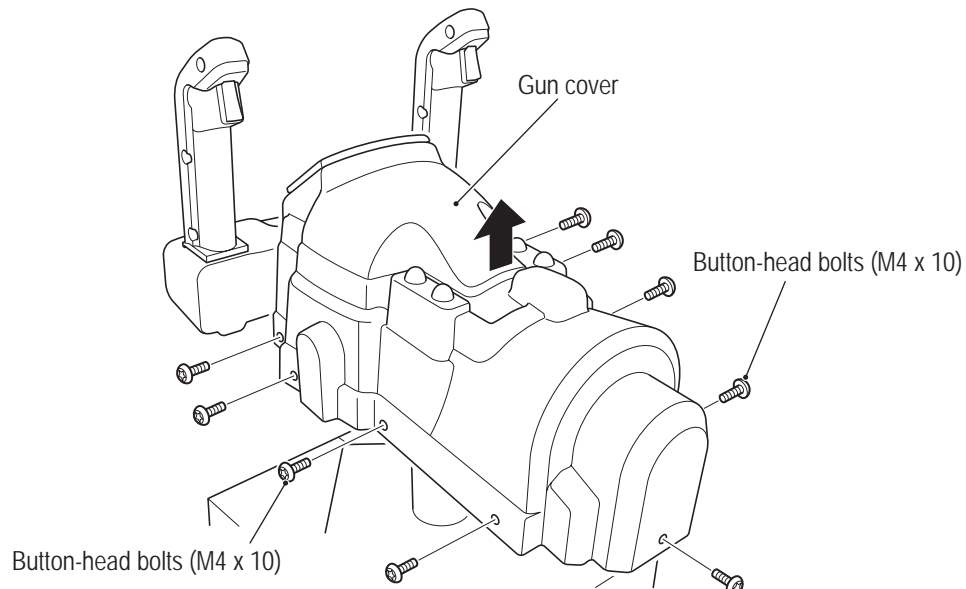

- 4** Disconnect the connector and remove the one double-point screw (M4 x 8), and then remove the potentiometer together with the potentiometer bracket.

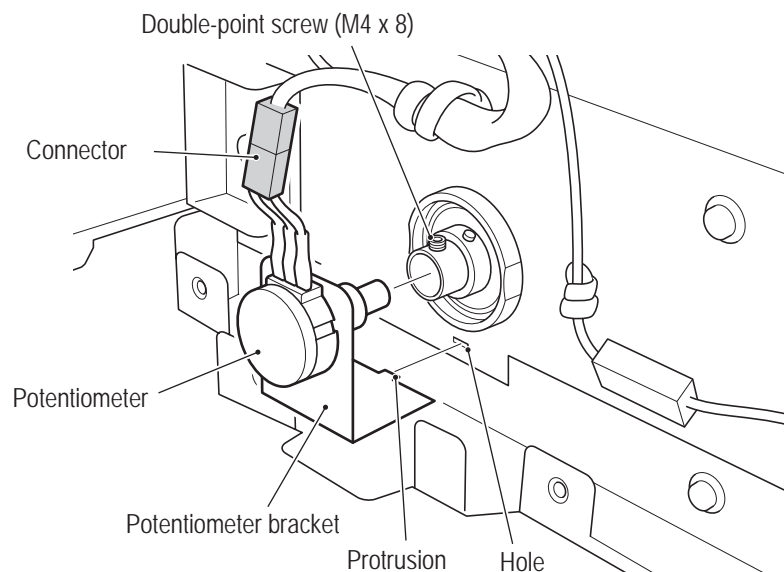

- 5** Remove the potentiometer from the potentiometer bracket.

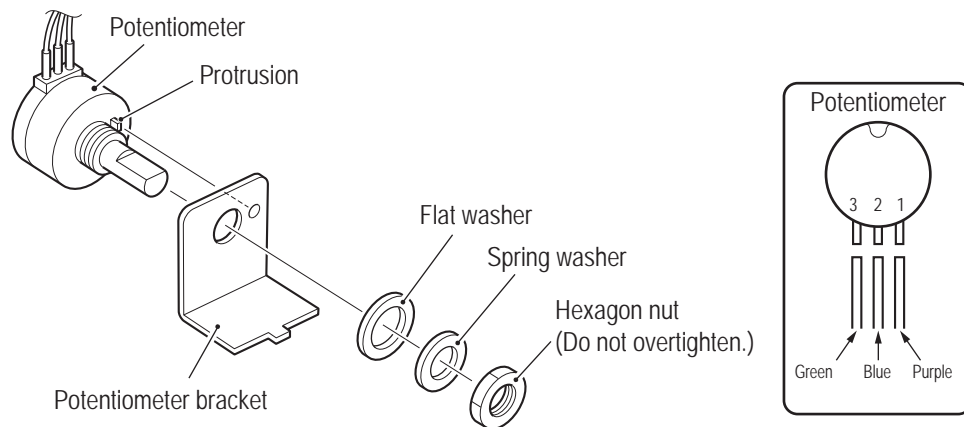

- 6** Replace the potentiometer.

* When installing the potentiometer, position the potentiometer terminals at the top.




- The potentiometer (for left-right) is the same in external appearance. Before replacing, check the harness colors.

- 7** To install, follow the removal sequence in reverse.



- When installing the potentiometer, align the flat section on the potentiometer shaft with the position of the double-point screw.

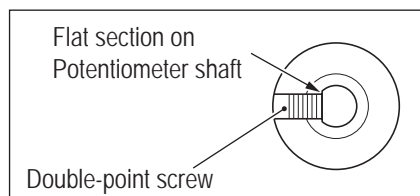

- After the replacement, be sure to perform initialization. (See P. 43 "7-8 Gun Assy adjustment (initialization) after parts replacement.")


8B. Maintenance – To be conducted by a technician only –

(4) Replacing the microswitch

⚠ WARNING


- To protect the service staff and other people from electric shock, accident and injury and to prevent damage to the electrical circuitry of the machine, always turn off the power switch before conducting the described task.

- 1** Turn off the power switch. (See P. 20 "7-5-1 Power switch location and turning on the switch.")
- 2** Remove the two Phillips pan-head screws (with flat washer) (M4 x 20), two cap nuts (M4) and one Phillips pan-head screw (with flat washer) (M4 x 6), and remove the lever grip A.

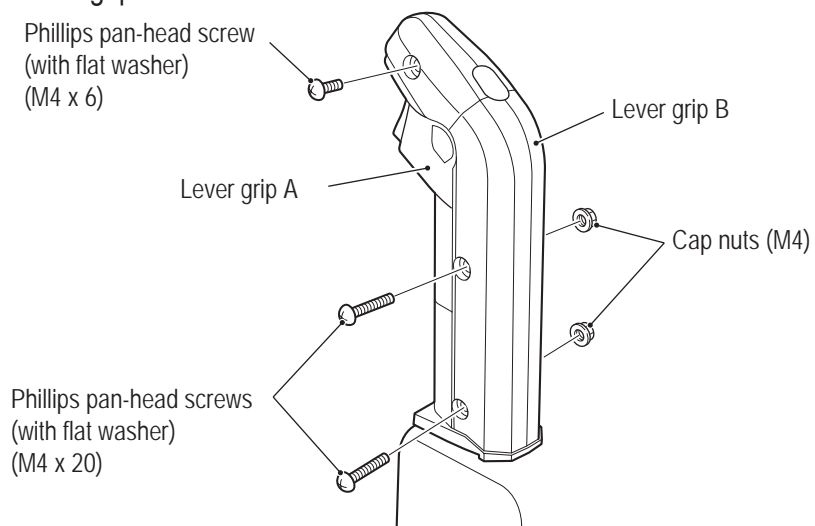

- Be careful not to lose the button cover that is attached to the upper section of the lever grip.

- 3** Remove the two special Phillips pan-head screws (M2.3 x 10).

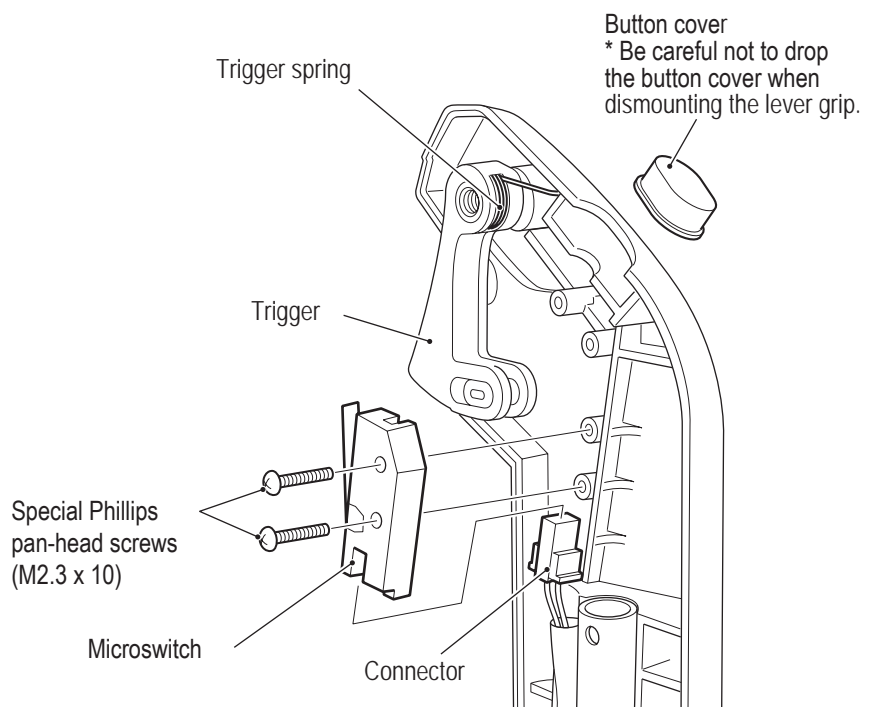

- 4** Disconnect the connector, and then remove and replace the microswitch.



NOTICE

- During the installation, check the direction of each connector and insert **the connectors firmly until they lock securely into place.**
- During the installation, be careful not to pinch the connectors or harnesses.

- 5** To install, follow the removal sequence in reverse.



NOTICE

- After the replacement, be sure to check switch operation in the Test mode. (See P. 27 "7-6-4 (2) SWITCH TEST.")

(5) Replacing the trigger and spring

WARNING


- To protect the service staff and other people from electric shock, accident and injury and to prevent damage to the electrical circuitry of the machine, always turn off the power switch before conducting the described task.

- 1** Turn off the power switch. (See P. 20 "7-5-1 Power switch location and turning on the switch.")
- 2** Disassemble the lever grip. (See P. 66 "8A-4-2 (4) Replacing the microswitch" **2** and **3**.)
- 3** If the trigger or spring is defective, replace it.



NOTICE

- Install the spring as shown in the diagram, and make sure that the spring rests securely on the trigger and lever grip B.

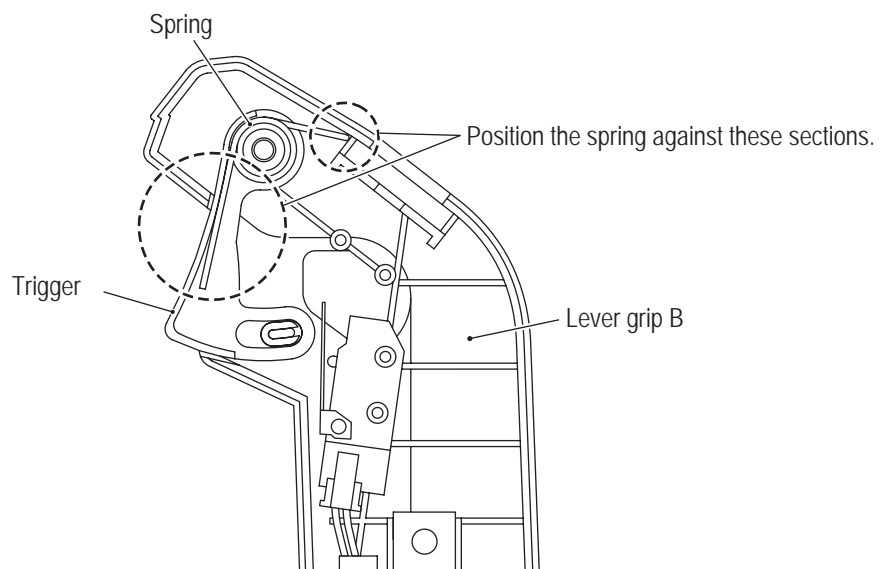

- 4** To install, follow the removal sequence in reverse. (See P. 66 "8A-4-2 (4) Replacing the microswitch" **2** and **3**.)


8B. Maintenance – To be conducted by a technician only –

(6) Replacing the illuminated switch/LED lamp in the Start button


WARNING

- To protect the service staff and other people from electric shock, accident and injury and to prevent damage to the electrical circuitry of the machine, always turn off the power switch before conducting the described task.


- 1** Turn off the power switch. (See P. 20 "7-5-1 Power switch location and turning on the switch.")
- 2** Remove the four button-head bolts (M4 x 10) and remove the switch bezel.

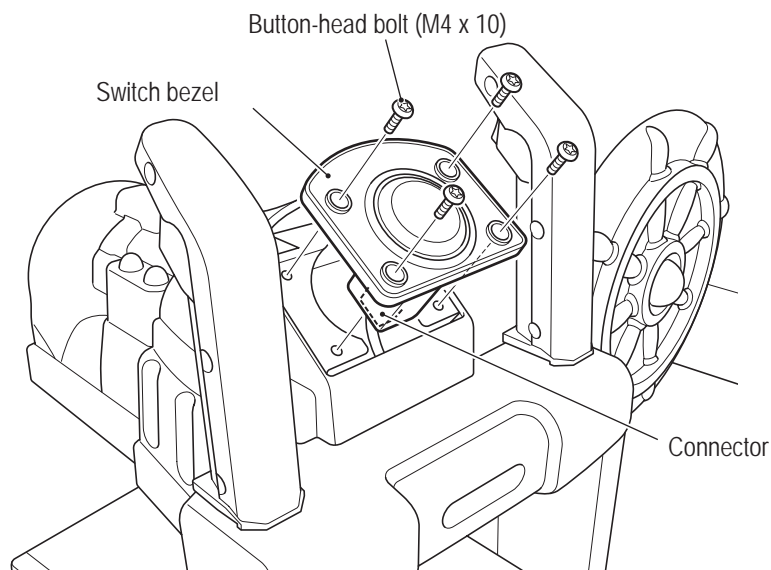

- 3** Disconnect the connector.
- 4** Turn the illuminated switch 45° and remove it from the switch bezel.

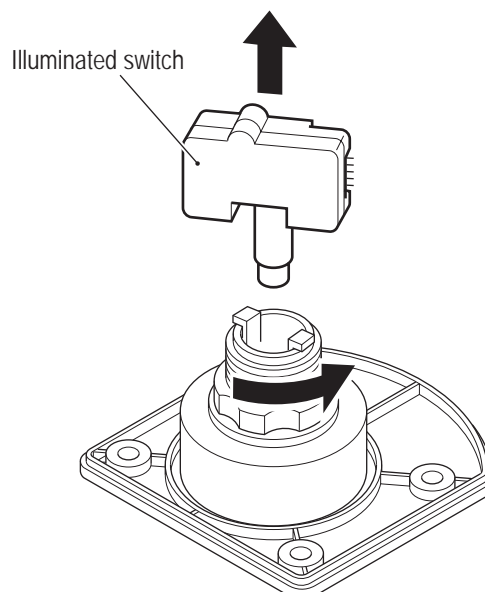

-
- 5** Remove the LED lamp from the illuminated switch and replace the defective part.
* Note that the LED lamp has polarities. Be sure to check the polarities when replacing the LED lamp.

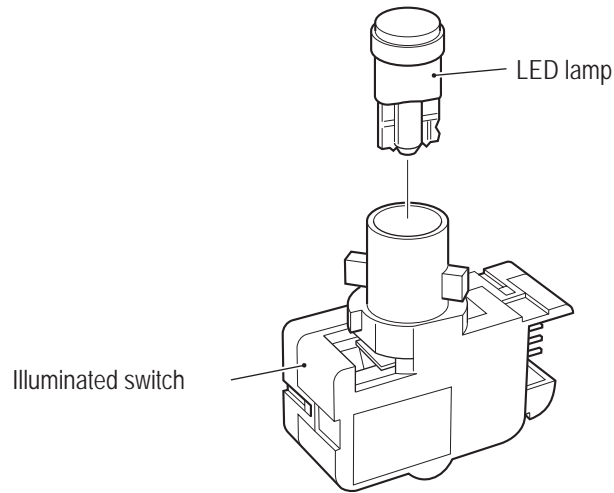

- 6** To install, follow the removal sequence in reverse.



- After the replacement, be sure to check switch operation in the Test mode. (See P. 27 "7-6-4 (2) SWITCH TEST" and P. 31 "7-6-4 (6) OUTPUT TEST.")


8B. Maintenance – To be conducted by a technician only –

(7) Replacing the vibration unit

WARNING

- To protect the service staff and other people from electric shock, accident and injury and to prevent damage to the electrical circuitry of the machine, always turn off the power switch before conducting the described task.


- 1** Turn off the power switch. (See P. 20 "7-5-1 Power switch location and turning on the switch.")
- 2** Remove the Start button and switch bezel. (See P. 68 "8B-4-2 (6) Replacing the illuminated switch/LED lamp in the Start button" **2** and **3**.)
- 3** Remove the gun cover. (See P. 62 "8B-4-2 (3) Replacing the volume (for up-down)" **3**.)
- 4** Remove the cord clip and disconnect the connector.

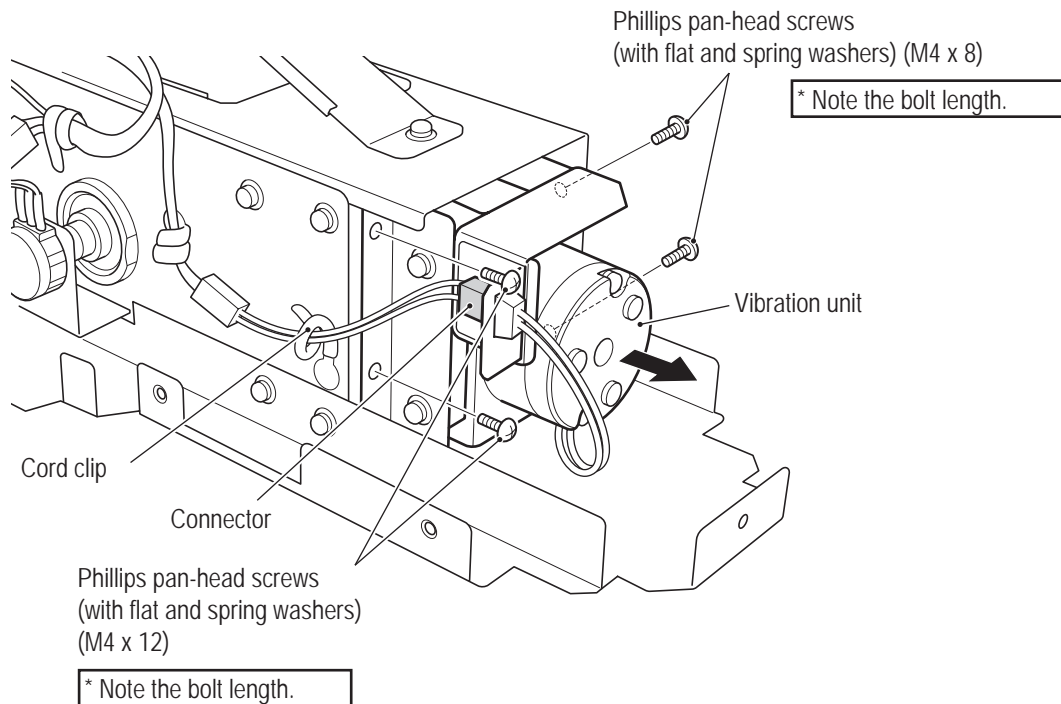


- 5** Remove the two Phillips pan-head screws (with flat and spring washers) (M4 x 12) and two Phillips pan-head screws (with flat and spring washers) (M4 x 8), and then remove the vibration unit.

8B. Maintenance – To be conducted by a technician only –

- 6** Remove the two Phillips pan-head screws (with flat and spring washers) (M4 x 12) and remove the stopper bracket.

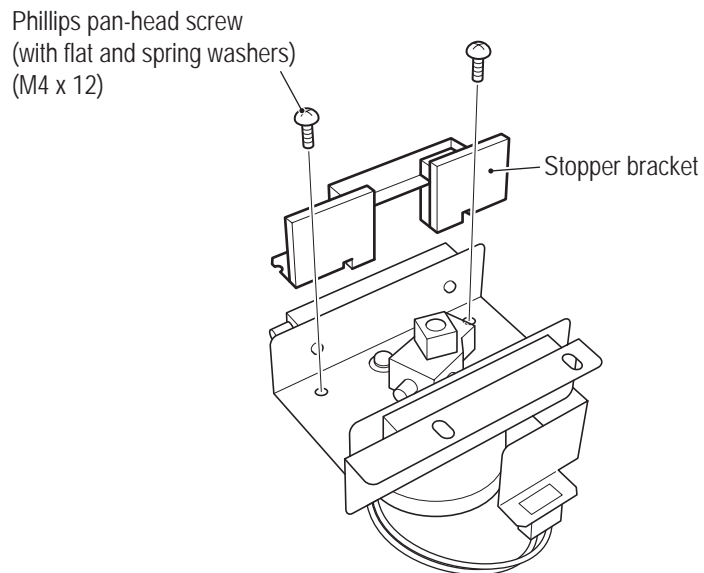

- 7** Loosen the two Hexagon Nut (M5) and then loosen the two double-point screws (M5 x 10) using an Allen wrench, and remove the crank.

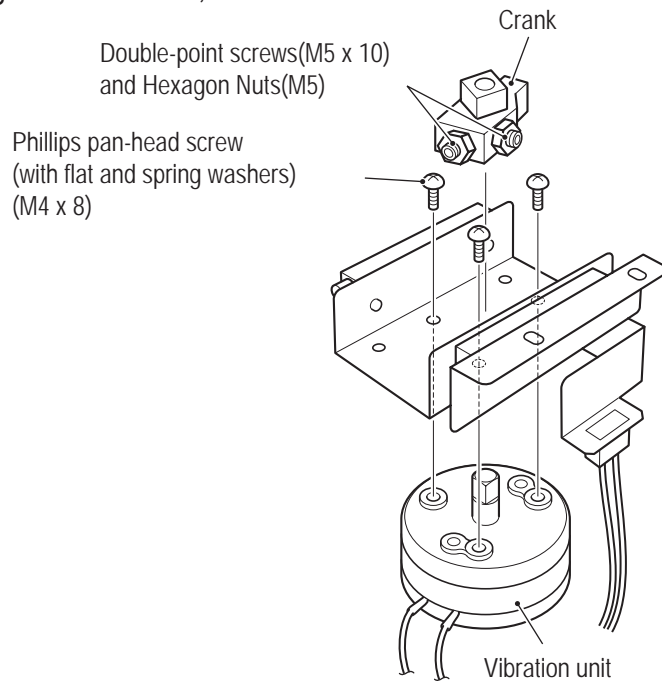


- 8** Disconnect the connector.
- 9** Remove the three Phillips pan-head screws (with flat and spring washers) (M4 x 8) and remove the vibration unit.
- 10** Replace the vibration unit.
- 11** To install, follow the removal sequence in reverse.

8B. Maintenance – To be conducted by a technician only –



- When installing the vibration unit, align the flat sections (2 locations) on the vibration unit shaft with the positions of the double-point screws.

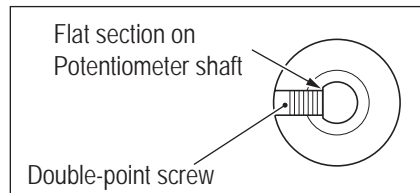


- During the installation, be careful not to pinch the connectors or harnesses.
- After the replacement, be sure to check the vibration unit for proper operation in the Test mode. (See P. 31 "7-6-4 (6) OUTPUT TEST.")

(8) Replacing the gun harness 3d


WARNING

- To protect the service staff and other people from electric shock, accident and injury and to prevent damage to the electrical circuitry of the machine, always turn off the power switch before conducting the described task.

- 1** Turn off the power switch. (See P. 20 "7-5-1 Power switch location and turning on the switch.")
- 2** Remove the Gun Assy. (See P. 60 "8B-4-2 (1) Replacing and installing the Gun Assy".)
- 3** Disconnect the two connectors and one Ground terminal.

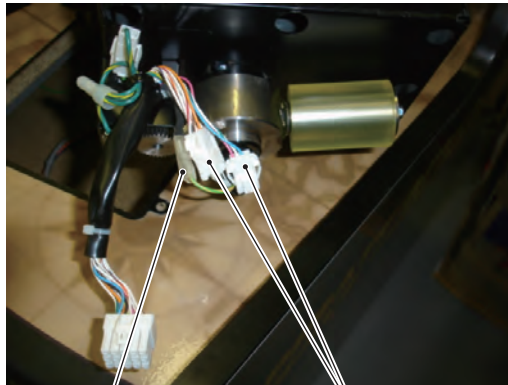


- 4** Remove the Gun cover. (See P. 70 "8B-4-2 (7) Replacing the vibration unit" **2** and **3**.)
- 5** Remove the four Phillips pan-head screws (with flat and spring washers) (M4 x 12) and remove the switch base.

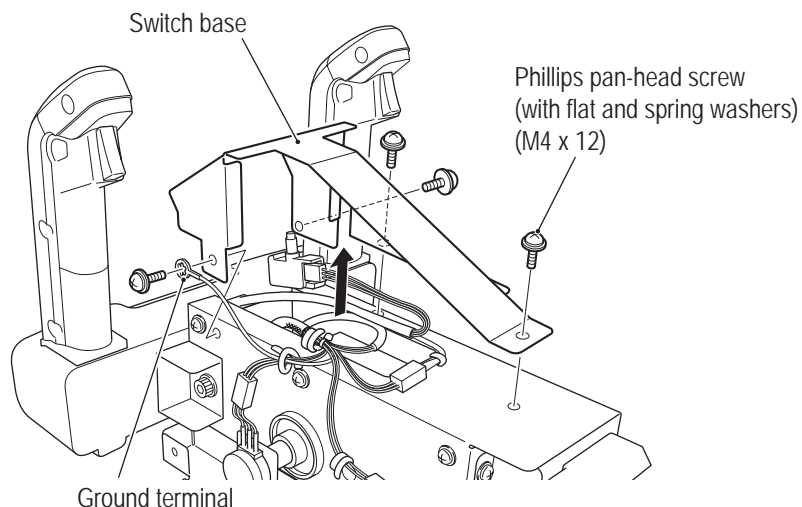


8B. Maintenance – To be conducted by a technician only –

- 6** Disconnect the three connectors of the gun harness 3d and remove the four cord clips. Remove the Phillips pan-head screw (M4 x 12) and the cord clip.

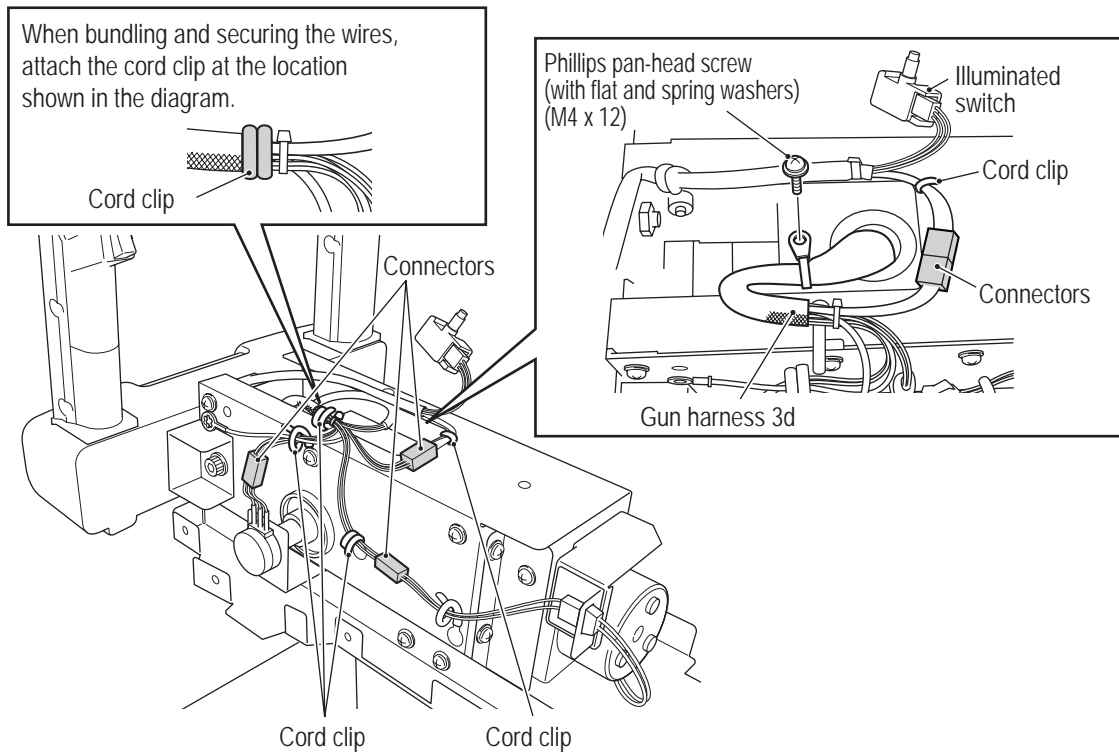

- 7** Pull out the gun harness 3d.

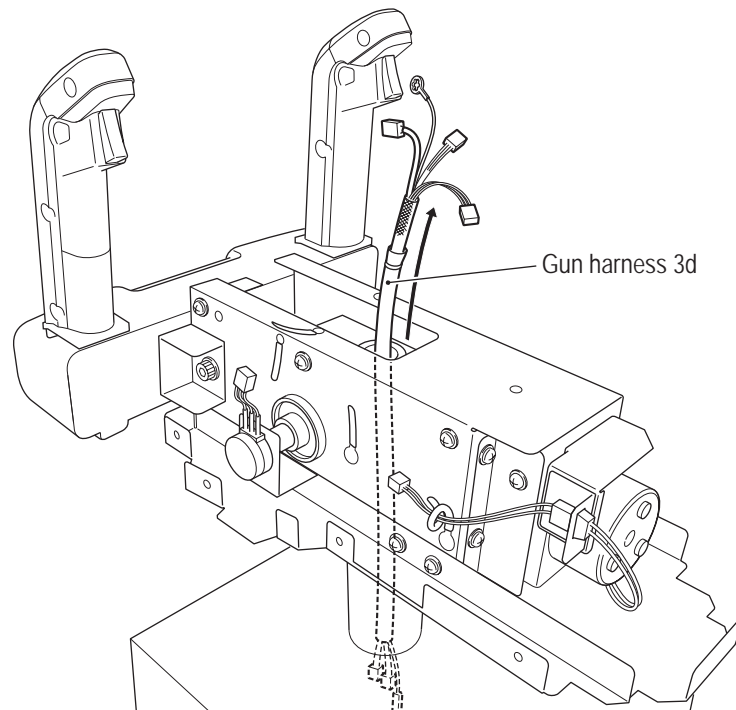


- 8** To install, follow the removal sequence in reverse.

(9) Replacing the gun harness 5

WARNING

- To protect the service staff and other people from electric shock, accident and injury and to prevent damage to the electrical circuitry of the machine, always turn off the power switch before conducting the described task.

- 1** Turn off the power switch. (See P. 20 "7-5-1 Power switch location and turning on the switch.")
- 2** Remove the gun cover. (See P. 62 "8B-4-2 (3) Replacing the volume (for up-down)" **3**.)
- 3** Disconnect the two connectors and detach the cord clip, and then remove the gun harness 5.

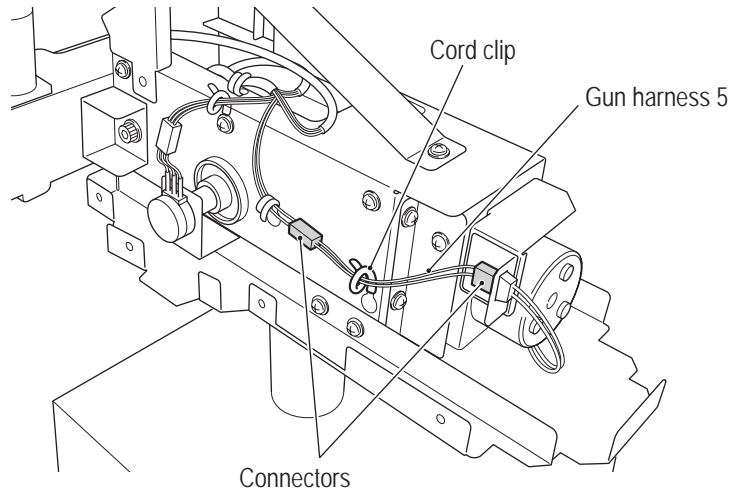

- 4** To install, follow the removal sequence in reverse.

8B. Maintenance – To be conducted by a technician only –


8B-4-3 Wheel Assy

(1) Removing and installing the Wheel Assy


WARNING

- To protect the service staff and other people from electric shock, accident and injury and to prevent damage to the electrical circuitry of the machine, always turn off the power switch before conducting the described task.

- 1** Turn off the power switch. (See P. 20 "7-5-1 Power switch location and turning on the switch.")
- 2** Remove the four Torx bolts (M5 x 12) and remove the wheel cover.

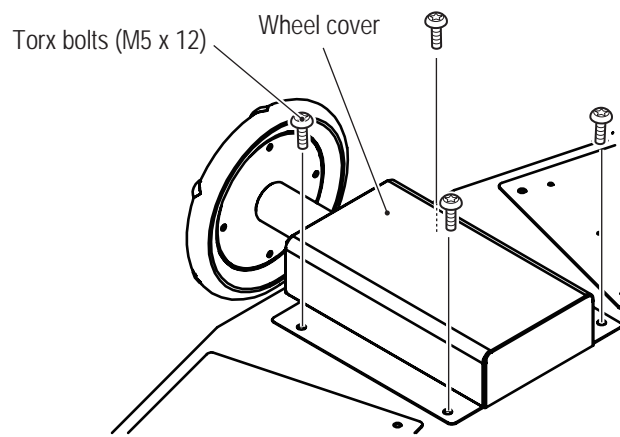

- 3** Disconnect the connector and remove the four Hexagon-head bolts with spring washers (M6 x 25), and remove the Wheel Assy.
* When removing the Hexagon-head bolts with spring washers (M6 x 25), support the wheel section since the Wheel Assy can lose balance due to the weight of the wheel.

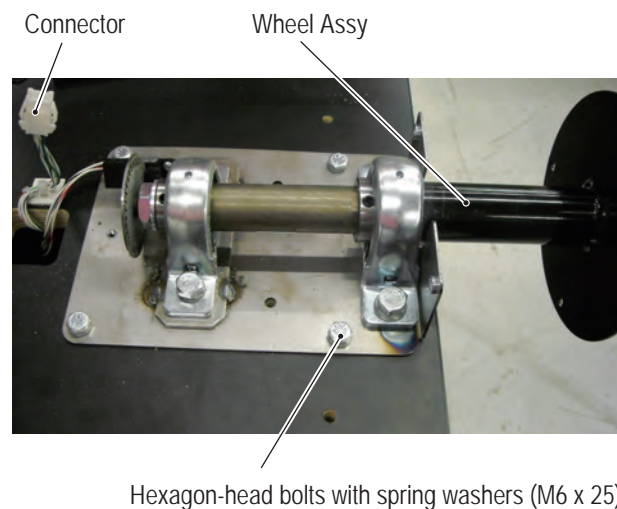

-
- 4** To install, follow the removal sequence in reverse.




- During the installation, check the direction of each connector and insert **the connectors firmly until they lock securely into place.**
- During the installation, be careful not to pinch the connectors or harnesses.

(2) Replacing the photosensor (for wheel)

WARNING

- To protect the service staff and other people from electric shock, accident and injury and to prevent damage to the electrical circuitry of the machine, always turn off the power switch before conducting the described task.


- 1** Turn off the power switch. (See P. 20 "7-5-1 Power switch location and turning on the switch.")
- 2** Remove the wheel cover. (See P. 76 "8B-4-3 (1) Removing and installing the Wheel Assy" **2**.)
- 3** Remove the two cap screws (M) (M4 x 10) and remove the photosensor bracket.

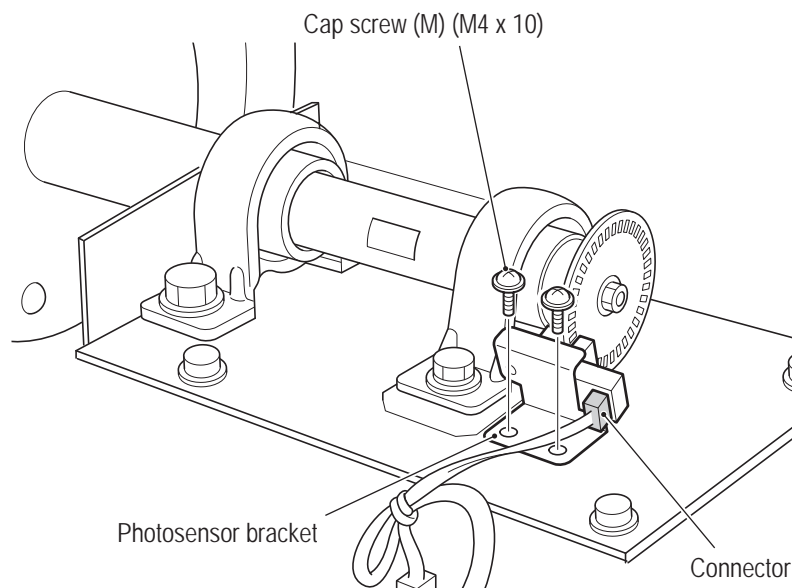



- 4** Disconnect the connector.

8B. Maintenance – To be conducted by a technician only –

- 5** Remove the one Phillips pan-head screw (M3 x 6), and remove and replace the photosensor.

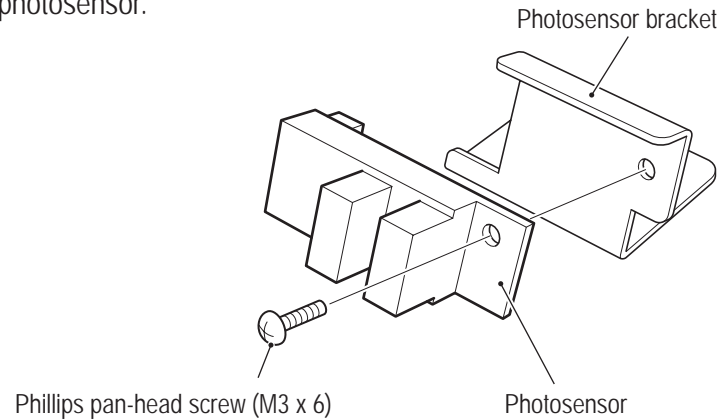


- 6** Temporarily install the photosensor bracket using two cap screws (M) (M4 x 6), position the slots in relation to the photosensor as shown in the diagram below, and then tighten the cap screws securely. After tightening the cap screws, turn the wheel and make sure that the slot board does not contact the photosensor.

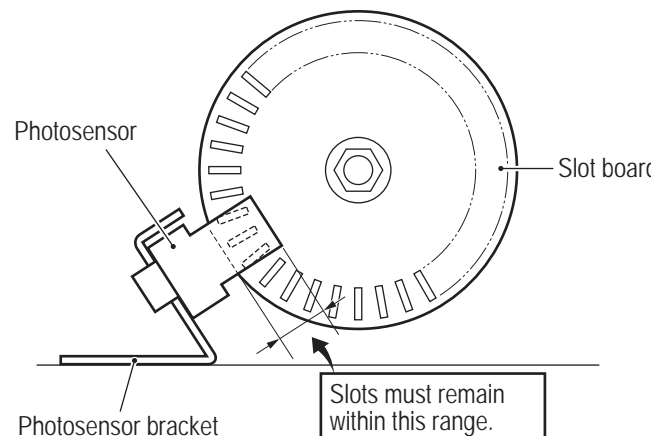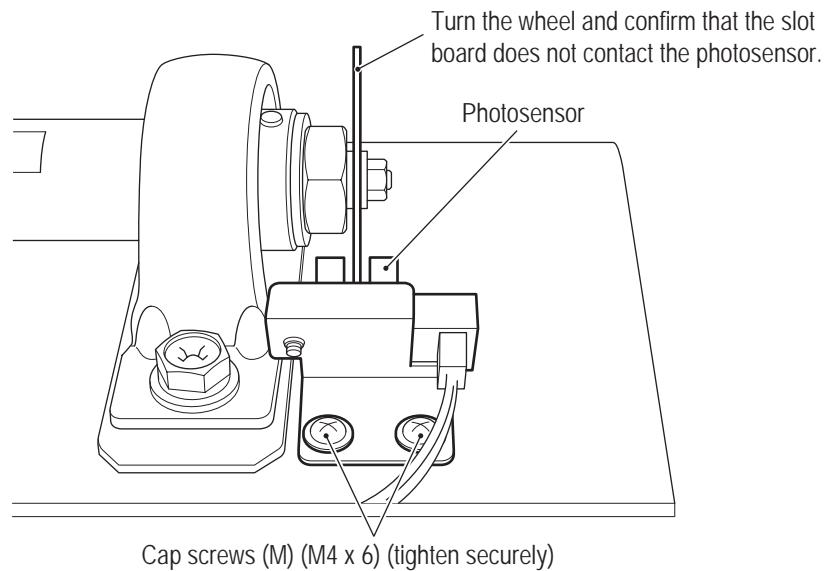

- During the installation, check the direction of each connector and insert the connectors firmly until they lock securely into place.
- During the installation, be careful not to pinch the connectors or harnesses.
- After the replacement, be sure to check the wheel for proper operation in the Test mode. (See P. 30 "7-6-4 (5) STEERING TEST.")

(3) Replacing the wheel

- 1** Remove the four Torx bolts (M5 x 12) and remove the wheel.

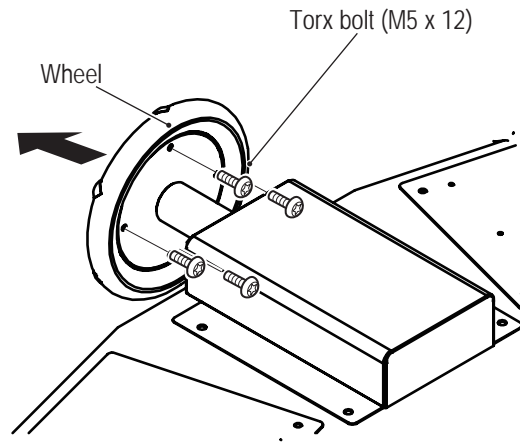

- 2** Replace the wheel.
- 3** To install, follow the removal sequence in reverse.

8B. Maintenance – To be conducted by a technician only –

8B-4-4 Marquee Assy

(1) Replacing the fluorescent lamps


WARNING

- To protect the service staff from injury and to prevent damage to the electrical circuitry of the machine, always turn off the power switch before conducting the described task.

CAUTION

- The fluorescent lamps become very hot. Exercise caution when removing them.
- Since removal of the fluorescent lamps must be performed at a height, prepare a step ladder or platform to stand on. Performing the task in an awkward position can result in injury or machine damage.

- 1** Turn off the power switch. (See P. 20 "7-5-1 Power switch location and turning on the switch.")
- 2** Remove the four Torx bolts (M5 x 25) and disconnect the connector of the fluorescent lamp unit, and then remove the Marquee box door with lamp unit from the Marquee Assy.

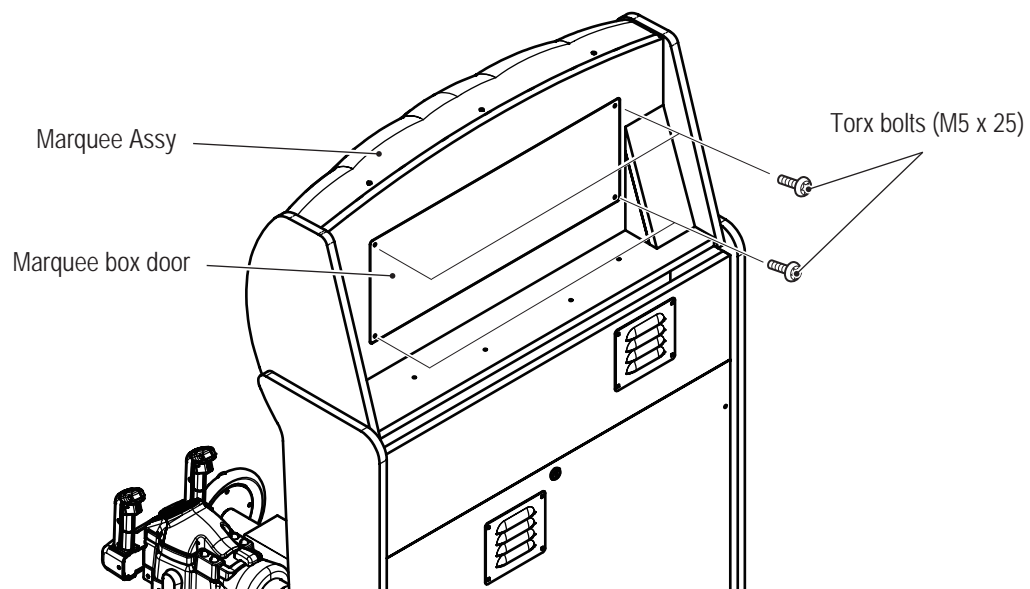

- 3** Replace the fluorescent lamps (20W).
- 4** To install, follow the removal sequence in reverse.


9. DISCARDING THE MACHINE

WARNING

- The machine must be collected, transported and discarded in accordance with applicable laws and regulations.
- When entrusting a third party to collect, transport and discard of the machine, be sure to select specialist companies.
- The following component contains specially controlled industrial waste which must be collected, transported and discarded in a special manner in accordance with the law. When discarding this component, please contact your distributor.
 - 32-inch LCD monitor (See P. 55 “8B-4-1 (4) Replacing the LCD monitor.”)
 - * In some cases, local ordinances also stipulate special methods of collecting, transporting and discarding specially controlled industrial waste.

10. PARTS LISTS

10-1 Cabinet Assy

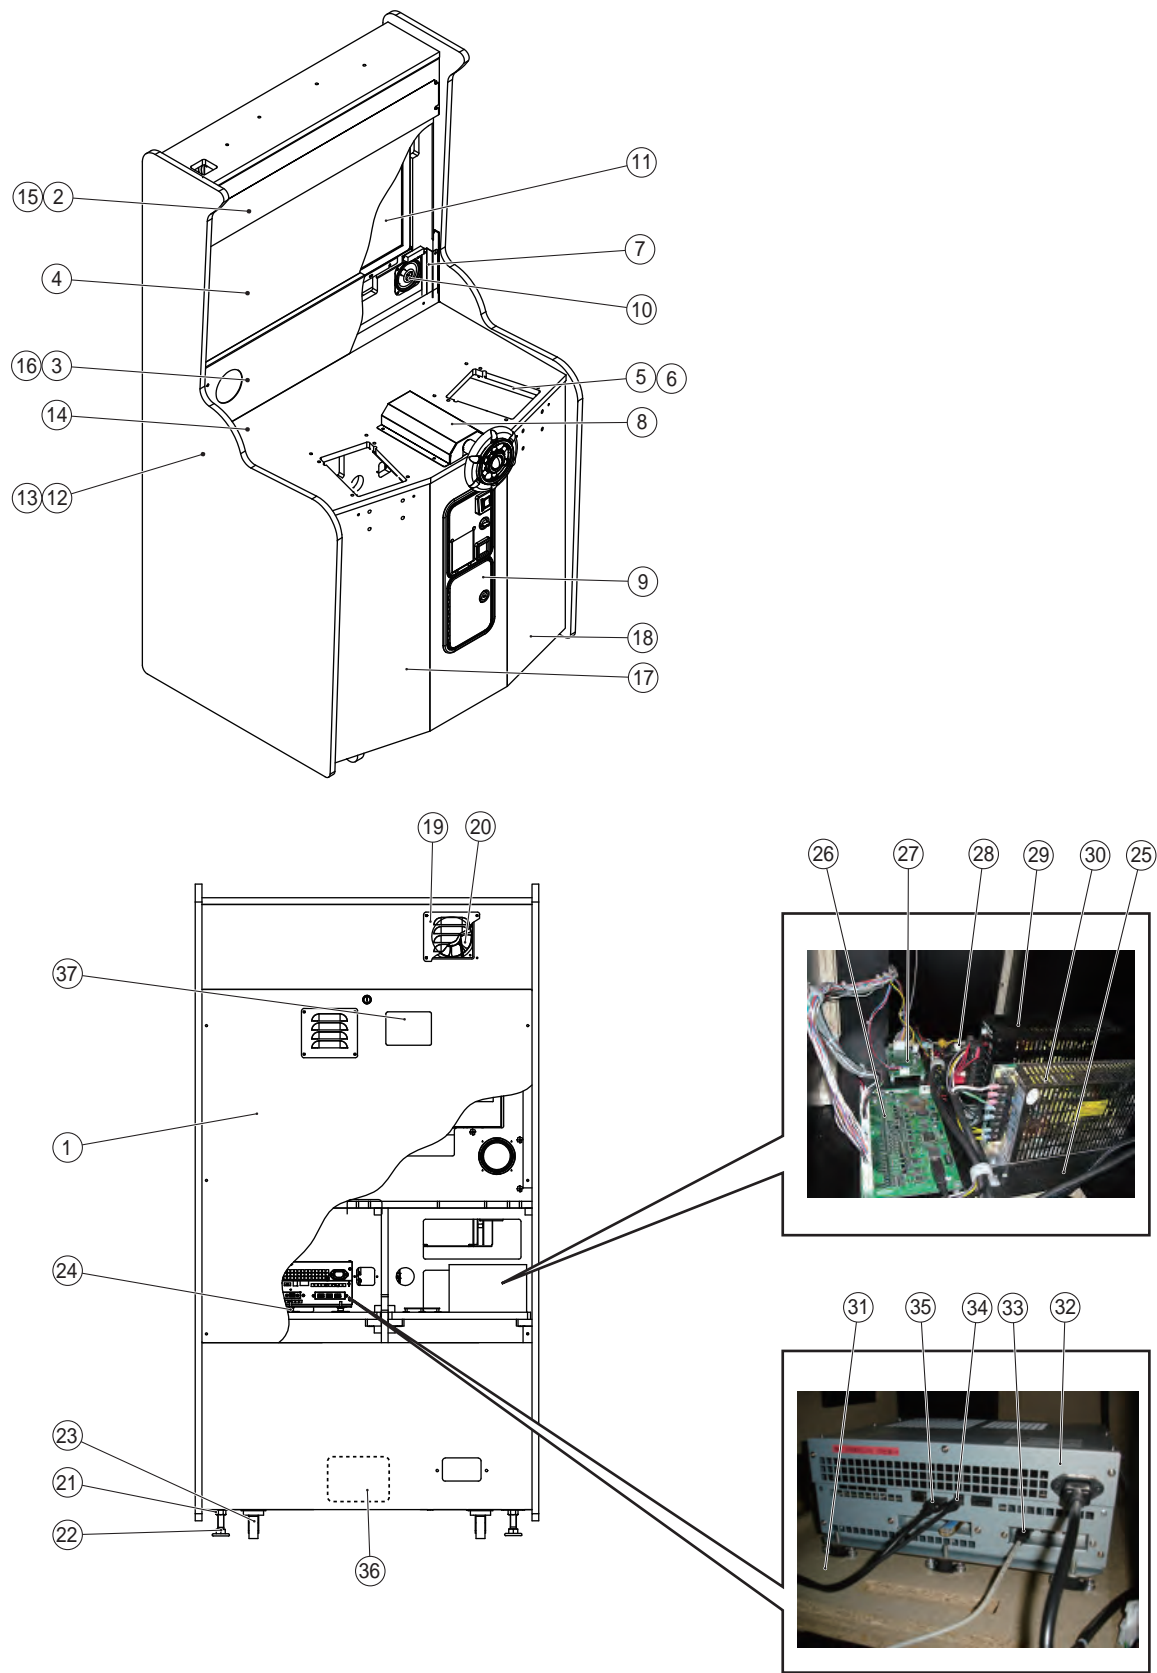


10. PARTS LISTS

No.	Name	Qty.	Type and rating	Part No.
1	Maintenance door	1		DP63-14052-02
2	Monitor cover B	1		DP10-13812-00
3	Monitor cover A	1		DP10-13808-00
4	Monitor glass	1		DP95-13816-00
5	Gun mount bracket L	1		DP10-13815-00
6	Gun mount bracket R	1		DP10-13815-01
7	Monitor cover bracket	2		DP10-13818-00
8	Wheel cover	1		DP10-13813-00
9	Over/Under door , 2 Entry	1		VG83-13188-00
10	Speaker	2		VG54-03210-01
11	LCD monitor 32"	1		VG85-12319-01
12	Decal, Side ST L	1		DP40-14060-00
13	Decal, Side ST R	1		DP40-14060-01
14	Decal, Table ST	1		DP40-13801-00
15	Decal, Monitor top ST	1		DP40-13802-00
16	Decal, Monitor bottom ST	1		DP40-14063-00
17	Decal, Front ST L	1		DP40-14061-00
18	Decal, Front ST R	1		DP40-14061-01
19	Vent plate	2		VG10-00066-08
20	AC FAN motor	1		VG55-13747-01
21	Leveler bracket	4		VG10-13164-00
22	Leveler	4		VG20-04938-01
23	Caster	4		VG24-00783-00
24	Round vibration-insulating rubber	1		RM96-12602-00
25	PCB base	1		DP63-14052-04
26	USIO PC board	1		DP15-13038-02
27	Gun Drive PC board	1		DP15-13039-00
28	Bass Amp PC board	1		DP15-13044-00
29	Power supply unit, 5V/12 V	1		VG88-13197-00
30	Power supply unit, 12V	1		VG88-10064-00
31	Rack base	1		DP63-14052-05
32	System 357	1		DP05-13020-02
33	USB cable	1		VG50-06800-01
34	AV cable	1		VG50-13147-00
35	HDMI-DVI conversion cable	1		VG50-13146-00
36	Transformer, Isolation	1		VG56-09173-01
37	Maintenance warning label	1		VG44-12423-00

10. PARTS LISTS

10-2 Gun Assy

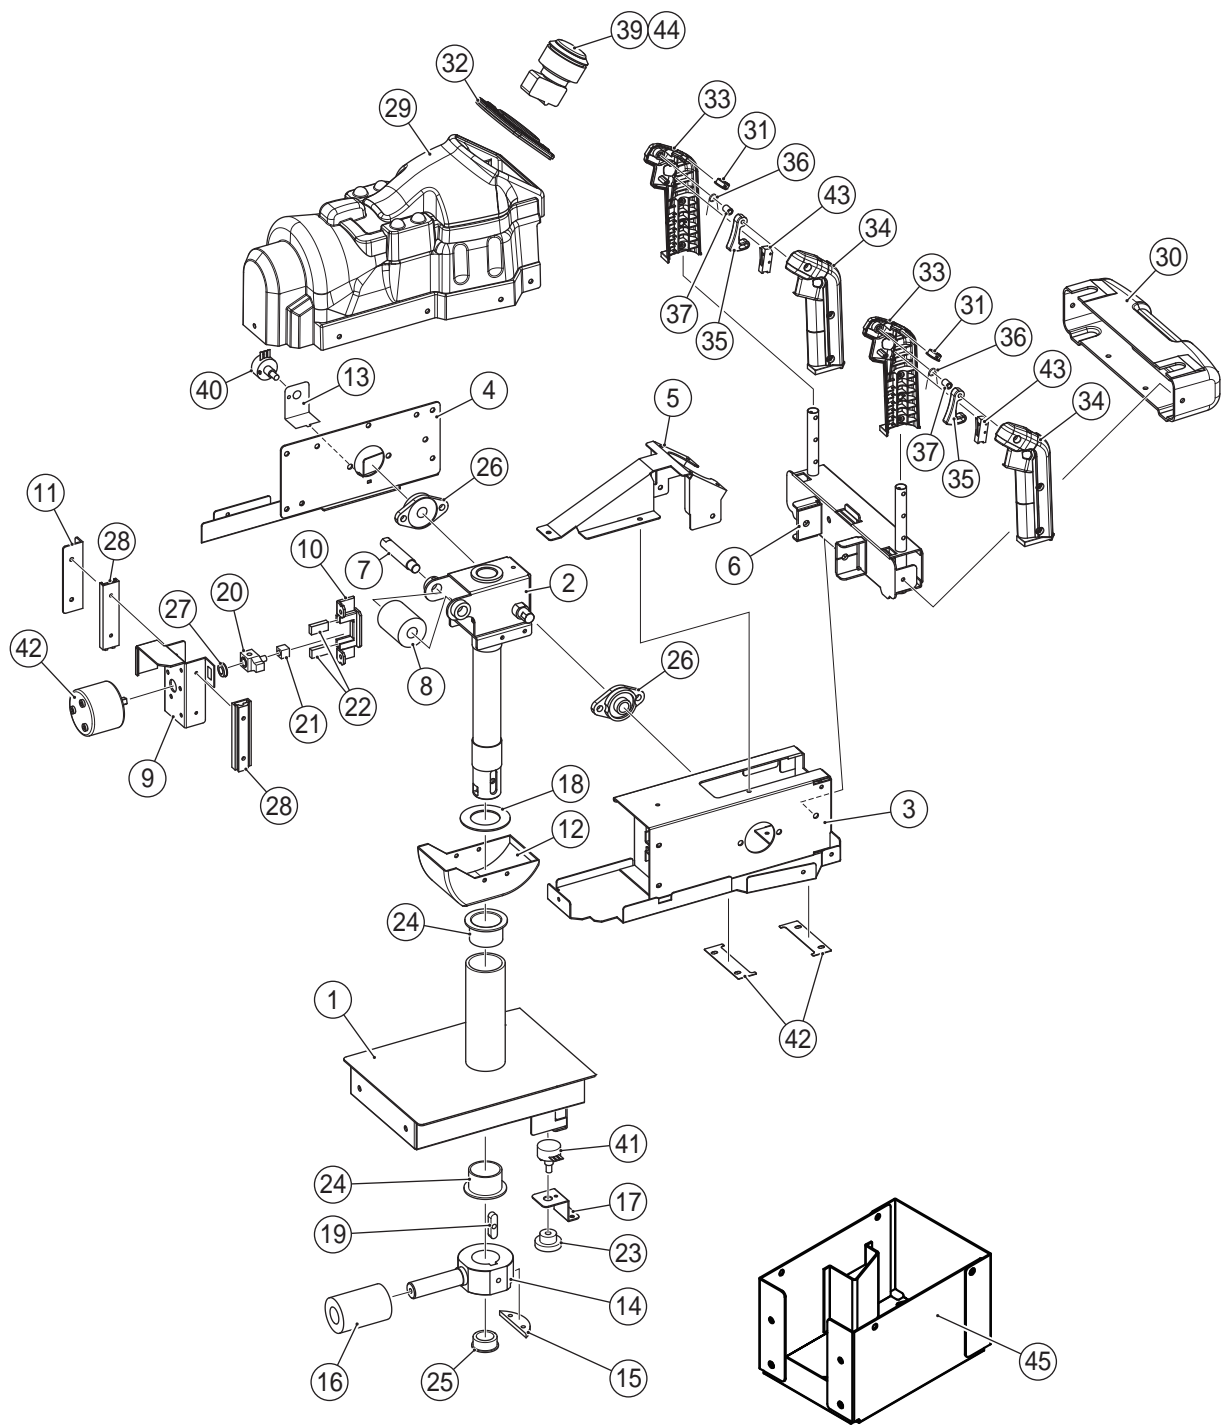


10. PARTS LISTS

No.	Name	Qty.	Type and rating	Part No.
1	Neck SD	1		DP10-13086-00
2	Core shaft	1		DP10-13094-00
3	Frame cover (2)	1		DP10-13105-00
4	Frame cover (1)	1		DP10-13104-00
5	Switch base	1		DP10-13103-00
6	Grip	1		DP10-13110-00
7	Stopper shaft	1		DP11-13109-00
8	Stopper rubber (1)	1		DP96-13095-00
9	Motor frame	1		DP10-13108-00
10	Stopper frame	1		DP10-13106-00
11	Slide bracket	1		DP10-13107-00
12	Undercover	1		DP90-13025-00
13	VR bracket (for up-down)	1		DP10-13102-00
14	Pipe end	1		DP11-13099-00
15	Gear	1		DP59-13047-00
16	Stopper rubber (2)	1		DP96-13101-00
17	VR bracket (for left-right)	1		DP10-13111-00
18	Spacer	1		DP96-13096-00
19	Key	1		DP11-13098-00
20	Crank	1		DP11-13174-00
21	Slider	1		DP59-13175-00
22	Stopper rubber	2		DP96-13176-00
23	Gear	1		DP59-13097-00
24	Flange bushing	2	LFF-3220	DP59-13048-00
25	Gun base box	1		DP10-13069-00
26	Rhomboidal pillow	2	KFL001	DP59-13177-00
27	Miniature bearing	1	MF148ZZ	DP59-13178-00
28	Slide rail	2	AR2-60 (ball: 2 x 10 pieces)	RM05-12576-00
29	Gun cover	1		DP90-13031-00
30	Grip cover	1		DP90-13024-00
31	Button cover Hole blind	2		DP90-13180-00
32	Switch bezel	1		DP90-13181-00
33	Lever grip A	2		DP90-13182-00
34	Lever grip B	2		DP90-13183-00
35	Trigger button	2	SN-07170	DP90-13184-00
36	Trigger spring	2	SN-07171	DP22-13049-00
37	Trigger spacer	2	SN-07177	DP90-13185-00
38	Cover plate	2		DP95-13186-00
39	Start button Button sticker	1		DP40-13192-00
40	Potentiometer (for up-down)	1	EWSV7CF20E13	VG75-03824-00
41	Potentiometer (for left-right)	1	EWSUGBF20E13	VG75-07050-00
42	Rotary Solenoid	1	RSR20/10-CAB0-BNG	RM09-12584-00
43	Microswitch	2	D3M-01L1-3	VG53-13118-00
44	Illuminated button switch	1		VG80-13093-00
45	Gun base box	1		DP10-13247-00


10. PARTS LISTS

10-3 Wheel Assy

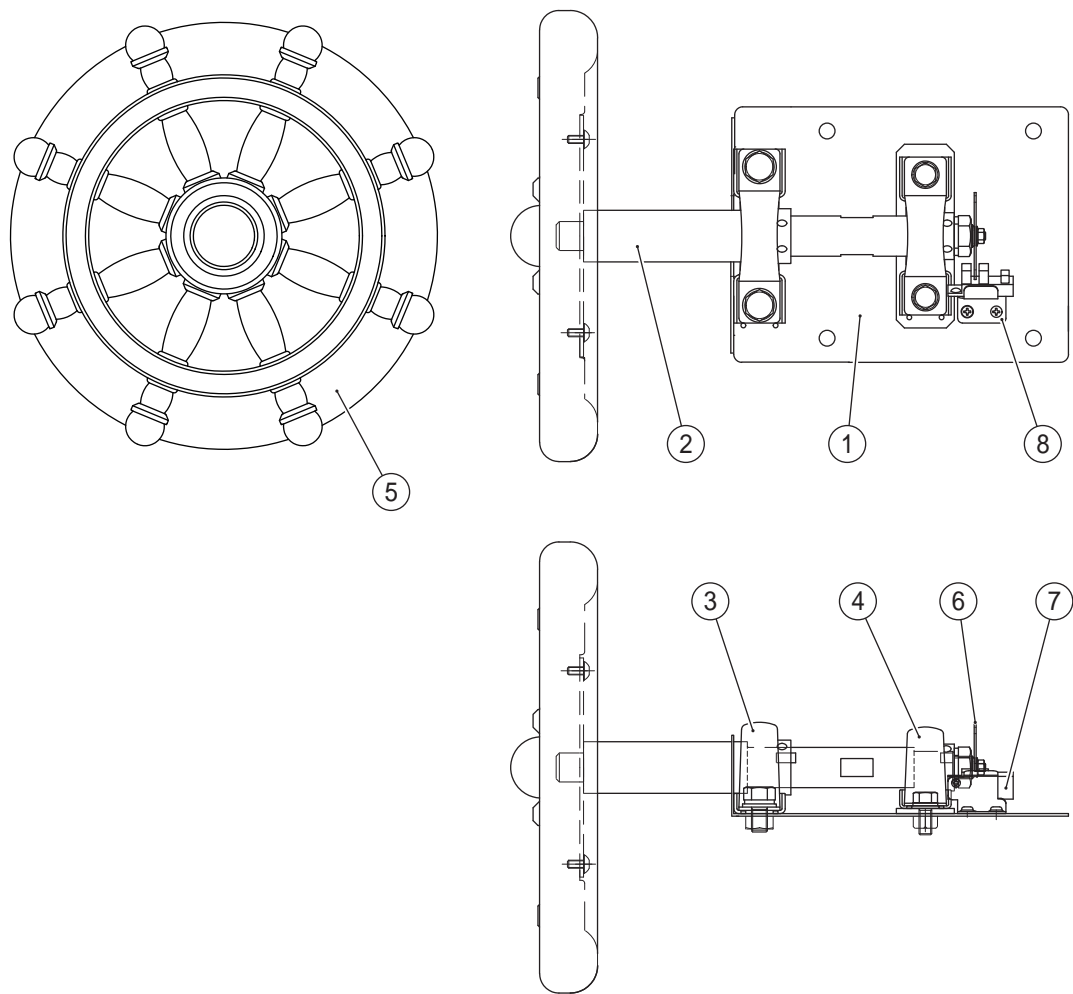

No.	Name	Qty.	Type and rating	Part No.
1	Wheel base	1		DP10-13112-00
2	Wheel shaft	1		DP11-13113-00
3	Pillow unit (diameter: 25 mm)	1	BPP5	VG59-13115-00
4	Pillow unit (diameter: 20 mm)	1	BPP4	VG59-13116-00
5	Steering wheel	1		DP90-13170-00
6	Slot board	1		DP10-13171-00
7	Photosensor	1	KI1138-AALF	DP79-13170-00
8	Sensor bracket	1		DP10-13114-00

10-4 Service Plate Assy

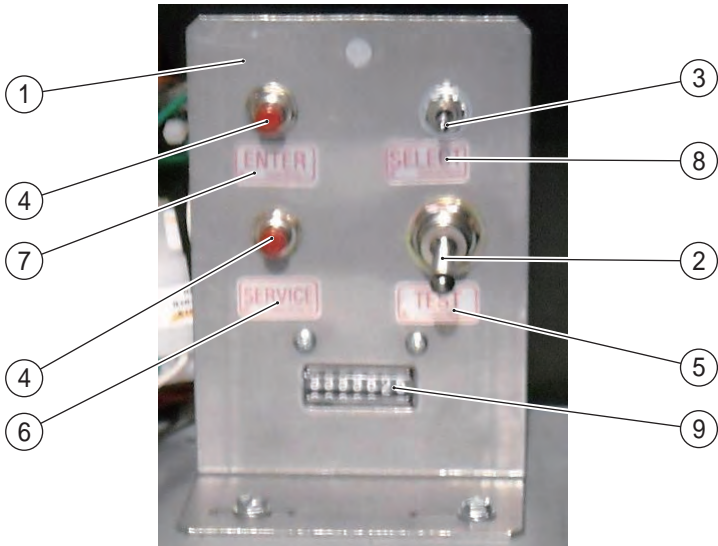

No.	Name	Qty.	Type and rating	Part No.
1	Service panel	1		VG10-06881-00
2	Toggle switch	1		VG53-12702-00
3	Toggle switch (Center off)	1		VG53-12703-00
4	Mini btn, Start, Red ctr galag	2		VG53-09641-00
5	Label, Service panel "Test"	1		VG44-02702-00
6	Label, Service panel "Service"	1		VG44-02702-01
7	Label, Service panel "Enter"	1		VG44-02702-11
8	Label, Service panel "Select"	1		VG44-02702-07
9	Coin meter, 12V W/Harness	1		VG83-13196-00


10-5 Cord Box Assy



No.	Name	Qty.	Type and rating	Part No.
1	A.C. Plate, detach cord	1		VG10-13674-00
2	Panel mount fuse holder	1		VG78-12950-00
3	Filter, EMI, 10A, Panel mount	1		VG78-12947-00


10. PARTS LISTS

10-6 Marquee Assy

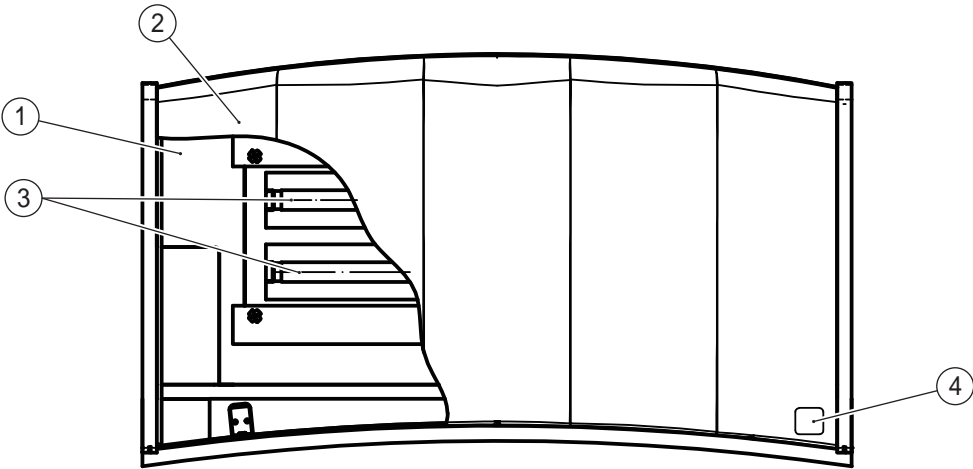


No.	Name	Qty.	Type and rating	Part No.
1	Marquee box	1		DP63-14052-00
2	Sign cover	1		DP90-14053-00
3	Fluorescent lamp	2	20W	VG57-02028-00
4	Security ST	1		VG44-13051-00

10-7 Other parts

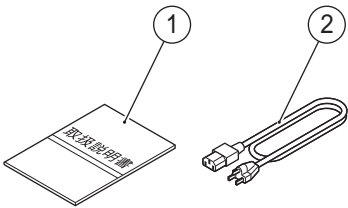

No.	Name	Qty.	Type and rating	Part No.
1	Operation Manual	1		DP45-13791-00
2	Power cord	1		VG51-01232-06

1/2

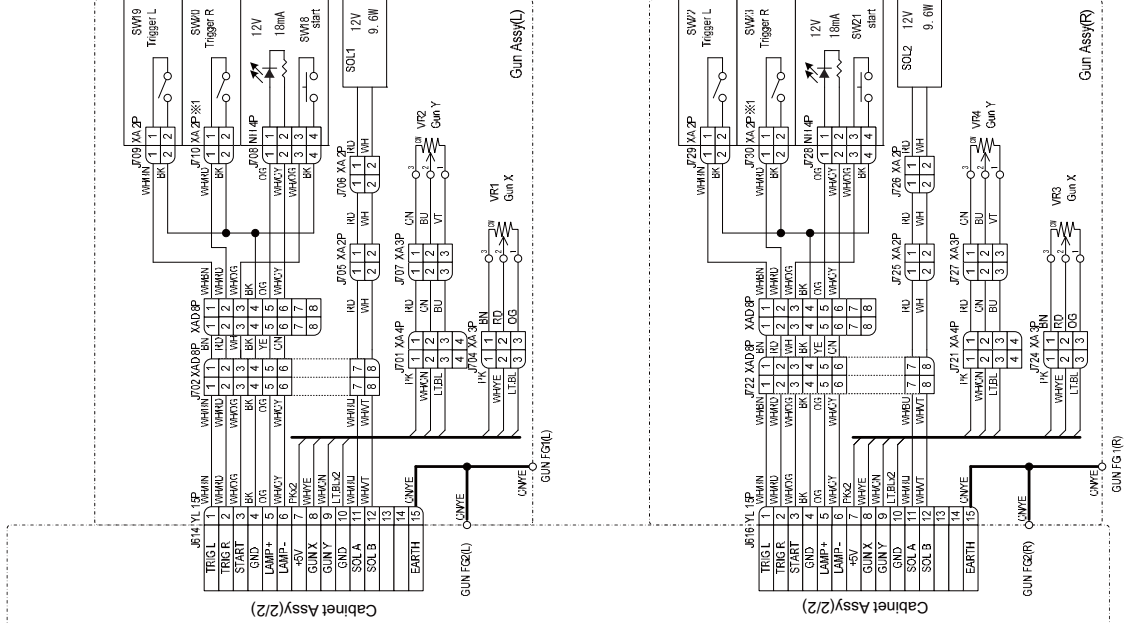



To Purchase This Item, Visit BMI Gaming | www.bmigaming.com | (800) 746-2255 | +561.391.7200

© NAMCO BANDAI Games Inc.

First Edition Published in November 2011

NAMCO AMERICA INC.

951 Cambridge Drive
Elk Grove Village, IL 60007
847.264.5610

FAX: 847.264.5611

Technical Assistance (USA)

Parts: 847.264.5612 Tech Service: 847.264.5614

Fax: 847.264.5613

Part No. DP45-14051-00

Rev A. November 2011