

STRIKE ZONE™

ARCADE OPERATION MANUAL

11-08-11



WARNING

Be sure to read this Operation Manual before using your machine to ensure safe operation.



© 2011 Bob's Space Racers® Incorporated



Table of Contents

MODEL VIEW 2	INSTALLATION 7	MAINTENANCE AND INSPECTION14
SPECIFICATIONS 3	Play zone (Operation Zone):..... 7	Maintenance: 14
Rated power supply:.....3	Locations to avoid:..... 7	Cleaning:..... 14
Power consumption:.....3	GAME LEVELING :..... 8	GAME LAYOUT15
Dimensions:3	CONNECTING THE POWER	TROUBLESHOOTING16
Weight:3	CORD 9	General Troubleshooting: 17
INTRODUCTION 4	INSTRUCTION FOR PLAY 10	SHOOT ADJUSTMENT :.....18
Overview:4	OPTION SETTINGS 10	PARTS LIST18
To Maintain Safety:4	Coins per Game, Bonus Start	WARRANTY24
WARNING: (or) CAUTION:4	Value, Hit Bonus Points10	CALLING FOR SERVICE25
NOTE (or) NOTICE:4	Game Time, Payout Score /	
IMPORTANT SAFETY	Ticket, Demo / Music11	
INFORMATION: 5	Mercy Payout, Maximum Payout,	
SET UP: 5	Bonus Increase, Difficulty12	
PACKAGE CONTENTS 6	Point Group, Test13	



MODEL VIEW

[Back to TOC](#)

Strike Zone™ Arcade Game



SPECIFICATIONS

[Back to TOC](#)

Rated power supply:

110VAC \pm 10%, 60 Hz \pm 3 Hz.

(Note: Please refer to the label on the game for the actual voltage).

Power consumption:


120 W (Min) to 150 W (Max)

Dimensions:

96 3/4" L x 28" W x 93 3/4" H

Weight:

386 lbs

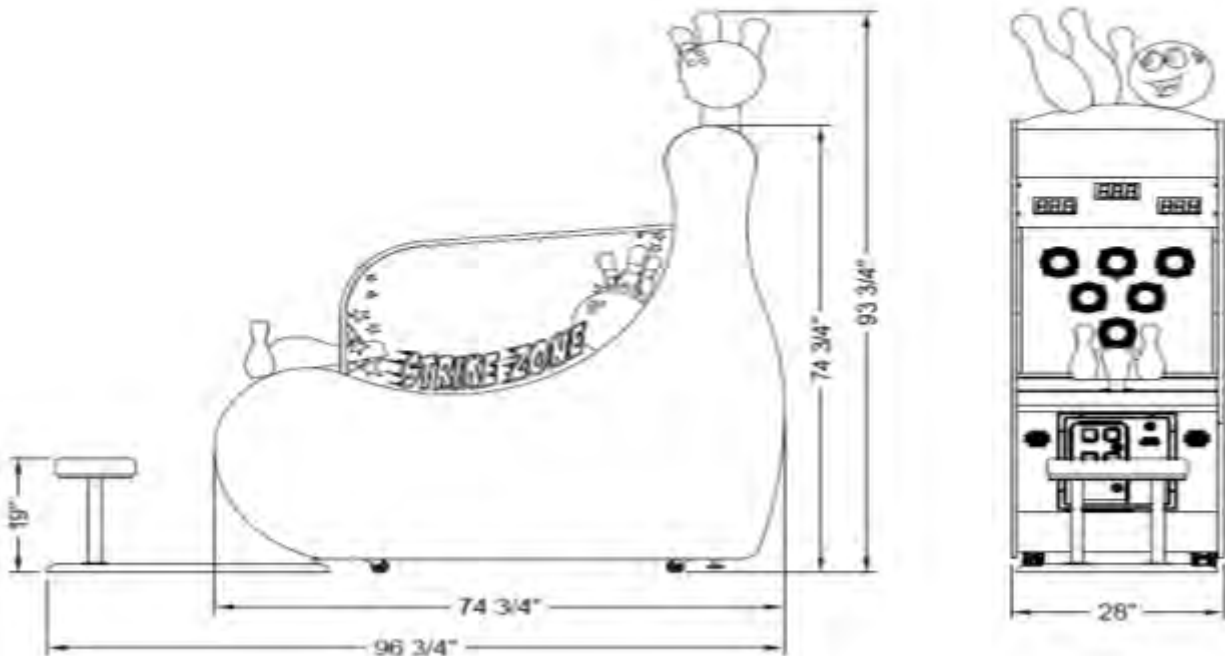

NOTE: Game parameters are subject to change without notice.

INTRODUCTION

[Back to TOC](#)

Overview:

Thank you for purchasing the new STRIKE ZONE™ from Bob's Space Racers®. Built on a long tradition of value, the new STRIKE ZONE™ retains all of the great game play you have come to expect of a game from BSR, and is specifically designed for today's Arcade environment. The new game uses technology specifically developed for this application.

This owner's Manual is intended to provide detailed descriptions together with all the necessary information covering the general operation of electronic assemblies, servicing control, spare parts, etc. pertaining to the game.

This manual is intended for the owner, personnel and managers in charge of operation of the product. Operate the product after carefully reading and sufficiently understanding the instructions. If the product fails to function satisfactorily, non-technical personnel should under no circumstances touch the internal system.



To Maintain Safety:

To ensure the safe usage of the product, be sure to read the following before using the product. The following instructions are intended for the users, operators and the personnel in charge of the operation of the product. After carefully reading and sufficiently understanding the warning display and cautions, handle the product appropriately. Be sure to keep this operation manual nearby the product or elsewhere convenient for referring to it when necessary.

Herein, explanations which require special attention are in sign of warning. Depending on the potentially hazardous degrees, the terms of NOTICE, WARNING, and CAUTION, etc. are used. Be sure to understand the content of the displays before reading the text.

WARNING: (or) CAUTION:

Disregarding this text could result in serious injury or damage to the machine.

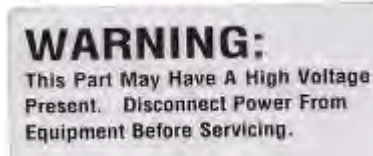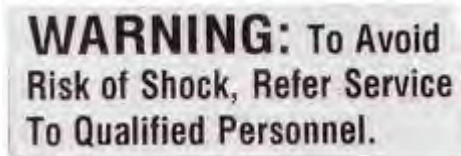

NOTE (or) NOTICE:

NOTE: ONLY QUALIFIED TECHNICAL PERSONNEL SHOULD WORK ON THIS GAME. FAILING TO COMPLY CAN CAUSE SEVERE INJURY.

IMPORTANT SAFETY INFORMATION:

[Back to TOC](#)

WARNING: Unplug the game from the AC wall receptacle when servicing this product. Failure to do so could result in serious injury to yourself or others.

Use only a GROUNDED AC receptacle. Failure to do so could result in improper operation or damage to the game and could void your warranty. If you are unsure that your AC receptacle is properly grounded, have a qualified electrician perform this check for you.

Always be sure power to the game is turned off when doing even routine maintenance. Otherwise, moving parts could activate unexpectedly causing injury.

This product is heavy, necessitated by the design. When moving this game, be sure you have adequate help. Use a suitable dolly or hand truck where practical. Use back support when needed.

SET UP:









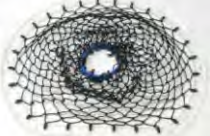

[Back to TOC](#)

1. Be sure that the game is on a level surface. If the game is rocking on the floor adjust the legs to remove the rocking of the game.
2. Be sure to plug the game into the proper A.C. GROUNDED receptacle. Do not use long extension cords unless absolutely necessary and if so, be sure it is a heavy duty cord of at least 16 Ga. and no longer than 20 ft. Check the label on the back of the game to make sure the power requirements of the game match that of your location.
3. Turn the game on and check to be sure there are no unusual sounds and that everything appears to be working correctly.

PACKAGE CONTENTS

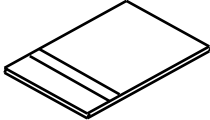[Back to TOC](#)

Game Unit Accessories

No.	Description	Specs	Qty	Picture	Note
1	Power Cord	10A/250V 1.8m	1		
2	Fuse	6.3 A/250V Φ5-20MM	1		220V
3	Manual		1		
4	Key	X919	2		Front and Back Door Key
		X818	1		Coin Box Key
5	Ball		55		
6	Motor Ball Wheel		2		
7	Light Ring Sensor		2		
8	Gun Net		1		
9	Socket Head Wrench	3mm	1		
10	Various Light Ring LED's		12		

INSTALLATION

[Back to TOC](#)



ATTENTION

- For indoor use only!

Check the parts list before installation. Verify that all parts that have been received and are in good condition.

Play zone (Operation Zone):

This machine requires space for playing the game. Be sure to leave enough space when installing the machine.



WARNING

- **Be sure to check the Electrical Specifications.** Ensure that this product is compatible with your location's power supply, voltage and frequency requirement. A plate describing Electrical Specifications is attached to the product. Non-compliance with the Electrical Specifications can cause a fire and electric shock.
- Putting many loads on one electrical outlet can cause generation of heat and a fire resulting from overload.

Locations to avoid:



NOTICE

The machine is designed for indoor use only. Never install this machine outdoors or in any of the following:


- Locations exposed to direct sunlight
- Locations subject to rain or water leakage.
- Unstable locations or locations subject to vibration.
- Dusty, hot, or damp locations.

GAME LEVELING:

[Back to TOC](#)

Install this machine on a flat surface. Adjust levelers to lift the legs and level game.

Make sure that the machine is level with the floor. If the machine is not level, the game may not play well.

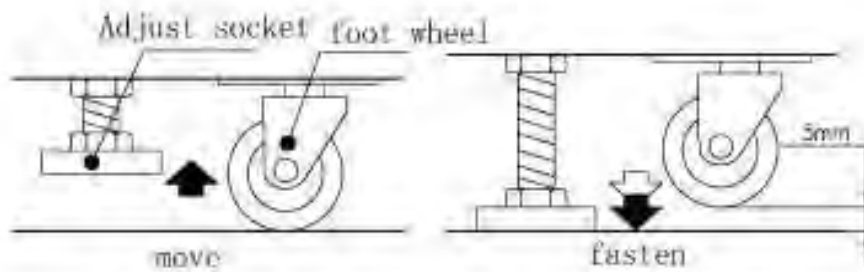


WARNING

- Disconnect game power before moving
- Make sure all wheels are intact. Replace any wheels that are damaged or broken before moving the game.
- When moving the game, DO NOT slide the game across the floor
- Ensure the game is level before connecting the power


CONNECTING THE POWER CORD

[Back to TOC](#)

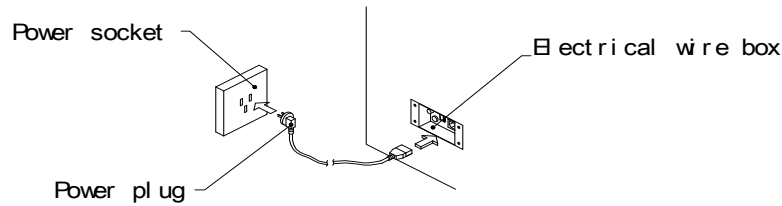


WARNING

- Do not put heavy items on power cord.

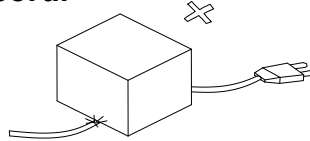

- Hold the power plug instead of the wire to draw the power cord out of the socket.

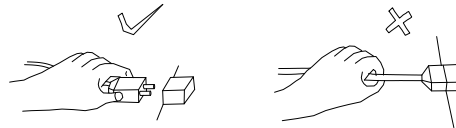

- Do not touch the power plug with wet hands.



- Do not draw or twist the cord or near a heat source.

- Do not place the cord where the player can easily trip over or come in contact with it.



- Operate this game with the correct power and fuse configuration. (The machine's supply Voltage is 110VAC, please refer to the label on the machine, connect the actual supply voltage, if not, it can cause an electric shock or malfunction.)

INSTRUCTION FOR PLAY

[Back to TOC](#)

1. Insert coin(s), the game starts.
2. When the game play starts, aim your gun at the lighted targets. The gun will fire automatically.
3. Tickets will be awarded for each game play.
4. Bonus Tickets are awarded for beating the high score and the bonus score.

OPTION SETTINGS

[Back to TOC](#)

Coins per Game, Bonus Start Value, Hit Bonus Points

As of 5/11/2011

Item	content	SW1							
		1	2	3	4	5	6	7	8
Insert coin (coin/game)	1	on	on						
	2	OFF	ON						
	3	on	off						
	4	off	off						
Bonus Start Value	0			on	on				
	10			OFF	ON				
	25			on	off				
	50			off	off				
Hit Bonus Points	250					on	on	on	on
	300					off	on	on	on
	350					on	off	on	on
	400					off	off	on	on
	450					on	on	off	on
	500					OFF	ON	OFF	ON
	550					on	off	off	on
	600					off	off	off	on
	650					on	on	on	off
	700					off	on	on	off
	750					on	off	on	off
	800					off	off	on	off
	850					on	on	off	off
	900					off	on	off	off
1000					on	off	off	off	
1200					off	off	off	off	

Game Time, Payout Score / Ticket, Demo / Music

As of 5/11/2011

Item	Content	SW2							
		1	2	3	4	5	6	7	8
Game Time	18	on	on	on					
	20	off	on	on					
	22	on	off	on					
	24	OFF	OFF	ON					
	26	on	on	off					
	28	off	on	off					
	30	on	off	off					
	60	off	off	off					
Payout (score/ ticket)	5				on	on	on	on	
	10				off	on	on	on	
	15				on	off	on	on	
	20				off	off	on	on	
	25				on	on	off	on	
	30				OFF	ON	OFF	ON	
	35				on	off	off	on	
	40				off	off	off	on	
	45				on	on	on	off	
	50				off	on	on	off	
	55				on	off	on	off	
	60				off	off	on	off	
	65				on	on	off	off	
	70				off	on	off	off	
75				on	off	off	off		
	no payout				off	off	off	off	
Demonstrate and music	Demo								ON
	Music								off

Mercy Payout, Maximum Payout, Bonus Increase, Difficulty

As of 5/11/2011

Item	Content	SW3							
		1	2	3	4	5	6	7	8
Mercy payout	0	ON	ON						
	1	off	on						
	2	on	off						
	4	on	on						
Maximum payout	0			on	on				
	100			off	on				
	250			on	off				
	500			OFF	OFF				
Bonus increase	0					on	on		
	1					OFF	ON		
	2					on	off		
	3					off	off		
Difficulty	easy							on	on
	MEDIUM							OFF	ON
	hard							on	off
	extremely							off	off

Point Group, Test

As of 5/11/2011

Item	Content	SW4							
		1	2	3	4	5	6	7	8
Point Group	I	ON	ON						
	Not Used	Off	on						
	Not Used	on	off						
	Not Used	off	off						
Test	yes			on					
	NO			OFF					

MAINTENANCE AND INSPECTION

[Back to TOC](#)

Maintenance:

Due to the design of the machine, very little periodic maintenance is required.

Start the game and verify the correct operation before putting the game into everyday operations.

Clean the surface of the game as needed.

After about a month of game operation, check to be sure all parts are secure and in proper working order.

1. Remove power before servicing game.

To avoid a short circuit, the power must be removed before touching the inside of the game.

2. Choose the appropriate replacement parts.

Using the wrong parts could lead to malfunction or damage to the game and components.

3. Do not substitute or change equipment, without authorization.

Doing so could lead to a short circuit and machine malfunction, or fire.

4. Do not put containers of water, cups or soda cans on the machine. In addition, chemicals or heavy items should not be allowed around the game.

The spill could cause a short circuit. Falling items could injure people or destroy the machine.

Cleaning:

CLEANING - Clean the outer surfaces of the game with a commercial spray type cleaner. DO NOT however, use glass cleaner or commercial sprays on the marquee graphic panel. Use a good quality spray type furniture polish to keep the game looking good.

Vacuum the inside of the game occasionally to help keep the dust and ticket debris off of all the optical sensors.

GAME LAYOUT

[Back to TOC](#)



TROUBLESHOOTING

[Back to TOC](#)



WARNING

For your safety, and to reduce risk of damage to your game read the Important Safety Information on page 5 before attempting any troubleshooting procedure.

TROUBLESHOOTING PHILOSOPHY

When troubleshooting any product, certain general guidelines should be followed.

1. Always check to be sure that your game is turned on. Be sure that all of the fuses in the game are functional and check to see that the AC voltage is in the proper operating range for your game.
2. Check to be sure that all of the game harnessing is plugged in properly and that all of the pins are firmly seated in the connectors. It is always possible that a harness can be damaged by rough shipping or moving.
3. Check game harnessing to be sure that none of the wires have become or are damaged. Using a handheld multi-meter, check continuity of the wires to make sure they are not broken.
4. Check for obvious damage to the P.C. Boards or electrical components.
5. If you have multiple games or multiple parts on a game, change or exchange the parts and see if the problem goes away or moves to another location. This way you can quickly eliminate certain parts as being the problem with the game.
6. When changing electronic or electrical components, ALWAYS disconnect power by unplugging the game.
7. Test power supplies for the specified voltages to the P.C. Boards and components as shown in the manual.

General Troubleshooting:

[Back to TOC](#)

Symptom	Possible Problem	Solution
	POWER	POWER
Game will not score	Power not on switch Sensor output not correct Signal not getting to mainboard Signal gets to main board but board doesn't see it	Check wiring harness for 12 volts on switch Repair / Replace Ring Repair / Replace harness Replace mainboard
Sound Problems -No sound -Low Sound -Intermittent Sound	Low Volume Faulty speaker harnessing Faulty speaker Faulty sound board or sound board harnessing Faulty Main P.C. Board	Check Volume Control and adjust as necessary Check connections and/or repair harnessing Check and/or replace speaker Check connections or Replace Sound Board Check and/or repair or replace Main P.C. Board
Game does not take or add money correctly	Coin switch out of adjustment Coin mech dirty or improperly adjusted Faulty Coin switch Faulty coin switch harness or connector Game improperly programmed Faulty Main P.C. Board or component	Re-bend coin switch wire Clean and adjust mech as necessary Check and/or replace switch Check and/or repair harnessing Check programming options and adjust Repair and/or replace Main P.C. board
Ticket Dispenser not working properly, or no tickets being dispensed	No tickets in the game Tickets jammed in dispenser Ticket dispenser sensor blocked with debris Poor connection on the ticket dispenser Game improperly programmed Faulty ticket dispenser Faulty ticket dispenser harnessing Faulty Main P.C. Board	Refill ticket dispenser Clear ticket jam Clean off sensor Check and/or replace connectors Check ticket programming options Replace dispenser Check and/or repair harnessing Replace or repair Main P.C. Board
Game will not start.	Game power off Electrical Power Switch Open Main fuse blown Power Supply problem or failure Faulty P.C. board or component	Check on/off switch and power cord Close Electrical Power Switch Check and/or replace fuse as necessary Check Power Supply output , connections, and fuse Repair and/or replace main P.C. board
Game stops or is stopped with nothing displayed	The power connector is disconnected. Possible faulty connection or short circuit.	Reconnect the connector securely. Check all circuitry for faulty connections or short circuits.

NOTE: CONTACT YOUR DISTRIBUTOR IF NONE OF THE CASES LISTED IN THIS MANUAL APPLIES TO THE PROBLEM, OR IF THE ACTION LISTED DOES NOT APPEAR TO RESOLVE THE PROBLEM.


SHOOT ADJUSTMENT:

[Back to TOC](#)

Remove top assembly on gun

Tighten or loosen screw to adjust shooting strength

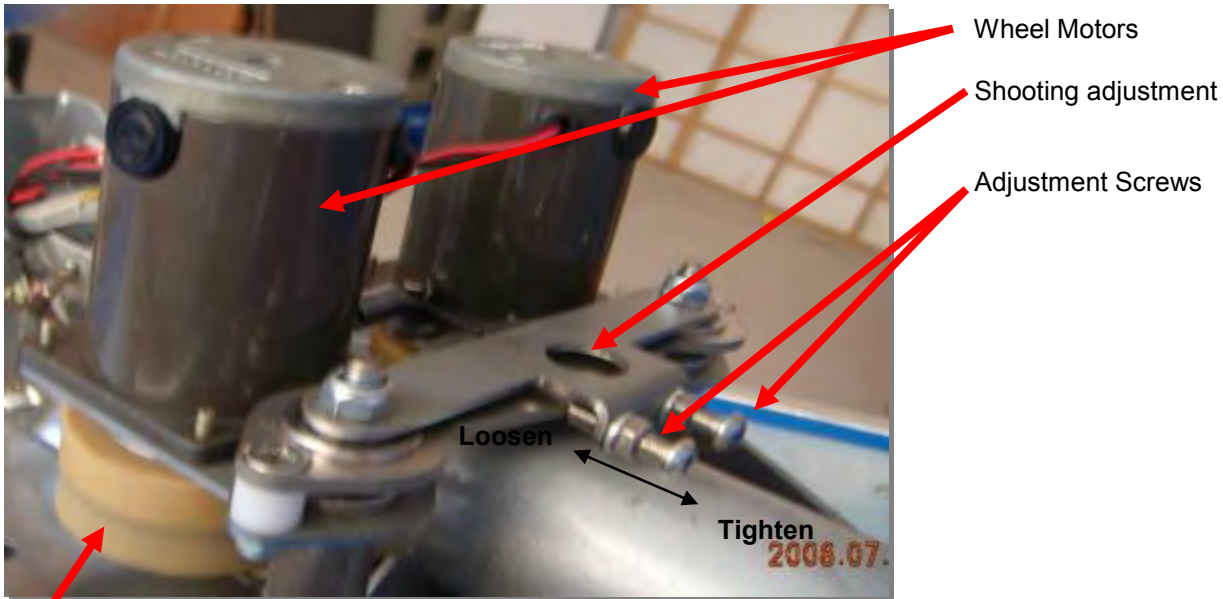

Loosen screw to adjust forward and backward shooting range



Worn wheels can cause little or no force applied to the ball. Replace if worn.

PARTS LIST

[Back to TOC](#)

Reference Number	Part Number	Description	Photo
SZ100-001-000	M0801100	Strike Zone Painted Fiberglass Hat Only	
SZ100-001-001	A0801100	Strike Zone Decal Set Complete	
SZ100-001-002	E0801100	3 Digit Display (High Score)	

BOB'S SPACE RACERS®

STRIKE ZONE ARCADE MANUAL BSR V1.0

			
SZ100-001-002	E0801100-A	3 Digit Display (Bonus Tickets / Your Score)	 
SZ100-001-003	E0801101	Strike Zone goal circuit board	
SZ100-001-004	E0801102	Goal scoring Rings/LED Rings	
SZ100-001-005	M0801101	Plexiglass cover green ribbons	
SZ100-001-006	M0801102	Seat	
SZ100-001-007	E0801103	Blue seat pedal LED light	
SZ100-001-008	E0801104	Strike Zone Main PCB Set with program	
SZ100-001-009	E0801105	Strike Zone small PCB (control Auger motor)	
SZ100-001-010	E0801106	Strike Zone Power Supply #1	

SZ100-001-011	E0801107	Strike Zone Power Supply #2	
SZ100-001-012	E0801108	Gun Motor	
SZ100-001-013	E0801109	Gun Motor Brush Repair Kit	
SZ100-001-014	E0801110	LED light Around seat	
SZ100-001-015	M0801103	Gun Motor Wheel Sets and adjustment Springs	
SZ100-001-016	M0801104	Complete Gun Assembly	
SZ100-001-016	TBD	Gun Mech Assembly only	
SZ100-001-018	E0801111	Mechanical Coin Mech	
SZ100-001-019	E0801112	Complete Cash Box Door Assembly	

SZ100-001-020	E0801113	Complete Ticket Mech assembly	
SZ100-001-021	CX801101	Plex Shield Front	Image Coming Soon
SZ100-001-022	CX801102	Plex Shield Left	Image Coming Soon
SZ100-001-023	CX801103	Plex Shield Right	Image Coming Soon
SZ100-001-024	CX801104	Plex Ball Stop Background	Image Coming Soon
SZ100-001-025	CX801105	Plex Ball Stop Shield	Image Coming Soon
SZ100-001-026	N/A	For Future Use	****
SZ100-001-027	E0801114	Connector and Pin Set for Each Game	
SZ100-001-028	H0801100	Fastener Set for Each Game	
SZ100-001-029	E0801115	Ticket Coin Meter Set with Labels and Wires	
SZ100-001-030	M0801105	Plexiglass Ball Shield	
SZ100-001-031	M0801106	Replacement Ball Set Qty of Balls (one set 55 pcs)	
SZ100-001-032	M0801107	Fiberglass Gun Cover Shell	
SZ100-001-033	M0801108	Gun Deck Plexiglass Cover	

SZ100-001-034	A0801101	Gun Set of Decals	
SZ100-001-035	M0801109	Gun Net	
SZ100-001-055	M0801116	Plexiglass net circle	
SZ100-001-037	E0801116	Gun Wiring Harness Robotic Wire	
SZ100-001-038	TBD	Gun Mount	
SZ100-001-039	M0801110	Gun Bushings Polyurethan Stops 1 Set	
SZ100-001-040	M0801111	Gun Spring	
SZ100-001-041	M0801112	Gun Motor Replacement Wheel	
SZ100-001-042	M0801113	Belt on Auger Motor	
SZ100-001-043	E0801117	Motor on Auger	

SZ100-001-044	M0801114	Auger Feeding Tube Assembly	
SZ100-001-045	E0801118	Gun ball Switch	
SZ100-001-046	N/A	For Future Use	****
SZ100-001-047	M0801115	Lock Sets	
SZ100-001-048	E0801119	Speaker Assembly	
SZ100-001-049	N/A	For Future Use	****
SZ100-001-050	N/A	For Future Use	****
SZ100-001-051	N/A	For Future Use	****
SZ100-001-052	N/A	For Future Use	****
SZ100-001-053	E0801120	Sound IC	
SZ100-001-054	E0801121	Program IC	
SZ100-001-056	E0801122	Ticket transfer board	

WARRANTY

[Back to TOC](#)

BOB'S SPACE RACERS INC. 90 DAY COIN-OPERATED GAME WARRANTY

1. INCLUDED IN THIS WARRANTY Bob's Space Racers®, Inc. warrants to the original purchaser only that the equipment that is the subject of this sale conforms to its specifications, and is free from defects under normal service for a 90 day period from the original date of deliver. This warranty does not include any damages resulting from occurrences listed in paragraph 2 below. This warranty is not transferable under any circumstance. Any claims under this warranty must be received in writing by Bob's Space Racers®, Inc. within 120 days from date of delivery. Within a reasonable time of such written notification Bob's Space Racers®, Inc. will replace or repair any defective component of the equipment or part thereof which fails for reasons other than normal service, use, or wear. Bob's Space Racers®, Inc. reserves the right to request dated proof of purchase by the end user (original purchaser) at any time. Light bulbs are specifically excluded from this warranty and shall be the sole responsibility of the purchaser. Bob's Space Racers®, Inc., within its sole discretion, makes the final determination as to whether to repair or replace any component and whether any such repair or replacement shall be performed where the equipment is located or at it's home facility in Volusia County, Florida, or another facility of its sole choice. Any and all freight charges for the purposes of repair or replacement shall be paid by the original purchaser. All defective parts shall be returned to Bob's Space Racers®, Inc. if requested. Bob's Space Racers®, Inc. does not warrant that the equipment will meet any original purchaser's specific requirements or that the operation of the equipment will be uninterrupted. These remedies are the original purchaser's exclusive remedies for breach of warranty.

2. EXCLUDED BY THIS WARRANTY Bob's Space Racers®, Inc. does not warrant (a) any product, components or parts not manufactured by Bob's Space Racers®, Inc.; (b) damages caused by use of the equipment for purposes other than those for which it was designed; (c) defects caused by failure to provide a suitable installation environment for the equipment; (d) damage caused by unauthorized attachments, modification, or service; (e) damage caused by normal wear and tear or improper power supply; (f) damage caused by accident or disaster such as fires, flood, lightning, and wind; or (g) any other abuse or misuse of the equipment.

3. EXCLUSIVE WARRANTY. THE FORGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES OR REMEDIES, WHETHER WRITTEN, ORAL OR IMPLIED. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. ANY AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, COURSE OF DEALING OR USAGE OF TRADE ARE HEREBY EXPRESSLY DISCLAIMED AND EXCLUDED.

4. REMEDIES LIMITED. UNDER NO CIRCUMSTANCES, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, SHALL BOB'S SPACE RACERS®, INC. BE LIABLE FOR ANY LOSS OR DAMAGE, DIRECT OR INDIRECT, SPECIAL INCIDENTAL OR CONSEQUENTIAL ARISING OUT OF THE USE OR INABILITY TO USE THIS EQUIPMENT INCLUDING BUT NOT LIMITED TO ANY CLAIM FOR LOSS OR PROFITS, LOSS OF SAVINGS OR REVENUE, LOSS OF USE OF THE EQUIPMENT, OR ANY ASSOCIATED EQUIPMENT, FACILITIES OR SERVICE, DOWNTIME, THE CLAIMS OR COSTS OF THIRD PARTIES INCLUDING CUSTOMERS AND INJURY TO PROPERTY. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

5. NO OTHER WARRANTIES. Unless modified in writing and signed by both parties, this agreement is understood to be the complete and exclusive agreement between the parties, superseding all prior agreements, oral or written, and all other communications between the parties relating to the subject matter of this agreement. No employee or representative of Bob's Space Racers®, Inc. or any other party is authorized to make any other warranty or to assume any other liability in connection with the sale of its equipment.

6. TIME LIMIT FOR CLAIMS. Any claim for breach of warranty or claims under this warranty must be received in writing by Bob's Space Racers®, Inc. within 120 days following delivery of the equipment.

7. FUTURE CHANGES. Bob's Space Racers®, Inc. reserves the right to reserve, change or modify the construction and design of its equipment or any component part or parts thereof without incurring the obligations to make such changes or modifications in present equipment.

8. ALLOCATION OF RISKS. This agreement allocates the risks of equipment failure between Bob's Space Racers®, Inc. and the original purchaser. This allocation is recognized by both parties and is reflected in the price of the goods. THE PURCHASER ACKNOWLEDGES THAT HE HAS READ THIS AGREEMENT, UNDERSTANDS IT, AND IS BOUND BY ITS TERMS.

9. TO OBTAIN WARRANTY SERVICE. The original purchaser must, at his/her own expense, bring or ship the equipment to an authorized location for service. Additionally, the original purchaser must pay all freight, shipping or transportation charges for the return of the equipment from Bob's Space Racers®, Inc. to the original purchaser. Telephone or write:

Bob's Space Racers®, Inc.
427 15th Street
Daytona Beach, FL 32117
Telephone number: 386/677-0761
FAX: 386/677-0794

CALLING FOR SERVICE

[Back to TOC](#)

1. When calling for service, please check the service manual first. Many times the answer to your problem has been addressed in this documentation.
2. Please make sure you have the serial number of the game ready when you call.
3. If this is a repeat call, please tell the service technician that you have made a previous call regarding this problem. This way we will be able to retrieve the history on your game allowing us to serve you better and save you time.
4. Please retain proof of purchase for your product. This might be requested for warranty repairs.
5. Please call from the game if possible since we might need you to check certain things on the game while we are on the telephone with you.

IF YOU HAVE ANY QUESTIONS OR COMMENTS, PLEASE CALL OUR SERVICE
DEPARTMENT AT

(386) 677-0761

(MONDAY – FRIDAY, 8:30AM – 5:00PM EST, EXCLUDING HOLIDAYS)

(or)

EMAIL QUESTIONS TO: Tech@BobsSpaceRacers.com

(or)

**VISIT THE “CUSTOMER SUPPORT” SECTION ON OUR WEBSITE:
WWW.BOBSSPACERACERS.COM**