

# SEGA®

## BG-X005SGA MANUAL



## Forward

First, we would like to thank you for purchasing the Sonic 4-Player Air Hockey Table. The product can be a 2 or 4 player game for the whole family to enjoy.

For your own safety, please carefully read through the instruction that indicates precautions to be taken prior to the assembly of the product. We hope that you can quickly be accustomed to it and comfortably play the product.

## Note before assembling

- 1.Ensure there is sufficient space assembling the Air Hockey Table.
- 2.Need at least 4 people to do the assembly, please ensure safety when moving the components.
- 3.Please ensure all parts are accessible before assembling.

## Tools required for assembling

Screw Driver

Scissors (Pliers)


Electronic Screw Driver

Air Hockey Access Key (game key)

\* Note: Self preparation on the tools indicated above  
Be careful not to damage the product when using the tools to assemble.

# List of Parts


## Main Body

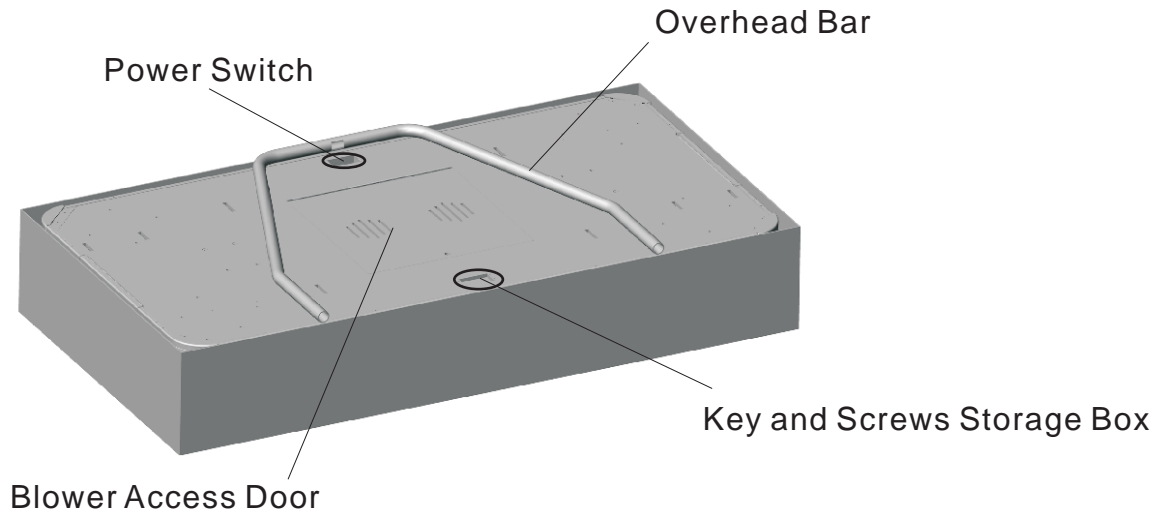

### Legs & Leg Levelers



### Overhead Bar

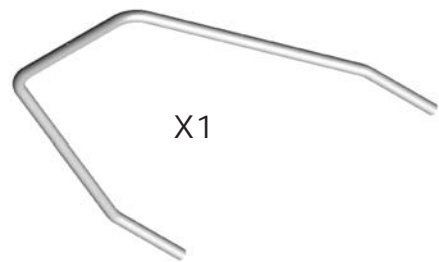

### Side Guards



### Center Guard



### Scoreboard



### Plastic Bar Bracket Cover (black)



### Puck and Mallet Box



### Center Guard Bracket



### Scoreboard Brackets (1 set)



# List of Parts

Plastic Sonic Sign



Power Cable



Mallets x8  
Pucks x20



Spray Wax for Tabletop



X2


# List of Screws



**Big Flathead Screw (4mm x 12mm)**

Scoreboard x 12  
Aluminum Side Guard Brackets  
x 12

<X24>

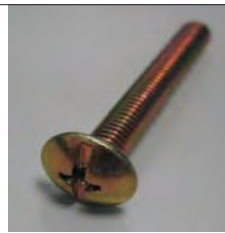

**Big Flathead Screw (5mm x 35mm)**

Plastic Bar Bracket Cover(black)  
x 8

<X8>



**Roundhead Screw (8mm x 25mm)**

Legs x 16


<X16>



**Flat Washer (8mm x 16mm)**

Legs x 16


<X16>

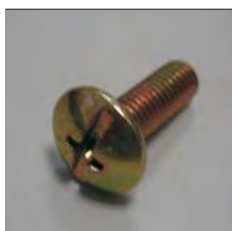

**Big Flathead Screw (5mm x 15mm)**

Sonic Sign Fastener x 3  
Overhead Bar Bracket x 12  
Center Guard x 4

<X19>

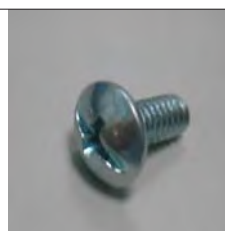


**Big Flathead Screw (4mm x 8mm)**

Side Guards x 8



<X8>

# Assembly Instruction

**Step 1:** Remove the 4 legs from the box; screw the leg levelers onto it. Attach onto the bottom of the table. Align the holes of legs to the holes on the bottom of the table, and then secure it with big flathead screw (5mm x 35mm) and flat washer (8mm x 16mm)

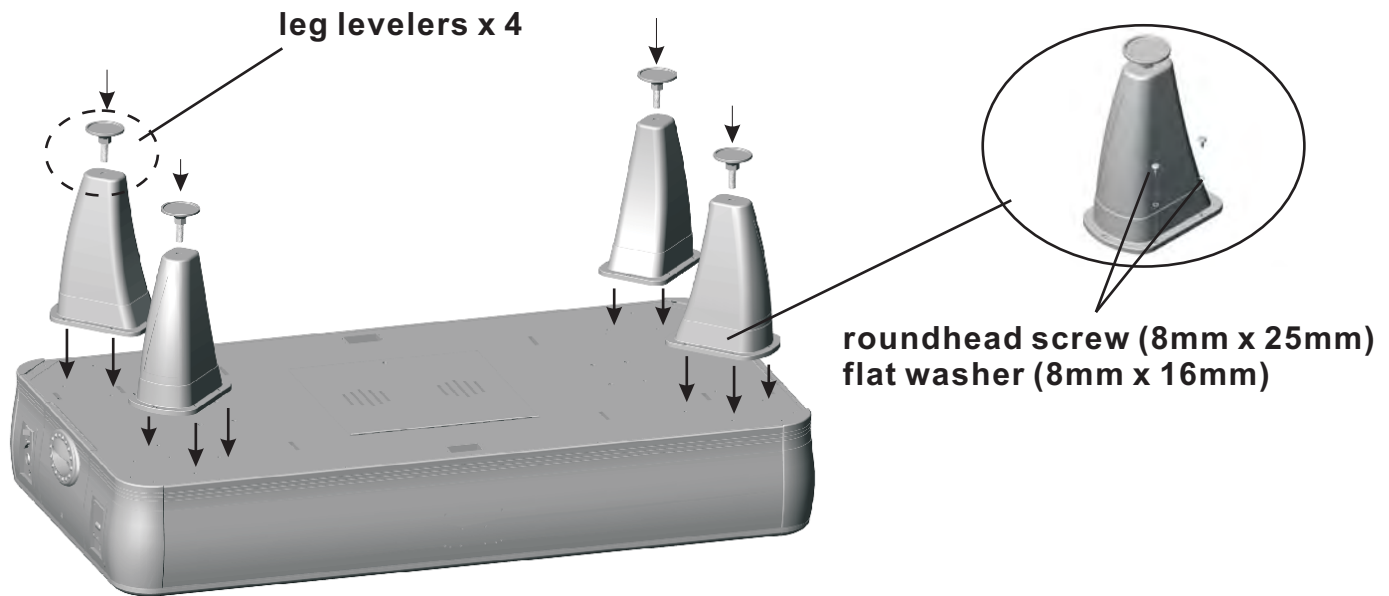


**Step 2:** Once the legs are tightly screwed on to the table base, flip and position the table by 90 degree angle; this action would require at least 3~4 people, then flip it again in same manner to conclude with the upright position as shown on the diagram:

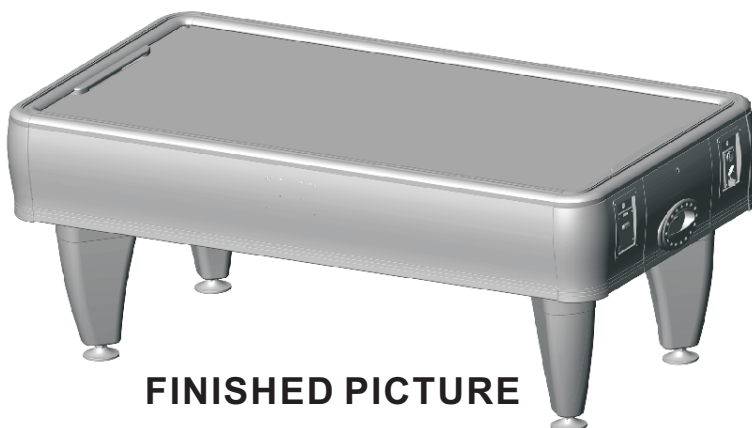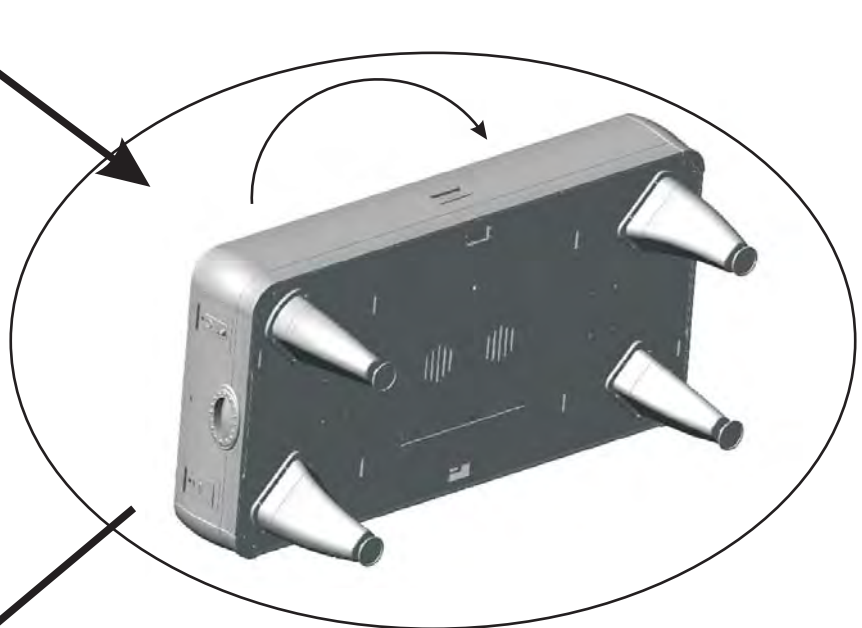

# Assembling Instruction


Step 3: Attach the center guard on one side with big flathead screw (5mm x 15mm).  
As to the other side, insert the center guard into the iron plate first before screw it tightly.

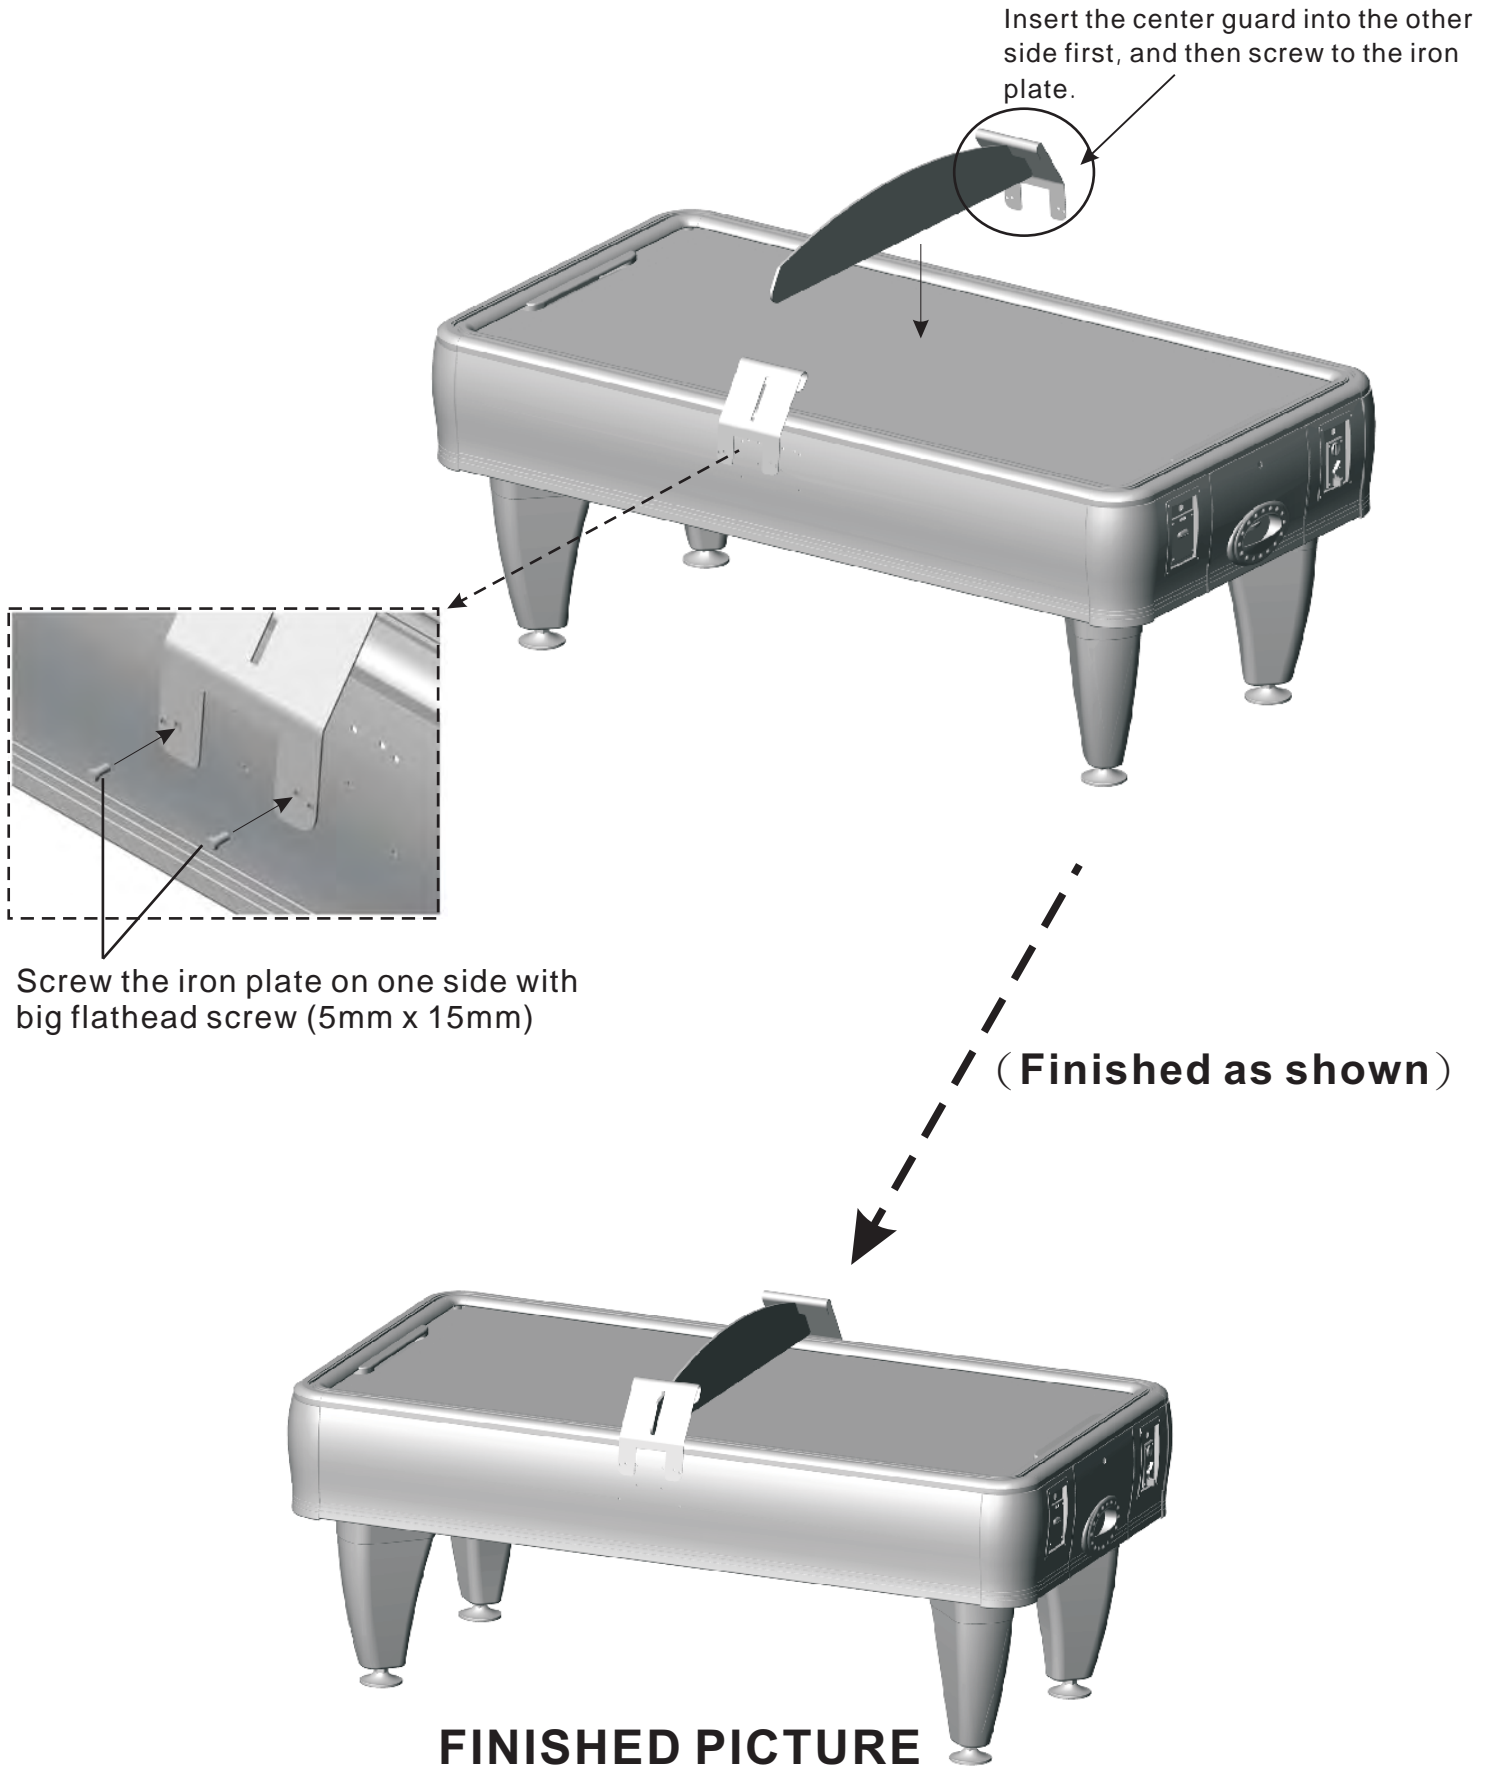

# Assembling Instruction

Step 4: Attach the overhead bar bracket with big flathead screw (5mm x 15mm).

Note: DO NOT screw it too tightly, only screw-in by 1/3 as overhead bars need to be placed in first, so do not tightly screw on both sides.

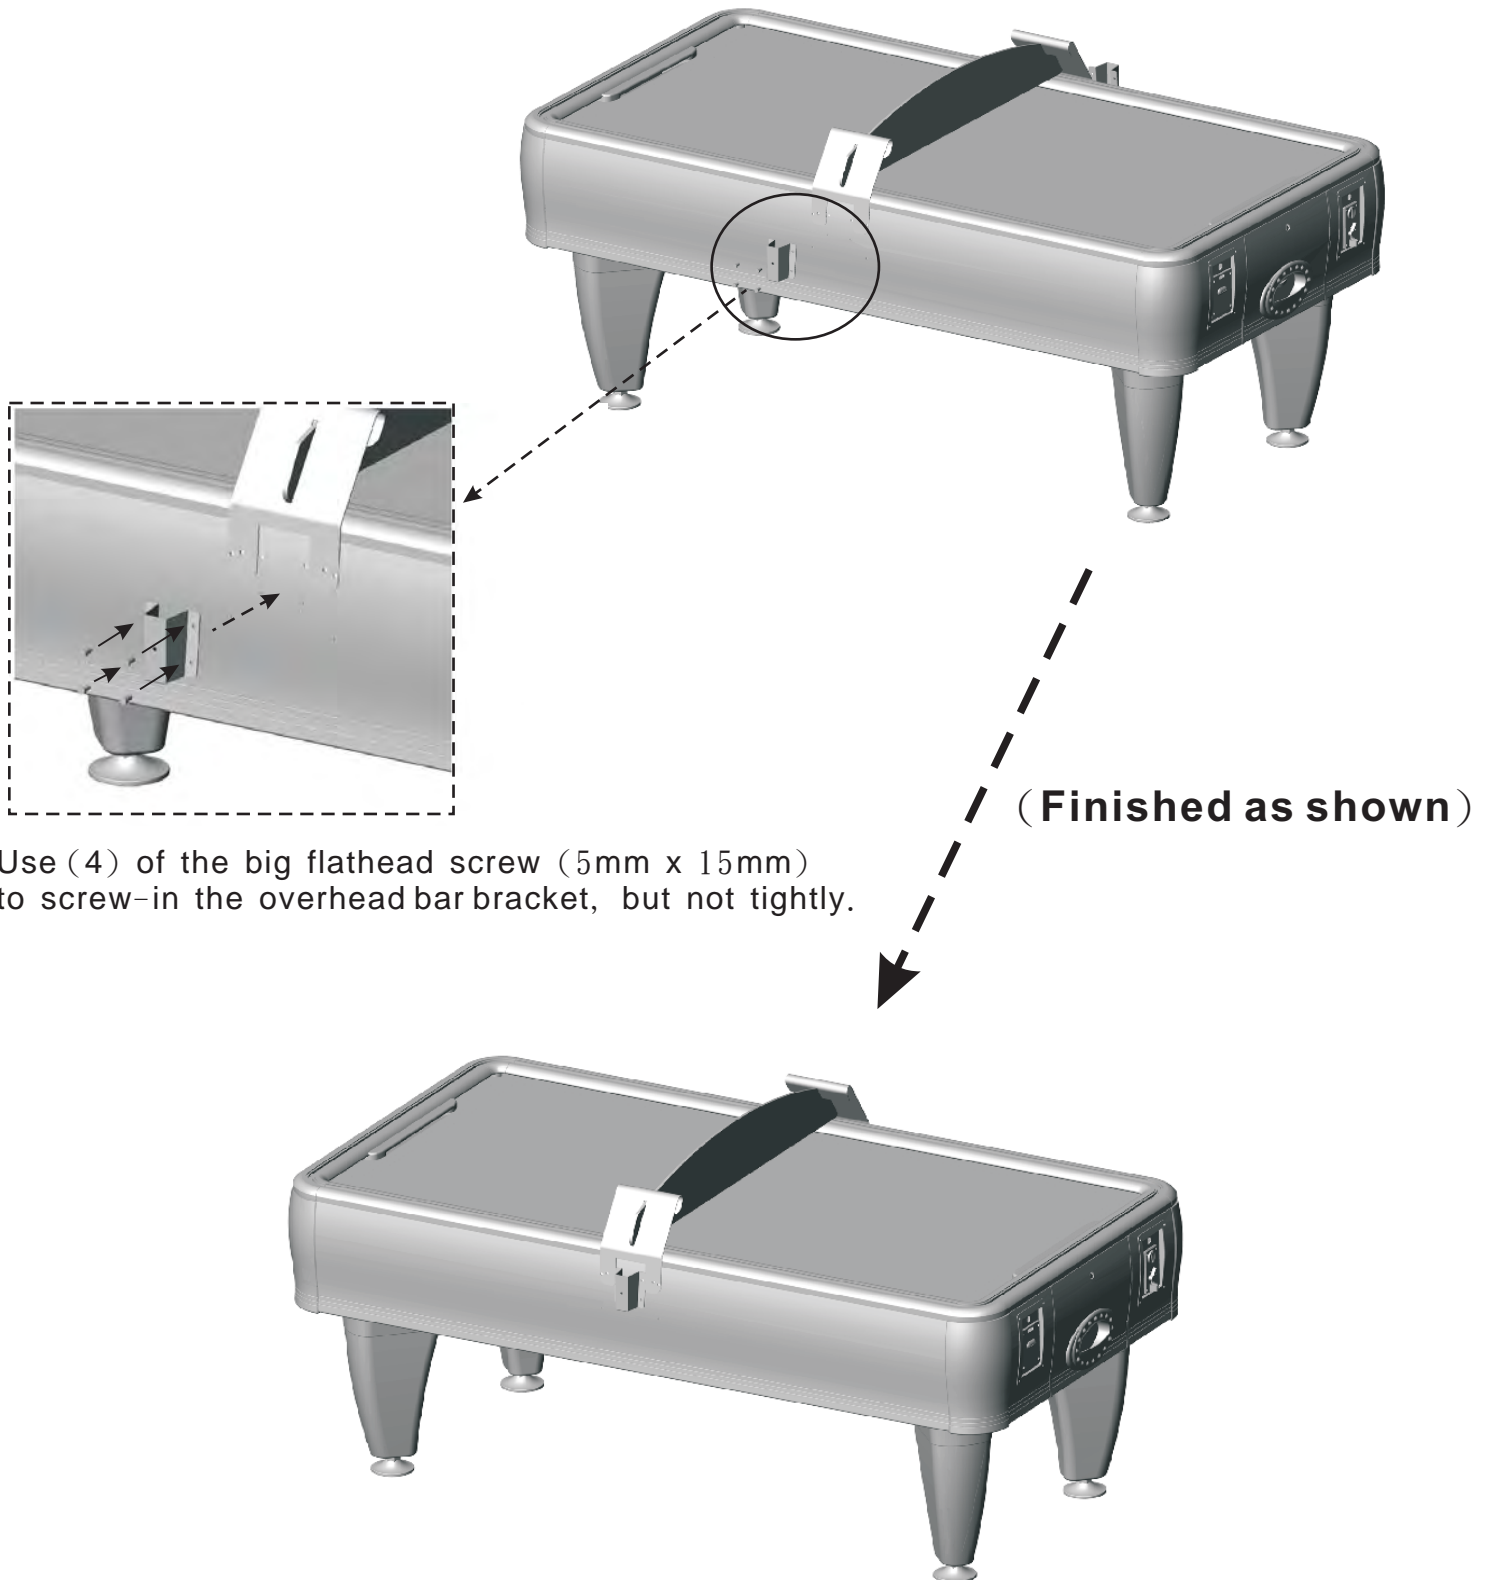


Use (4) of the big flathead screw (5mm x 15mm) to screw-in the overhead bar bracket, but not tightly.


**FINISHED PICTURE**

# Assemble Instruction

Step 5: Connect the Scoreboard and the overhead bar. Place the sonic sign fastener on the centre of the overhead bar then tightly screw it with (3) big flathead screw (5mm x 15mm). Then use (4) big flathead screw (4mm x 12mm) to connect the Scoreboard with the sonic sign fastener..

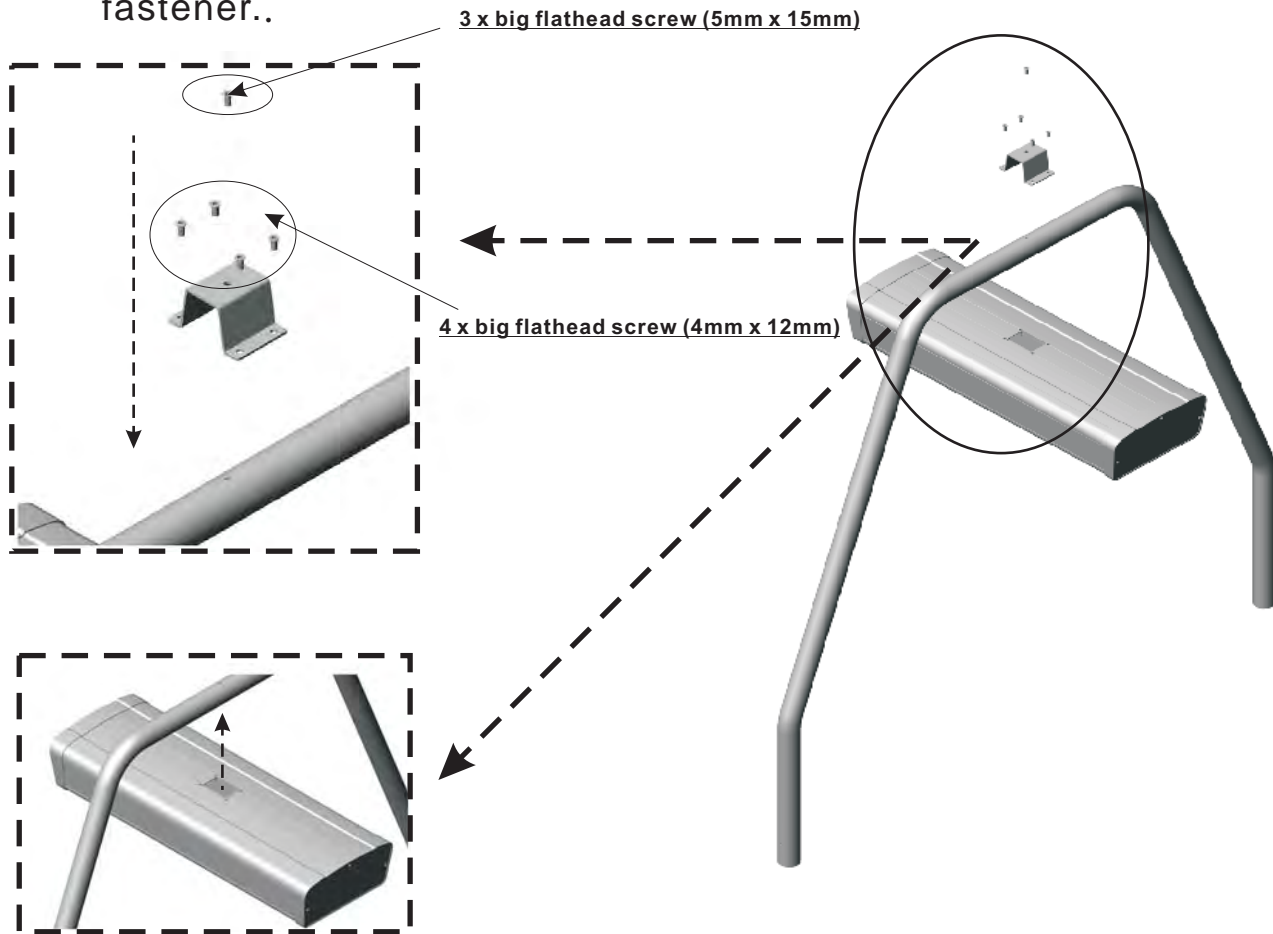

Step 6: Screw the sonic sign fastener on the scoreboard. Use (8) big flathead screw (4mm x 12mm) to screw the sonic sign fastener tightly onto the scoreboard.

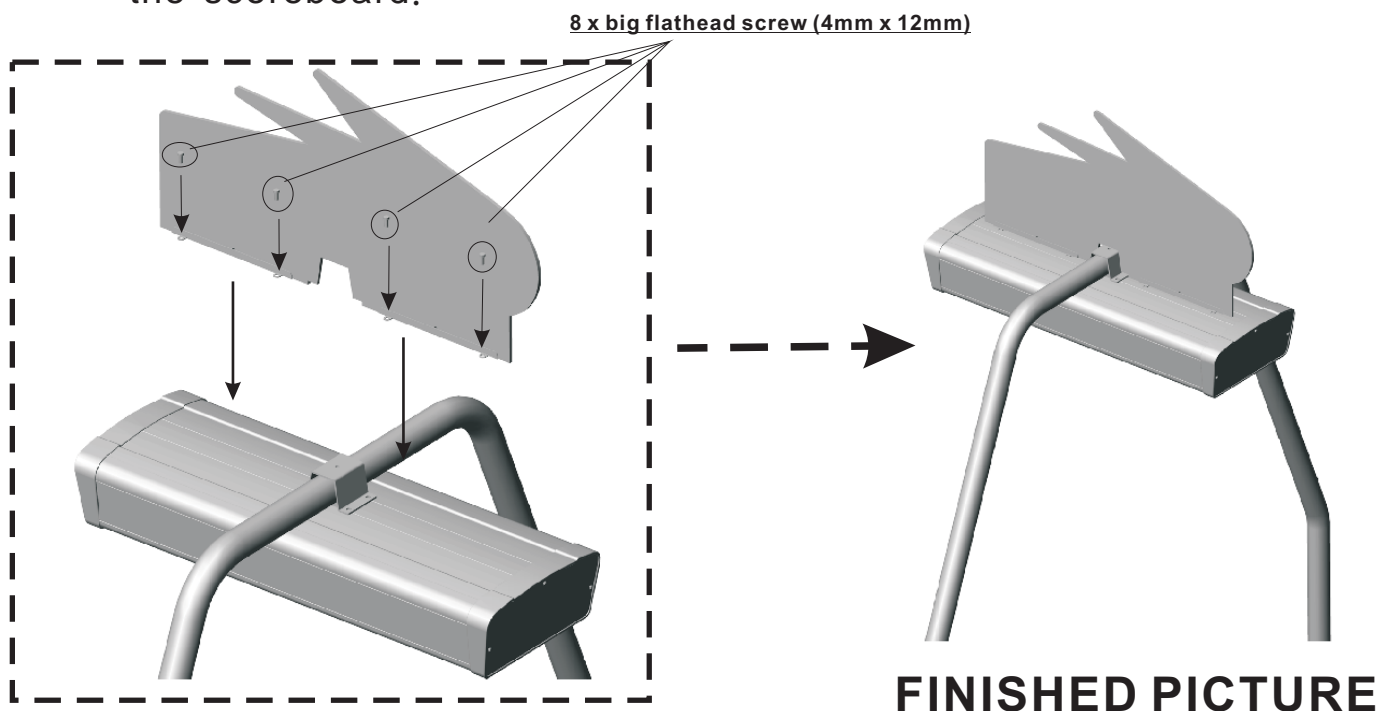





# Assemble Instruction

Step 7: Connect the Scoreboard with the overhead bar then insert the set into the overhead bar bracket. Note: the connector plugs need to be inserted into the overhead bar bracket first. Please do not bend or press the connector wires.


**Insert the Scoreboard set (including the overhead bar) into the overhead bar bracket. NOTE: the part with the connector plugs should face inside.**

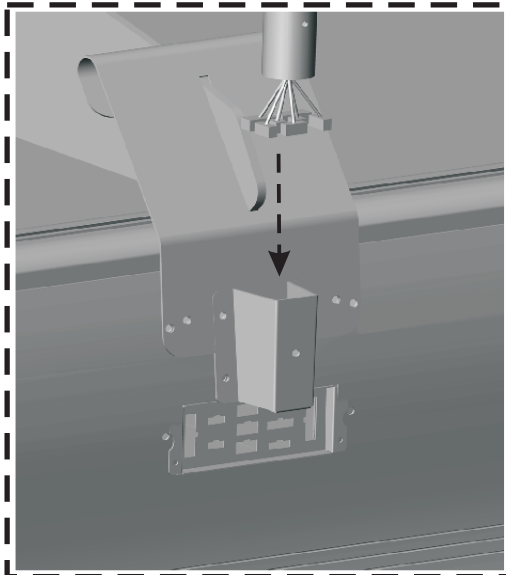

**Connector plug end need to pass through the overhead bar bracket first set**

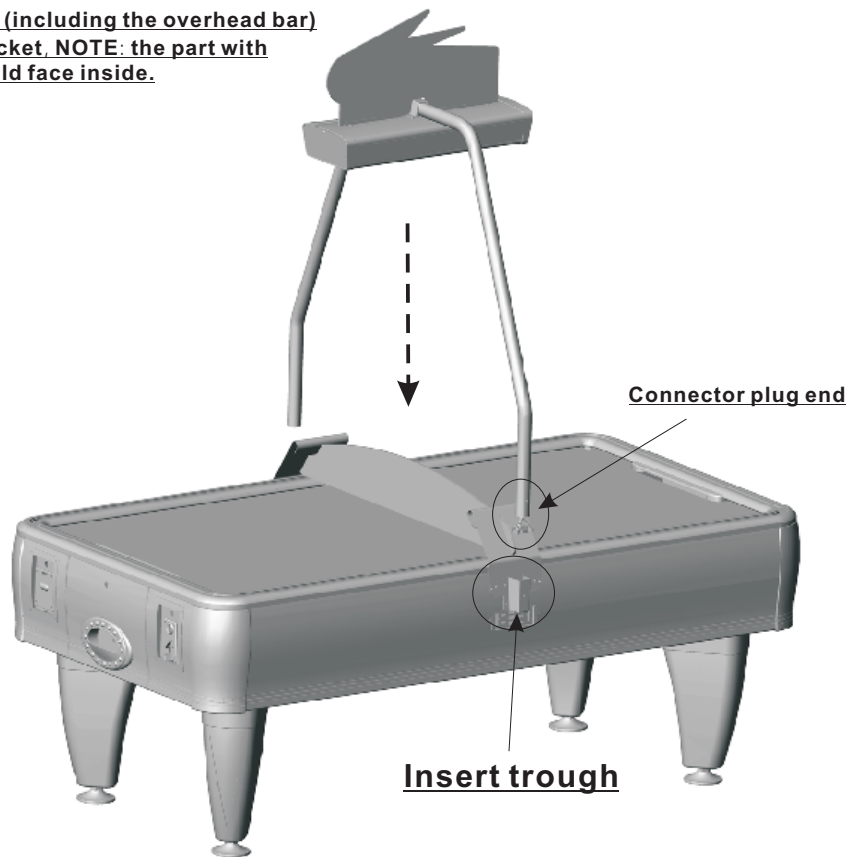


Step 8: Plug-in all the plugs on the connector plug end in accordance to its colors.  
NOTE: plug-in tightly.

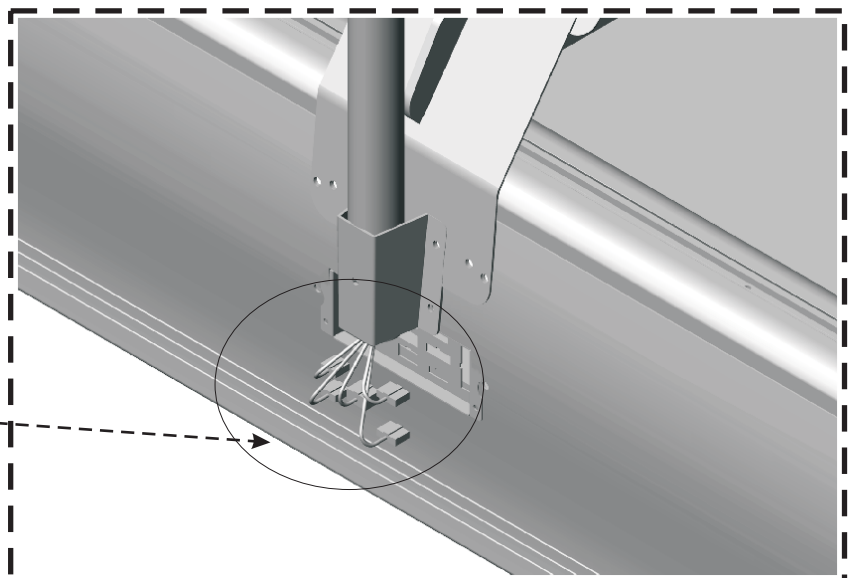


**All plugs are separated by colors**

# Assemble Instruction

Step 9: Use the open-cut side of the overhead bar plastic cover, and then insert it into the overhead bar protection cover. Lastly attach the whole cover onto the side panel. Before attaching it on, ensure the overhead bar is placed into the open-cut of the overhead bar plastic cover. Then cover it with the overhead bar protection cover.

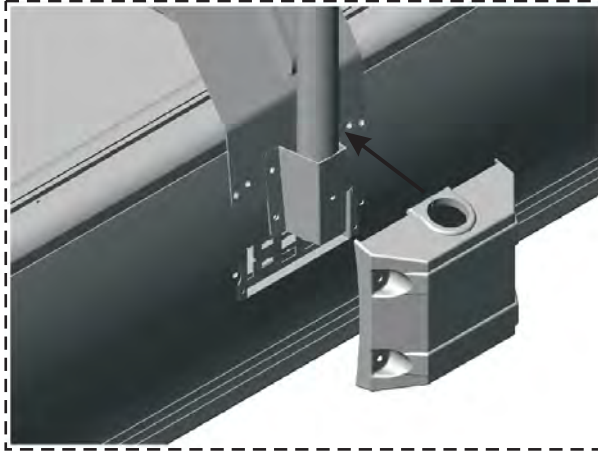


Plastic cover with the plastic bar bracket cover then place the set onto the overhead bar

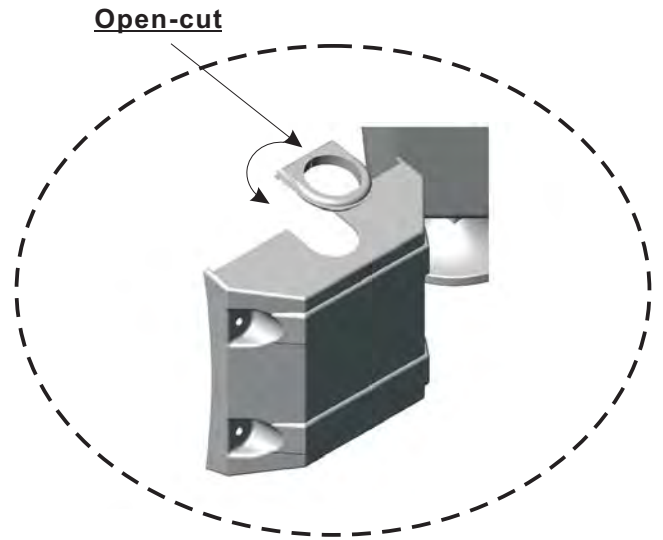

Place the plastic bar bracket cover onto the overhead bar plastic cover

Step 10: Tightly screw on the plastic bar bracket cover on both sides with (4) big flathead screw (5mm x 35mm). The center guard needs to be attached into the (2) upper holes of the plastic bar bracket cover.

Center guard needs to be attached into the 2 upper holes

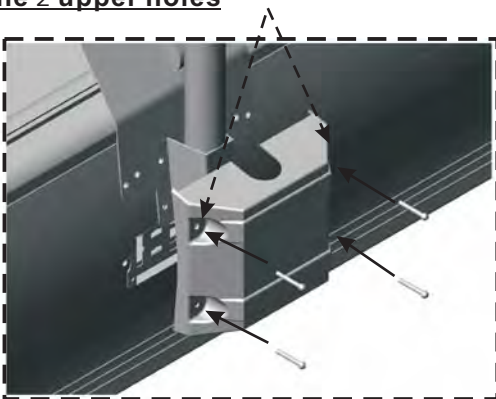


Use 4 big flathead screw (5mm x 35mm)




FINISHED PICTURE

# Assemble Instruction

Step 9: Use the open-cut side of the overhead bar plastic cover, and then insert it into the overhead bar protection cover. Lastly attach the whole cover onto the side panel. Before attaching it on, ensure the overhead bar is placed into the open-cut of the overhead bar plastic cover. Then cover it with the overhead bar protection cover.

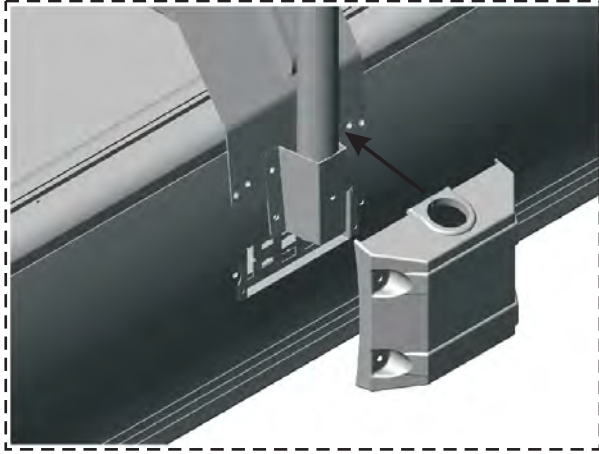


Plastic cover with the plastic bar bracket cover then place the set onto the overhead bar

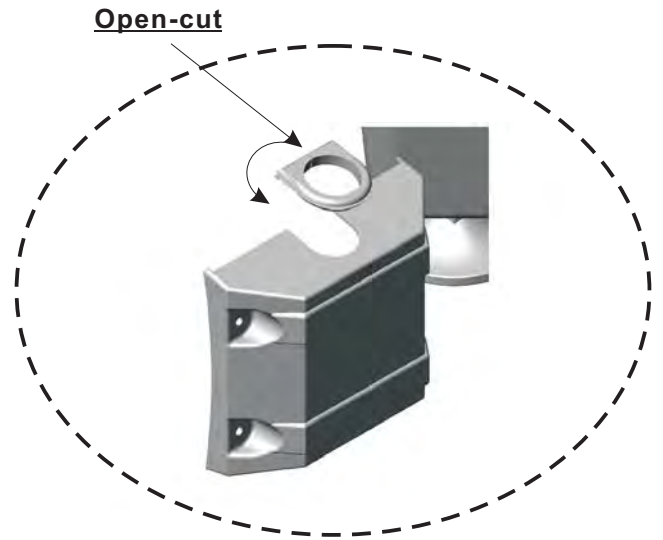

Place the plastic bar bracket cover onto the overhead bar plastic cover

Step 10: Tightly screw on the plastic bar bracket cover on both sides with (4) big flathead screw (5mm x 35mm). The center guard needs to be attached into the (2) upper holes of the plastic bar bracket cover.

Center guard needs to be attached into the 2 upper holes

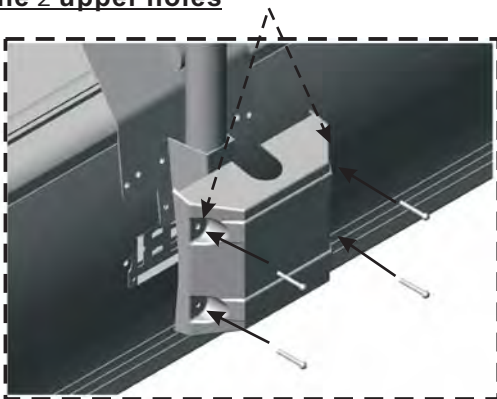

Use 4 big flathead screw (5mm x 35mm)




FINISHED PICTURE

# BG-X005-SGA

## Description of Motherboard Controls

DIP Sw2      DIP Sw1

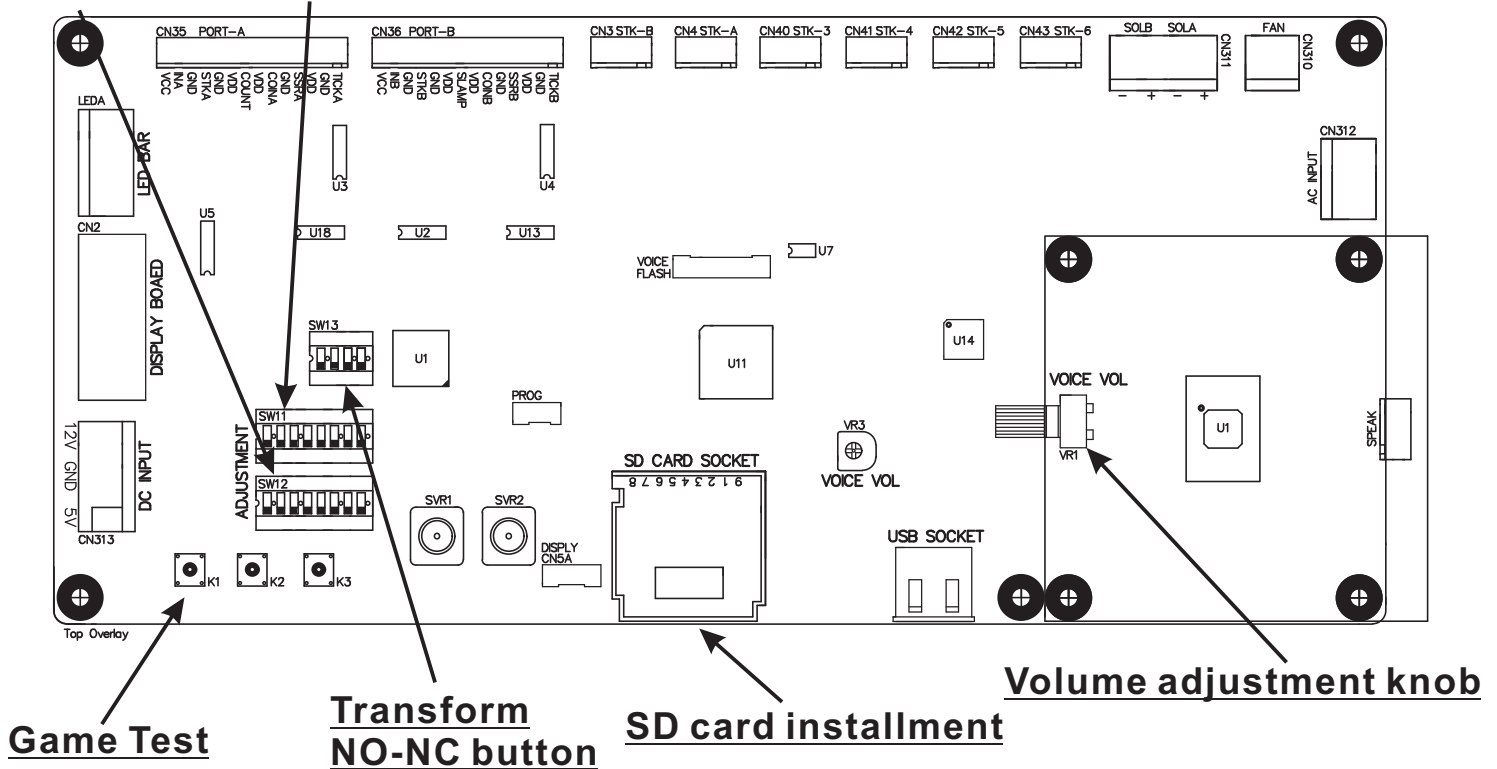

**LEDA: Running LED lights around table**

**NC2 : Display panel connection outlet**

**NC313 : Direct Current (DC) Input outlet**

**NC35 : A1 Output Control point**

**NC36 : B1 Output Control point**

**NC311 : Electro-magnet switch for goal gates (solenoid)**

**NC3 : Rail Strike Detector**

**NC4 : Rail Strike Detector**

**NC40 : Rail Strike Detector**

**NC41 : Rail Strike Detector**

**NC42 : Rail Strike Detector**

**NC43 : Strike Detector**

**NC310 : Blower output**

**NC312 : Alternating Current (AC) Output**


**R3 : Sound Effect and Volume adjustment**

**VF1 : Total Volume Adjustment**

**SPEAK : Sound Output**

# BG-X005-SGA

## Description on locations of controls

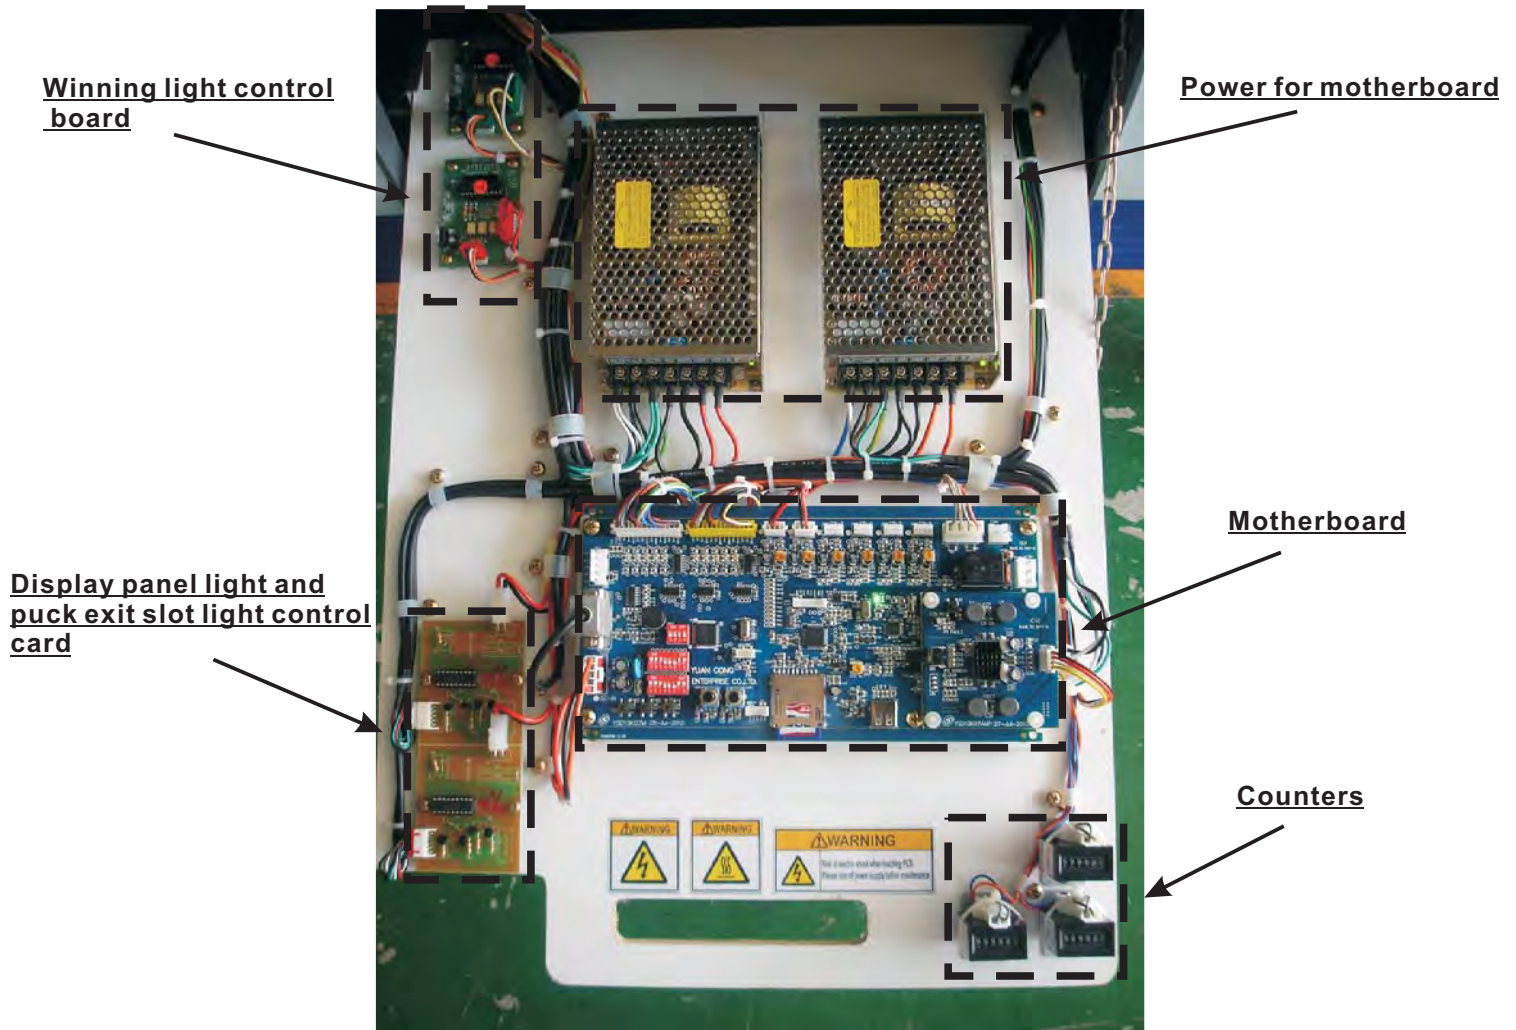

---

**Motherboard:** Controls the game operation, light signals and sounds of the machine.

**Power for Motherboard:** Supplies the power to motherboard and other control cards.

**Winning light control card:** Controls the winning lights on the score board.

**Display panel light and puck exit slot light control card:** Controls the display panel lights and puck slot lights.

**Counters:** Counts the number of games, coins inserted and lottery tickets given.


# BG-X005-SGA

## Description of light signals and DIP SW

### Error Message Lights

- Light A Goal Sensor signal
- Light B Start button Light signal
- Light C Insert Coin mechanism Light signal
- Light D Ticket Light signal
- Light E Rail Noise strike Light signal

**Note : If these lights are on there is an error .**

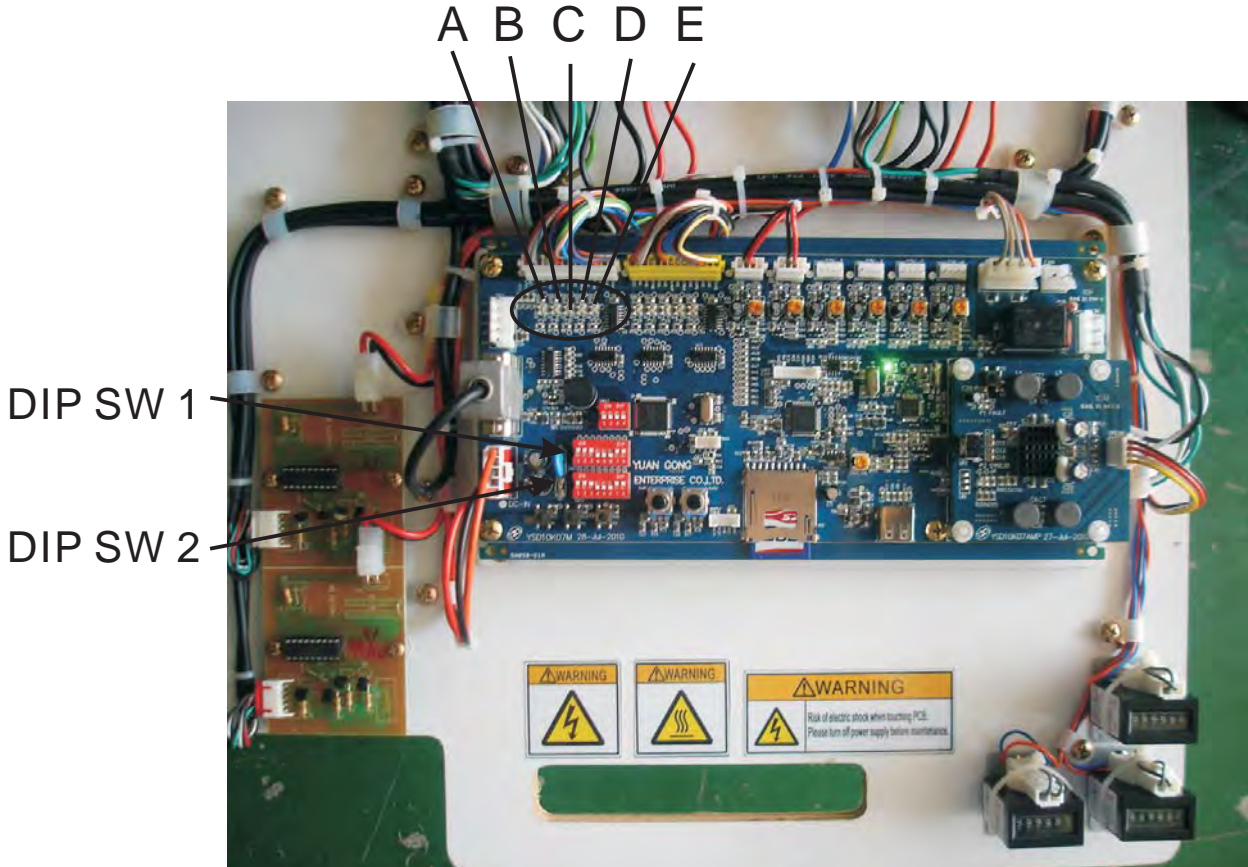

## BG-X005-SGA DIP SW-----ADJUSTMENT

O=OFF I=ON

DIP	Sw11	1	2	3	4	5	6	7	8
COIN1	CREDIT1	I	I	I					
	2	O	I	I					
	3	I	O	I					
	4	O	O	I					
2	1	I	I	O					
	3	I	O	I	O				
	4	I	O	O					
	1	I	O	O					
FREE	PLAY	O	O	O					
	NONE				I	I	I		
	W3/L1				O	I	I		
	W6/L2				I	O	I		
	W9/L3				O	O	I		
	W18/L4				I	I	O		
	W22/L5				O	I	O		
TICKET OUT PUT	W26/L6				I	O	O		
	W36/L7				O	O	O		
	A							I	I
SRTIKE SOUND	B							O	I
	C							I	O
	NO SOUND							O	O

**DIP SW 1**


DIP	Sw11	1	2	3	4	5	6	7	8
GOAL TO WIN	NO LIMIT	O	O	O					
	9	I	O	O					
	8	O	I	O					
	7	I	I	O					
	6	O	O	I					
	5	I	O	I					
	4	O	I	I					
	3	I	I	I					
	NO LIMIT				O	O	O		
TIME OUT	10				I	O	O		
	8				O	I	O		
	6				I	I	O		
	4				O	O	I		
	3				I	O	I		
	2				O	I	I		
TICKET	1				I	I	I		
	WINNER ONLY							I	
DEMO SOUND	BOTH							O	
	ON								I
	OFF								O

**DIP SW 2**

# BG-X005-SGA

## Explanation and Analysis of machine components

### DIP SW

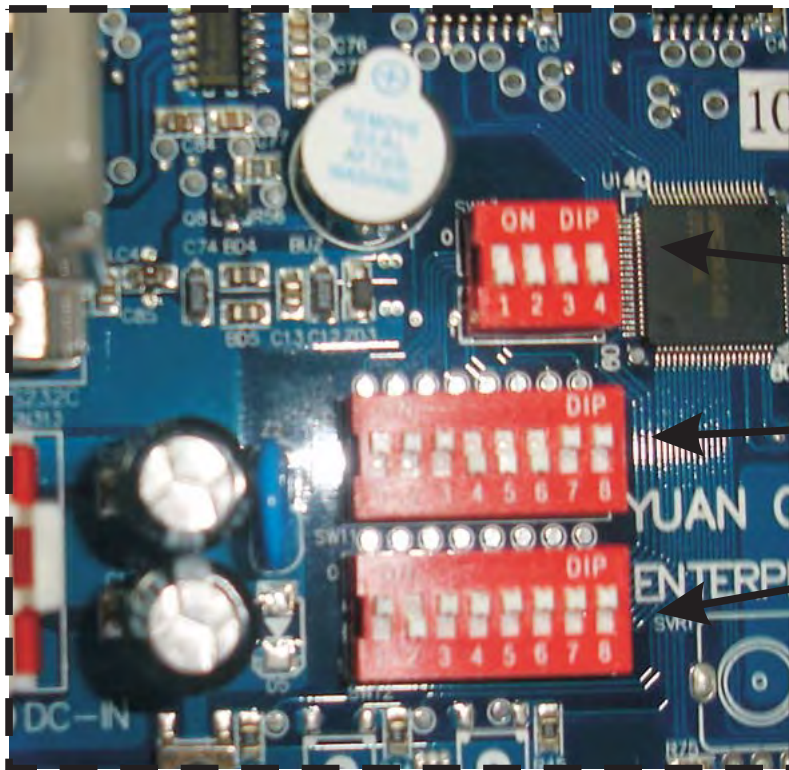

SW 13


SW 11

SW 12

- SW 11: Adjust numbers of coins inserted and lottery tickets given and sound of strikes
- SW 12: Adjust numbers of balls, time, which lottery ticket exit slot to use when winning / loosing and demonstrating sound
- SW 13: Adjust money course signal NO or NC

### Bounced Light Control Card

Lights control card for 4 handrails

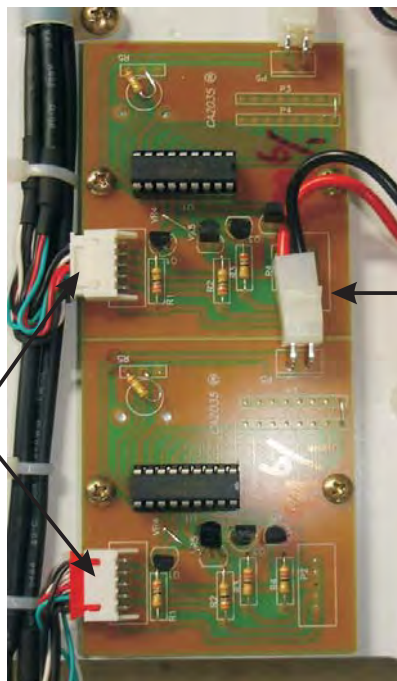


Power point  
Red +5V  
Black GND

Output  
cord

Puck exit slot light control card

### Winning Light Control Card

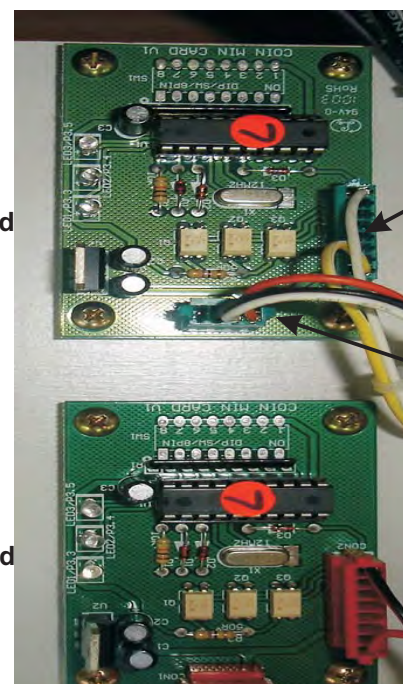

Green light  
control card

Signal point  
(light)


Red light  
control card

Power  
signal  
point

# BG-X005-SGA

## Explanation and Analysis of machine components


### Power Supply

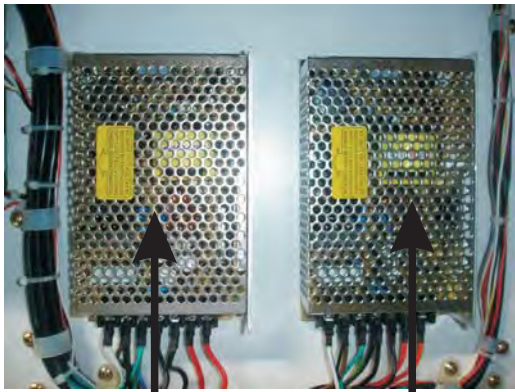

DC +5 , 20A

DC +12 , 8.5A

### Counter

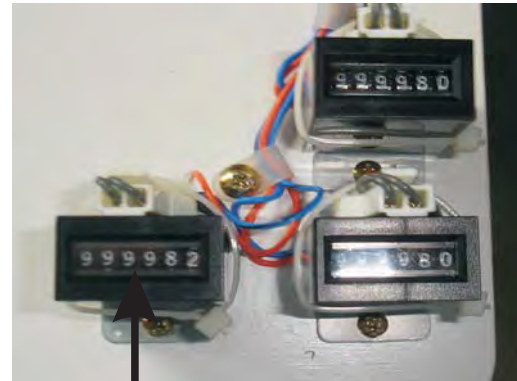

2P Ticket Counter

1P Ticket Counter

Insert Coin Counter

### Puck Exit Slot Light Set



Puck Exit Slot Light


Puck Exit Slot

### Transformer



220V , 3A , 660W  
110V US ONLY

### Platform connected to Main body

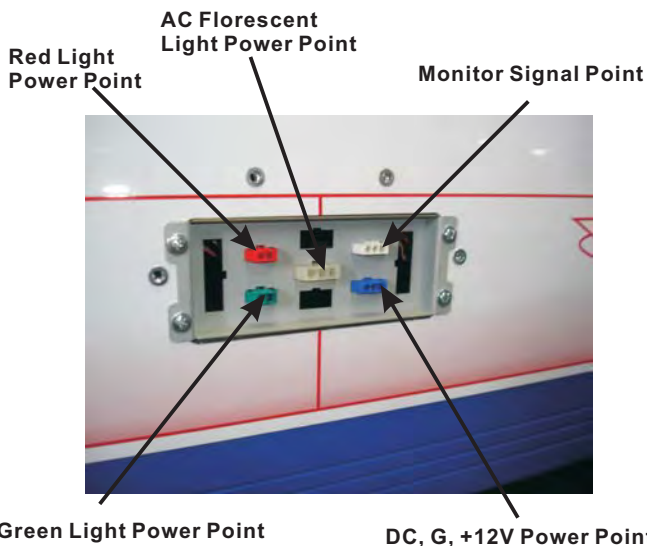

Red Light Power Point


AC Florescent Light Power Point

Monitor Signal Point

Green Light Power Point

DC, G, +12V Power Point

### Ticket Machine

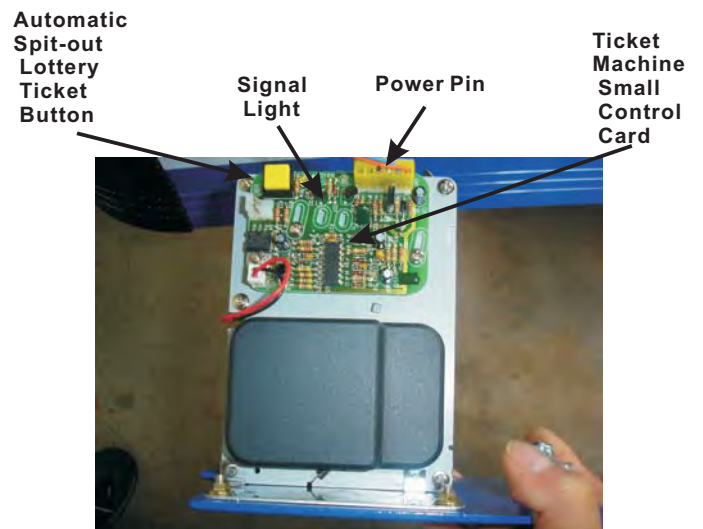

Automatic Spit-out Lottery Ticket Button

Signal Light


Power Pin

Ticket Machine Small Control Card




# **BG-X005-SGA**

## **To Eliminate Malfunction on goal gate**

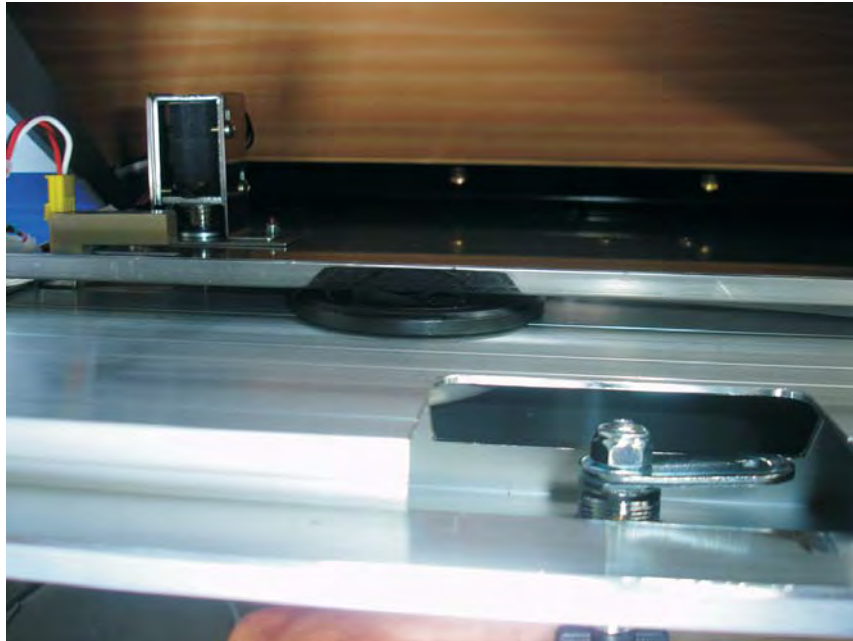

**When puck cannot emerge, check whether the puck course is blocked with foreign object(s). Clean it if needed.**

### **Magnetic puck solenoid**

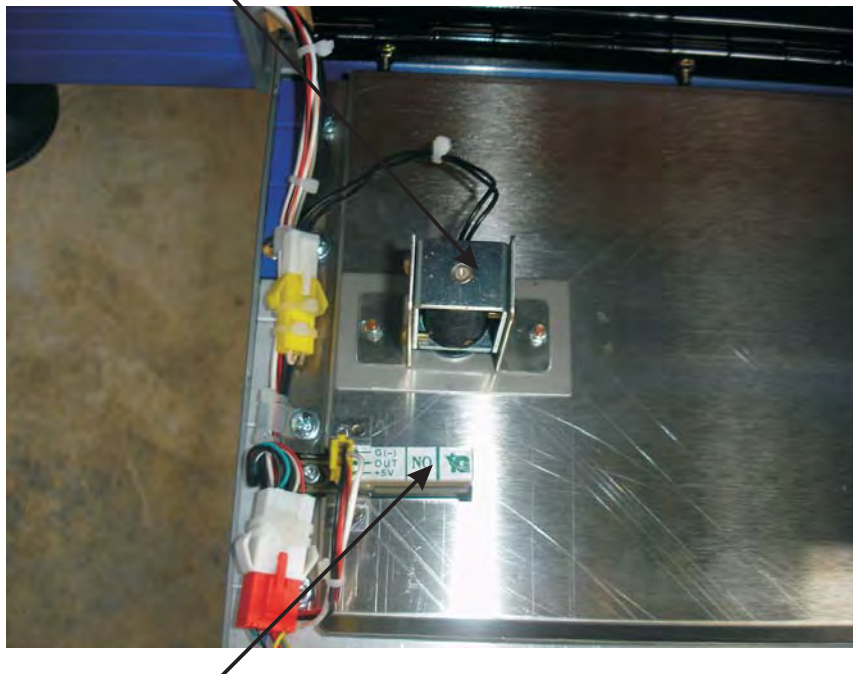

### **IR Goal Sensor (puck detector)**

**If the puck cannot be emerged when the game begins (stuck), please check whether the magnetic puck solenoid is in force or whether the course is blocked with foreign object(s)... etc.**

**If goal sensor cannot detect, please block the goal sensor first to see whether the sensor is working by checking on whether the goal sensor light signal is on or not on the motherboard. If there is no light or the light stays on continuously, then it means the goal sensor is broken. Please change it accordingly.**

# Troubleshooting

## I. PC Board Lights

If lights on Pc Board are on for coin mechanism and/or ticket dispenser , there is an error for the corresponding light(s).

## II. Ticket Dispenser

Flashing light on ticket dispenser means out of tickets.

Restart table if light does not appear with new tickets inserted.

## III. Coin Mechanism/Acceptor

Make sure to replace the sample plastic coin with the desired number of coins. Coin Acceptor must be on N.O.(normally open)setting.

## IV. Puck Release

If puck is grtting stuck inside of the release door , the following need to be check for possible errors :

- 1) Check for debris , shavings , paper and other emains lodged inside the return unit.
- 2) Puck has chips not allowing it to fall through the return unit.  
Replace or sand puck.
- 3) Wire connector to release solenoid has become unplugged/  
damaged/stuck/broken.
- 4) Release solenoid needs to be replaced.

## V. Push Start Sound

If you hear "PUSH START" , the following need to be checked and corrected. It is an error message. Restart the table after every time changes/new settings are made. ON/OFF switch is underneath the table , next to the power display.

- 1) Machine is out of tickets.
- 2) Both coin acceptors and ticket dispensers are properly plugged in and connected.
- 3) Any damage to connection pins/other wirse.
- 4) Make sure both ticket dispensers are on the following settings  
N.O (Normally Open) and not on continuous dispense.
- 5) Both coin acceptors are on the N.O (Normal Open) settings.
- 6) The correct numbers of coins have inserted to play the game.

## VI. NOTE

There is no start button located on commercial air hockey machines.

# Care & Maintenance

## Keep these tips in mind for best operating performance

- Turn the adjustable leg bolts to create a leveled playing field.
- Place puck in the middle of the table: if it moves to a certain side, raise accordingly.
- Avoid direct sunlight if table is placed outdoors.
- Avoid exposure to wetness when placed in basement or wet area.
- Do not shake or drop when transporting.
- Replace puck when moving slowly during game play. Light sanding of puck can also smooth puck.
- Check air holes periodically to ensure smooth air hockey play.
- Do not use sharp objects on playfield.
- Keep table surface always clean and dust free.
- When cleaning table surface use a soft dry cloth and polishing spray. DO NOT APPLY WATER.
- DO NOT APPLY AMMONIA BASED PRODUCTS such as window/glass cleaner.
- Polish spray/wax is provided inside the mallet kit.
- Polish spray/wax table monthly to ensure best playfield.
- Wax the table surface periodically to ensure smooth air hockey play.

**SEGA**<sup>®</sup>

