

Optional Kits available through your Distributor:

Flipper Rebuild Kit (Left) 500-6307-10

Flipper Base Plate Kit (Left)..... 515-6617-01

Kit includes: Flipper Base Plate (Left) pre-threaded with securing hardware; see the Flipper Drawing for view.

Flipper Rebuild Kit (Right) 500-6307-00

Flipper Base Plate Kit (Right)..... 515-6617-00

Kit includes: Flipper Base Plate (Left) pre-threaded with securing hardware; see the Flipper Drawing for view.

Pinball Location Maintenance Standard Kit (for METALLICA LE Pinball)..... 502-6002-E3

Standard Kit includes : 8 oz. Novus Wax #2 Fine (Red) (675-0003-01), Cloth, Rubber Rings (used above playfield), Bulbs (Bulb quantities vary and is limited to 25 per type), Fuses (1/per type) and 4 Pinballs. Note: Quanties, sizes and contents subject to change without notice.

Pinball Location Maintenance Deluxe Kit (for METALLICA LE Pinball) 502-6003-E3

Deluxe Kit includes : Pinball Location Maintenance Standard Kit as described above plus a quantity of Flipper Rebuild Kits. Note: Quantity varies which equals the same quantity of flippers used in this game.

▲ THIS GAME KIT INCLUDES (2) FLIPPER REBUILD KITS ▲

Plastics*Kit (for METALLICA LE Pinball) 803-5000-E3

Plastics Kit includes: Plastic Set (830-6187-XX)


Decals*Kit (for METALLICA LE Pinball)..... 802-5000-E3

Decals Kit includes: Decal Set (820-6917-XX) for Pro/Premium/LE

***Attention:** No individual Plastic or Decal can be ordered separately, unless noted otherwise. Plastics & Decals are subject to change without notice during and / or after production. Key Fobs subject to availability and may or may not be included in the plastic set. All designs, shapes & pieces used subject to change without notice. Kit contents subject to change. Service Bulletin(s) will announce any critical changes, if warranted. The last 2-digits shown on plastics or decals are for reference only.

Ball Shooter (Plunger) Assembly, 500-6146-00-04 (Items 1-6)

Securing Hardware for Items 3 & 5 are also shown separated from the Ball Shooter (Plunger) Assembly for clarity.

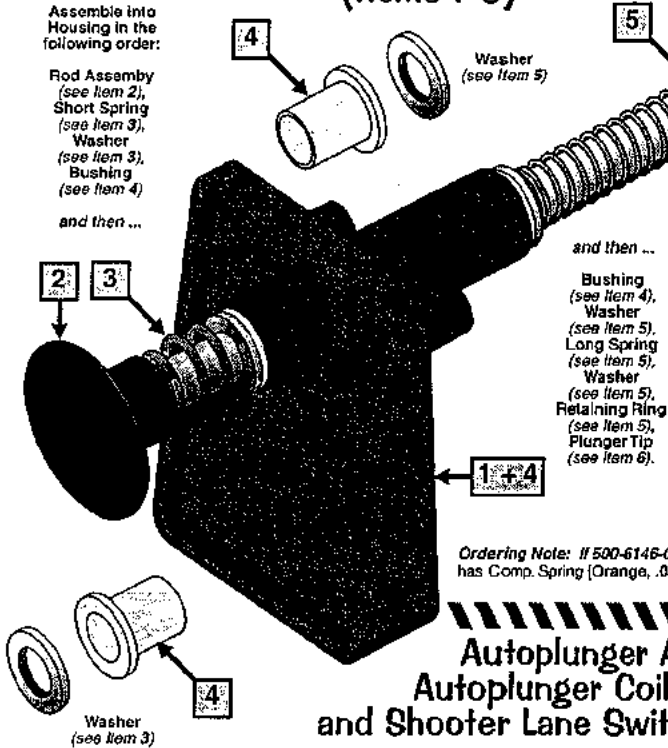

Nr.	BALL SHOOTER PARTS	QTY.	SPI PART Nr.
1	Housing Asm. + Bushings (Item 4)	1	535-5067-02
Item 1 is secured to the Cabinet by: Support Plate (not included with Item 1 or Assembly) (535-5027-00), #10-32 X 1/2" PPH (Sems) Zinc TF (Qty. 3) (237-6033-00), #10 Split Lock Washer (Qty. 3) (244-5003-00) and #6 X 1/2" HWH AB (Zinc) Red (Qty. 2) (234-5001-02)			
2	Rod Assembly (with Black Knob)	1	515-6557-00
3	Comp. Spring (Short) (Knob Side)	1	266-5010-00
Item 3 is sandwiched onto Item 2 (Front Side) between the knob and by: Washer, 3/8" I.D. X 5/8" O.D. X 1/16" (242-5014-00)			
4	Bushing, 3/8" I.D. (Oilite)	2	280-5010-00
Item 4 is included with Item 1, Housing, (1 @ the front; 1 @ the back) as shown.			
5	Comp. Spring (Long) [GREEN, .035" ϕ]	1	266-5001-04
Item 5 is sandwiched onto Item 2 (Rubber Tip Side) by: Washer, 3/8" I.D. X 5/8" O.D. X 1/16" (Qty. 1 per side) (242-5014-00) and Retaining Ring, 3/8" ϕ Shaft (270-5012-00)			
6	Rubber (Plunger) Tip (Black 50 Durom)	1	545-5276-00

Ordering Note: If 500-6146-00-04 is unavailable, order the individual part(s) actually required. ... Identical to 500-6146-00-07 has Comp. Spring [Orange, .038" ϕ] (266-5001-07) or 500-6146-00-05 has Comp. Spring [Blue, .031" ϕ] (266-5001-05).



Autoplunger Arm Weld Asm., 500-6091-00 (Items 1-5), Autoplunger Coil Assembly, 500-6092-02-ND (Items 6-9) and Shooter Lane Switch Assembly, 500-6096-00 (Items 10-12)

Nr.	AUTOPL. ARM WELD PARTS	QTY.	SPI PART Nr.
1	Arm Weld Assembly	1	515-6526-00
Item 1 is secured to Item 2 by: Retaining Ring, 1/4" ϕ Shaft (Qty. 1) (270-5002-00)			
2	Autoplunger Fulcrum	1	535-7697-00
3	Nyliner, 1/4" (Thomson #41 FF)	2	545-5423-00
4	Plunger & Link Assembly	0	511-5183-00
Item 4 is secured to Item 1 by: Retaining Ring, 1/4" ϕ Shaft (Qty. 1) (270-5002-00) For Individual Items use: Plunger 1.81" Lg. (530-5025-05), Plunger Link (545-5293-00) and Roll Pin 1/8" ϕ x 5/8" Lg. (251-5008-00)			
5	Compression (Return) Spring	1	266-5020-00
(ASM. REF 500-6091-00, Items 1-5)			

Nr.	AUTOPLNGR. COIL PARTS	QTY.	SPI PART Nr.
6	Autoplunger Coil Bracket Assembly	1	515-6527-00
Items 1 & 6 are secured below the P/F by: #8 X 1/2" SHWH AB (Zc.) (Qty. 9) (234-5101-00)			
7	Coil Retainer Bracket	1	535-5203-03
Item 7 is secured to Item 6 by: #9-32 X 1/4" PPH MS (Sems) Zinc (Qty. 2) (232-5300-00)			
8	Coil, 24-940 [NO DIODE]	1	090-5036-ND
COIL DOES NOT REQUIRE A DIODE. SEE \odot COIL NOTE BELOW FOR DETAILS.			
9	Coil Sleeve	1	545-5031-00
(ASM. REF 500-6092-02-ND, Items 6-9)			

Nr.	SWITCH PARTS	QTY.	SPI PART Nr.
10	Switch (for Shooter Lane)	1	180-5157-00
Switch has a Diode (1N4004) (112-5003-00). Can be replaced with (1N4001) (112-5001-00)			
11	Switch Mounting Bracket	1	535-6173-00
Item 11 is secured to Playfield by: #5 X 1/2" SLT HWH AB (Zinc) (Qty. 2) (234-5001-02)			
12	Switch Body Protect Plate	14	535-6539-00
Item 12 is secured to Items 10-11 by: #2-56 X 1/2" Unslotted Ser. HWH #4 Head TR3 Black (Qty. 2) (237-5937-02) and #2-58 Hex Nut (Qty. 2) (240-5301-0)			
(ASM. REF 500-6096-00, Items 10-12)			

Assemblies & Ramps

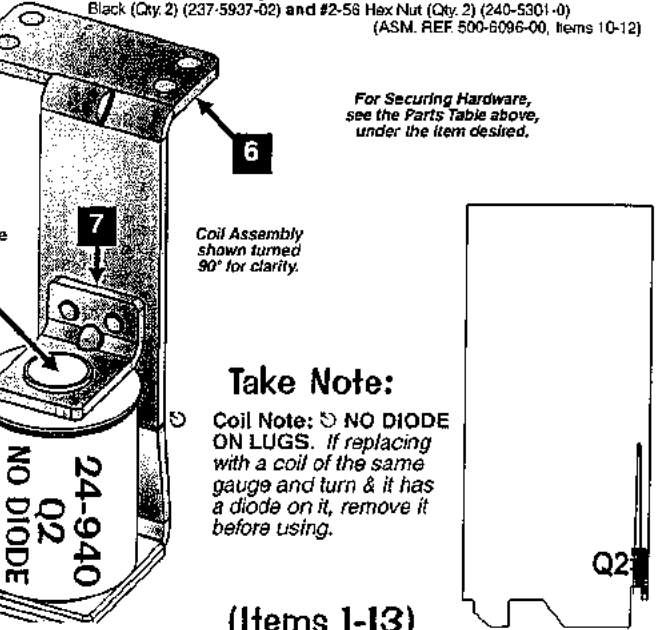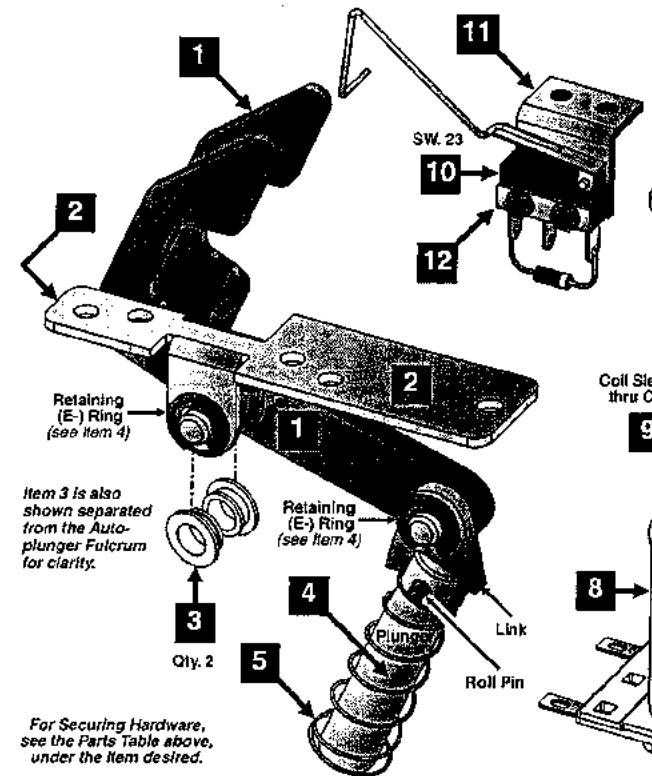

For Securing Hardware, see the Parts Table above, under the item desired.


Take Note:
Coil Note: \odot NO DIODE ON LUGS. If replacing with a coil of the same gauge and turn & it has a diode on it, remove it before using.

(Items 1-13)

4-Ball Trough Assembly, 500-6318-24-ND (Items 1-13) and Associated Parts: See Parts Table Below.

Ordering Note: Identical to 500-6318-14 with exceptions, see note below Item 13 (Parts Table).


Nr.	4-BALL TROUGH PARTS	QTY.	SPI PART Nr.	Nr.	4-BALL TROUGH PARTS	QTY.	SPI PART Nr.
1	Ball Trough Outhole Mounting Bracket	1	515-6580-01	11	Trough Ball Guide Plate	1	535-7801-00
Item 1 is secured below the playfield by: #8 X 1/2" SHWH AB (Zc) (Qty. 4) (234-5101-00)				Item 11 is secured to Item 1 by: 1/4" X 5/16" X 1/44" I.D. Spacer Tap (Qty. 1) (254-5014-03) and #2-56 X 1/2" HWH (Ser) UNS #4HD TR3 BO (Qty. 4) (237-5937-02)			
2	Coil Mounting Bracket	1	535-7330-01	12	Dual OPTO TRANS Board Assembly	1	515-0173-00
Item 2 is secured to Item 1 by: #8-32 X 3/8" HWH Swage (Sr.) Zinc (Qty. 4) (237-5975-00)				Items 12 & 13 are secured by: #6-32 X 5/8" HWH Swg (Ser) Zinc (Qty. 3/per) (237-5976-04)			
3	Coil Retaining Bracket	1	535-5203-03	13	Dual OPTO REC Board Assembly	1	515-0174-00
Item 3 is secured to Item 2 by: #6-32 X 1/4" SHWH (Ser) Zinc (Qty. 2) (237-5975-04)				For Individual Items use: Dual OPTO Transmitter Board (Qty. 1) (520-5173-00), Dual OPTO Receiver Board (Qty. 1) (520-5174-00), OPTO PCB Tube Spacer (Brass) (Qty. 3/per) (530-5308-02) and OPTO PCB Rubber Grommet (Qty. 3/per) (545-5518-00)			
4	Coil, 26-1200 [NO DIODE]	1	090-5044-ND	Ordering Note: If 500-6318-24-ND is unavailable, order the individual part(s) actually required. This assembly is identical to 500-6318-14-ND, -15 or -25 except for the quantity of Items 9 & 10 (Qty. 4/per on 5-Ball Trough) and Item 11, required when a Magnet Mech. is used in the game (this game it is required). -ND means no diode on Item 4, Coil, 26-1200.			
COIL DOES NOT REQUIRE A DIODE. SEE COIL NOTE BELOW FOR DETAILS.							
5	Coil Sleeve (Short) (Formost #10-7077)	1	545-5076-01	ASSOCIATED PARTS ARE NOT INCLUDED WITH THE ABOVE ASSEMBLY.			
6	Steel & Nylon Plunger Assembly	1	515-7309-01	Nr.	ASSOCIATED PART(S)	QTY.	SPI PART Nr.
7	Compression (Return) Spring	1	266-5020-00	AP-A	Ball Trough Enter / Exit Scoop	1	535-7329-01
8	Rubber Bumper (Grommet)	1	545-5105-00	Item AP-A secured to the playfield by: #8 X 1/2" SHWH AB (Zinc) (Qty. 4) (234-5101-00).			
9	Micro Switch (Roller Actuator, Lite-Force)	3	180-5119-02	AP-B	* Steel Balls (1-1/16" Ø)	4	260-5000-00
Item 9 requires: Heat Shrink Tubing 1/8" x PUL-24 (Qty. 1/per) (605-5006-00)							
Switch has a Diode (1N4004) (112-5003-00). Can be replaced with (1N4001) (112-5001-00).							
10	Switch Body Protect Plate	3	535-6539-00				

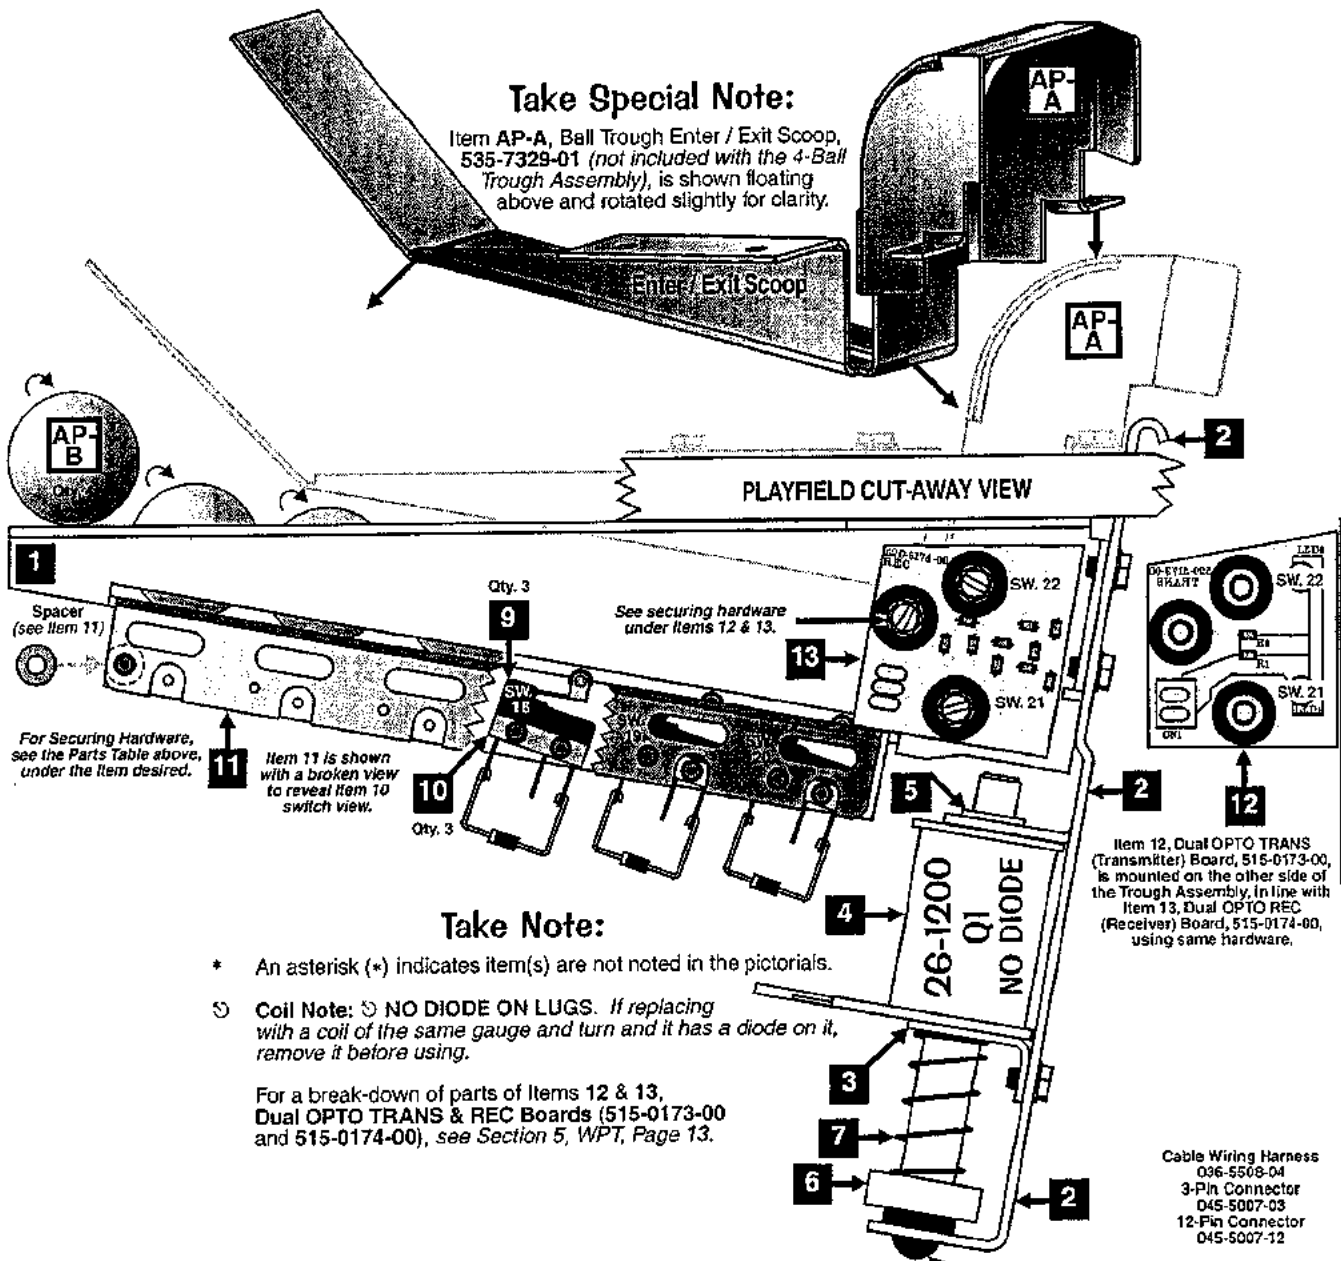

Flipper (Left) Assembly, 500-6543-33-ND (Items 1-15) and Associated Parts: Yellow Flipper Bat & Shaft Asm., 515-5133-06-06 (Items AP-A / AP-B)

Nr.	FLIPPER (LEFT) PARTS	QTY.	SPI PART Nr.
1	Flipper Base Plate (LEFT)	1	See FRP1
Item 1 is secured below by: #8 X 1/2" SHWH AB (Zinc) (Qty. 8) (234-5101-00) Ordering Note: Individual Part (535-7275-01) is not prethreaded, see Item FRP1.			
2	Flipper Bat Bushing (White Plastic) 25" ø I.D.	1	545-5070-00
Item 2 is secured to Item 1 by: #6-32 X 3/8" HWH Swage (Ser.) Zc. (Qty. 3) (237-5976-02)			
3	Power (EOS / End-of-Stroke) Switch	1	180-5149-00
Item 3 is secured to Item 1 by: #6-32 X 5/8" HWH Swage (Ser.) Zc. (Qty. 2) (237-5976-04)			
4	Sw. Plate/Spring Return Brkt. (LEFT)	1	535-7354-01
5	Flipper Return Spring	1	265-5035-00
6	Coil Stop Bracket Sub-Assembly	1	515-6308-01
Item 6 is secured to Item 1 by: #10-32 X 3/8" SHWH Swage (Ser.) Zinc (Qty. 2) (237-5995-00) and #10 Split Lock Washer (Qty. 2) (244-5003-00)			
7	Spring Washer (17/32" ID X 3/4" X 1")	1	269-5002-00
8	Coil Support Bracket	1	535-7356-00
Item 8 is secured to Item 1 by: #8-32 X 3/8" HWH Swage (Ser.) Zc. (Qty. 2) (237-5975-00)			
9	Coil, 23-900 [NO DIODE] GRN WRAP	1	090-5020-30-ND
COIL DOES NOT REQUIRE A DIODE. SEE COIL NOTE BELOW FOR DETAILS.			
10	Coil Sleeve	1	545-5388-00
11	Deflector Pad (Bumper)	1	545-5428-00
12	Flipper Plunger & Link Sub-Assy.	1	515-6304-03
For Individual Items use: Flipper Plunger (530-5349-01) and Plunger/Flipper Link (545-5611-01) and is secured to the Plunger by: Bushing, 15" ø ID X .261" ø OD X .187" (Qty. 1) (530-5532-00) and Spiral Pin ø 5/32" X 3/4" Lg. (Qty. 1) (251-5015-02)			
13	Crank Bar (Pawl)	1	530-5070-02
Item 13 requires: Bushing, 192" ø ID X .312" ø OD X .195" (Qty. 1) (530-5139-00)			
14®	Switch Actuator (LEFT) Sub-Assy.	1	515-7257-01
For Individual Items use: Actuator & Spring Bracket (LEFT) (535-9038-01) and © Switch Actuator (White Plastic) (545-5612-00) and is secured to the Bracket by: Rivet, 1/8" ø X 1/4" Lg. (Qty. 1) (249-5003-00)			
15	Set Screw: #10-32 X 3/4" Socket Hd.	2	237-6144-00
Item 15 requires: #10-32 Nylon Stop Nut (Qty. 1) Flipper Link Side Only (240-5203-00) and #10 Split Lock Washer (Qty. 1) Switch Actuator Side Only (244-5003-00) Tool required for Item 15: 5/32" or 4mm Allen Wrench			

Item 14® is also shown separated from Item 13, Crank Bar, for clarity.

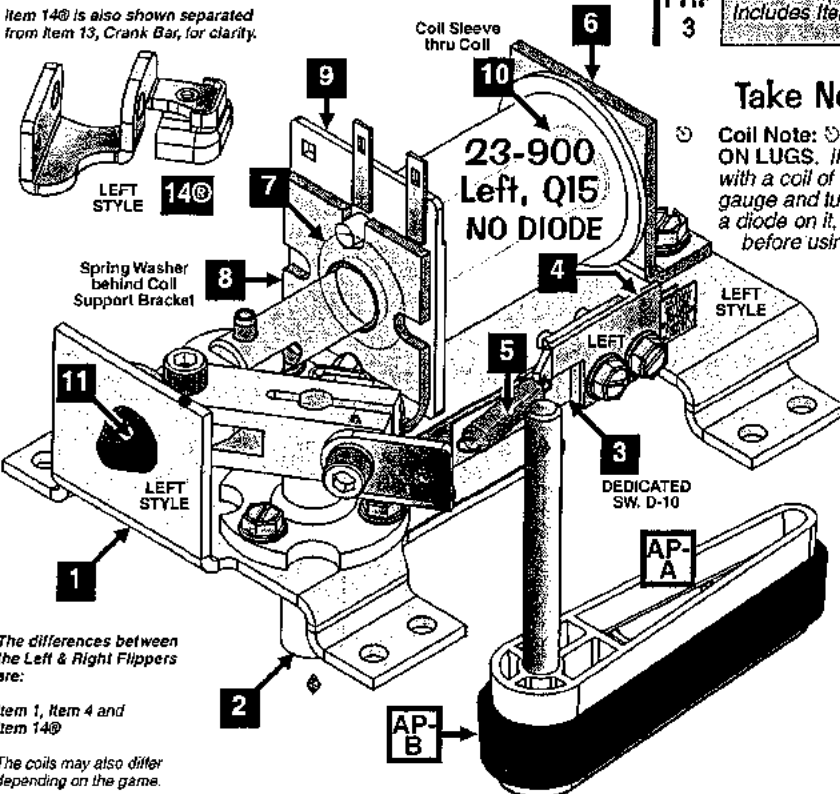

The differences between the Left & Right Flippers are:

Item 1, Item 4 and Item 14®


The coils may also differ depending on the game.

ASSOCIATED PARTS ARE NOT INCLUDED WITH THE ABOVE ASSEMBLY.

Nr.	ASSOCIATED PART(S)	QTY.	SPI PART Nr.
AP-A	Yellow Flipper Bat & Shaft Assembly (Non-Knurled End) without Rubber Ring	1	515-5133-06-06
AP-B	Large Flipper BLACK Rubber Ring	1	545-5277-00

Flipper Rebuild Parts for Easier Installation, Save \$:

FRP 1 FLIPPER BASE PLATE KIT (LEFT):
Includes Item 1 pre-threaded >+< Securing Hardware for Items 2, 3, 6 & 8. 515-6617-01

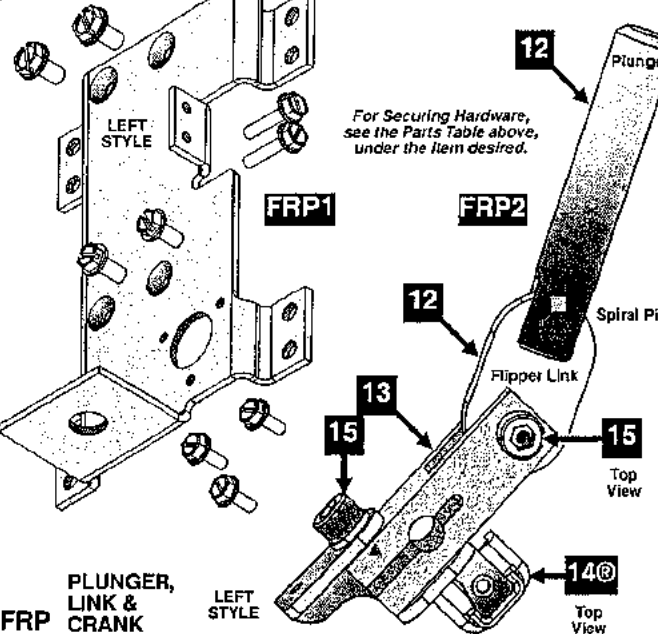


FRP 2 PLUNGER, LINK & CRANK (LEFT STYLE) ASSEMBLY: Includes Items 12, 13, 14 & 15 (comes assembled). 515-7203-01

FRP 3 FLIPPER (LEFT) REBUILD KIT: Includes Items 6, 10 AND above FRP2 500-6307-10

Take Note:

© Coil Note: © NO DIODE ON LUGS. If replacing with a coil of the same gauge and turn & it has a diode on it, remove it before using.

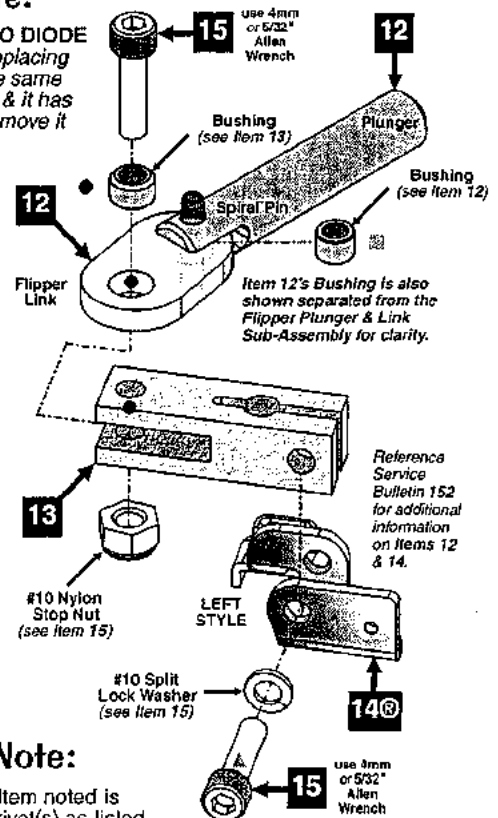

Take Note:

® "R" indicates Item noted is secured with rivet(s) as listed.




Sec. 4: Drawings ...

Slingshot (Left & Right) Assemblies, 500-5849-01-ND (Qty. 2) (Items 1-9)


Nr.	SLINGSHOT PARTS	QTY.	SPI PART Nr.	Nr.	SLINGSHOT PARTS	QTY.	SPI PART Nr.
1	Slingshot Bracket Assembly	1/per	515-5339-01	6	Compression (Return) Spring	1/per	266-5020-00
Item 1 is secured below the playfield by: #8 X 1/2" SHWH AB (Zc.) (Qty. 3) (234-5101-00)				7	Slingshot Stack (Blade) Switch	2/per	180-5054-00
2	Coil Retaining Bracket	1/per	535-5203-03	Only 1 of the 2 Switches has a Diode (1N4004) (112-5003-00). See Note Below on Drawing. Can be replaced with (1N4001) (112-5001-00).			
Item 2 is secured to Item 1 by: #8-32 X 3/8" PPH MS (Sems) (Qty. 2) (232-5301-00)				8	Switch Body Protect Plate	2/per	535-5045-00
3	Coil, 23-800 [NO DIODE]	1/per	090-5044-ND	Items 7 & 8 are secured to Item 1 by: #6-32 X 5/8" HWH Swage (Qty. 4) (237-5976-04)			
COIL DOES NOT REQUIRE A DIODE. SEE ☉ COIL NOTE BELOW FOR DETAILS.				9Ⓡ	Riveted Arm & Tip Assembly	1/per	515-5340-01
4	Coil Sleeve	1/per	545-5031-00	For Individual Parts use (requires drilling out rivet & re-riveting): Arm (515-5341-01), Kicker Tip (545-5216-01) and Rivet, 1/8" ø x 1/4" Lg. (249-5003-00) The Riv. Arm is secured to Item 1 by: Retaining Ring, 1/4" ø Shaft (Qty. 1) (270-5002-00)			
5	Plunger & Link Assembly	1/per	515-5338-00	Ordering Note: If 515-5340-01 is unavailable, order the individual part(s) actually required.			
For Individual Items use: Plunger 2" Lg. (530-5025-01), Plunger Link (545-5293-00) and Roll Pin 1/8" ø x 5/8" Lg. (251-5008-00) The Plunger Link is secured to the Riveted Arm by: Retaining Ring, 1/4" ø Shaft (Qty. 1) (270-5002-00)				Ordering Note: If 500-5849-00-ND is unavailable, order the individual part(s) actually required. This assembly is identical to 500-5849-02-ND with the exception of Item 3, which uses a Coil, 27-1500 [NO DIODE] (090-5004-ND) instead.			
Ordering Note: If 515-5338-00 is unavailable, order the individual part(s) actually required.							

Take Note:

- ☉ Coil Note: ☉ NO DIODE ON LUGS. If replacing with a coil of the same gauge and turn and it has a diode on it, remove it before using.
- Ⓡ "R" indicates Item noted is secured with rivet(s) as listed.

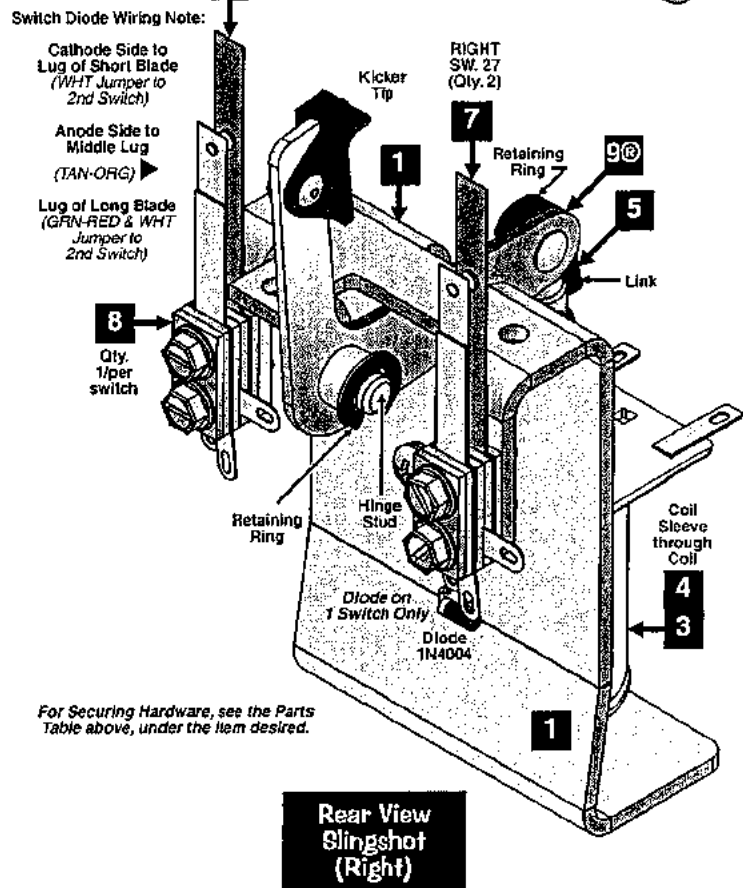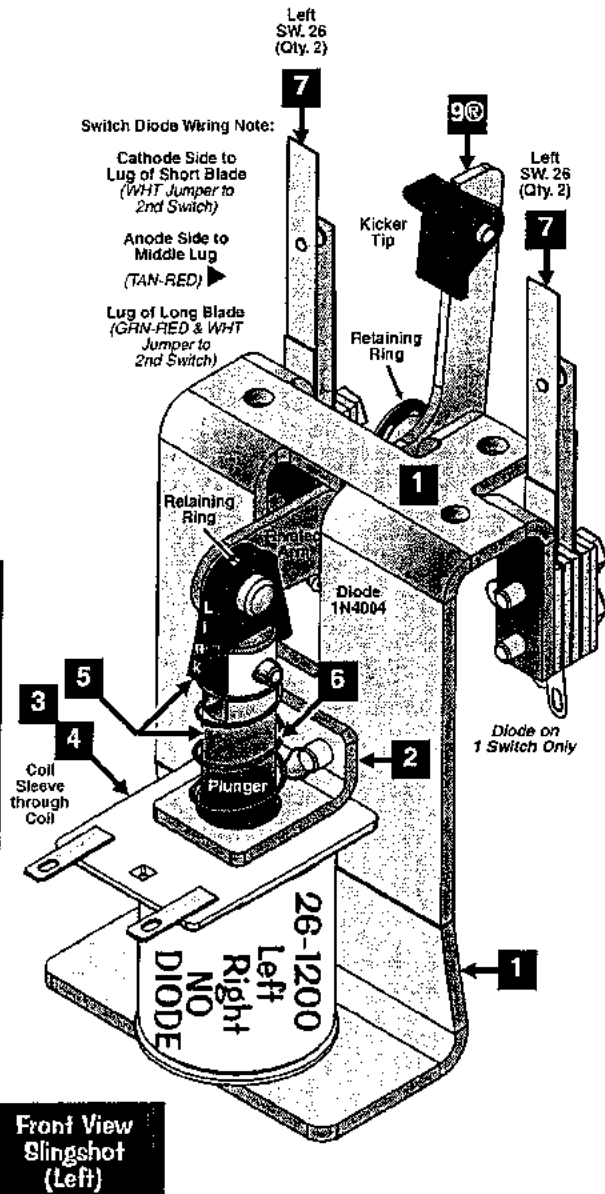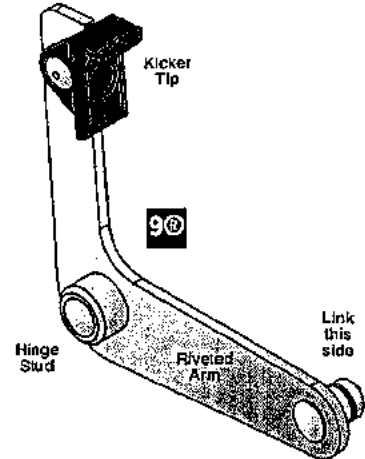

Bumper Top, Bumper Bottom & Bumper Switch Individual Parts Only (Items 1-18) and Associated Part: See Parts Table Below.

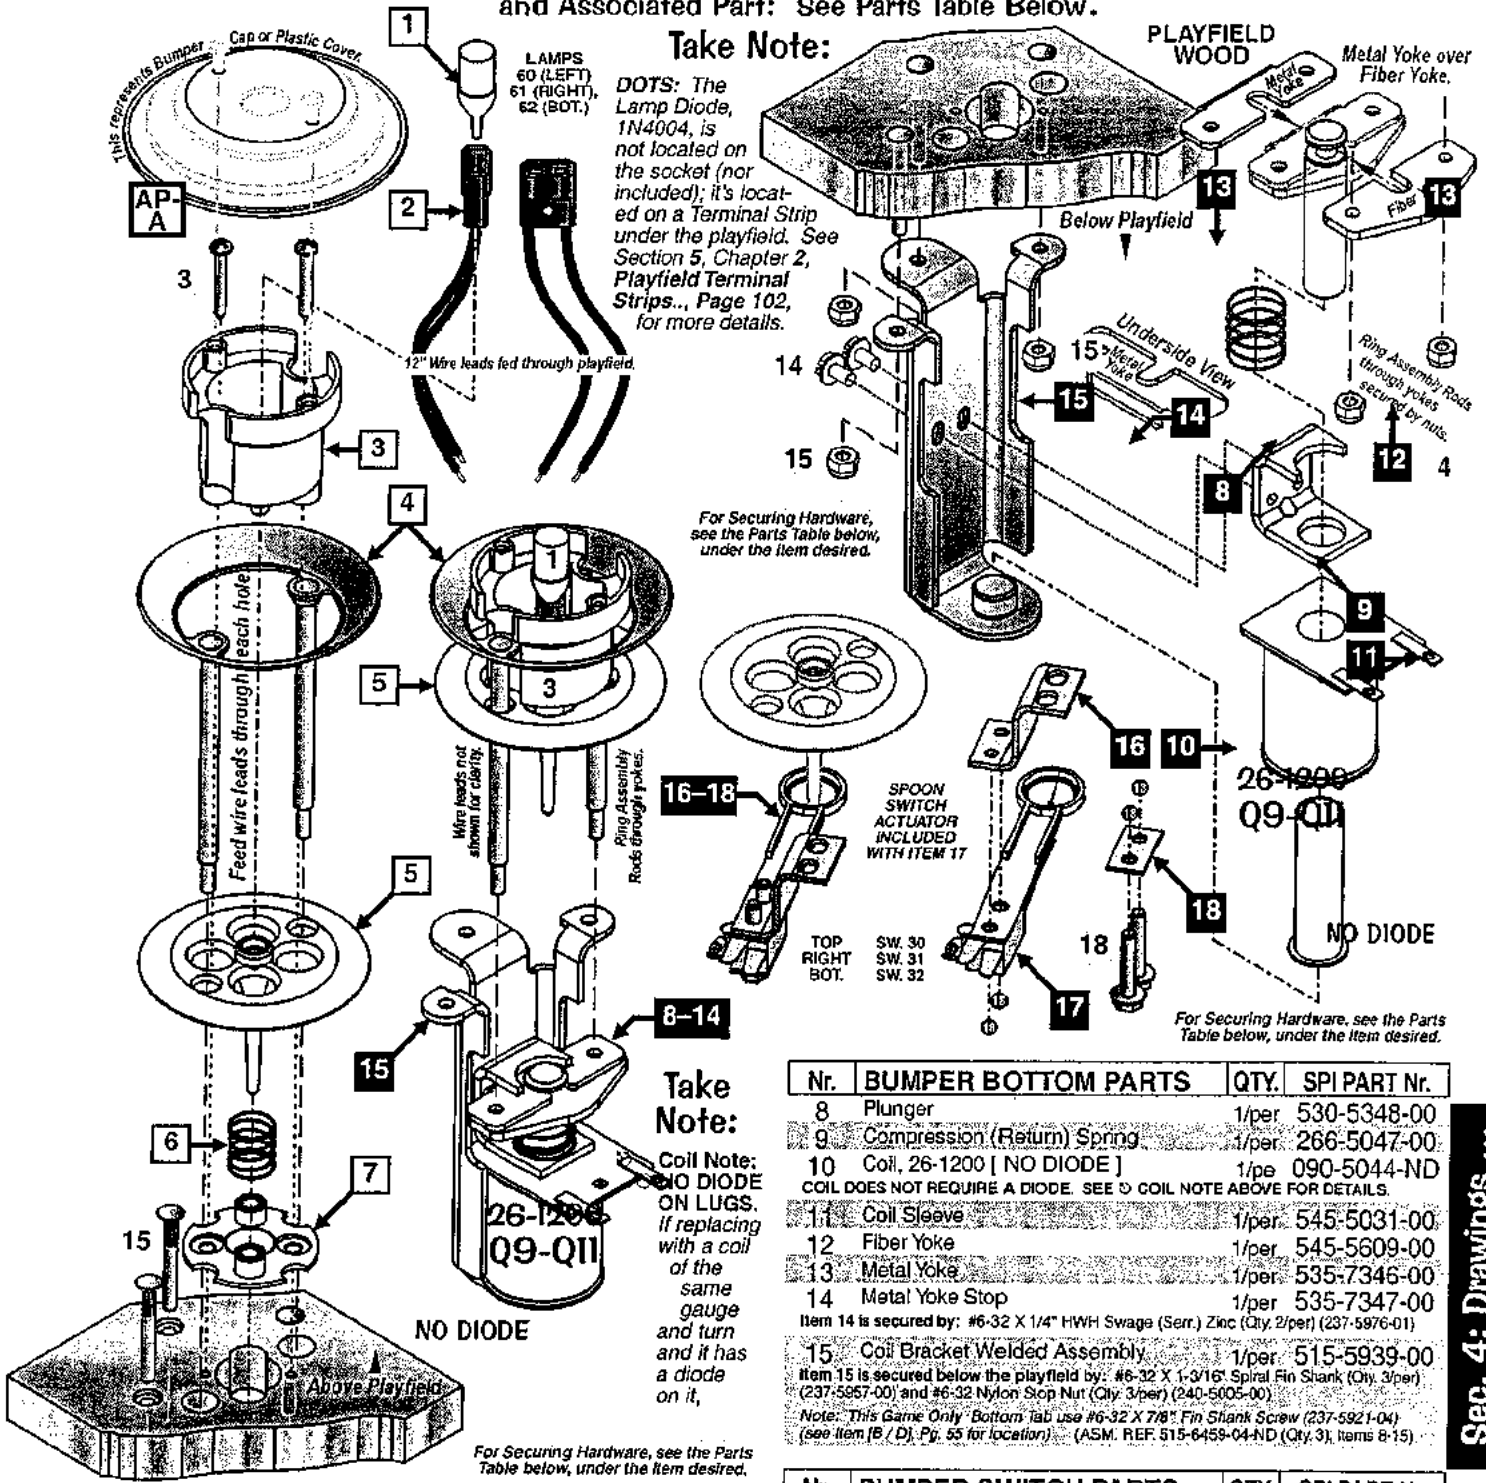

Take Note:

DOTS: The Lamp Diode, 1N4004, is not located on the socket (nor included); it's located on a Terminal Strip under the playfield. See Section 5, Chapter 2, Playfield Terminal Strips., Page 102, for more details.

Take Note:

Coil Note: NO DIODE ON LUGS. If replacing with a coil of the same gauge and turn and it has a diode on it,

Nr.	BUMPER BOTTOM PARTS	QTY.	SPI PART Nr.
8	Plunger	1/per	530-5348-00
9	Compression (Return) Spring	1/per	266-5047-00
10	Coil, 26-1200 [NO DIODE]	1/pe	090-5044-ND
COIL DOES NOT REQUIRE A DIODE. SEE COIL NOTE ABOVE FOR DETAILS.			
11	Coil Sleeve	1/per	545-5031-00
12	Fiber Yoke	1/per	545-5609-00
13	Metal Yoke	1/per	535-7346-00
14	Metal Yoke Stop	1/per	535-7347-00
Item 14 is secured by: #6-32 X 1/4" HWH Swage (Serr.) Zinc (Qty. 2/per) (237-5976-01)			
15	Coil Bracket Welded Assembly	1/per	515-5939-00
Item 15 is secured below the playfield by: #6-32 X 1-3/16" Spiral Fin Shank (Qty. 3/per) (237-5957-00) and #6-32 Nylon Stop Nut (Qty. 3/per) (240-5005-00)			
Note: This Game Only Bottom tab use #6-32 X 7/8" Fin Shank Screw (237-5921-04) (see item B / D) Pg. 55 for location) (ASM. REF. 515-6459-04-ND (Qty. 3), Items 8-15)			

Nr.	BUMPER TOP PARTS	QTY.	SPI PART Nr.
1	LED Module (WHT) (6.3v) Wedge Base	1	112-5024-08
2	Wedge Base Socket	1	077-5206-00
3	Bumper Body	1/per	545-5197-00
Item 3 is secured above the P/F by: #5 X 7/8" PRH AB (Zinc) (Qty. 2/per) (237-5826-00)			
4	Ring Assembly	1/per	515-5085-00
Item 4 is secured by: #6-32 Nylon Stop Nut (Qty. 2/per) (240-5005-00)			
5	Bumper Skirt (Switch Actuator)	1/per	545-5607-00
6	Bumper Skirt Compression Spring	1/per	266-5048-00
7	Bumper Base	1/per	545-5195-00
(ASM. REF. 515-6459-01L (Qty. 1), Items 1-7, 515-6459-00 (Qty. 2), Items 3-7)			


The Top & Bottom Assemblies are secured together by hardware noted in Item 4.

Nr.	BUMPER SWITCH PARTS	QTY.	SPI PART Nr.
16	Switch Bracket	1/per	535-7342-00
Item 16 is secured by: #8 X 1/2" HWH AB (Zinc) (Qty. 2/per) (234-5101-00)			
17	Bumper Stack (Blade) Switch Assy.	1/per	180-5015-04
Included with Item 17: Spoon Switch Actuator (545-5610-02)			
Switch has a Diode (1N4004) (112-5003-00). Can be replaced with (1N4001) (112-5001-00).			
18	Switch Body Protect Plate	1/per	535-7344-00
Items 17 & 18 are secured by: #6-32 X 3/4" HWH Swage (Serr.) Zc. (Qty. 2) (237-5976-05) (ASM. REF. 515-6459-09 (Qty. 3), Items 16-18)			

ASSOCIATED PARTS ARE NOT INCLUDED WITH THE ABOVE ASSEMBLIES.

Nr.	ASSOCIATED PART(S)	QTY.	SPI PART Nr.
AP-A	Kit, Plastic (incl. -16, -16B & -16C)	1	803-5000-
Note: Individual Plastics (830-6068-XX & 830-6078-XX) are not available individually; ordering of kit is required.			
AP-A are secured by: #4 X 3/8" PPH AB (Zinc) (Qty. 3/per) (237-5815-00)			


Sec. 4: Drawings ...

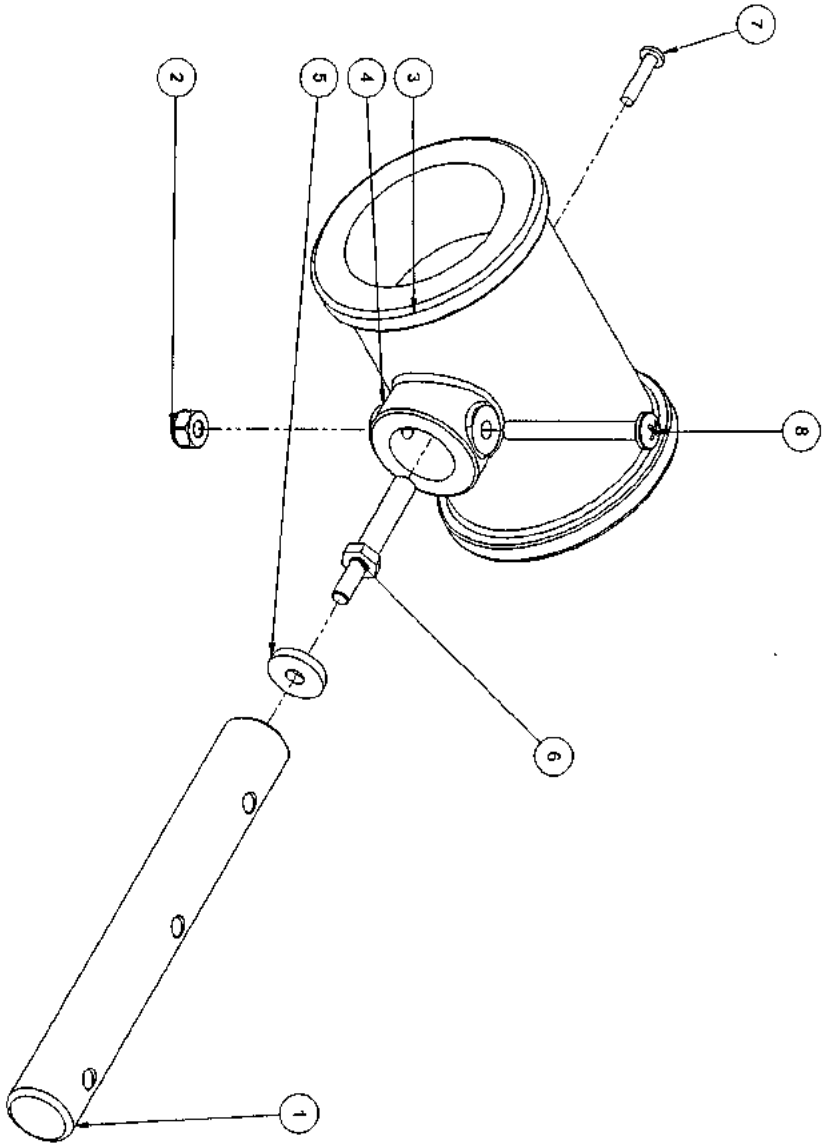

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	530-7828-00	HAMMER HANDLE	1
2	240-5203-00	10-32 NYLON LOCK NUT	1
3	545-7826-01	HAMMER HEAD	1
4	242-5003-00	#10 FLAT WASHER - .72" O.D. X .082 THICK	1
5	242-5039-00	WASHER - 13/64 ID X 5/8 OD X .105	1
6	530-5332-09	HEX BUMPER POST - .632 TAP	1
7	237-5503-01	10-32 THREAD SCREW, 5.32 X .58 PPH MS BLACK	1
8	237-5711-00	SCREW, 10-32 X 1 3/4 PPH MS	1

HAMMER ASSEMBLY-JAMES


511-7481-00

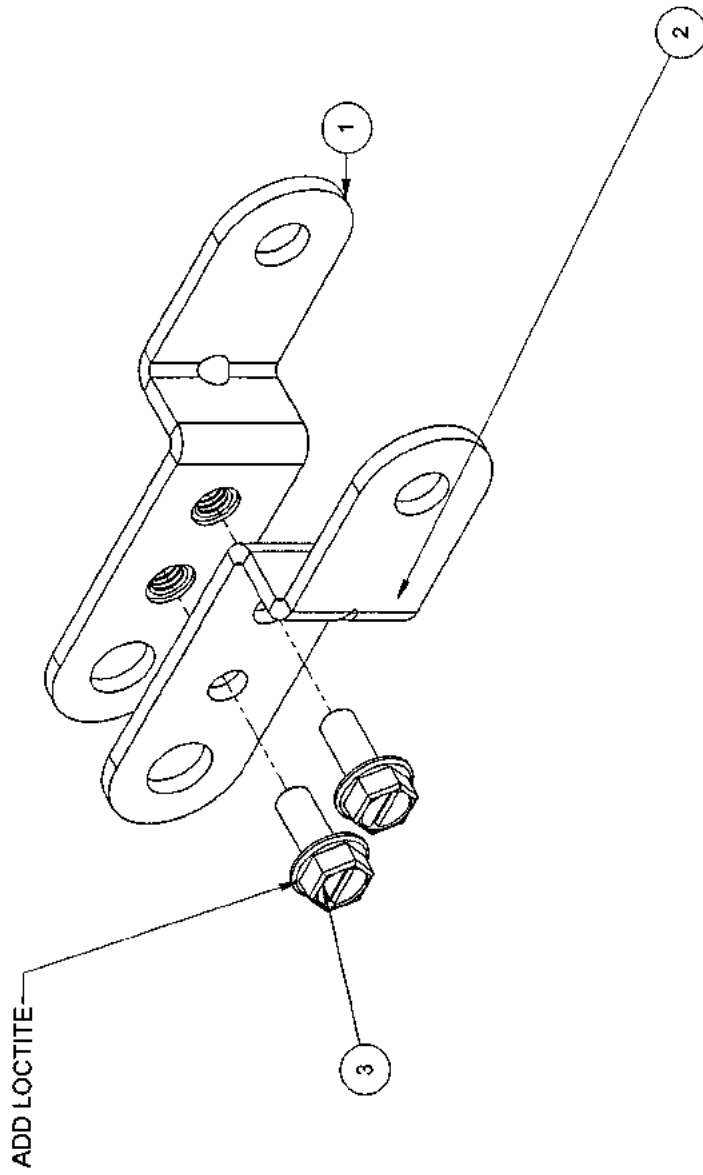

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	515-9663-00	LINKAGE-HAMMER	1
2	535-0712-00	LINKAGE-HAMMER	1
3	237-5903-00	SCREW, 8-32 X 3/8" HWH	2

LINK ASSEMBLY

511-7488-00



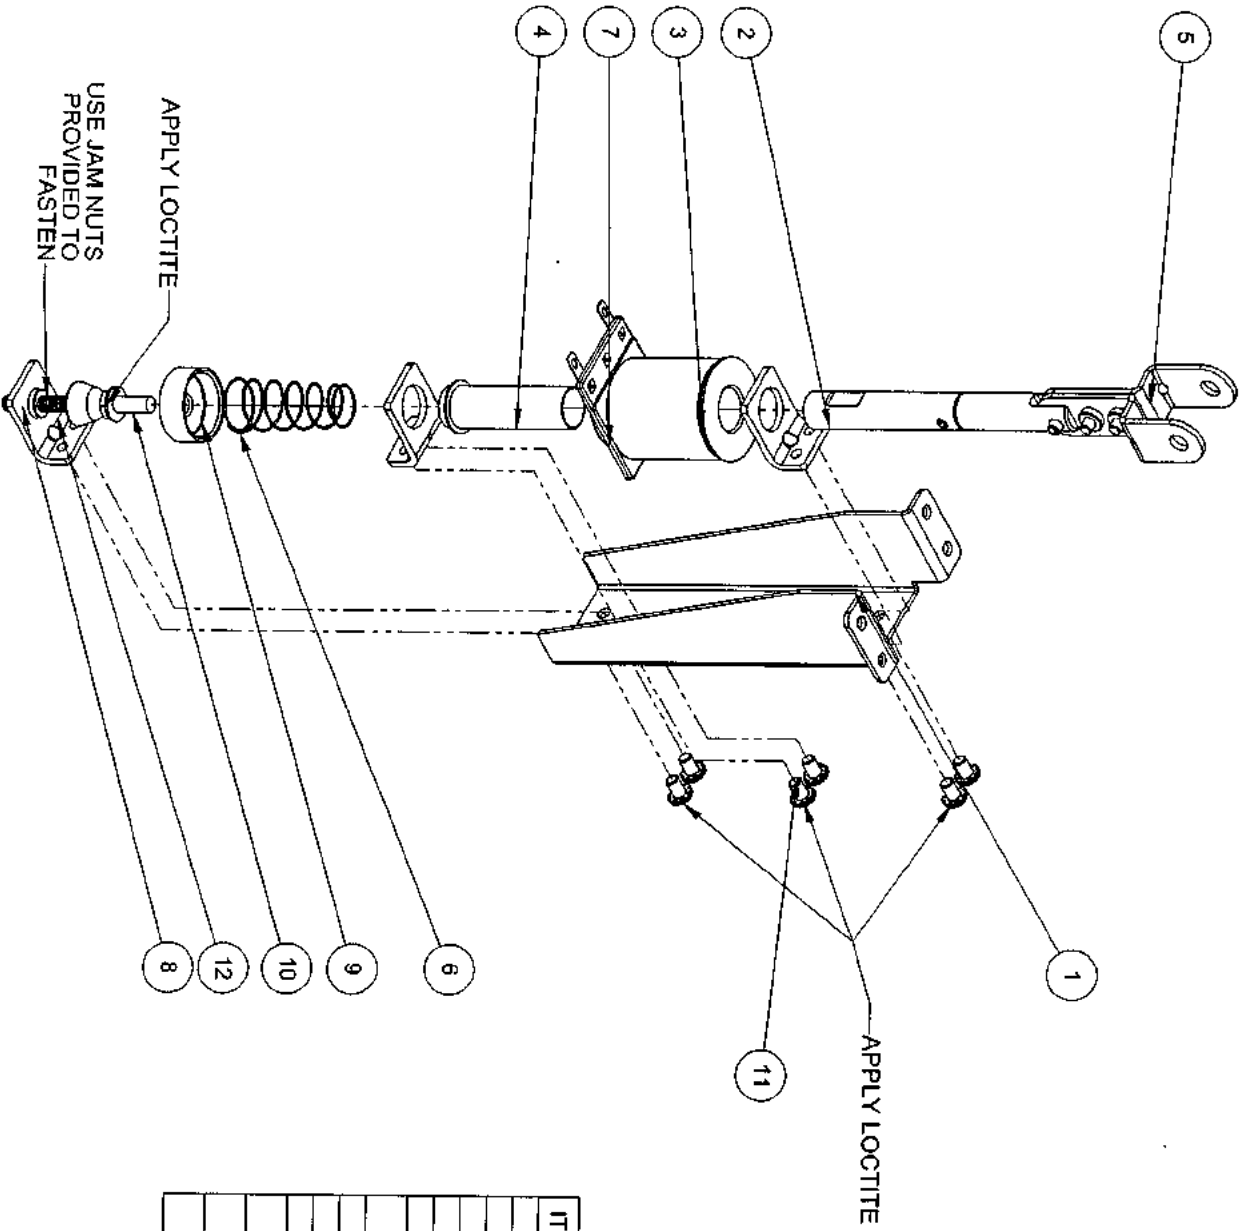


ITEM NO.	PART NUMBER	DESCRIPTION	Default Qty.
1	535-0690-00	HAMMER LOWER BRACKET	1
2	535-5203-03	COIL RETAINING BRACKET	2
3	090-5044-ND	COIL 26-1200 - NO DIODE	1
4	545-5076-01	COIL SLEEVE	1
5	515-0178-00	HAMMER PLUNGER ASSY COMPRESSION SPRING-	1
6	266-5020-00	CONICAL SPRING WASHER	1
7	269-5002-00	ADJUSTABLE BUMPER/STOP	1
8	280-5014-00	PLUNGER HEAD	1
9	530-5511-00	#10-32 x 1/2 HWHT NO SLOT SERR ZI	1
10	237-5995-00	SCREW, 8-32 X 1/4" PPH SEMS	6
11	232-5300-00	COIL RETAINING BRACKET-	1
12	535-0692-00	ADJUSTABLE	1

HAMMER PLAYFIELD ASSEMBLY

511-7473-00

KEEP FASTENERS AT SLOTS LOOSE FOR FINAL ASSEMBLY. SETTING AT 1 AND 18 FINISHING TORQUE WILL BE 75-80 IN-LBS.

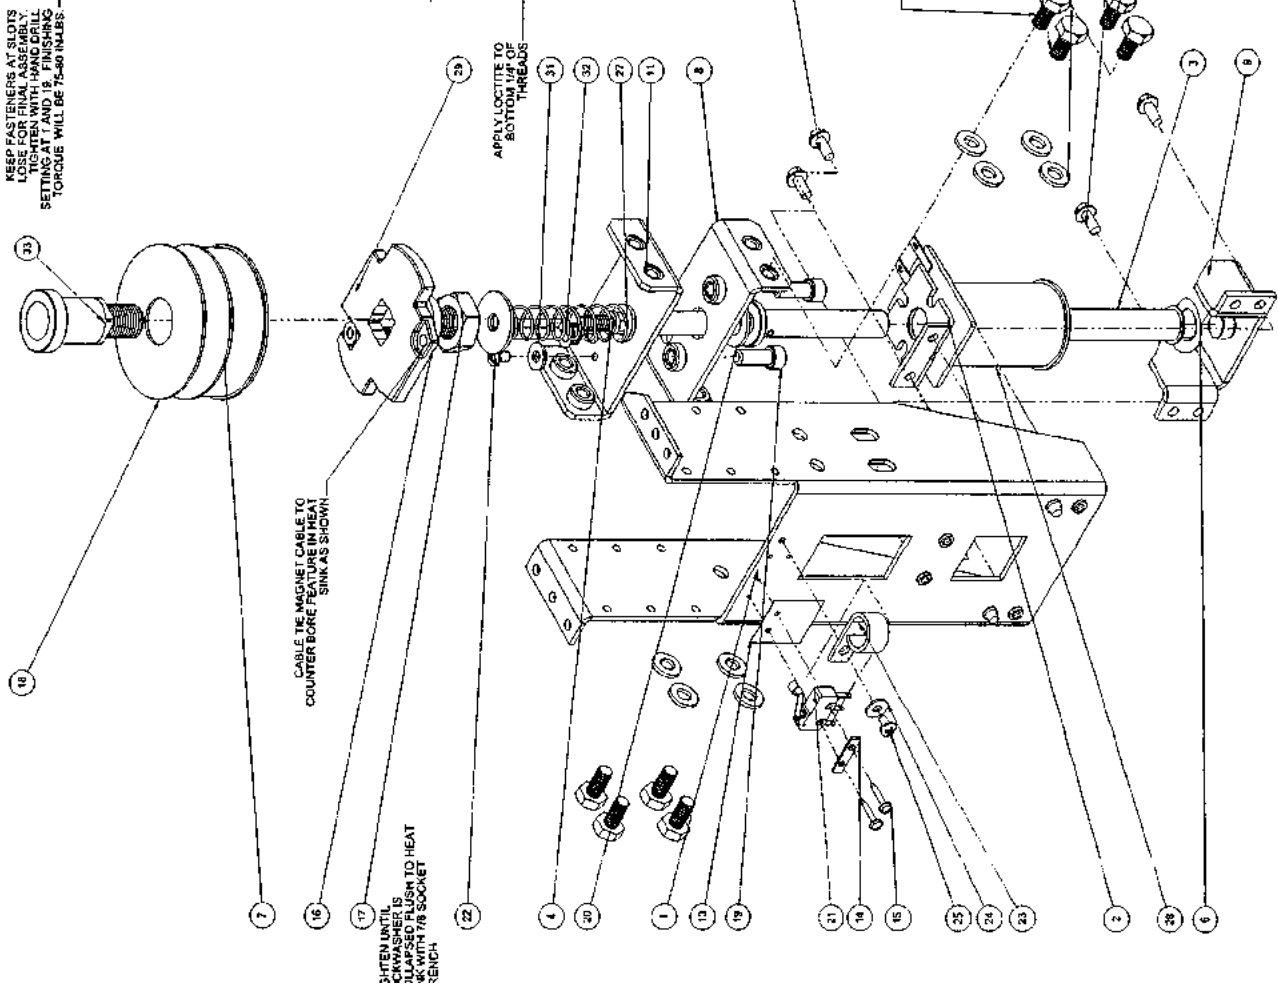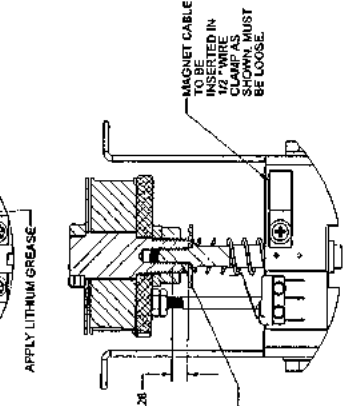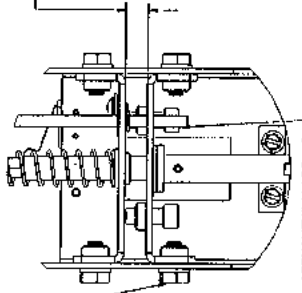


ITEM NO.	PART NUMBER	DESCRIPTION	QUANTITY
1	535-0834-00	DISAPPEARING BALL SUPPORT BRACKET	1
2	535-7324-00	COIL BRACKET	1
3	546-5389-00	COIL SLEEVE	1
4	515-9664-00	DISAPPEARING BALL PLUNGER ASSY	1
5	232-5975-00	SCREW, 8-32 X 3/8" HWH SWAGE ZN	6
6	268-5002-00	SPRING WASHER	1
7	511-5005-00	MAGNET / CONNECTOR ASSY, 22-650	1
8	615-9672-00	BEARING PLATE DISAPPEARING BALL	1
9	515-9667-00	PLUNGER STOP ASSEMBLY	1
10	237-6104-05	1/4-20 X 1/2" HEX HEAD BOLT	8
11	515-9668-00	BEARING PLATE DISAPPEARING BALL	1
12	242-5008-00	WASHER, 1/4" OD X 1/2" OD X 1/16" THICK	8
13	546-6284-00	FIBRE PAPER	1
14	535-6039-00	SWITCH BODY PROTECT PLATE	1
15	232-5937-02	SCREW, 2-56 X 1/2" HWH MB	2
16	244-5007-06	SPLIT LOCKWASHER 8/16	1
17	246-6413-00	JAM HEX NUT 9/16" 18	1
18	535-6083-00	MAGNET PROTECTOR-JAMES	1
19	231-5851-01	1/4-20 X 5/8 LG. SOC HD CAP SCREW	2
20	546-7814-00	WASHER THRUST	1
21	188-6266-00	SUB MINIATURE SWITCH - SML ROLLER	1
22	242-5006-00	WASHER, 1/4" OD X 1" OD X 9/64" THICK	1
23	040-6000-06	1/2" CABLE CLAMP	1
24	242-5001-00	R6 WASHER	1
25	232-5200-00	SCREW, 6-32 X 1/4" PPH SEMS	1
26	038-5586-18 E3	CABLE ASSEMBLY	1
27	208-5008-04	COMPRESSION SPRING-CONICAL	1
28	096-5032-ND	COIL - 22-1030 -ND DIODE	1
29	511-7502-00	HEAT SINK ANTI ROTATION ASSEMBLY	1
30	232-5009-00	SCREW, 8-32 X 1/4" PPH SEMS	1
31	242-5005-00	R6 WASHER	1
32	515-5659-00	1/4" DIA. NYLON BEARING - SNAP IN - L2	1
33	515-9660-00	MAGNET CORE DISAPPEAR BALL	1

*ITEM NOT SHOWN

DISAPPEARING BALL W MAGNET

511-7475-00



111

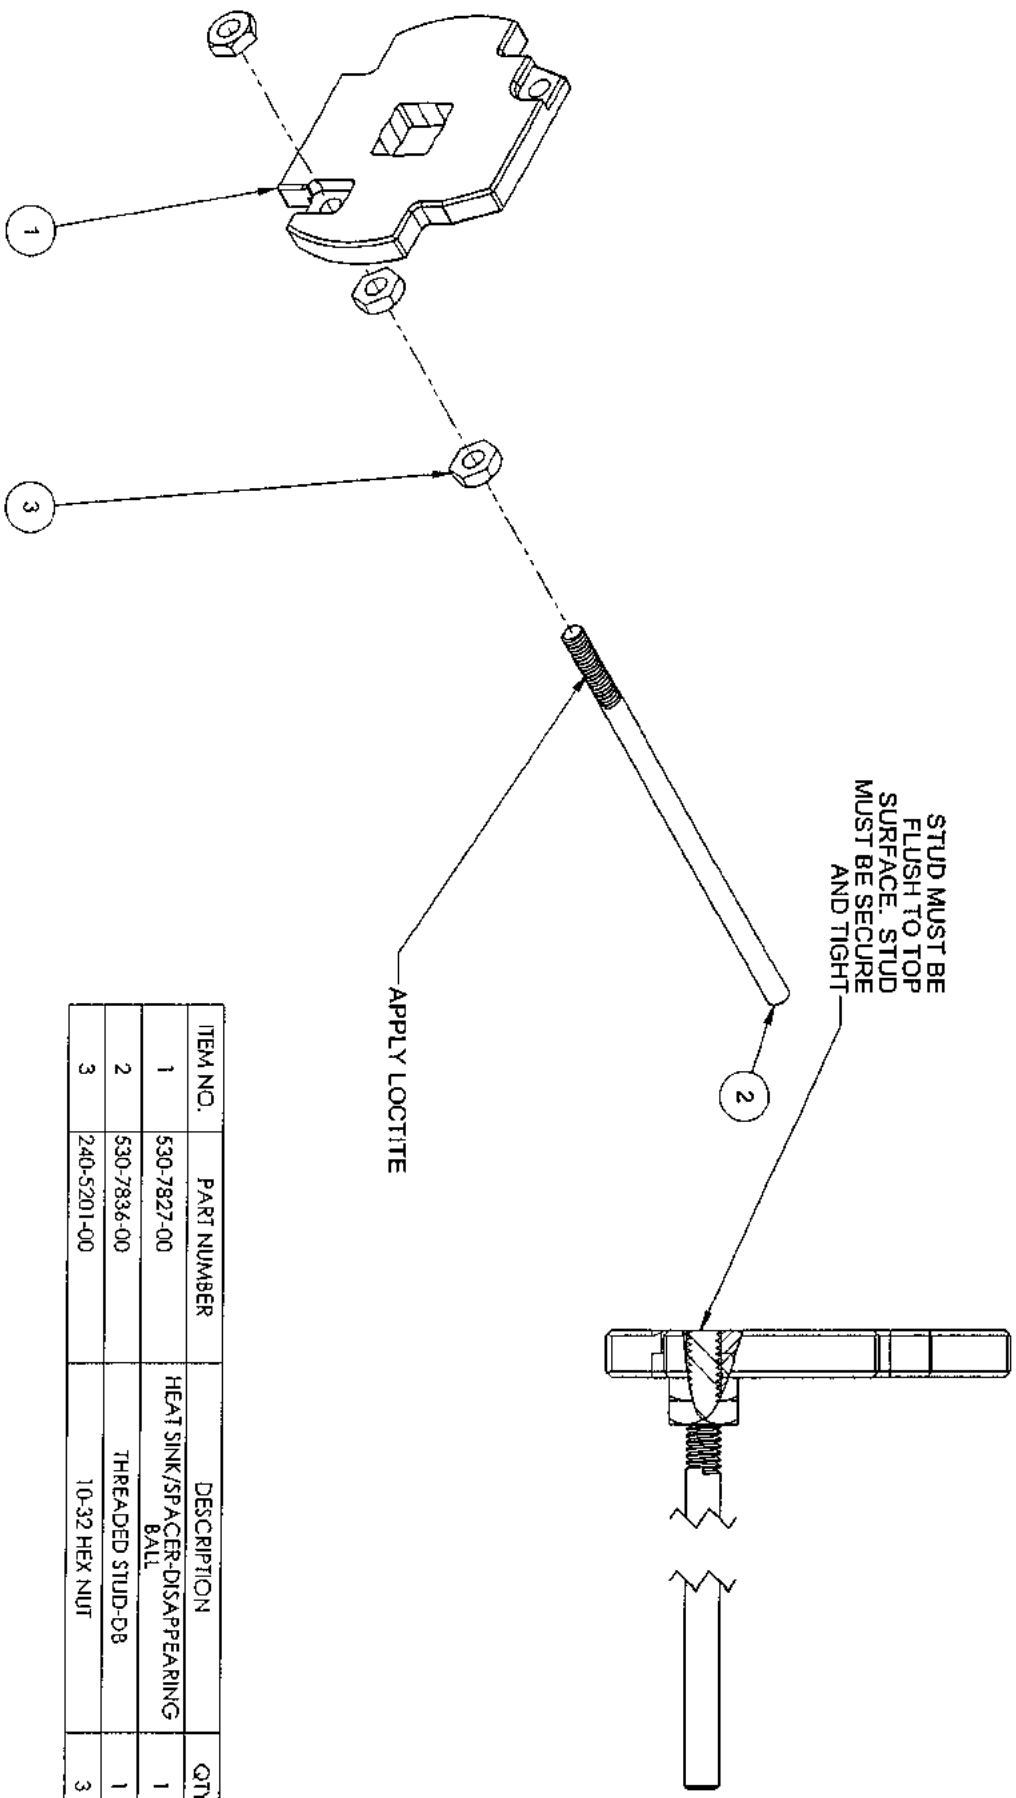

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	530-7827-00	HEAT SINK/SPACER-DISAPPEARING BALL	1
2	530-7836-00	THREADED STUD-D8	1
3	240-5201-00	10-32 HEX NUT	3

HEAT SINK ANTI ROTATION ASSEMBLY


511-7502-00

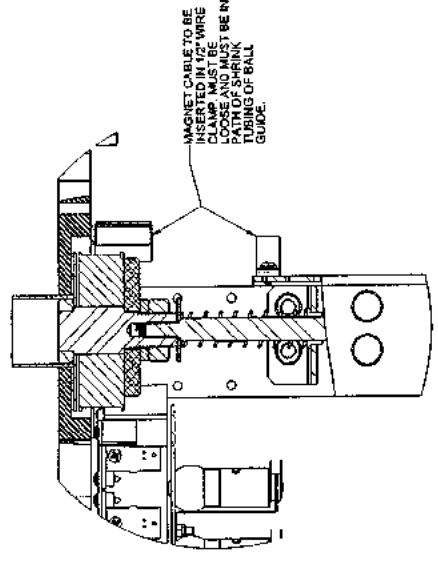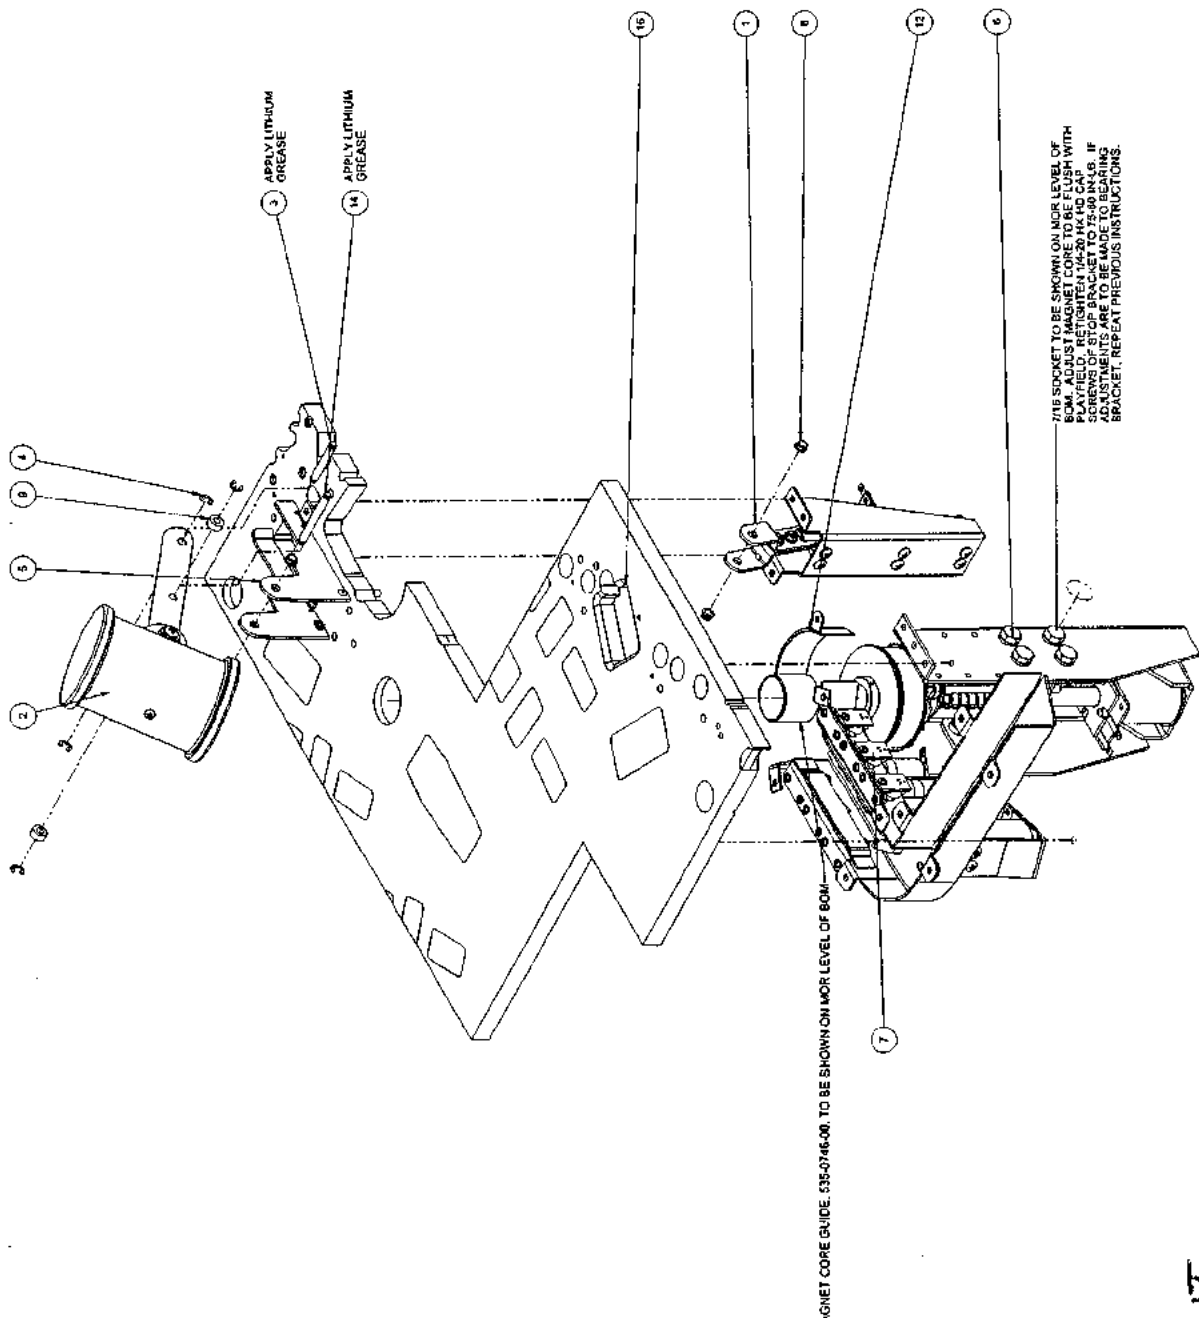

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	511-7473-00	HAMMER PLAYFIELD ASSEMBLY	1
2	511-7481-00	HAMMER ASSEMBLY-JAMES	1
3	500-7812-01	PIVOT PIN	1
4	270-5001-09	RETAINING RING, 3/16" SHAFT OD	4
5	572-0689-09	HAMMER BALL GUIDE AND PIVOT-RIGHT	1
6	511-7425-00	DISAPPEARING BALL W/ MAGNET	1
7	511-7475-00	DISAPPEARING BALL, TROUGH-JAMES	1
8	548-5382-00	NYLINER, 3/16" SHAFT	4
9	254-5015-00	SPACER, BLACK NYLON	2
10	234-5101-00	SCREW, #8 X 1/2" SLT-HWH AB ZINC	3
12	511-7494-00	BALL GUIDE SHRINK WRAP ASSEMBLY	1
13	535-0688-08	HAMMER BALL GUIDE AND PIVOT-LEFT	1
14	500-7812-02	PIVOT PIN	1

DISAPPEARING BALL AND HAMMER PLAYFIELD ASSEMBLY
500-8609-00

513

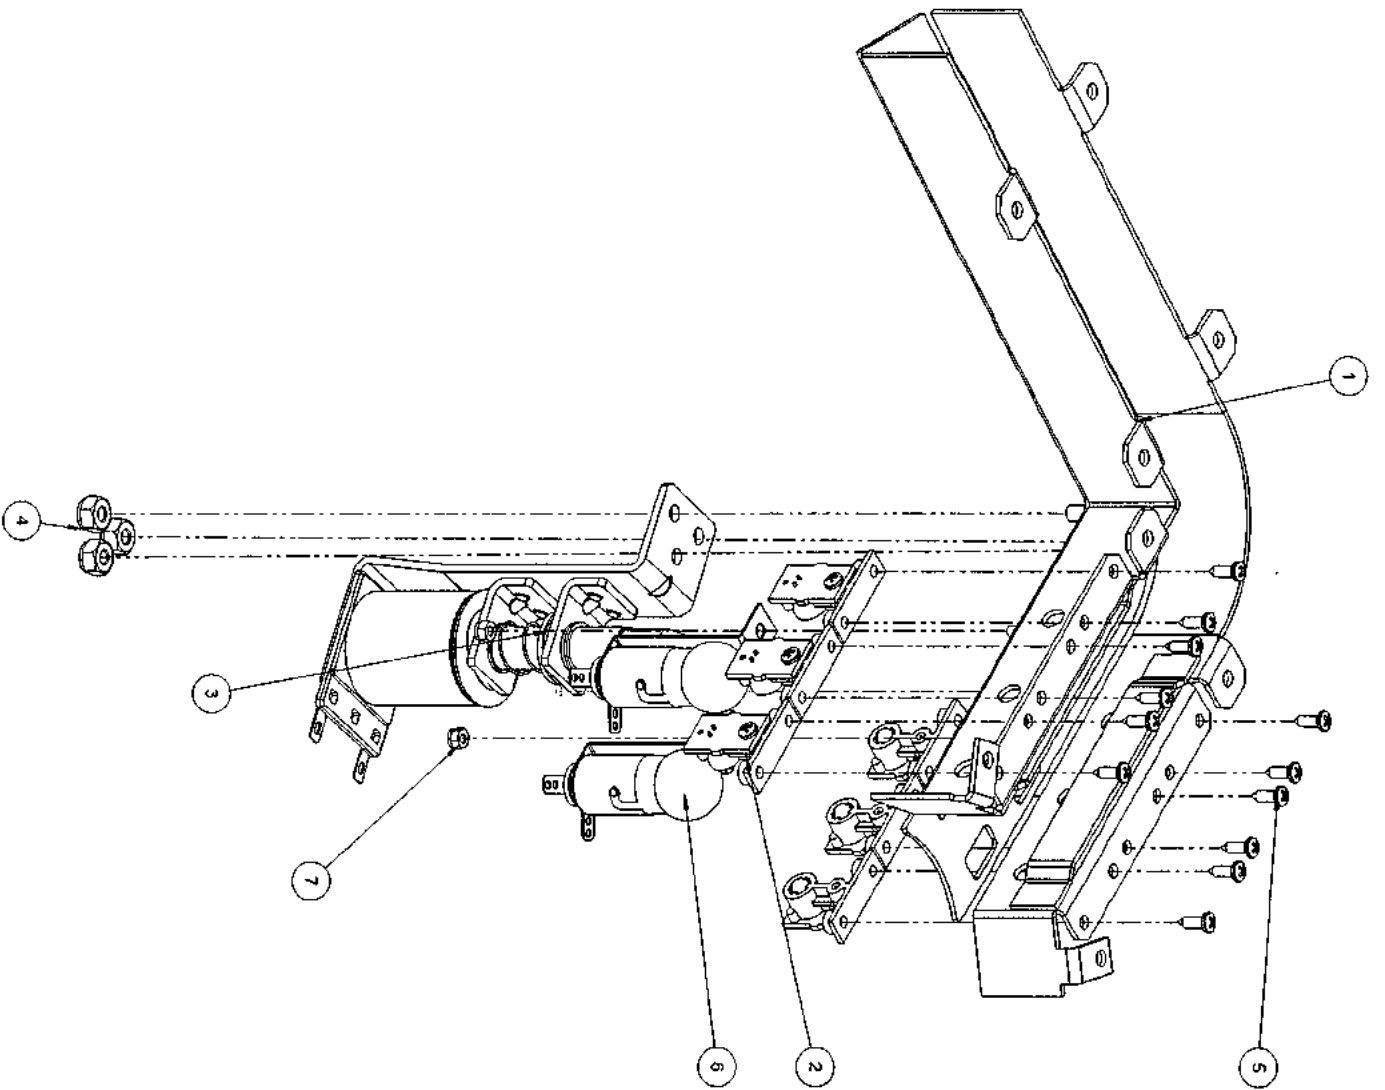

ITEM NO.	PART NUMBER	DESCRIPTION	Default Qty
1	515-0179-00	DISAPPEARING BALL TROUGH	1
2	500-6775-01	WELDMENT OPTO TRANSDUCER ASSY, 15" LEADS	6
3	500-9811-00	DOWN POST ASSY	1
4	240-5102-00	8.32 NYLON LOCK NUT	3
5	227-5815-00	SCREW, #4 X 3/8" PPH AB	12
6	519-5102-02 HF	LONG S/O SOCKET/BULB ASSEMBLY	2
7	240-5303-00	4-40 NYLON LOCK NUT	2
*8	036-5596-16-E3	CABLE ASSEMBLY-BALL TROUGH	1




* ITEM NOT SHOWN

614

DISAPPEARING BALL TROUGH-JAMES

ITEM NO.	PART NUMBER	DESCRIPTION	500-9812-01/QTY.
1	515-9659-01	POWER SCOOP, LE	1
2	535-6173-00	MICRO-SWITCH BRACKET	1
3	232-5209-00	SCREW, 6-32 X 3/16" PPH SEMS	2
4	180-5057-00	MICRO-SWITCH	1
5	535-6539-00	SWITCH BODY PROTECT PLATE	1
6	237-5806-00	SCREW, 2-56 X 1/2" PPH MS ZINC	2
7	244-5001-00	#2 LOCK WASHER, SPLIT	2
8	240-5301-00	2-56 HEX NUT	2
9	112-5003-00	DIODE - 1N4004	1
*99	036-5544-01	3" GENERIC CABLE-SWITCH	1

* ITEM NOT SHOWN

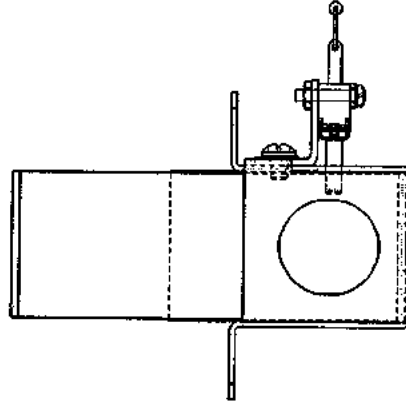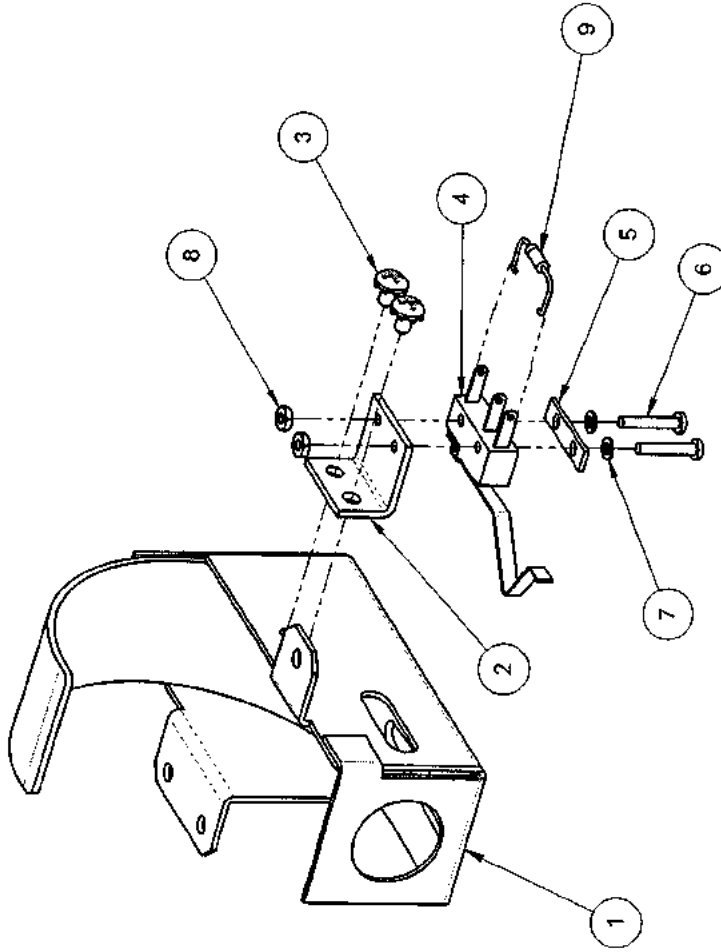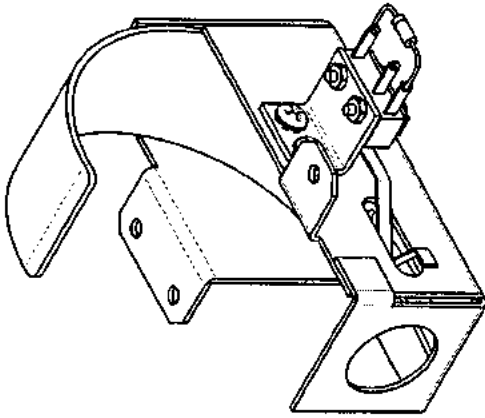


POWER SCOOP ASSEMBLY, JAMES LE

500-9812-01

b15


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	535-8575-00	KICK BIG MTG. BRKT.	1
2	090-5001-ND	COIL - 23-800, NO DIODE	1
3	545-5076-01	COIL SLEEVE	1
4	269-5002-00	SPRING WASHER	1
5	266-5020-00	COMPRESSION SPRING-CONICAL	1
6	545-5105-00	RUBBER BUMPER	1
7	515-7318-00	PLUNGER ASSEMBLY	1
8	535-5203-03	COIL RETAINING BRACKET	1
9	232-5300-00	SCREW, 8-32 X 1/4" PPH SEMS	2

ASSEMBLY, BIG KICKER
500-6398-01

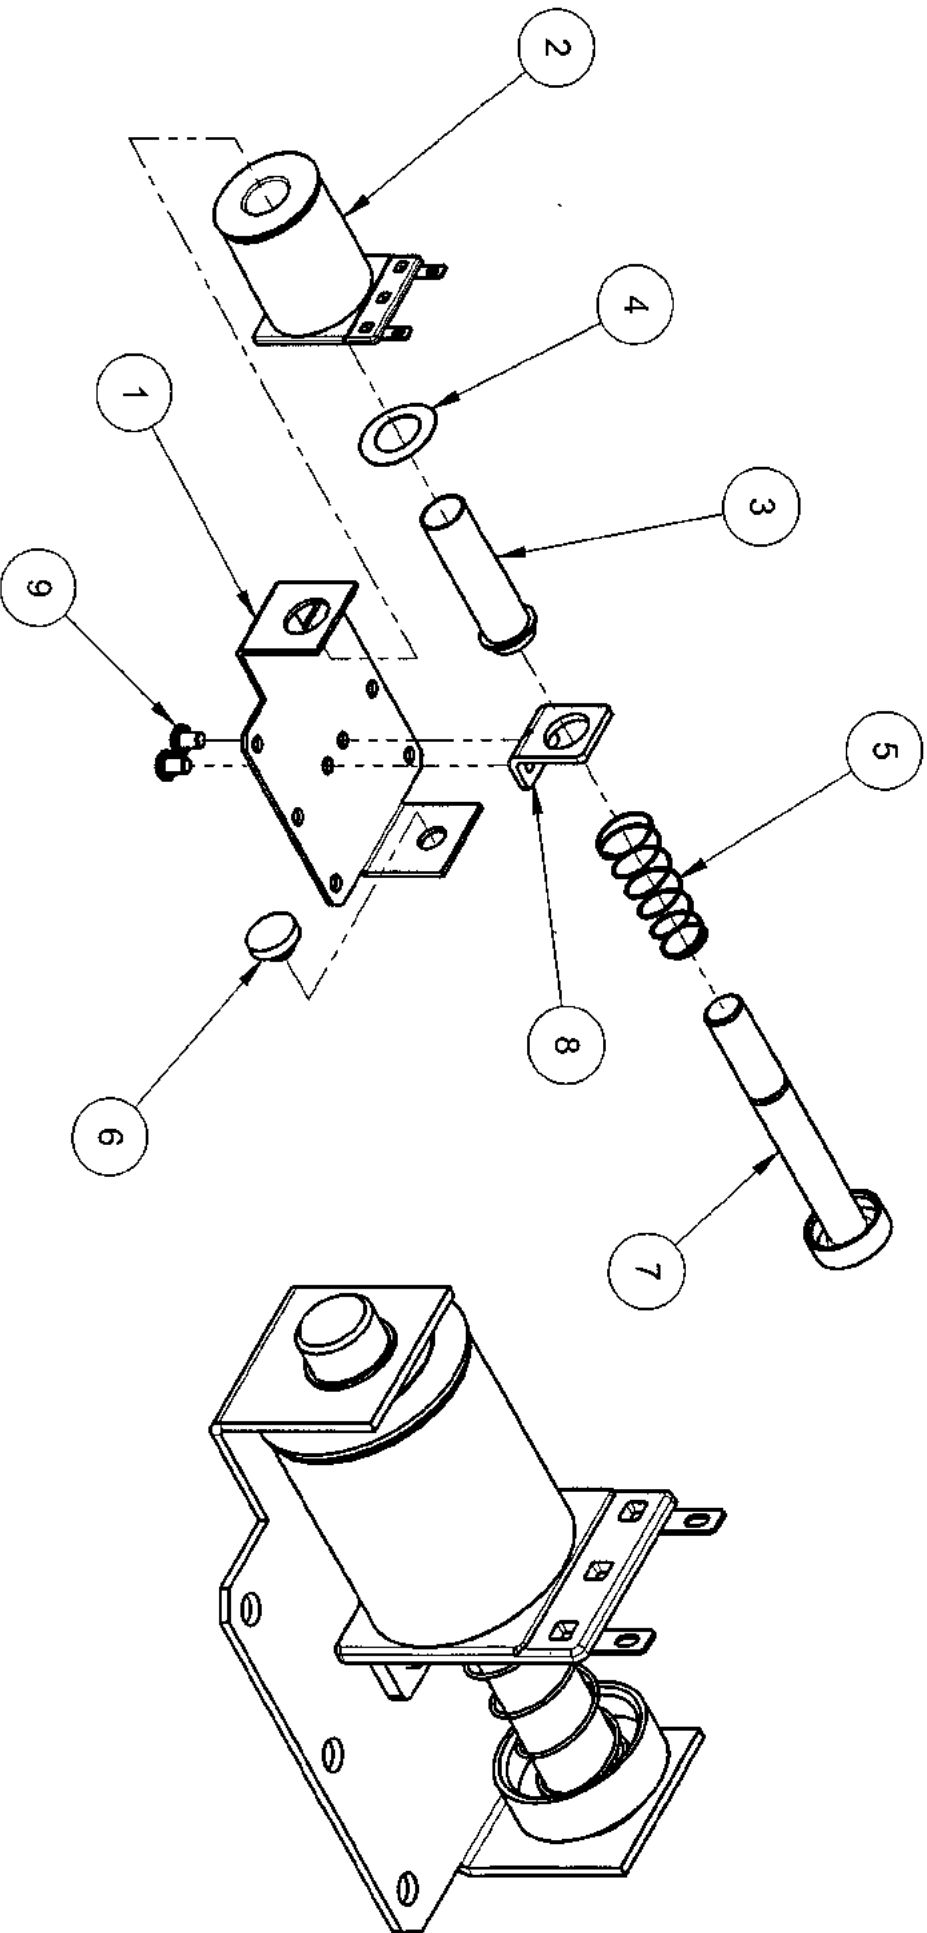

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	515-6141-03	THREADED CORE WELD ASSY	1
2	511-5065-00	MAGNET & CONN ASSY, S-M	1
3	530-5320-00	THREADED CORE PLUG	1
4	240-5315-00	3/4-16 HEX JAM NUT	1


MAGNET PRIME ASSEMBLY

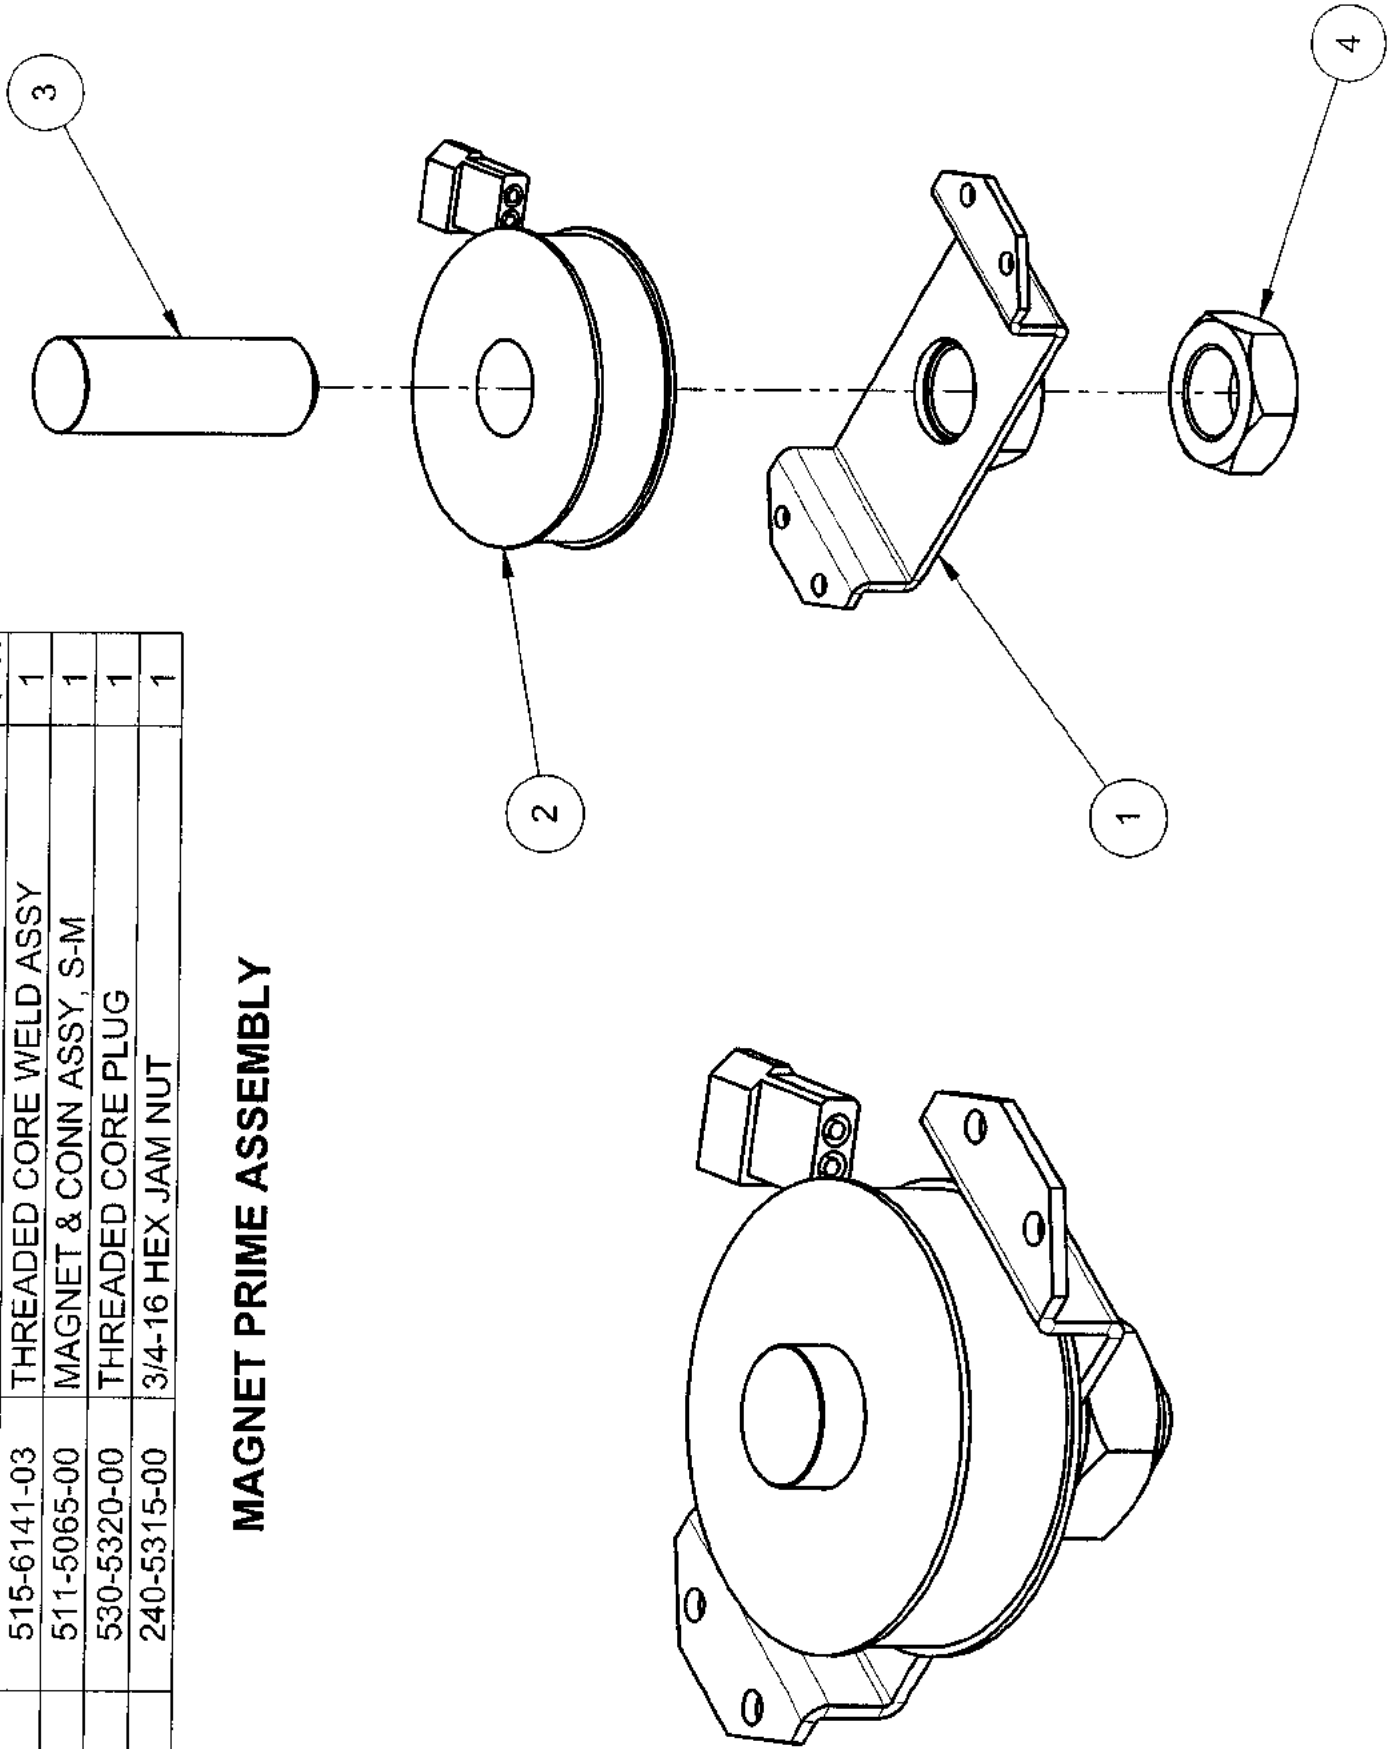

**ASSEMBLY, SNAKE HEAD
METALLICA PREMIUM / LE
500-9813-00**

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	515-9669-00	WELDMENT, SNAKE UPPER JAW, JAMES	1
2	511-7484-00	ASSY, SNAKE LOWER JAW, JAMES	1
3	530-7831-00	PIVOT PIN, SNAKE JAW, JAMES	1
4	270-5001-00	RETAINING E-RING, 3/16" SHAFT OD	2
5	242-5088-00	NYLON WASHER, .195" X .437" X .031"	2
6	545-5352-00	NYLINER, 3/16" SHAFT	2
7	180-5209-00	SUB MINIATURE SWITCH - SIM. ROLLER	1
8	535-6539-00	SWITCH BODY PROTECT PLATE	1
9	237-5937-02	SCREW, 2-56 X 1/2" HWH MS	2
10	545-7828-00	MOLDED SNAKE HEAD, JAMES	1
11	237-5918-00	SCREW, 6-32 X 1/2" PPH MS ZINC	1
12	232-5201-00	SCREW, 6-32 X 3/8" PPH MS SEMS	1
13	254-5000-19	NYLON SPACER - BLACK - 3/8 OD X .175 ID X 1/8"	1
14	254-5000-09	NYLON SPACER - BLACK - 3/8 OD X .175 ID X 1/4"	1
15	237-5506-00	SCREW, 6-32 X 1" PPH MS	1
98*	040-5001-00	CABLE TIE, 4"	1
99*	036-5596-11-E1	CABLE, SNAKE HEAD	1



* ITEM NOT SHOWN

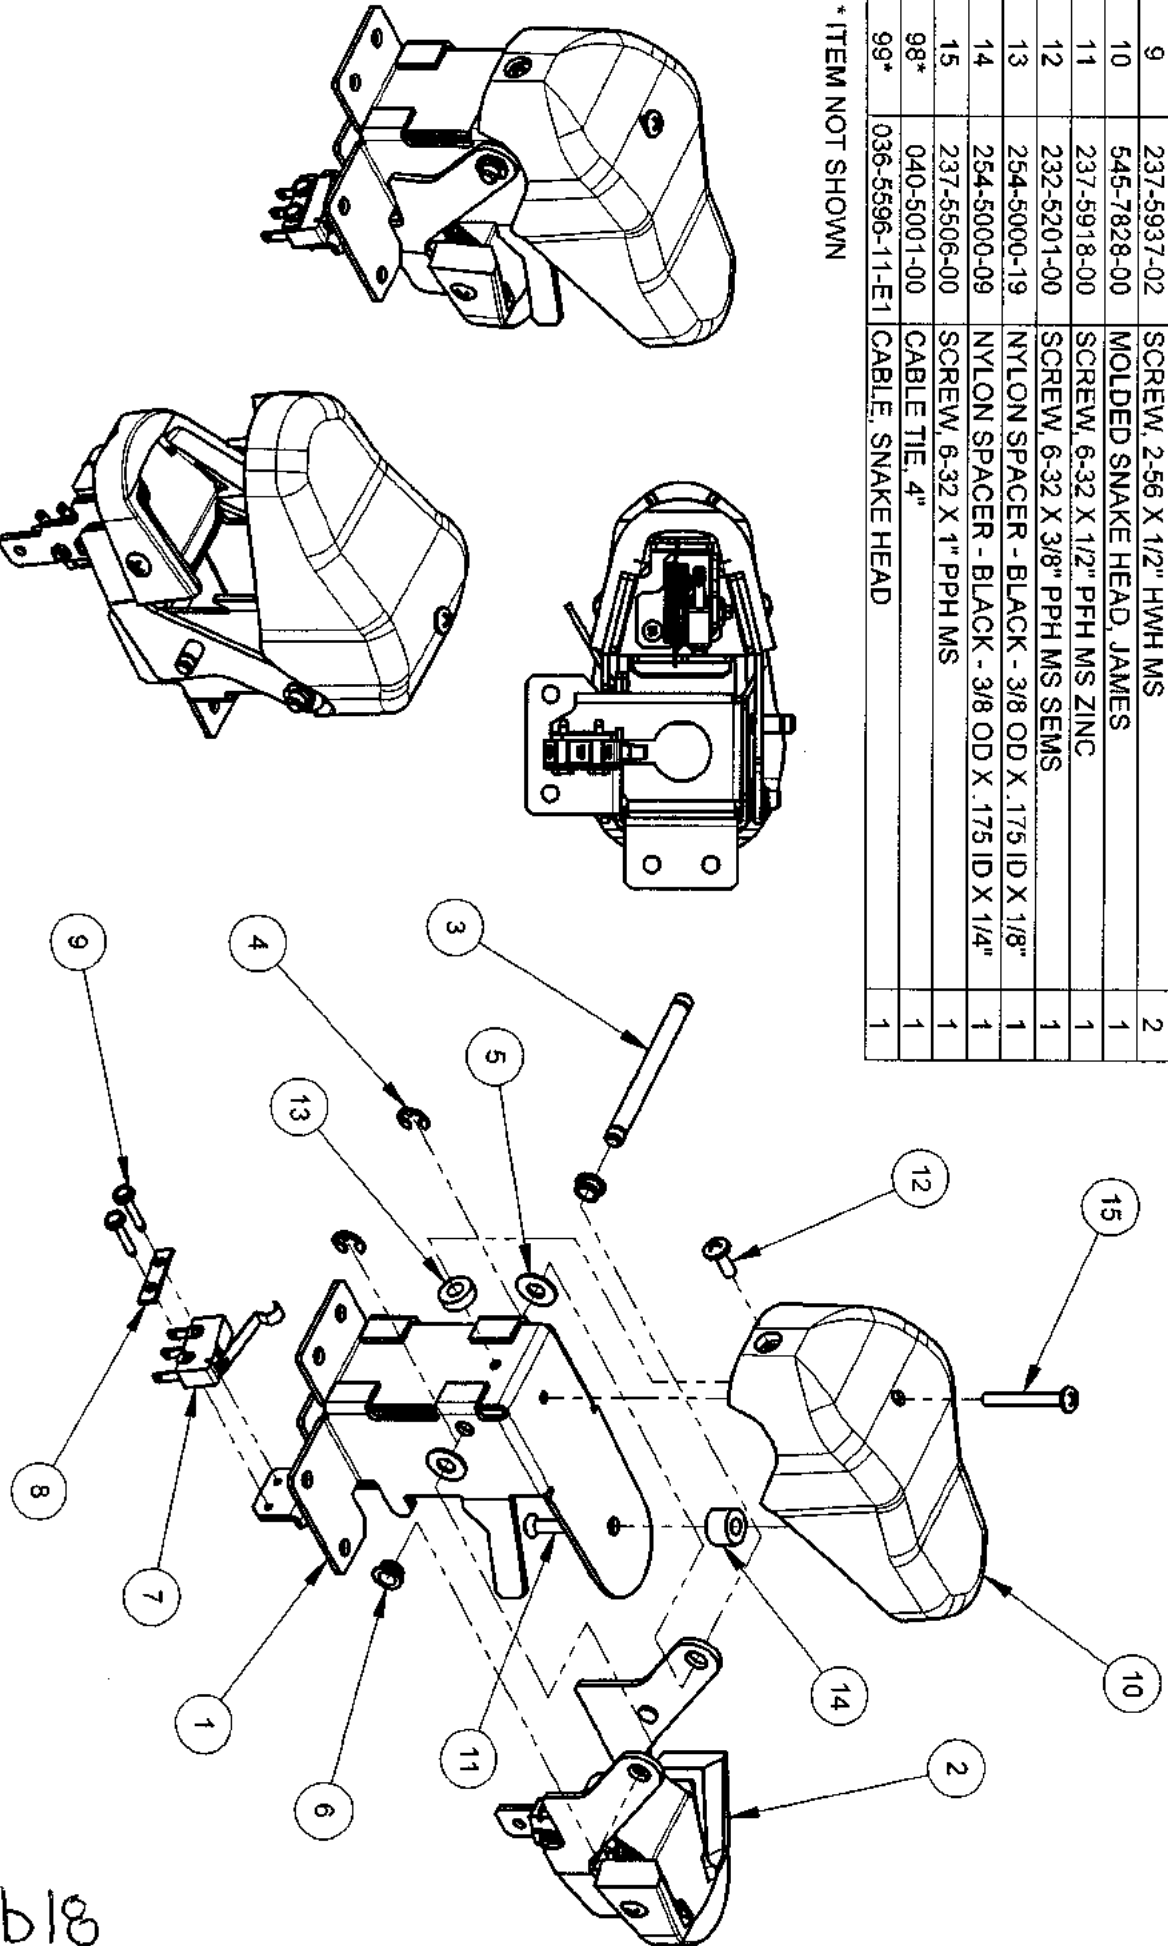

ASSEMBLY, SNAKE LOWER JAW METALLICA PREMIUM / LE 511-7484-00

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	515-9670-00	WELDMENT, SNAKE LOWER JAW, JAMES	1
2	535-0707-00	SLIDING JAW BRKT, SNAKE, JAMES	1
3	237-5816-00	SCREW, 4-40 X 1/2" PPH	3
4	242-5002-00	#4 FLAT WASHER - 5/16" O.D.	3
5	254-5062-02	SPACER, #4 ID, 3/16" OD X .125"	3
6	242-5615-00	WASHER, .203 ID X .438 OD X .03 THK, ACETAL	3
7	240-5303-00	4-40 NYLON LOCK NUT	3
8	180-5209-00	SUB MINIATURE SWITCH - SIM. ROLLER	1
9	535-6539-00	SWITCH BODY PROTECT PLATE	1
10	237-5937-02	SCREW, 2-56 X 1/2" HWH MS	2
11	240-5301-00	2-56 HEX NUT	2
12	265-5071-00	EXTENSION SPRING	1
13	545-7829-00	MOLDED LOWER JAW, SNAKE, JAMES	1
14	232-5201-00	SCREW, 6-32 X 3/8" PPH MS SEMS	2
15	545-6029-00	INSULATOR - FISH PAPER (SCOOP)	1
16	535-0717-00	LOWER JAW COVER, SNAKE, JAMES	1
17	535-0723-00	SWITCH BRKT, SNAKE LWR JAW, JAMES	1
18	545-7831-00	GLIDE PLATE, SNAKE JAW, JAMES	1
99*	040-5001-00	CABLE TIE 4"	1




* ITEM NOT SHOWN

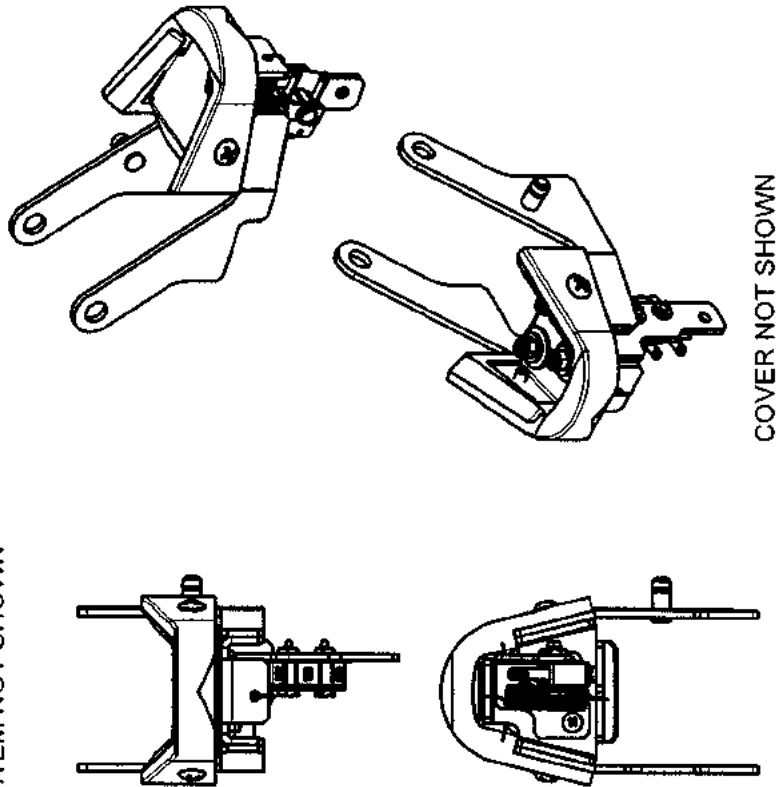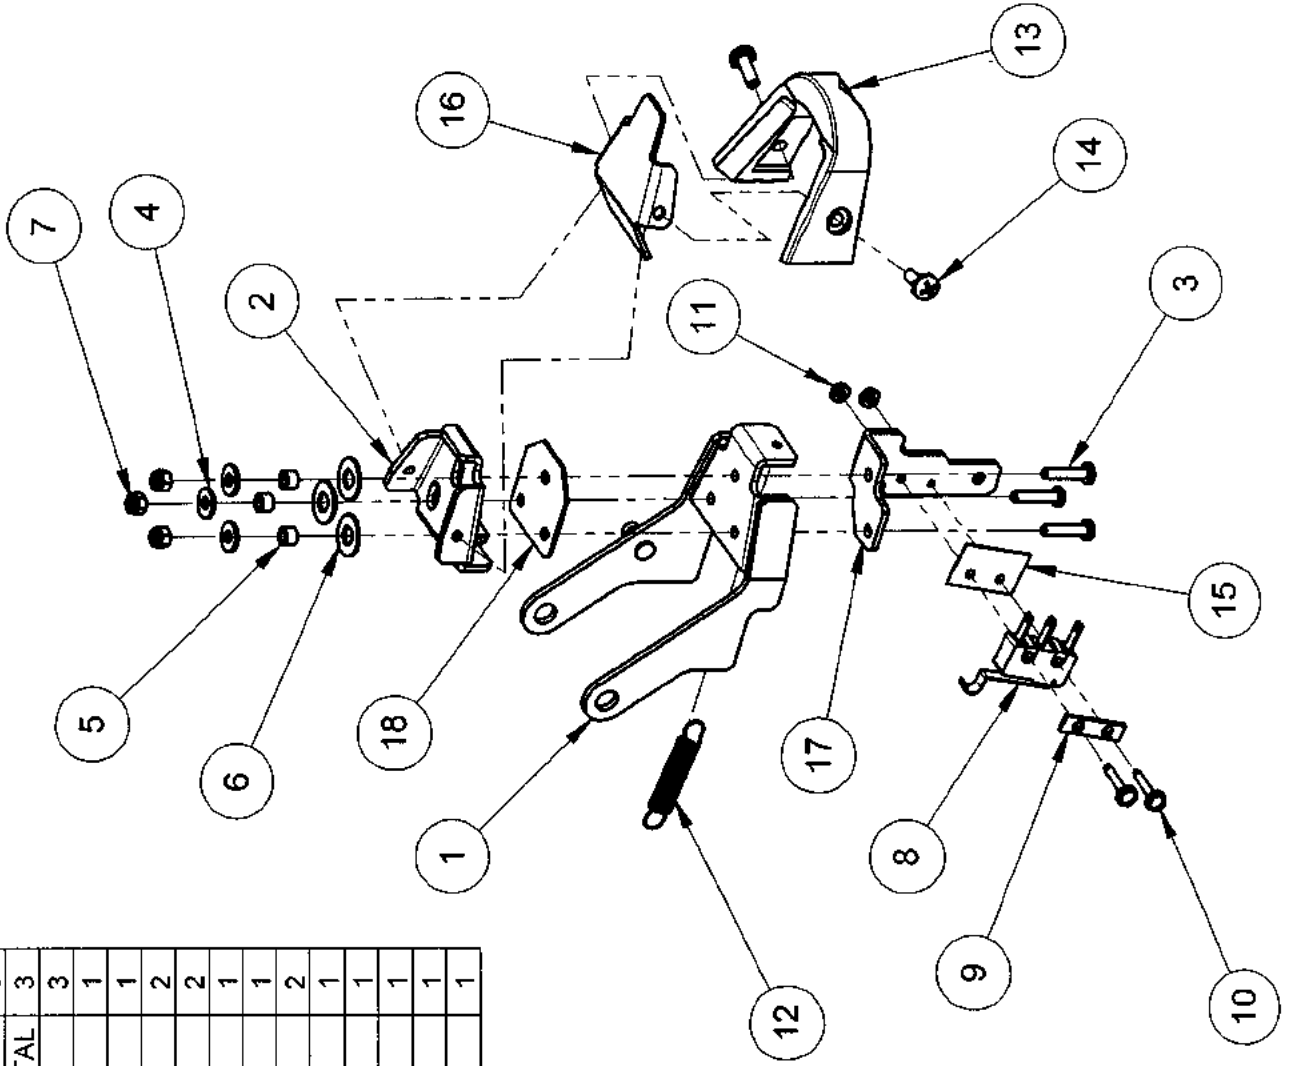

COVER NOT SHOWN

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	515-9671-00	COIL BRACKET ASSY, SNAKE, JAMES	1
2	090-5001-ND	COIL - 23-800, NO DIODE	1
3	515-7309-00	PLUNGER ASSEMBLY	1
4	545-5076-01	COIL SLEEVE	1
5	535-5203-03	COIL RETAINING BRACKET	3
6	232-5300-00	SCREW, 8-32 X 1/4" PPH SEMS	6
7	266-5020-00	COMPRESSION SPRING-CONICAL	1
8	545-5105-00	RUBBER BUMPER	1
9	090-5044-ND	COIL 26-1200 - NO DIODE	1
10	545-5411-00	COIL SLEEVE	1
11	266-5034-02	COMPRESSION SPRING	1
12	511-7485-00	PLUNGER ASSY, SNAKE JAW, JAMES	1
13	511-7486-00	LATCH COIL ASSY, SNAKE, JAMES	1
14	232-5200-00	SCREW, 6-32 X 1/4" PPH SEMS	2
15	180-5010-04	MICRO-SWITCH	1
16	535-6539-00	SWITCH BODY PROTECT PLATE	1
17	237-5937-02	SCREW, 2-56 X 1/2" HWH MS	2
18	545-6029-00	INSULATOR - FISH PAPER (SCOOP)	1
99*	036-5596-09-E1	CABLE, SNAKE COIL	1


* ITEM NOT SHOWN

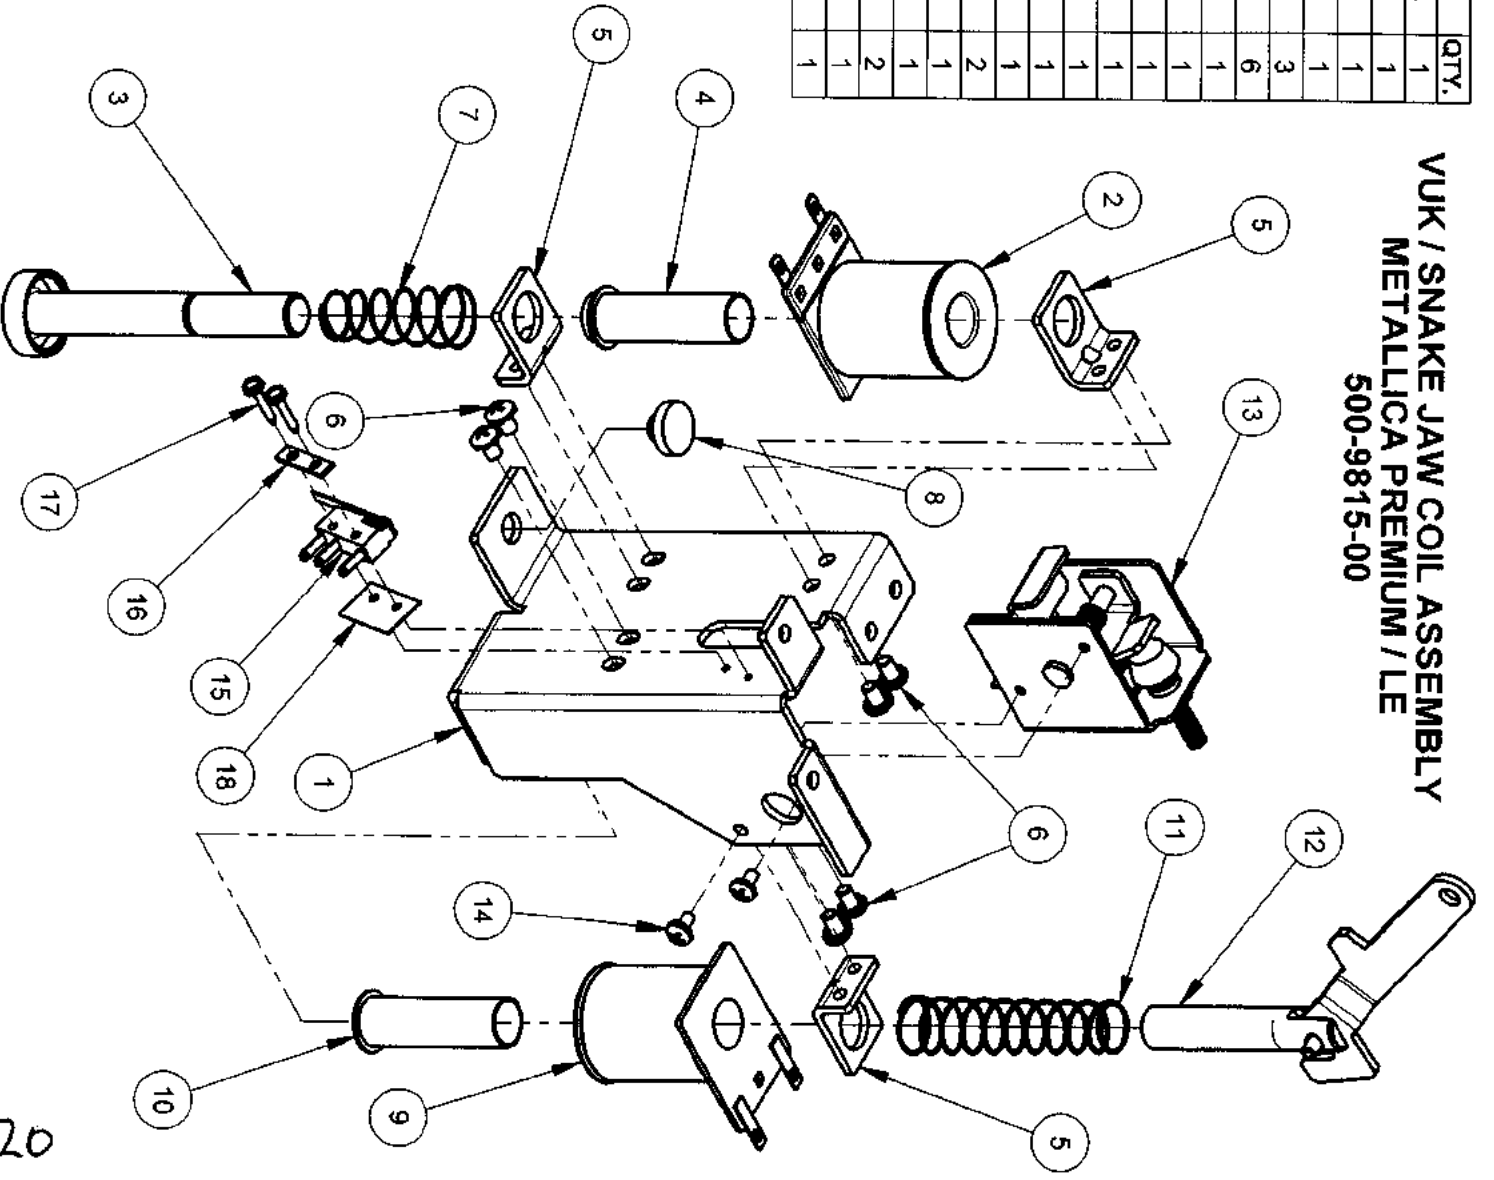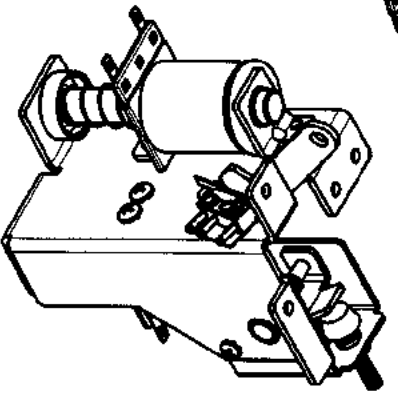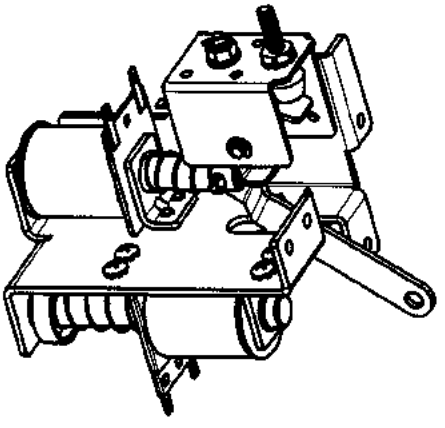


VUK / SNAKE JAW COIL ASSEMBLY
METALLICA PREMIUM / LE
500-9815-00

**PLUNGER ASSY, SNAKE JAW
METALLICA PREMIUM / LE
511-7485-00**


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	530-5726-01	RESET PLUNGER, JAW	1
2	535-0706-00	OFFSET PLUNGER LINK, SNAKE, JAMES	1
3	251-5010-00	ROLL PIN, 5/32 X 3/4	1

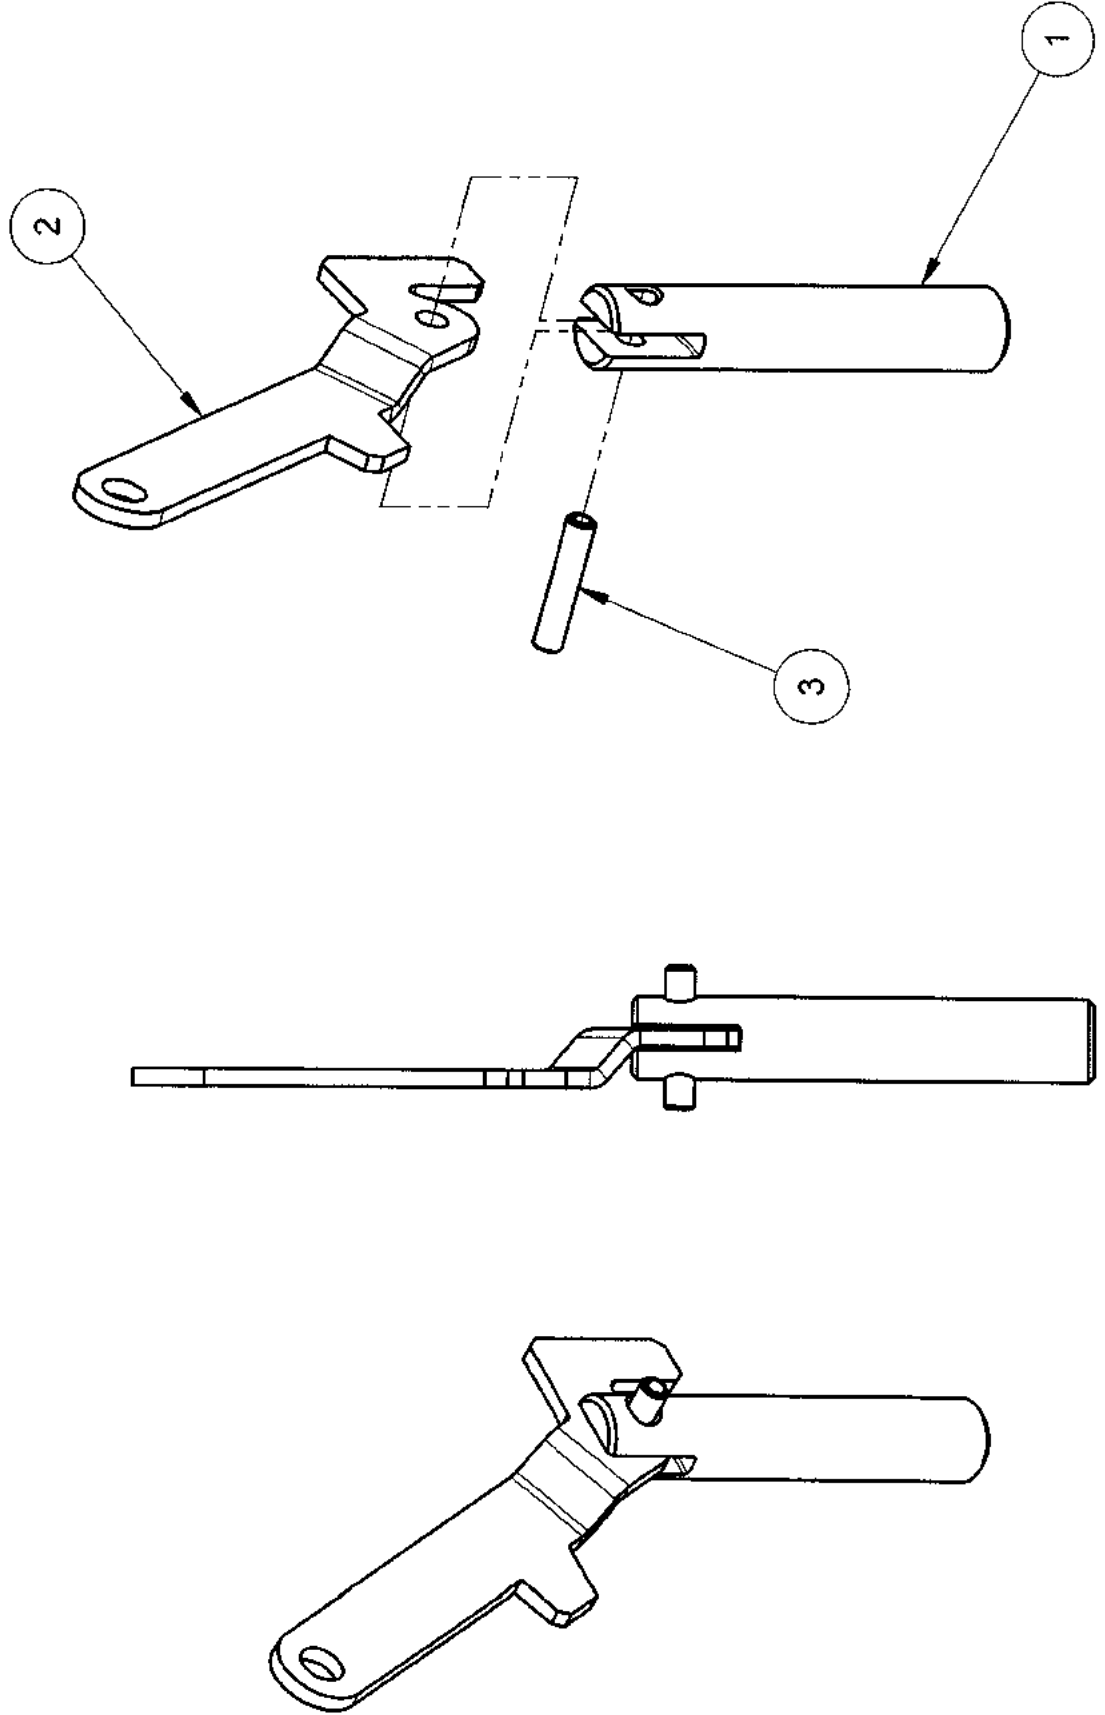


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	515-9686-00	WELDMENT, LATCH COIL, SNAKE, JAMES	1
2	090-5060-01-ND	MINI-COIL W/CORE, ND - 32-1250, YELLOW	1
3	530-5702-01	CLEVIS PIN W/ RING, 3/16"D X 1-1/2"	1
4	535-0709-00	LATCH BRACKET, SNAKE JAW, JAMES	1
5	267-5002-00	TORSION SPRING, REAR VUK DOOR	1
6	242-5005-00	#8 WASHER	1
7	240-5102-00	8-32 NYLON LOCK NUT	1
8	280-5014-00	ADJUSTABLE BUMPER/STOP	1
9	240-5208-00	10-32 KEPS NUT	1
10	242-5088-00	NYLON WASHER, .195" X .437" X .031"	2
11	237-5012-00	SCREW, 6-32 X 3/8" PPH 18-8 BLK OX	1
12	242-5001-00	#6 WASHER	1
13	240-5005-00	6-32 NYLON STOP NUT	1

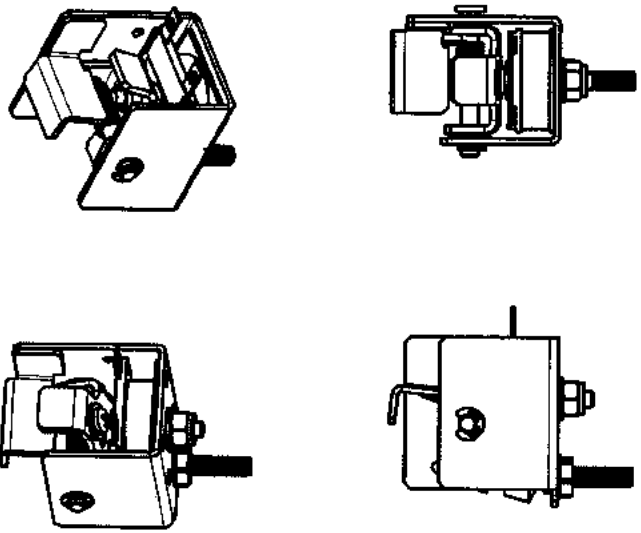

**LATCH COIL ASSY, SNAKE
METALLICA PREMIUM / LE
511-7486-00**

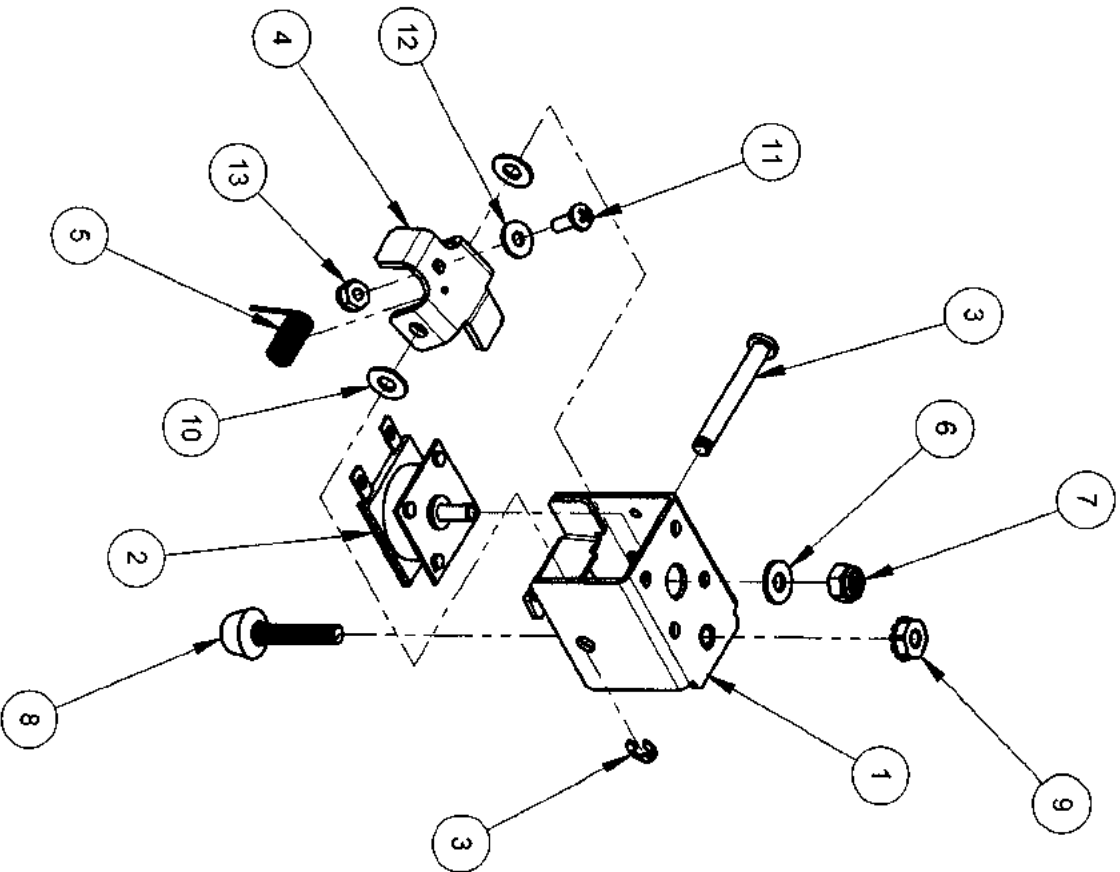


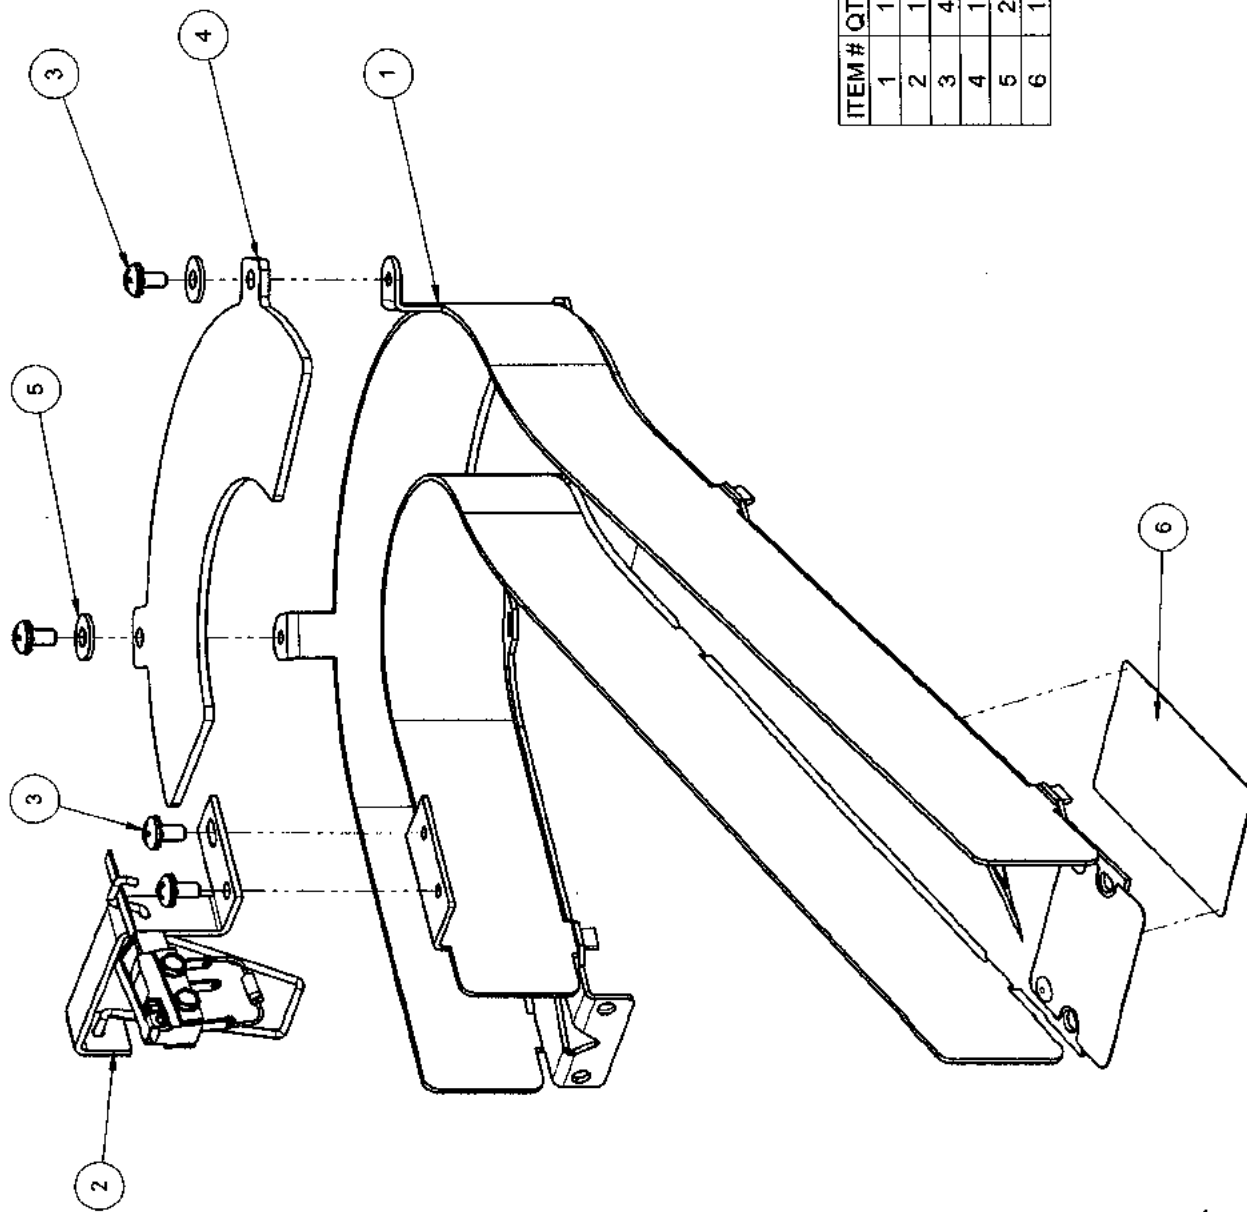

ITEM #	QTY	PART #	DESCRIPTION
1	1	510-7452-00	RIVETED ASSEMBLY - LEFT RAMP - JAMES
2	1	515-6556-02	GATE ASSEMBLY
3	4	232-5200-00	SCREW, 6-32 X 1/4" PPH SEMS
4	1	830-6187-25	BUTY # 25 - JAMES L E
5	2	242-5001-00	#6 WASHER
6	1	830-6920-00	RUBY RED ADHESIVE FILM

LEFT RAMP ASSEMBLY - JAMES L E


500-9807-01

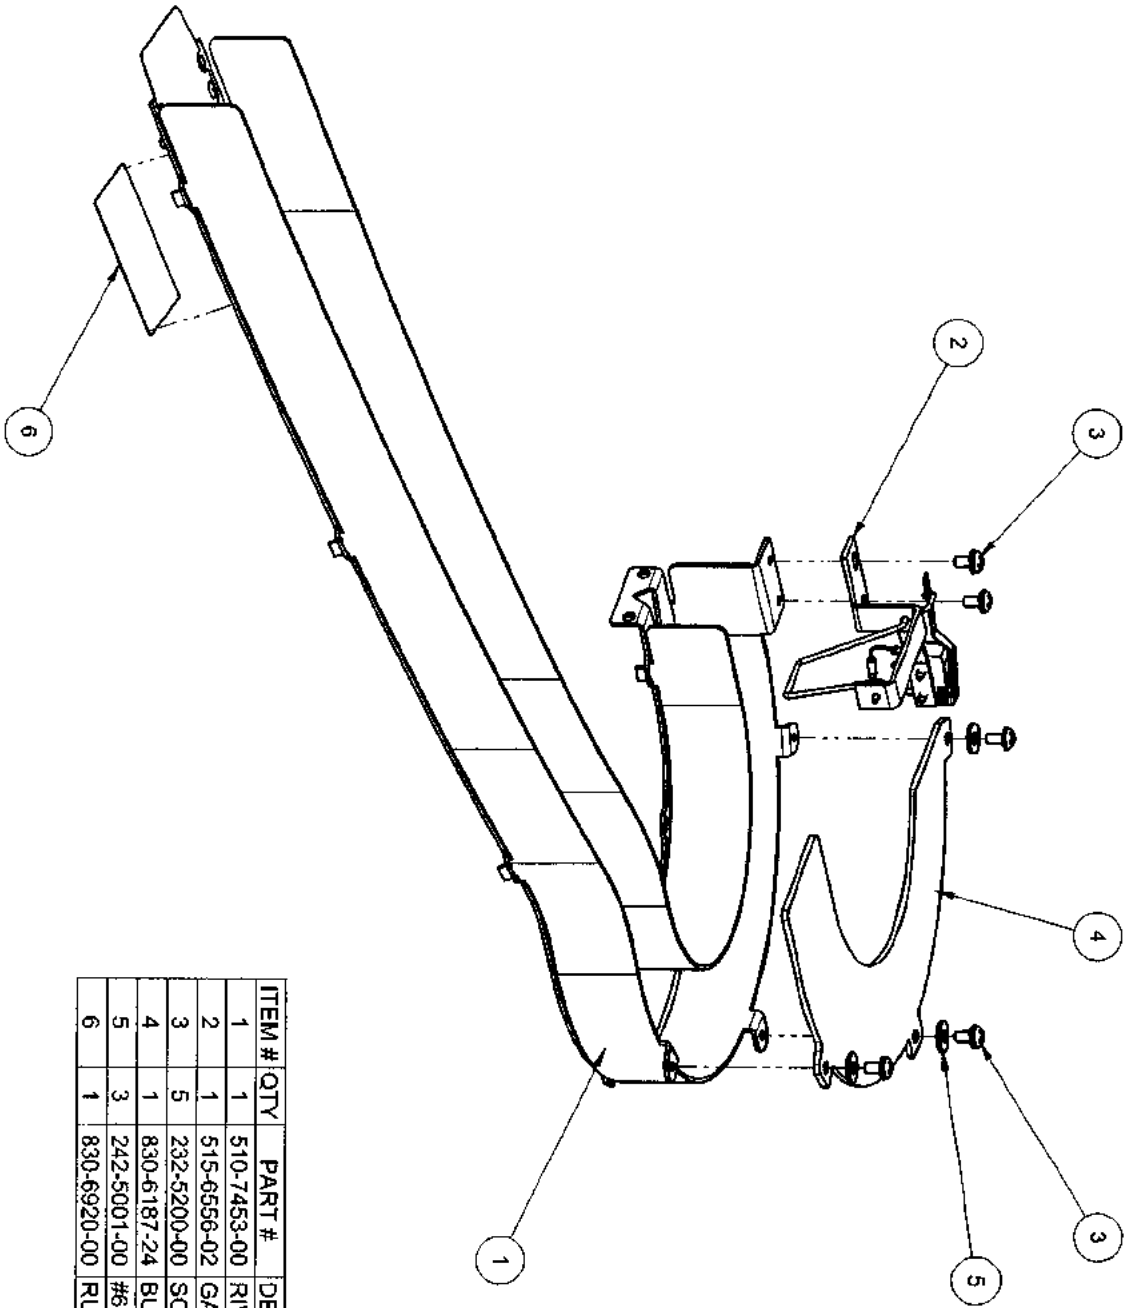

ITEM #	QTY	PART #	DESCRIPTION
1	1	510-7453-00	RIVETED ASSEMBLY - RIGHT RAMP - JAMES
2	1	515-6556-02	GATE ASSEMBLY
3	5	232-5200-00	SCREW, 6-32 X 1/4" PPH SEMS
4	1	830-6187-24	BUTY # 24 - JAMES L E
5	3	242-5001-00	#6 WASHER
6	1	830-6920-00	RUBY RED ADHESIVE FILM


RAMP ASSEMBLY - RIGHT - JAMES L E

500-9808-01

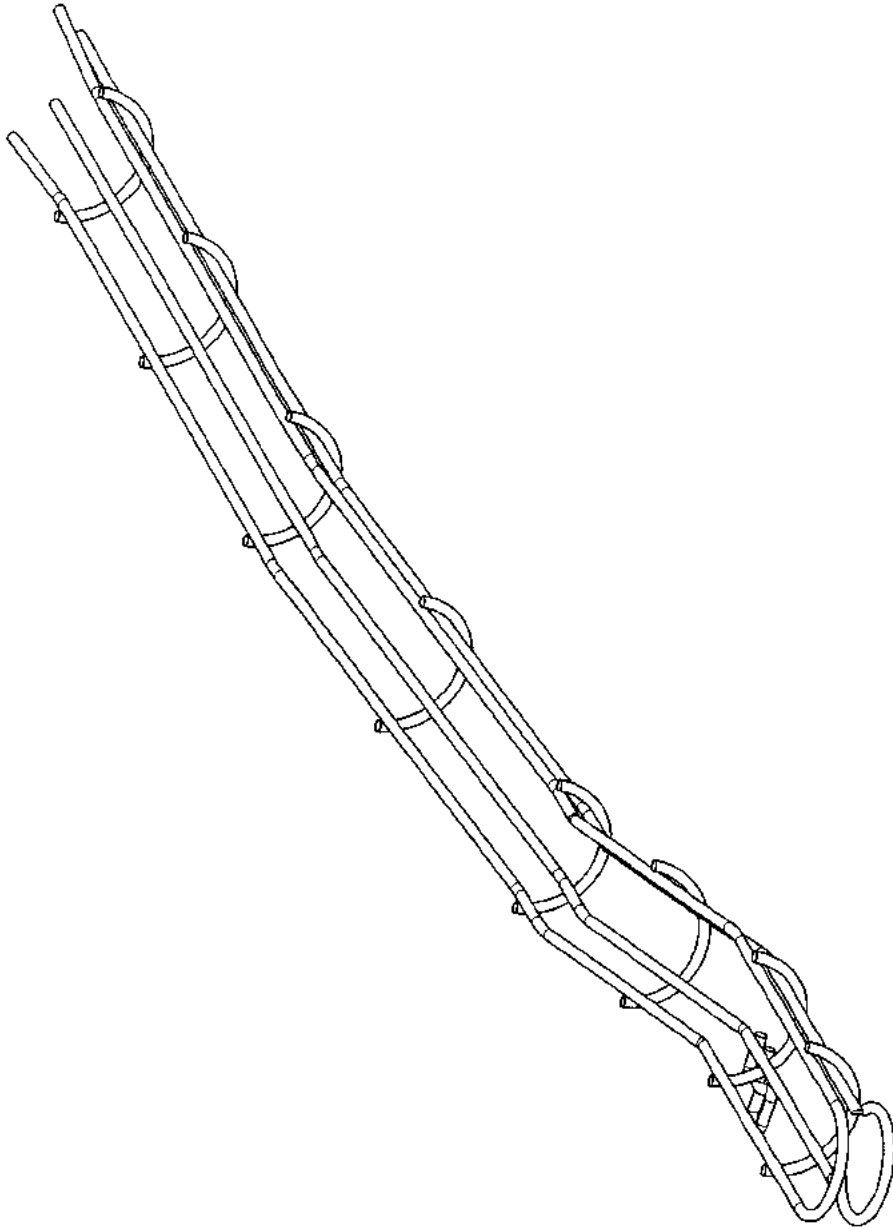

WIRE RAMP - LEFT - JAMES


515-8653-00

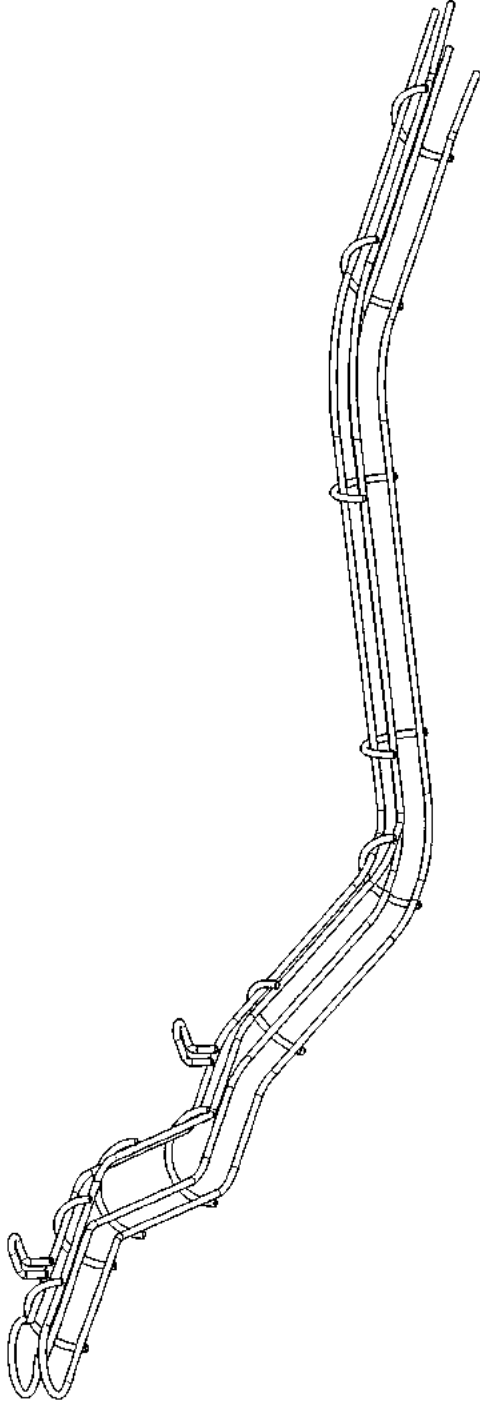

WIRE RAMP - RIGHT - JAMES
515-8552-00

b26


ITEM #	QTY	PART #	DESCRIPTION
1	1	515-9662-00	BRACKET - GRAVE MARKER
2	1	545-7352-00	GRAVE MARKER - MOLDED
3	3	237-5871-01	SCREW, 6-32 X 1/4" PFH 82-DEG U/C ZINC
4	1	518-5114-08	MULTI-LED FLASHER ASSEMBLY - WEDGE BASE - WHITE

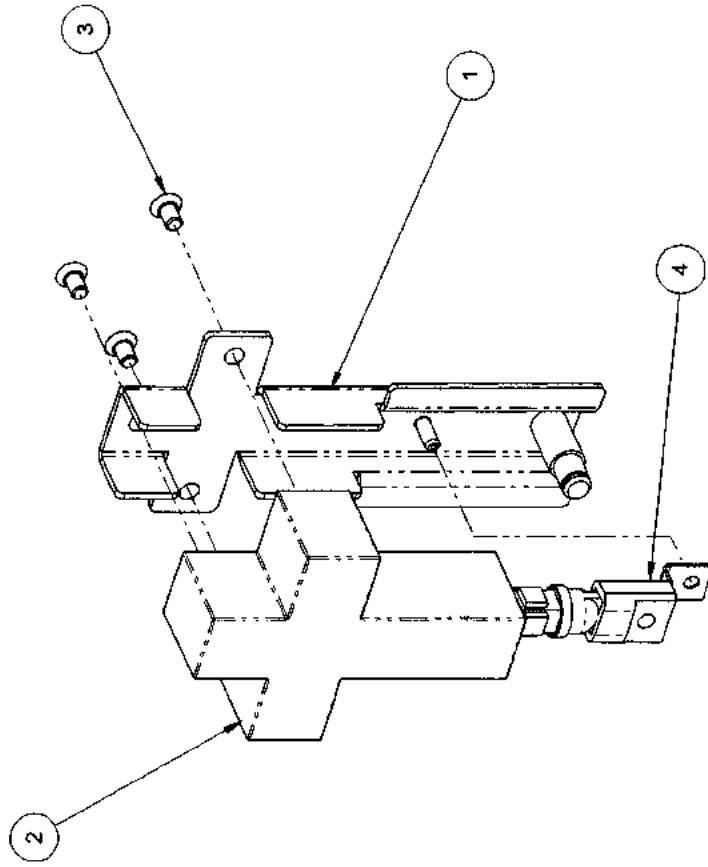

SLIDE ASSEMBLY - GRAVE MARKER

511-7472-00

b27

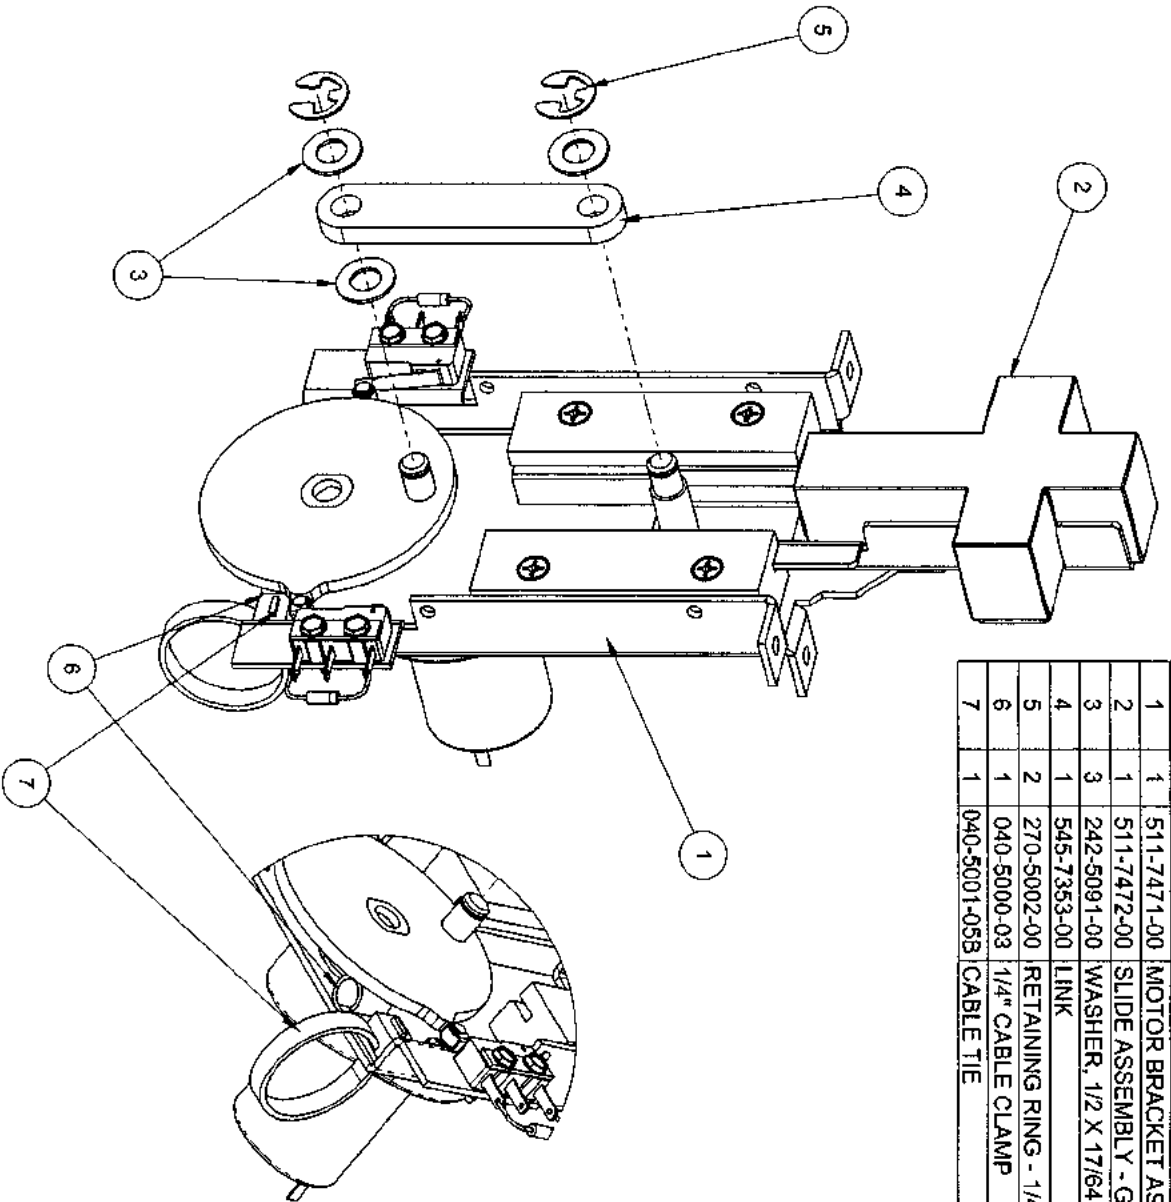

ITEM #	QTY	PART #	DESCRIPTION
1	1	511-7471-00	MOTOR BRACKET ASSEMBLY - GRAVE MARKER
2	1	511-7472-00	SLIDE ASSEMBLY - GRAVE MARKER
3	3	242-5091-00	WASHER - 1/2 X 17/64 X .03 - DT
4	1	545-7353-00	LINK
5	2	270-5002-00	RETAINING RING - 1/4"
6	1	040-5000-03	1/4" CABLE CLAMP
7	1	040-5001-05B	CABLE TIE


APPLY LIGHT AMOUNT OF LITHIUM GREASE TO BACK OF CROSS SLIDE ASSEMBLY.

SLIDING GRAVE MARKER ASSEMBLY

500-9810-00

1 of 1

b28

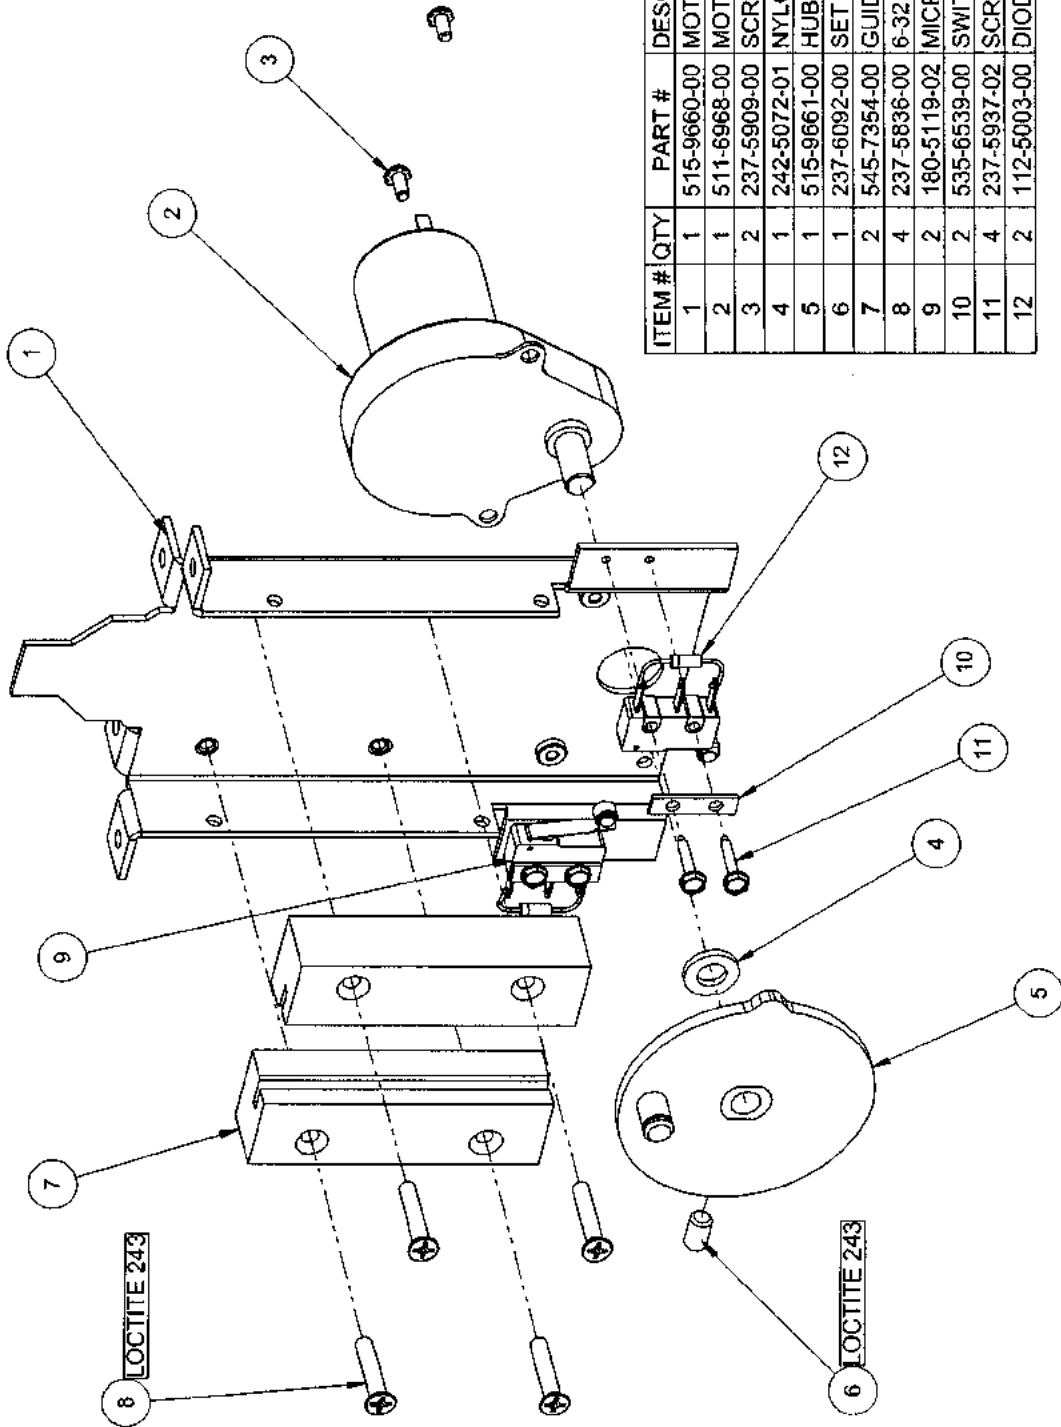


ITEM #	QTY	PART #	DESCRIPTION
1	1	515-9660-00	MOTOR BRACKET - GRAVE MARKER
2	1	511-6968-00	MOTOR & CONN ASSY, 24 VDC, 12 RPM
3	2	237-5909-00	SCREW, 4-40 X 1/4" PPH SEMS
4	1	242-5072-01	NYLON WASHER, .252 ID X .472 OD
5	1	515-9661-00	HUB WELDMENT
6	1	237-6092-00	SET SCREW, 10-32 X 5/16, SOCKET CUP PT
7	2	545-7354-00	GUIDE BLOCK
8	4	237-5836-00	6-32 X 3/4 PHILLIPS FLAT HEAD ZINC
9	2	180-5119-02	MICRO-SWITCH - LIGHT ACTUATION
10	2	535-6539-00	SWITCH BODY PROTECT PLATE
11	4	237-5937-02	SCREW, 2-56 X 1/2" HWH MS
12	2	112-5003-00	DIODE - 1N4004

MOTOR BRACKET ASSEMBLY - GRAVE MARKER

511-7471-00

ITEM #	QTY	PART #	DESCRIPTION
1	1	515-7822-00	NEWTON CUBE PLATE
2	1	535-0780-00	NEWTON CUBE
3	2	237-6023-00	8-32 x 1/2 PFH MS

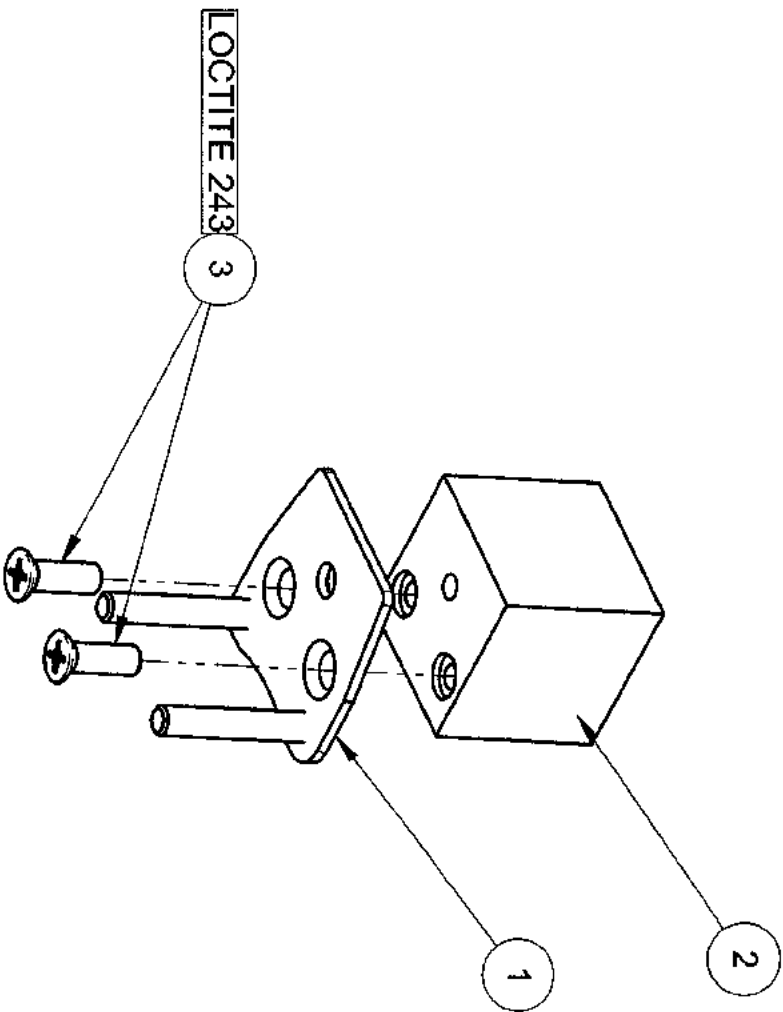

NEWTON CUBE ASSEMBLY

511-7501-00

b30

Backbox Wiring

- ▶ Coils Detailed Chart Table
- ▶ Backbox I/O Power Driver Board Detailed Wiring Diagram
- ▶ Backbox Board Layout Wiring Diagram
 - ▷ 128 X 32 Dot Matrix Display PCB (USA)..... 520-5052015
 - ▷ 128 X 32 Dot Matrix CES-LED // EURO ONLY RoHS //..... it - 00-00

Playfield Wiring

- ▶ General Illumination Circuit Detailed Wiring Diagram
- ▶ Playfield Switch Wiring Diagram
- ▶ Playfield Lamp Wiring Diagram
- ▶ Playfield Terminal Strips, Fuses & Misc. Wiring Descriptions & Locations
- ▶ #-Flipper Circuit Wiring Diagram

Cabinet and Coin Door Wiring

- ▶ Transformer Power Wiring Diagram
- ▶ Cabinet Wiring Diagram
- ▶ Coin Door Wiring Diagram
- ▶ Cabinet Universal Voltage Jumper Plugs (for use with Universal AC Cable, 036-5530-00 ONLY)

COILS DETAILED CHART TABLE


High Current Coils Group 1			Drive Transistor	Driver Output PCB	Power Line Color	Power Line Connection	Power Voltage	Drive Transistor Control Line Color	D.T. Control Line Connect	Coil GA-Turn or Bulb Type
#1	TROUGH UP-KICKER	Q1	I/O Power Driver	▲ ▼	YEL-VIO	J10-P9/10	50VDC	BRN-BLK	J8-P1	28-1200 090-5044-ND
#2	AUTO LAUNCH	Q2			YEL-VIO	J10-P9/10	50VDC	BRN-RED	J8-P3	24-184U 090-5038-ND
#3	GRAVE MARKER MAGNET	Q3			VIO-YEL	J10-P8	50VDC	BRN-ORG	J8-P4	22-850 511-5065-ND
#4	ELECTRIC CHAIR MAGNET	Q4			VIO-YEL	J10-P8	50VDC	BRN-YEL	J8-P5	22-860 511-5065-ND
#5	SNAKE EJECT	Q5			YEL-VIO	J10-P9/10	50VDC	BRN-GRN	J8-P6	23-800 090-5001-ND
#6	RIGHT EJECT	Q6			YEL-VIO	J10-P9/10	50VDC	BRN-BLU	J8-P7	23-800 090-5001-ND
#7		Q7						BRN-VIO	J8-P8	
#8	SHAKER MOTOR (OPTIONAL)	Q8			RED-WHT	J17-P7	16VAC	BRN-GRY	J8-P9	502-5027-00
High Current Coils Group 2			Drive Transistor	Driver Output PCB	Power Line Color	Power Line Connection	Power Voltage	Drive Transistor Control Line Color	D.T. Control Line Connect	Coil GA-Turn or Bulb Type
#9	LEFT POP BUMPER	Q9	I/O Power Driver	▲ ▼	YEL-VIO	J10-P9/10	50VDC	BLU-BRN	J8-P1	28-1200 090-5044-ND
#10	RIGHT POP BUMPER	Q10			YEL-VIO	J10-P9/10	50VDC	BLU-RED	J8-P2	28-1200 090-5044-ND
#11	BOTTOM POP BUMPER	Q11			YEL-VIO	J10-P9/10	50VDC	BLU-ORG	J8-P4	28-1200 090-5044-ND
#12	SNAKE JAW LATCH	Q12			YEL-VIO	J10-P9/10	50VDC	BLU-YEL	J8-P5	32-1250 090-5080-01 min
#13	LEFT SLINGSHOT	Q13			YEL-VIO	J10-P9/10	50VDC	BLU-GRN	J8-P6	28-1200 090-5044-ND
#14	RIGHT SLINGSHOT	Q14			YEL-VIO	J10-P9/10	50VDC	BLU-BLU	J8-P7	28-1200 090-5044-ND
#15	LEFT FLIPPER (50V RED/YEL)	Q15			GRY-YEL-3A Fuse-RED-YEL	J10-P6/7	50VDC	ORG-GRY	J8-P8	23-900 090-5020-30 min
#16	RIGHT FLIPPER (50V RED/YEL)	Q16			BLU-YEL-3A Fuse-RED-YEL	J10-P6/7	50VDC	ORG-VIO	J8-P9	23-900 090-5020-30 min
Low Current Coils Group 1			Drive Transistor	Driver Output PCB	Power Line Color	Power Line Connection	Power Voltage	Drive Transistor Control Line Color	D.T. Control Line Connect	Coil GA-Turn or Bulb Type
#17		Q17	I/O Power Driver	▲ ▼				VIO-BRN	J7-P2	
#18	ELECTRIC CHAIR (STEP-UP DRV BD)	Q18			YEL-VIO	J10-P9/10	50VDC	VIO-RED	J7-P3	32-1800 090-5031-08 min
#19	FLASH: GRAVE MARKER	Q19			ORG	J6-P10	20VDC	VIO-ORG	J7-P4	LED 112-5041-08
#20	GRAVE MARKER MOTOR	Q20			BRN	J7-P1	20VDC	VIO-YEL	J7-P6	041-5111-00
#21	FLASH: BACK PANEL (LEFT)	Q21			ORG	J6-P10	20VDC	VIO-GRN	J7-P7	#89 BULB 185-5000-89
#22	FLASH: BACK PANEL (RIGHT)	Q22			ORG	J6-P10	20VDC	VIO-BLU	J7-P8	#89 BULB 185-5000-89
#23	FLASH: LEFT RAMP	Q23			ORG	J6-P10	20VDC	VIO-BLK	J7-P9	#89 BULB 185-5000-89 min
#24	OPTIONAL (e.g. COIN METER)	Q24			RED	J16-P4-8	5VDC	VIO-GRY	J7-P10	COIN METER
Low Current Coils Group 2			Drive Transistor	Driver Output PCB	Power Line Color	Power Line Connection	Power Voltage	Drive Transistor Control Line Color	D.T. Control Line Connect	Coil GA-Turn or Bulb Type
#25	FLASH: POP BUMPERS	Q25	I/O Power Driver	▲ ▼	ORG	J6-P10	20VDC	BLK-BRN	J6-P1	#89 BULB 185-5000-89
#26	FLASH: GRAVE MARKER (X2)	Q26			ORG	J6-P10	20VDC	BLK-RED	J6-P2	#89 BULB 185-5000-89
#27	FLASH: ELECTRIC CHAIR (X2)	Q27			ORG	J6-P10	20VDC	BLK-ORG	J6-P3	#89 BULB 185-5000-89
#28	FLASH: ELECTRIC CHAIR SPOT (X2)	Q28			ORG	J6-P10	20VDC	BLK-YEL	J6-P4	LED 112-5041-08
#29	FLASH: RIGHT RAMP	Q29			ORG	J6-P10	20VDC	BLK-GRN	J6-P5	#89 BULB 185-5000-89
#30	FLASH: SNAKE	Q30			ORG	J6-P10	20VDC	BLK-BLU	J6-P6	LED 112-5041-08
#31	FLASH: COFFIN INSERT (X2)	Q31			ORG	J6-P10	20VDC	BLK-VIO	J6-P7	#89 BULB 185-5000-89 min
#32	FLASH: ELECTRIC CHAIR INSERT	Q32			ORG	J6-P10	20VDC	BLK-GRY	J6-P8	#89 BULB 185-5000-89

4/2

Backbox I/O Power Driver Board (Coils Q1-Q32) Detailed Wiring Diagram Partial View (520-5249-00)

ALL FUSES RATED 250V SLO-BLO
I/O FUSE CHART INFO IN BACKBOX & PAGE DR. 1

For complete and detailed schematics of the Connectors, Coils, Flash Lamps, Bridges and Fuses noted below, see the I/O Power Driver PCB (Sheets 1 & 2 of 4) in Section 5, Chapter 4, Printed Circuit Boards (PCBs).

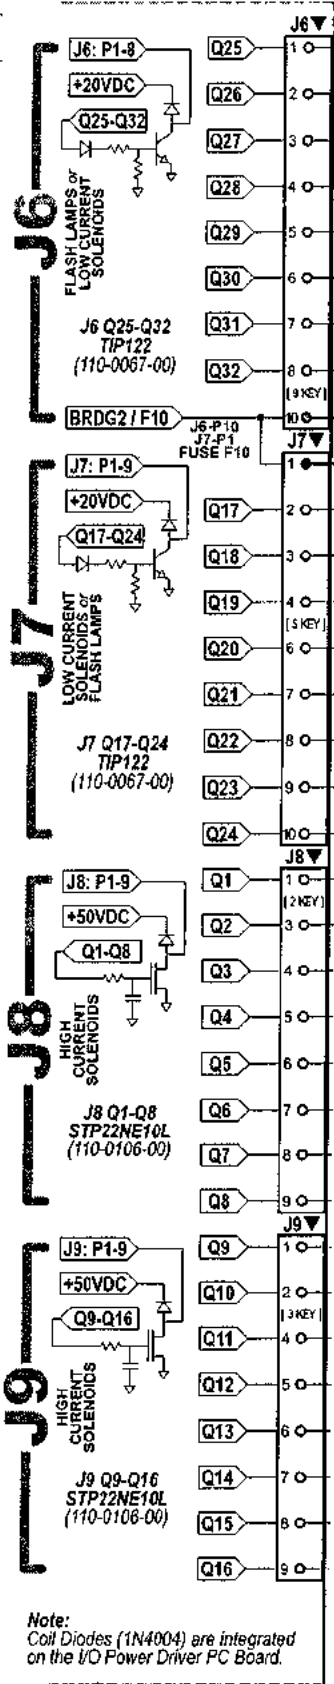

Note:
Coil Diodes (1N4004) are integrated on the I/O Power Driver PC Board.

#33 - #35 Note: If this game is equipped with an optional Ticket Dispenser & Meter, see the end of Sec. 5, Chapter 4 for wiring information. Ensure Std. Adj. 56, Ticket Dispenser = YES.



Backbox
Wiring

Backbox Wiring


Y3

METALLICA PREMIUM & L.E. GAMES

Wiring for the 6-Transistor driver board, 520-5326-01

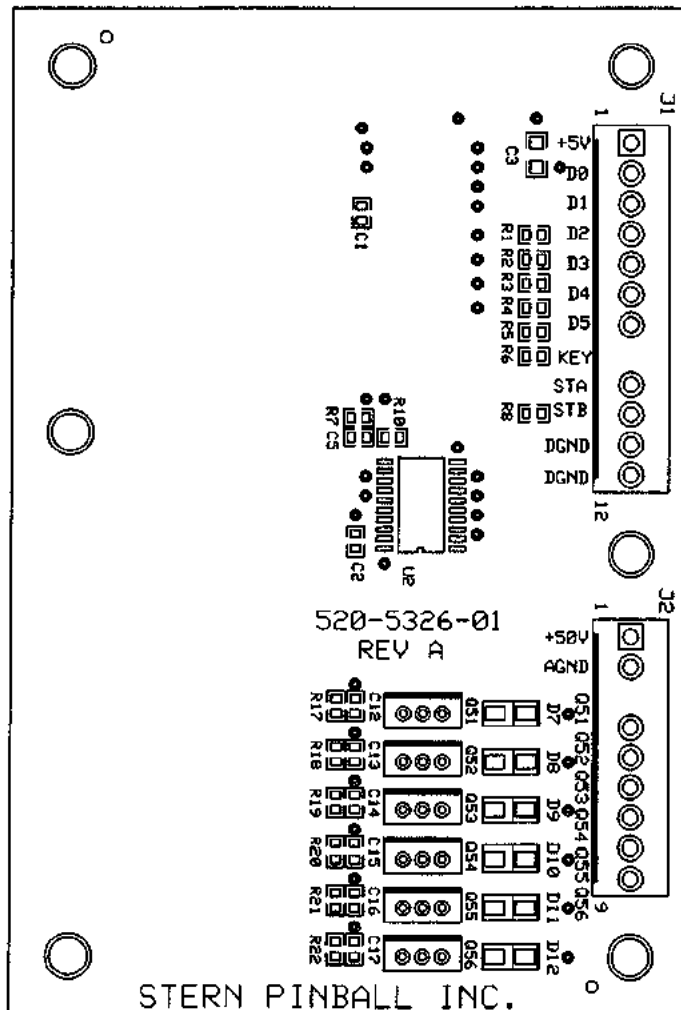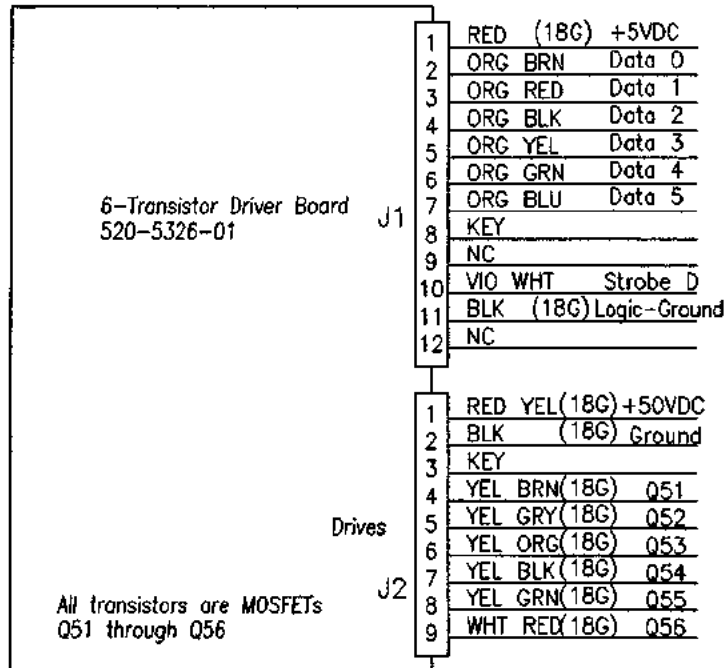

Y5


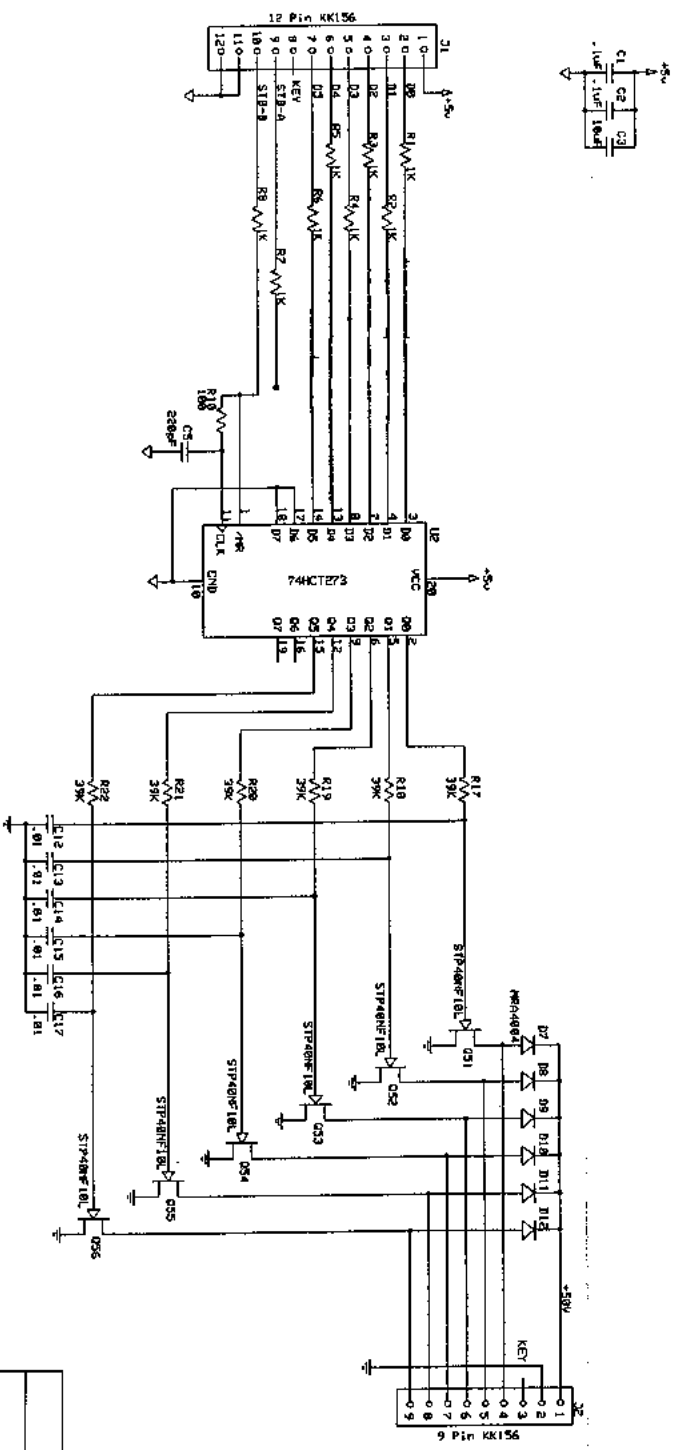



STERN PINBALL INC.
Auxiliary Driver
 Rev. A
 12/20/2012
 Page 1 of 1

Y6


METALLICA PREMIUM & L.E. GAMES

Wiring for the Magnet Processor board, 520-6801-00

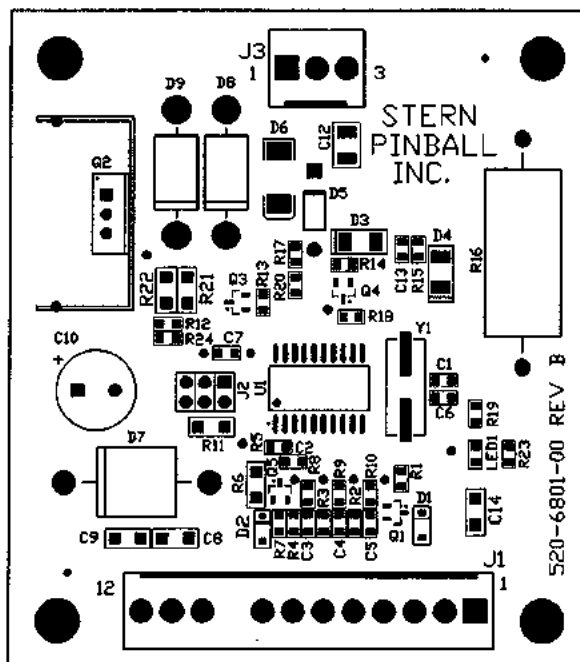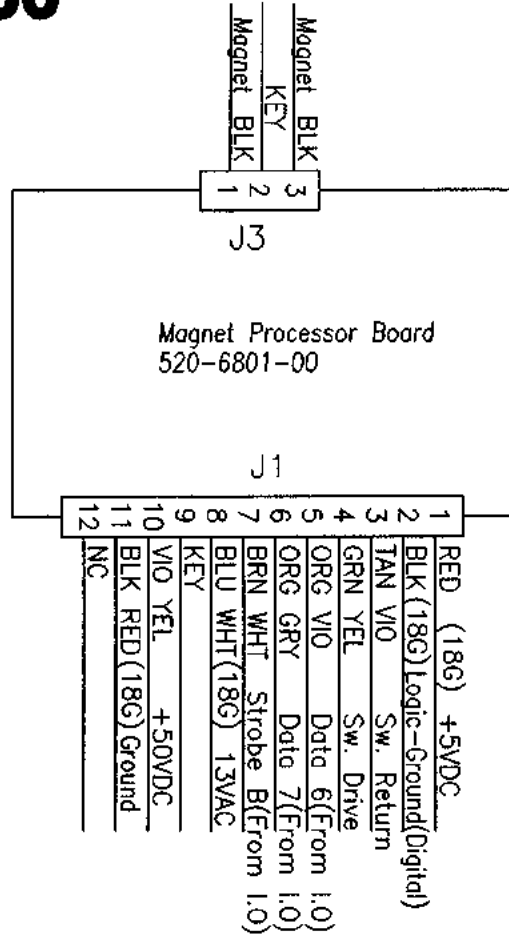


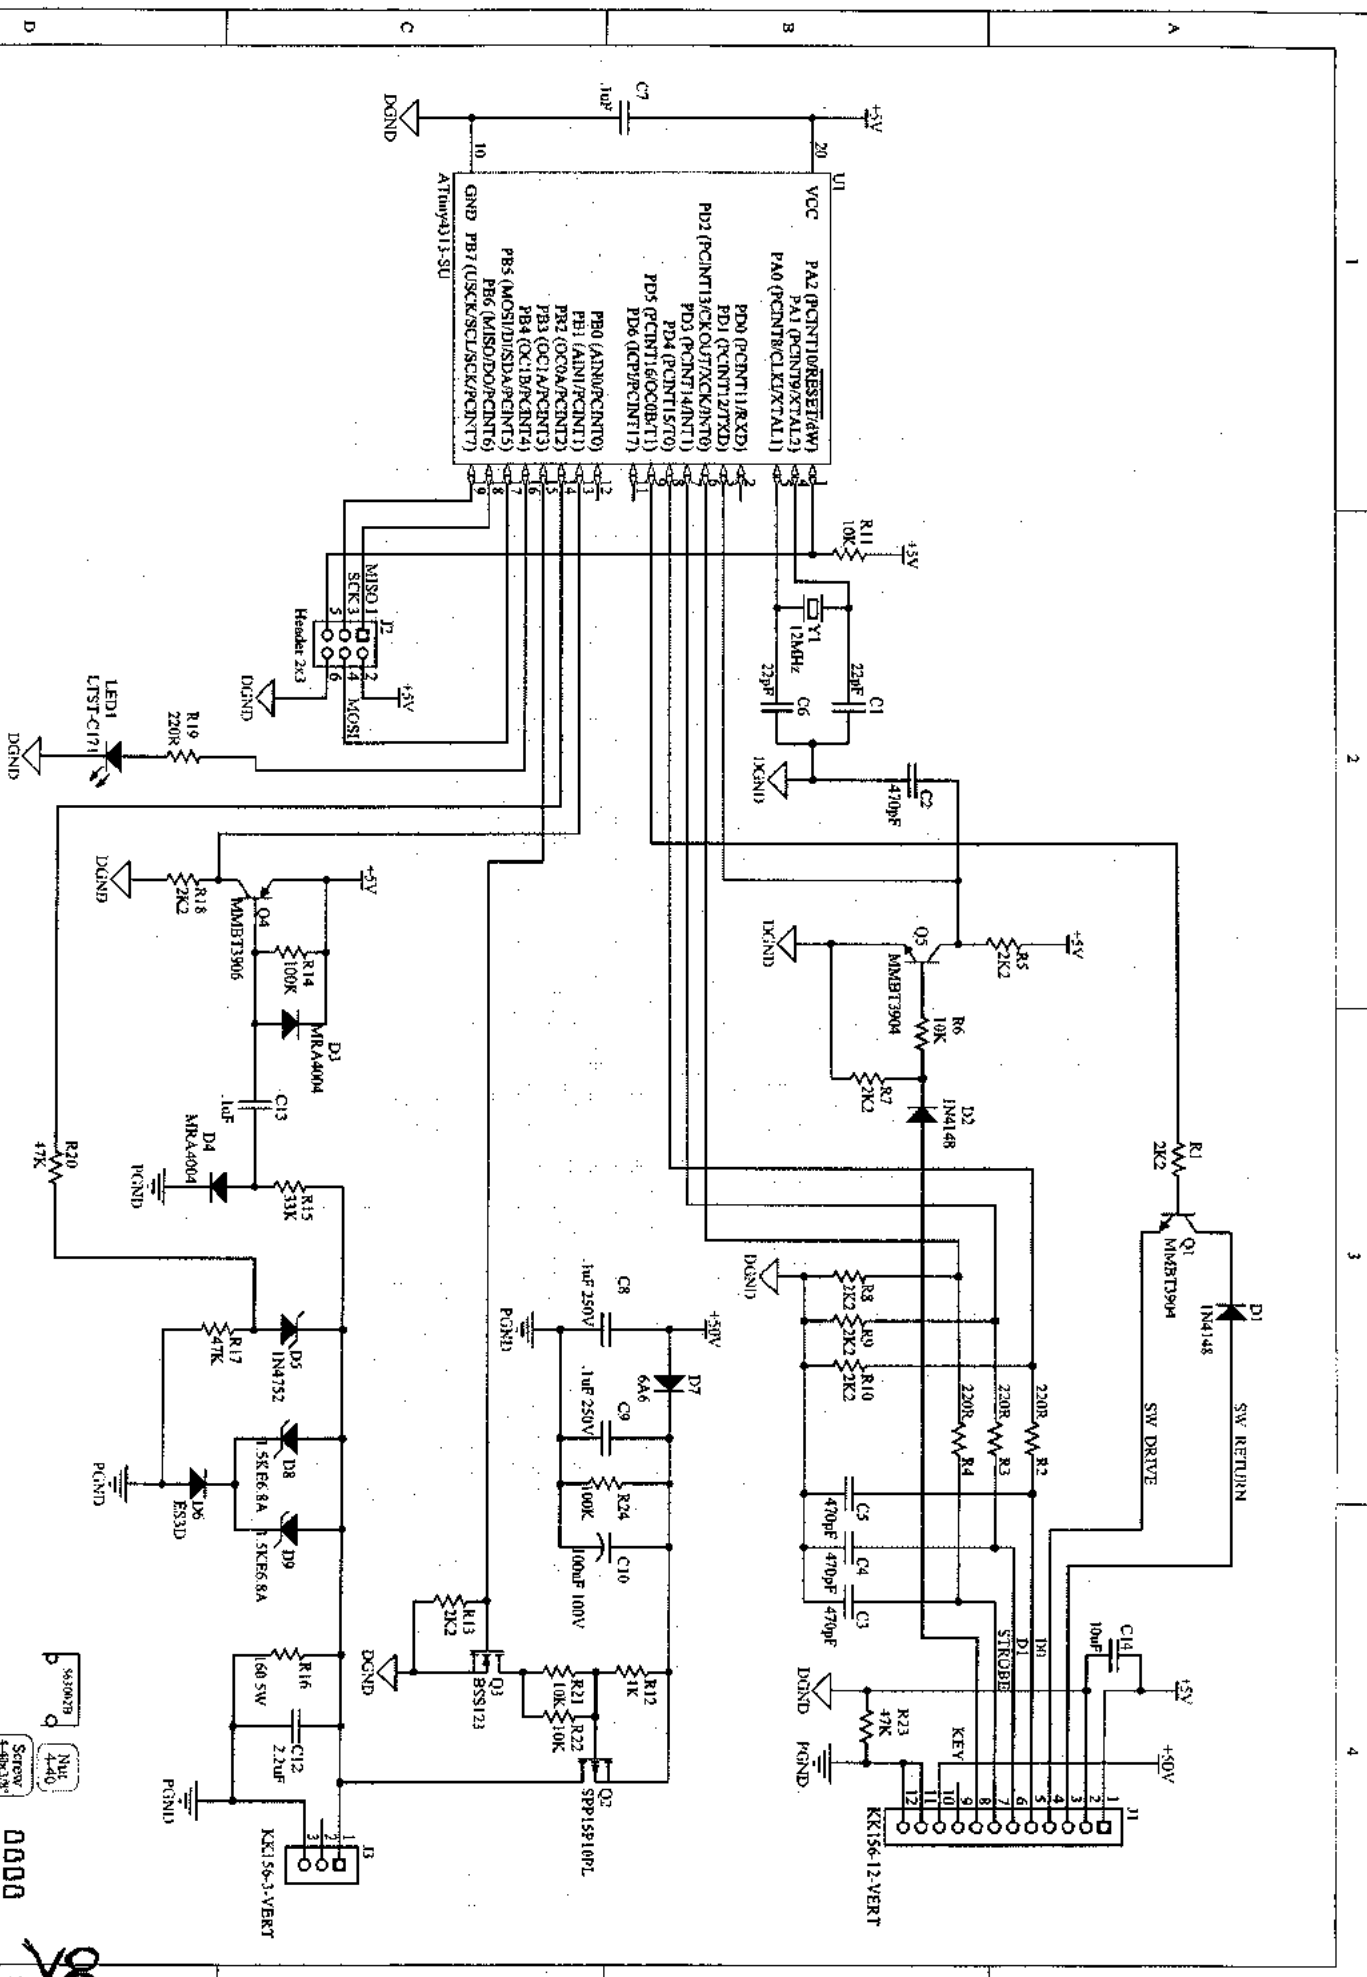

The Stern Pinball - Magnet Processor
 Site: Letter Number: 520-6801-00 Revision: B
 Date: 4/15/2013 Sheet 1 of 1
 Creative Electronics & Software Inc.
 650 Sardinia Road
 South Elgin, IL 60177
 847-695-0023



0000

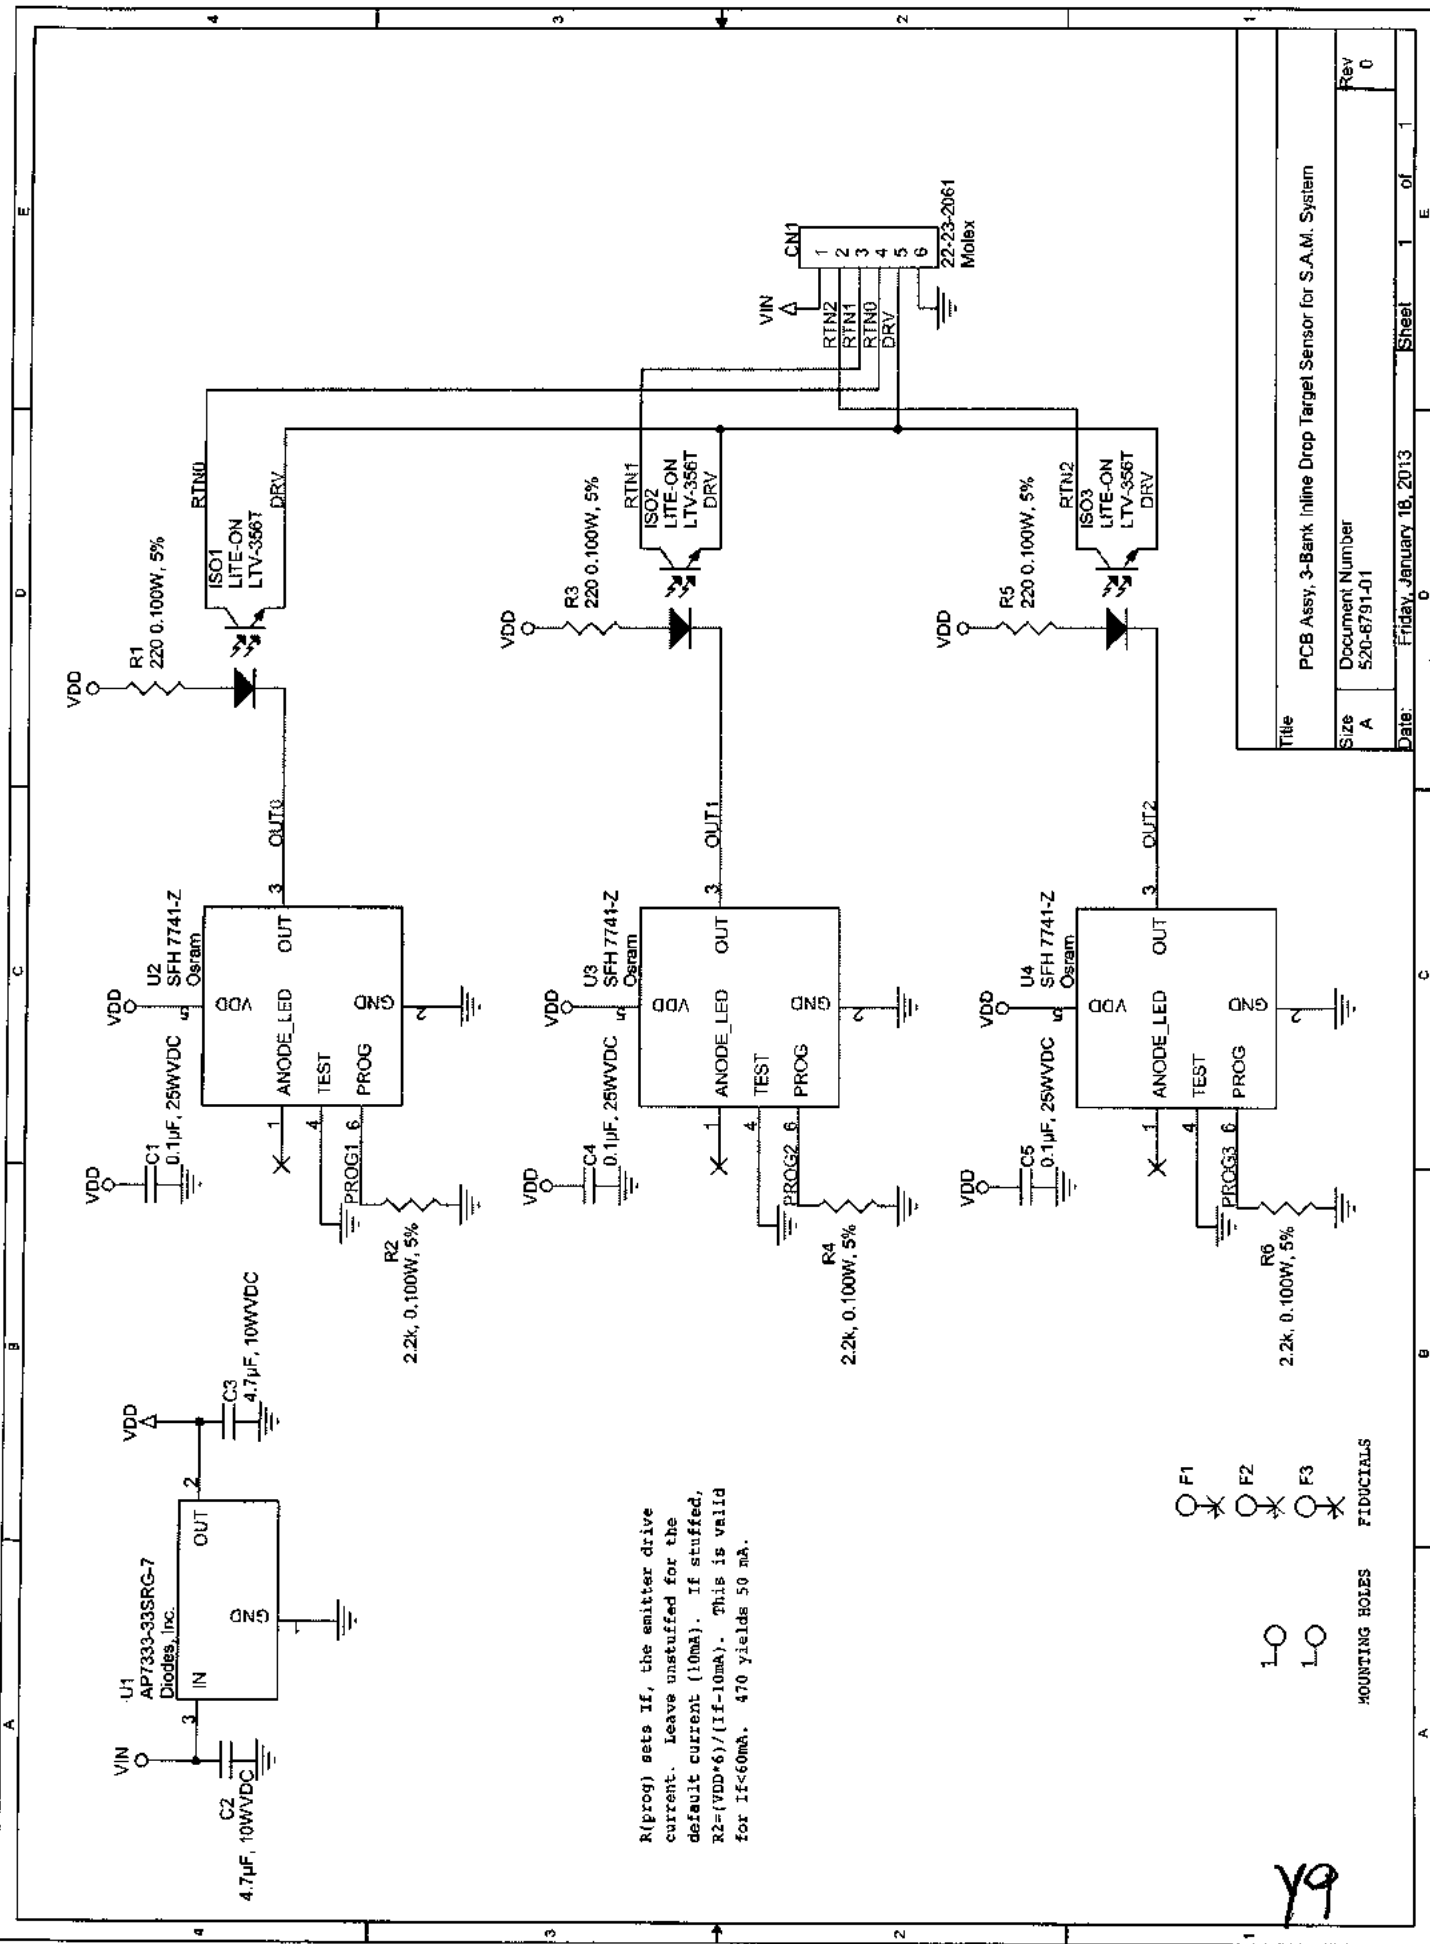

R(prog) sets If, the emitter drive current. Leave unstuffed for the default current (10mA). If stuffed, $R2 = (VDD \cdot 6) / (If - 10mA)$. This is valid for $If < 60mA$. 470 yields 50 mA.


- F1
- F2
- F3
- FIDUCIALS
- MOUNTING HOLES

Y9

Title		PCB Assy, 3-Bank In-line Drop Target Sensor for S.A.M. System	
Size	A	Document Number	520-8791-01
Date:	Friday, January 18, 2013	Sheet	1 of 1
Rev	0		

METALLICA L.E. BOTTOM OF PLAYFIELD LED BOARD DATA CABLES

BOTTOM VIEW

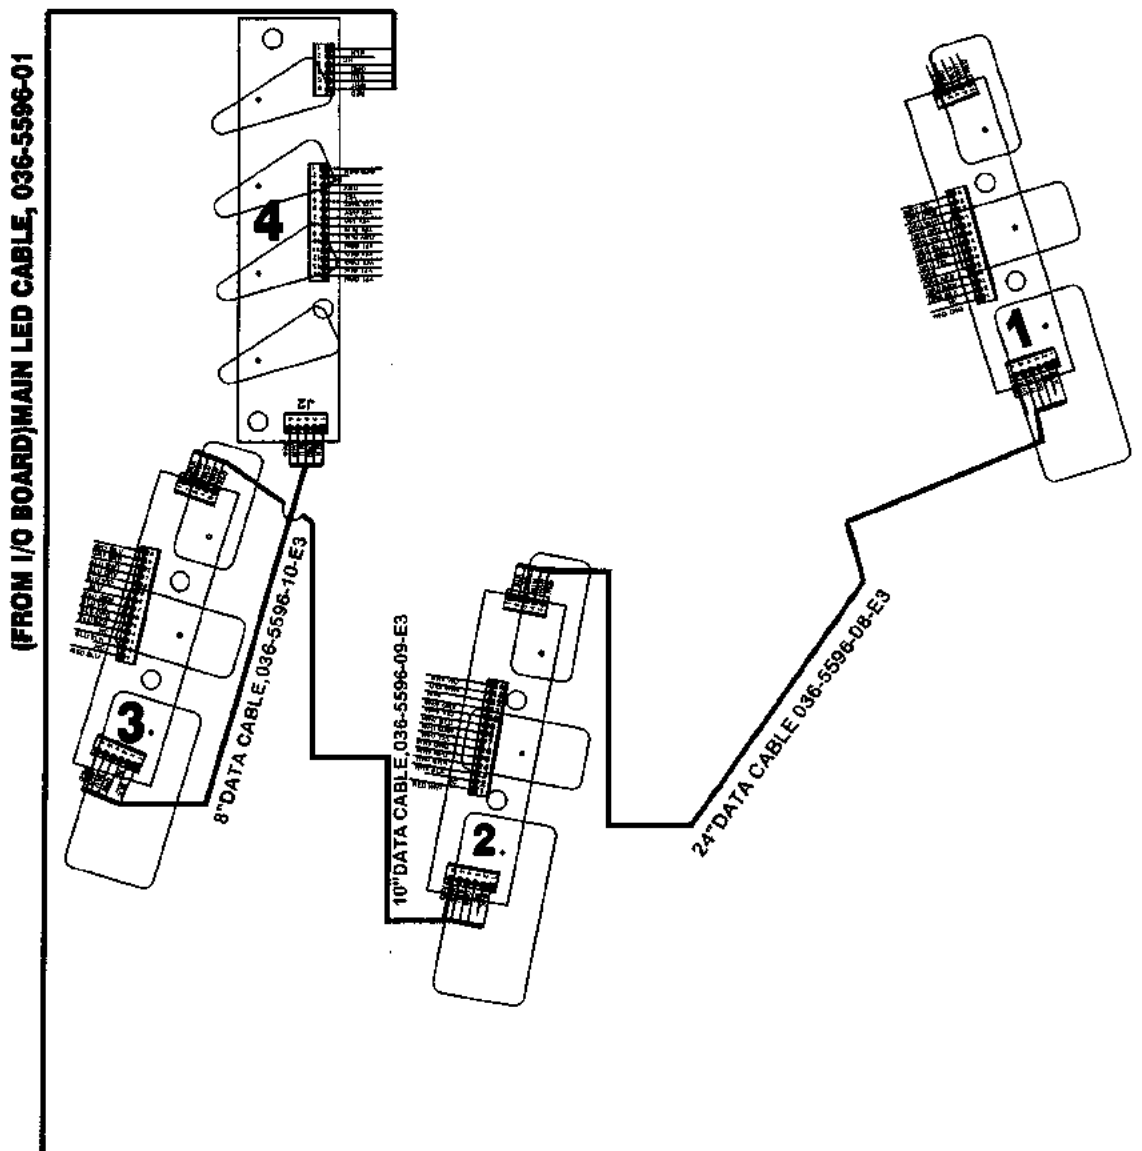

APRIL 26, 2013

BOTTOM VIEW


LED WIRING Limited Edition METALLICA

036-5596-13-E3

036-5596-12-E3

036-5596-21-E3

036-5596-14-E3

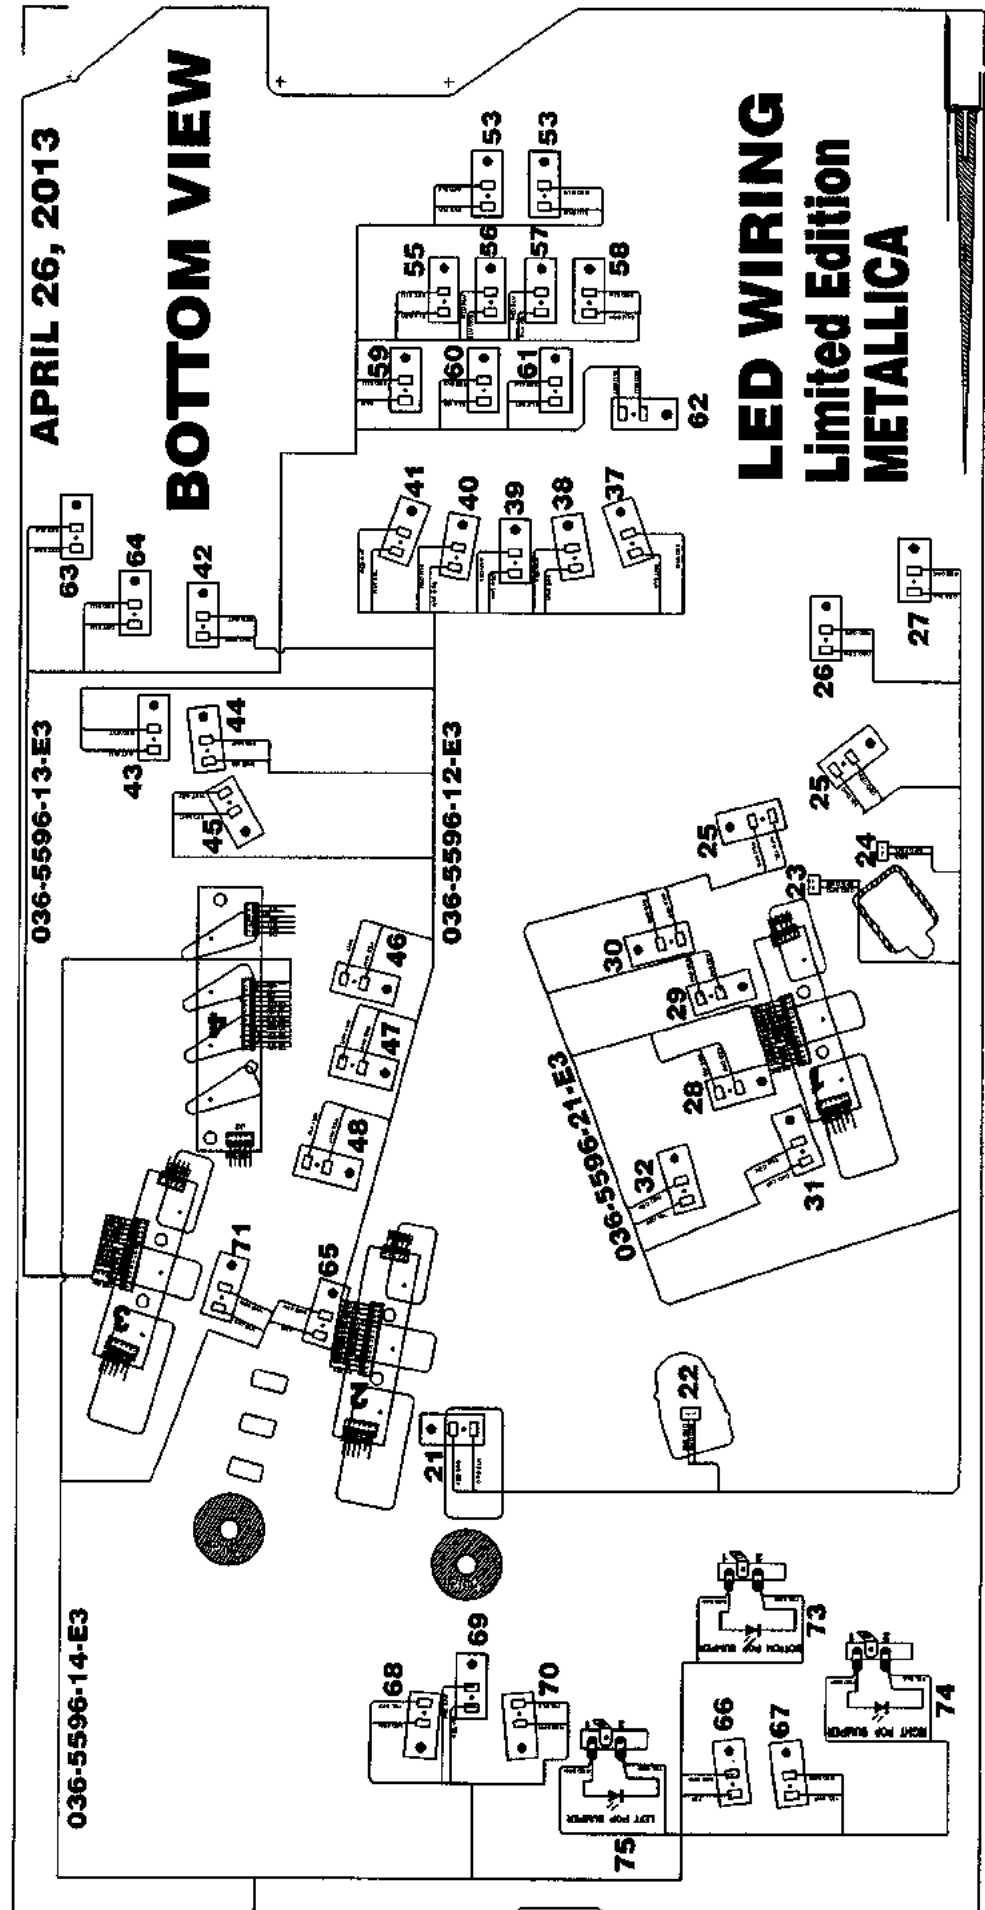


72,76

111

METALLICA Limited Edition

LED Board Wiring

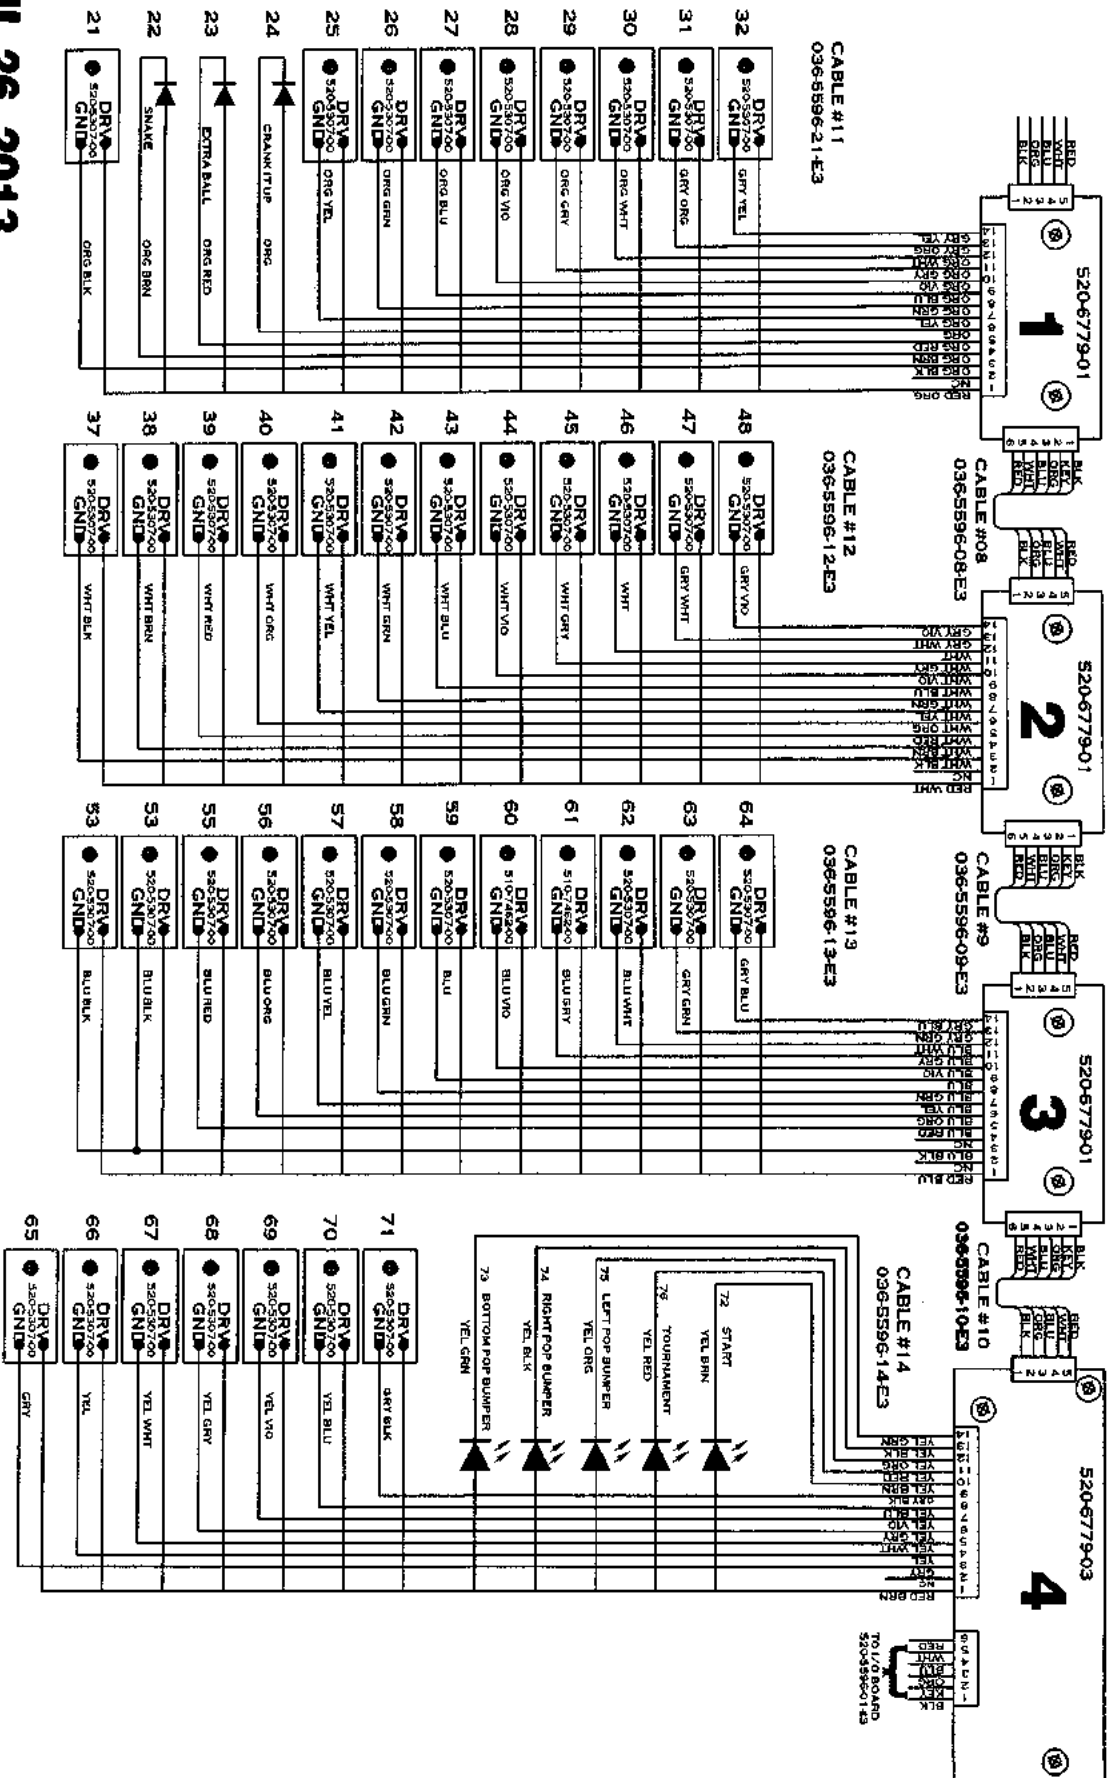

APRIL 26, 2013


Y12

METALLICA L.E. LED Board 1 and 2 Detail


Board 1

Board 2

**Cable (ORG)
036-5596-21-E3**

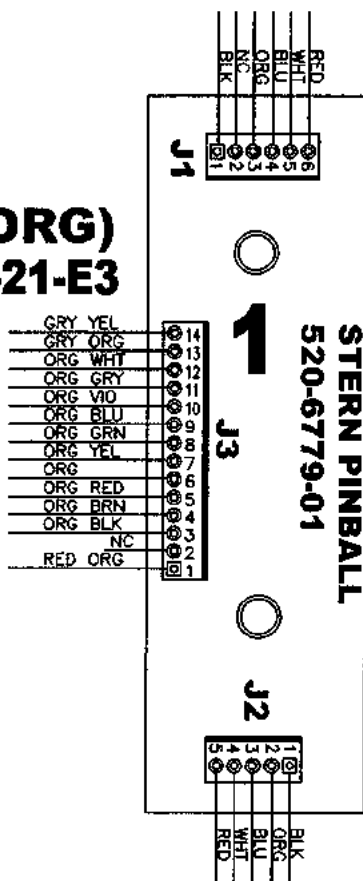

**Cable (WHT)
036-5596-12-E3**

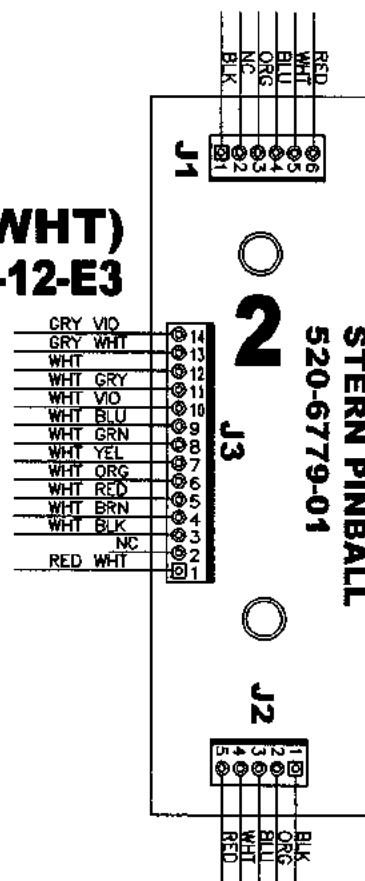


METALLICA L.E.

LED Board 3 AND 4 Detail


Board 4

Board 3

Cable (YEL)
036-5596-14-E3




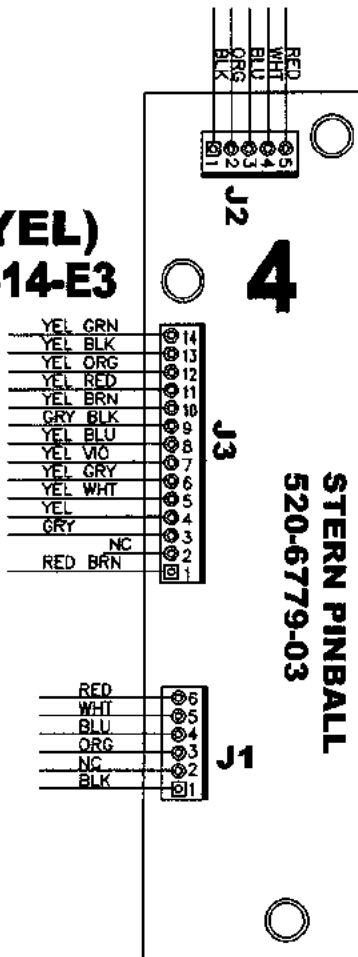


Cable (BLU)
036-5596-13-E3

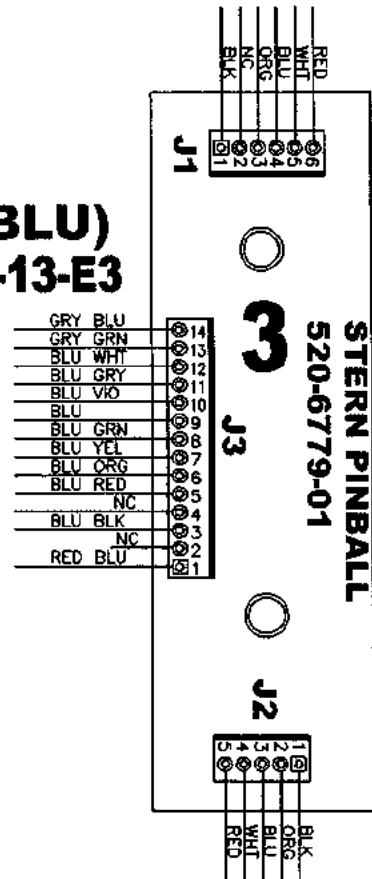

Cable Connections to 520-5331-00 Driver Board

Rectifier and Heat Sink Assy 511-7215-00

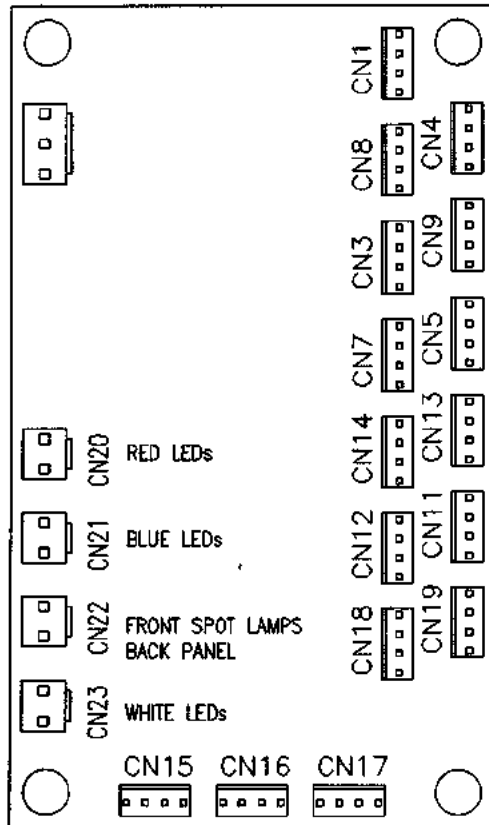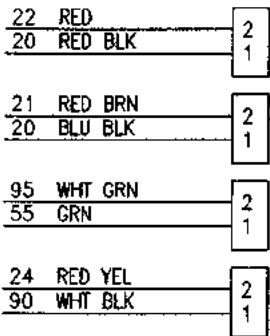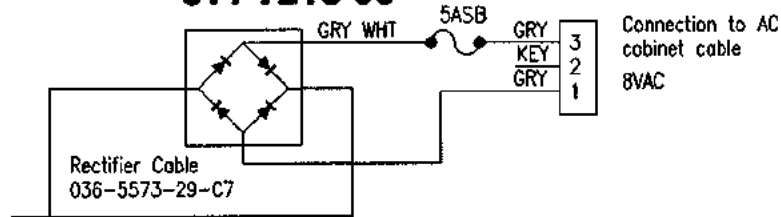

1	RED	22
2	RED BRN	21
3	GRN BRN	51
4	BLU BRN	61
5	KEY	
6	NC	
7	RED WHT	29
8	GRN	55
9	BLU	66
10	KEY	
11	NC	
12	RED YEL	24
13	GRN YEL	54
14	BLU YEL	64


1	RED	22
2	RED BLK	20
3	GRN BLU	56
4	BLU BLK	60
5	KEY	
6	NC	
7	RED GRN	25
8	GRN WHT	59
9	BLU GRN	65
10	KEY	
11	NC	
12	RED ORG	23
13	GRN ORG	53
14	BLU ORG	63

METALLICA L.E. RED GI LEDS

9 WEDGE BASE 112-5033-02
2 BAYONET 112-5034-02

Location of all
LED controller

TR-COLOR
LED AMP &
CONTROLLER

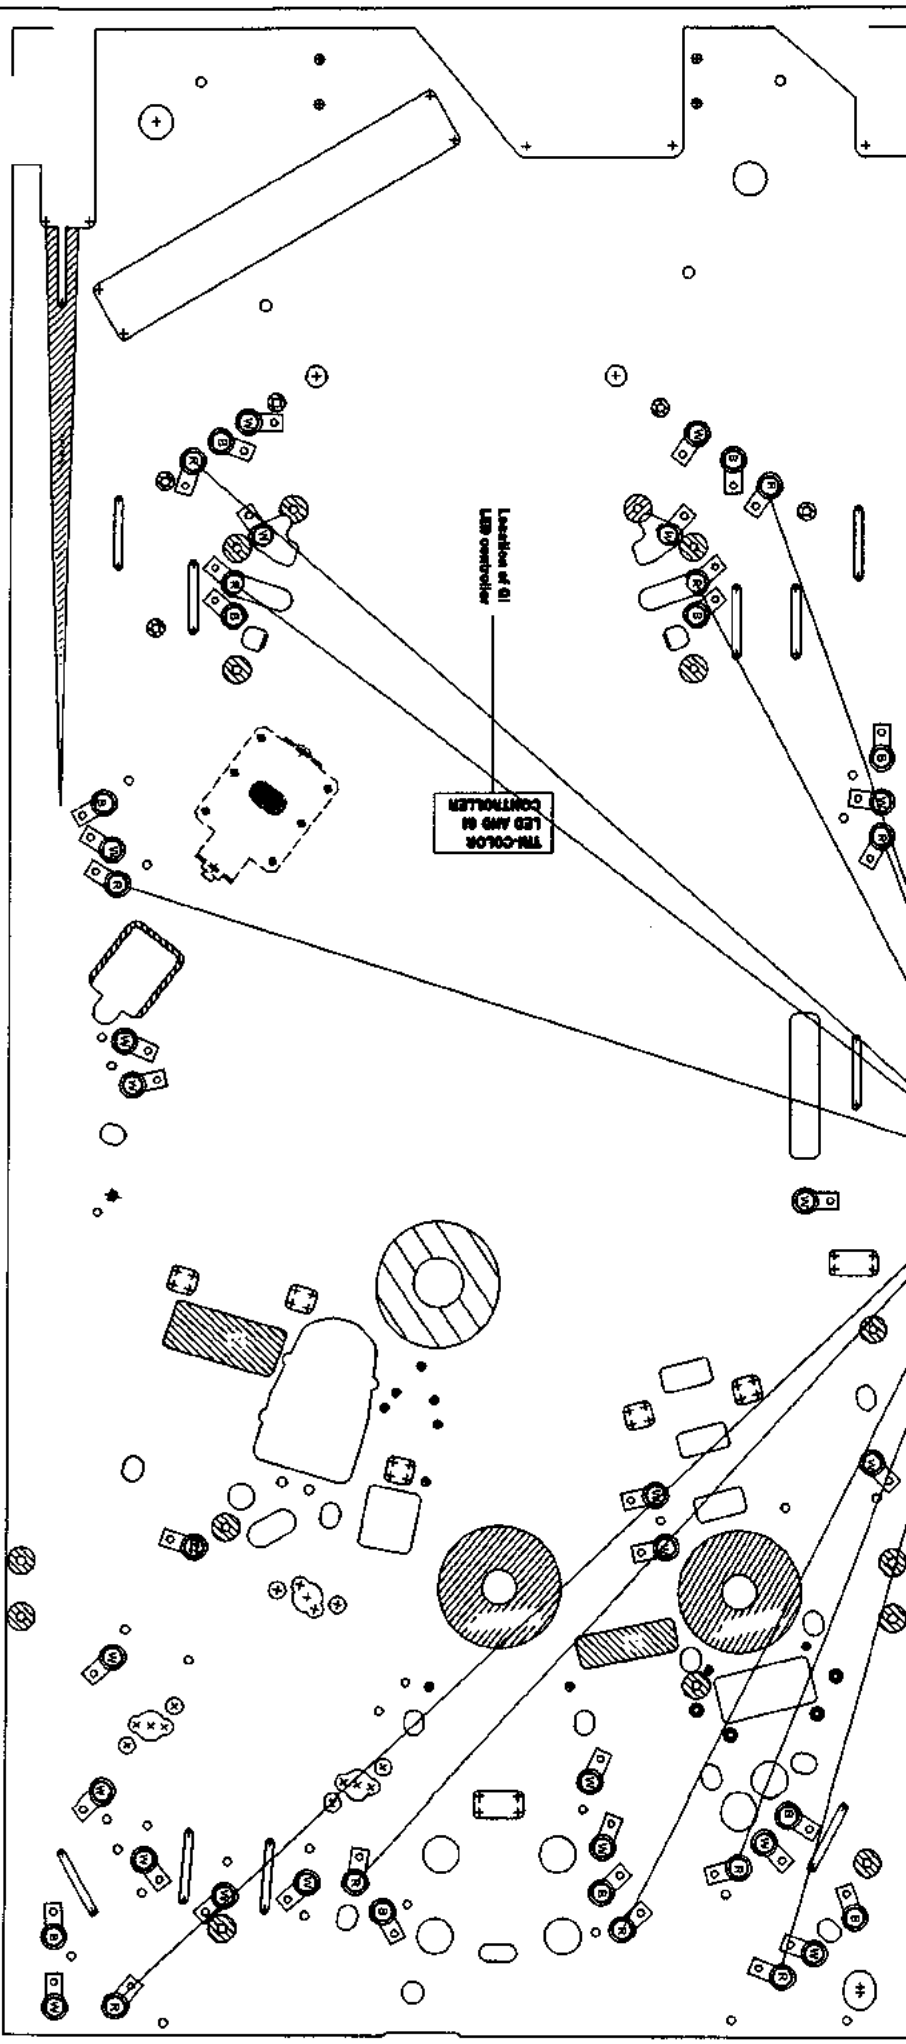



317

Y19

METALLICA L.E. BLUE GI LEDS

9 WEDGE BASE 112-5033-05
2 BAYONET 112-5034-05

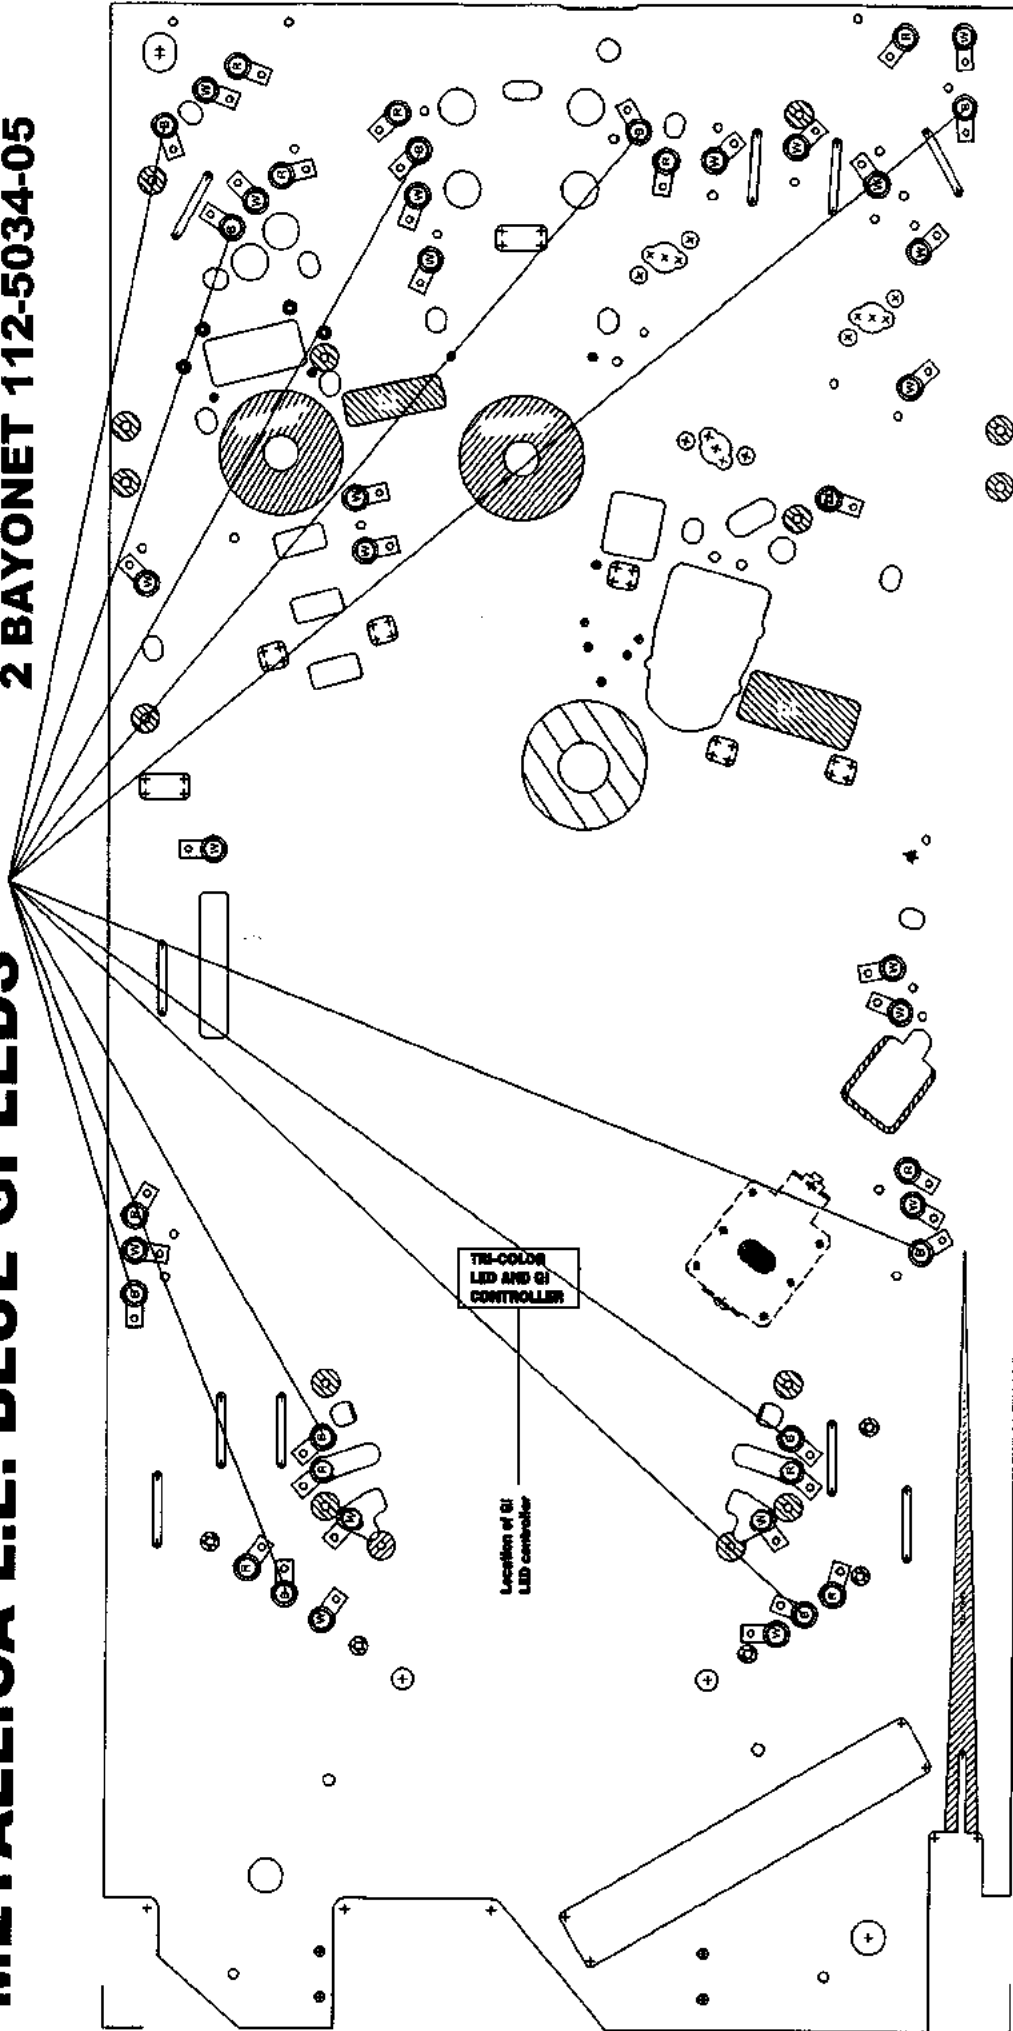

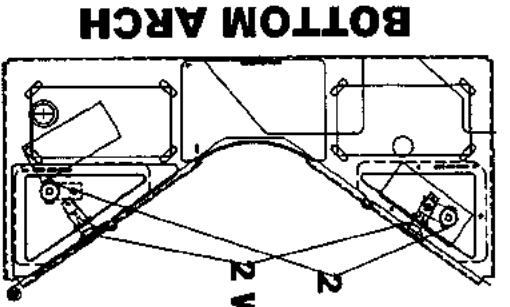


BOTTOM ARCH

2 BAYONET 112-5034-08 LED

2 WEDGE BASE 112-5031-01 LED

519-5223-88LED (6)
BAYONET SOCKET


6 BAYONET 112-5034-08 LED

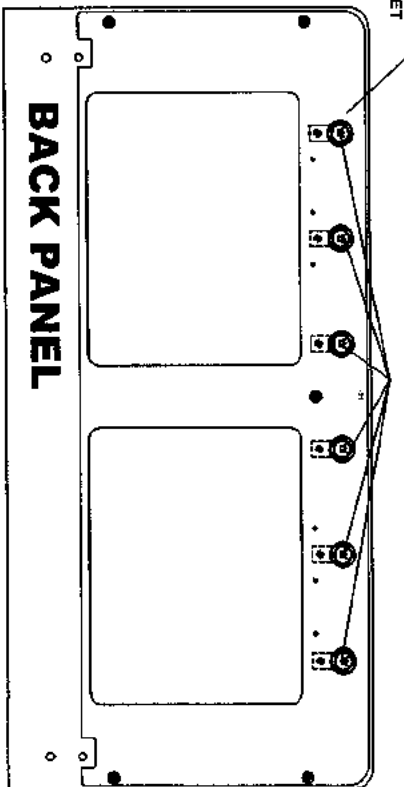

BACK PANEL

22 WEDGE BASE 112-5033-08
2 BAYONET 112-5034-08

**METALLICA L.E. WHITE G1 LEDS
PLAYFIELD**

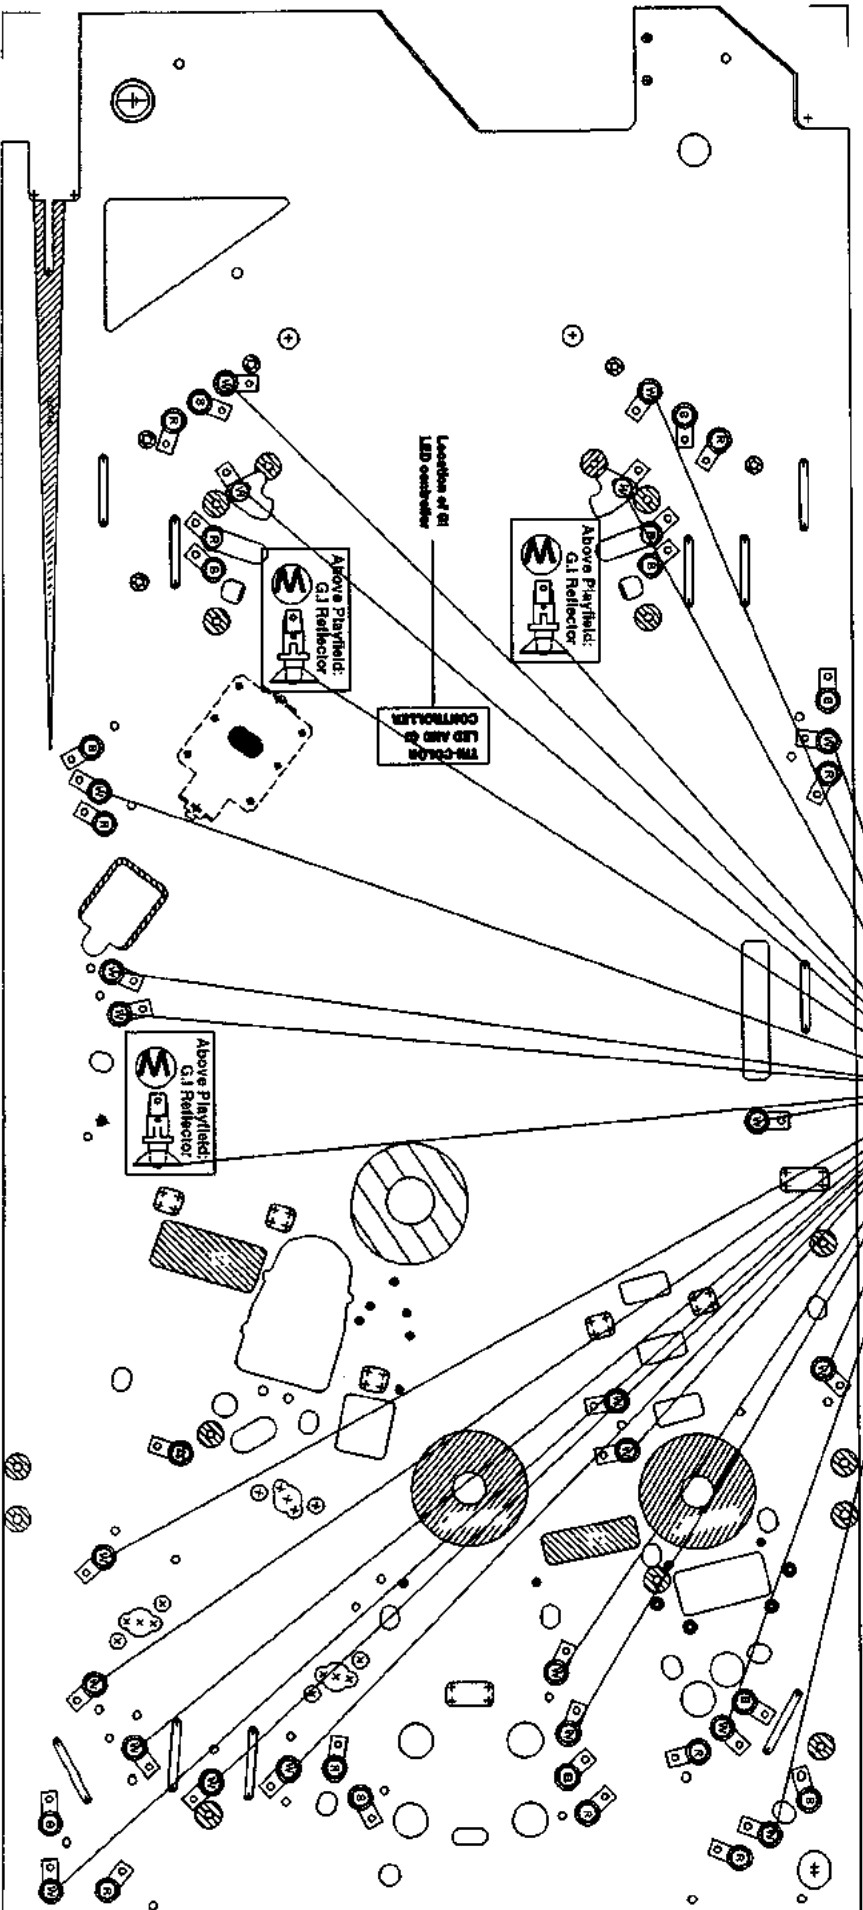

V20


METALLICA

Opto Amplifier Board #1

Wiring configuration

ELECTRIC CHAIR

Transceiver Board
500-6775-00



2-conductor cable


SWITCH 53



2-conductor cable


Transceiver Board
500-6775-00

Transceiver Board
500-6775-00



2-conductor cable

SWITCH 52



Transceiver Board
500-6775-00

2-conductor cable


GRAVE MARKER

SILVER Anode
COPPER Cathode

SILVER Anode
COPPER Cathode

SILVER Anode
COPPER Cathode

SILVER Anode
COPPER Cathode

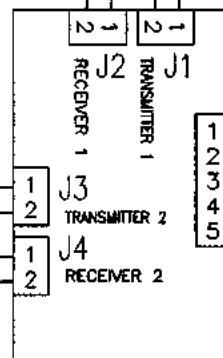

1	WHT GRN	Matrix Rows	To CPU Board J6-5
2	WHT YEL	Matrix Rows	To CPU Board J6-6
3	GRN YEL	Matrix Columns	To CPU Board J1-5
4	BLK	Ground	To I/O Board J8 pin 10
5	RED	+5V DC	To I/O Board J16 pin 7

Part of Playfield Cable

Date: 05-21-13	TITLE Opto Amplifier Board #1 Wiring	
Scale: N/S	Rev: -	
STEARN PINBALL, INC	DWN. REYNA	Y21
	1st USE METALLICA	

METALLICA


Opto Amplifier Board 2 and 3

Wiring Configuration

Transceiver Boards
500-6775-01

Switch 57


Amplifier Board # 2
520-5239-01

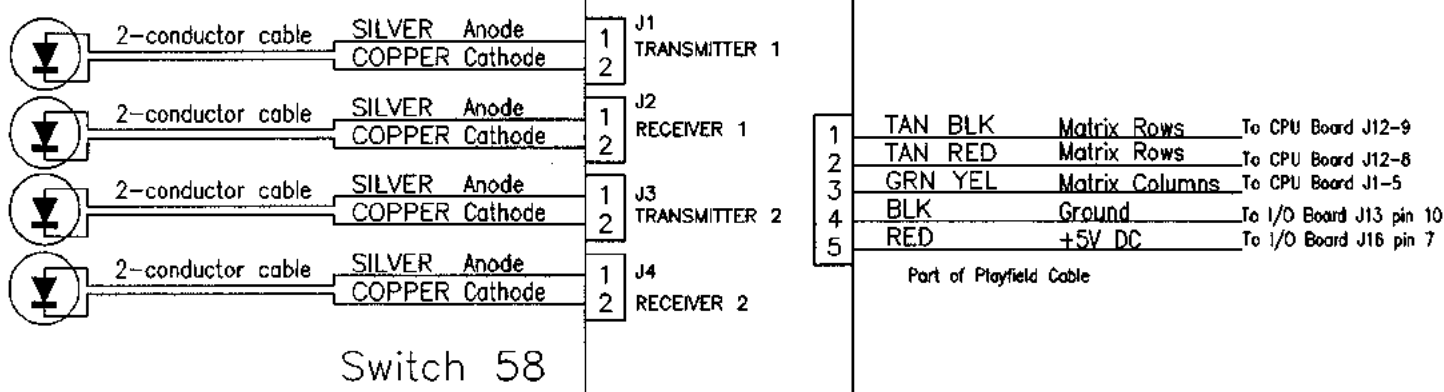

Transceiver Boards
500-6775-01

Switch 59


Amplifier Board # 3
520-5239-01

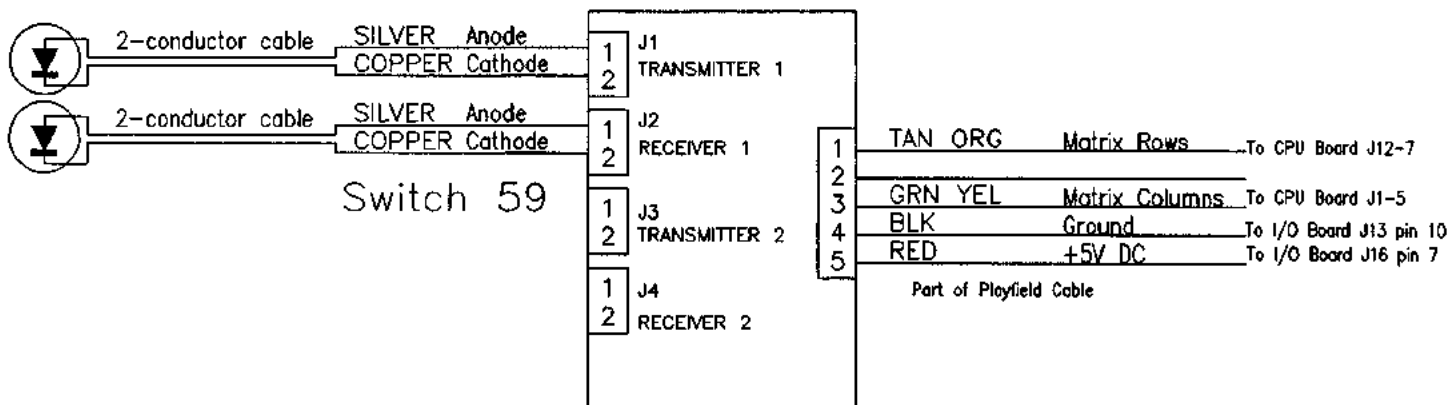


Date: 05-21-13	TITLE Opto Amplifier Board 2 & 3 Wiring
Scale: N/S	Rev: -
STERN	DWN. REYNA
PINBALL, INC.	1st USE METALLICA

Y22


**SWITCH 56
SNAKE LATCH**

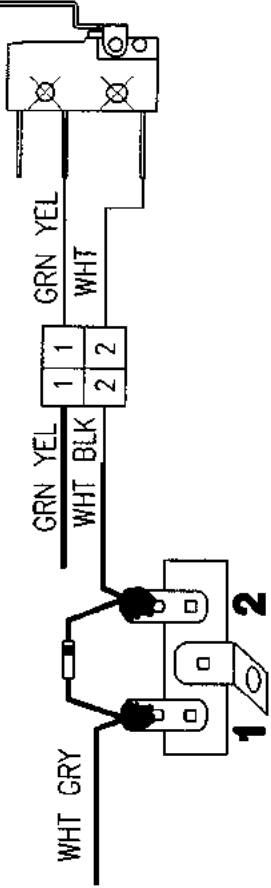


**SWITCH 54
SNAKE KICK**

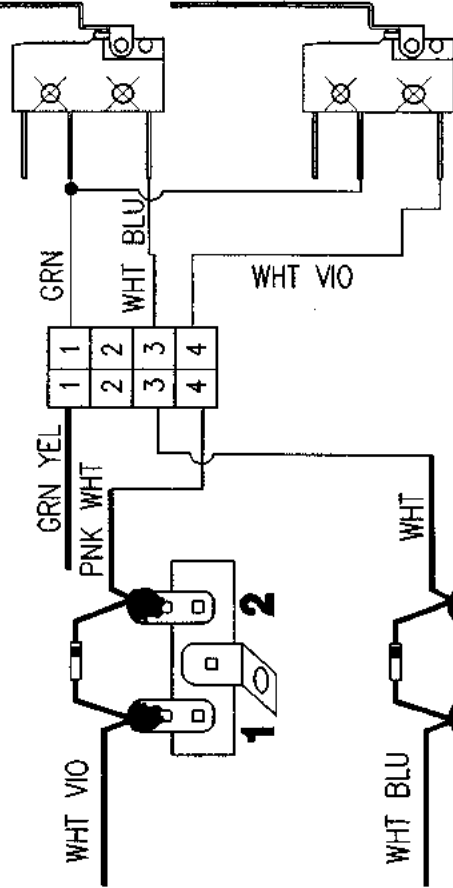

**SWITCH 55
SNAKE JAW**

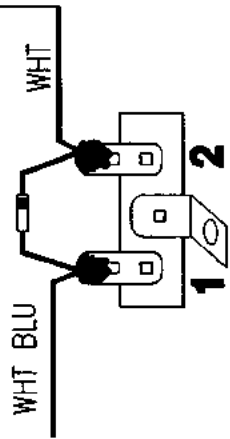

**SWITCH 64
COFFIN MAGNET
DOWN**

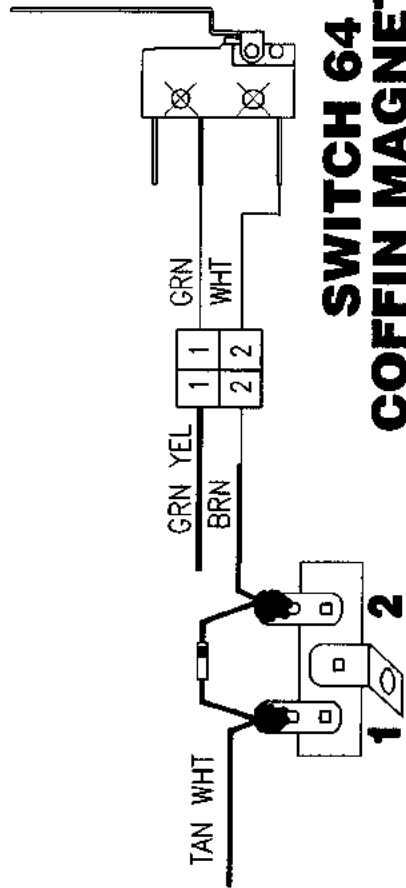

DOWN	REYNA	DATE	TITLE
1st USE		05-07-13	DTS Configuration
		SCALE	METALLICA(LE)
		1:1	
		REV	
		-	
Stern Pinball, Inc			PART NO.
2020 JANICE AVE., MELROSE PARK, IL. 60160			DTS-MAP

Y23

#-Flipper Circuit Wiring Diagram

Partial View CPU/Sound PCB (520-5246-00)


Dedicated Switch IC Source Number: LVC245A

J3

DEDICATED SWITCHES



CPU/Sound PCB

The Outside **LEFT FLIPPER BUTTON** located on the Cabinet operates both the Left Flipper & Upper Left Flipper, if used. The Outside **RIGHT FLIPPER BUTTON** located on the Cabinet operates both the Right Flipper & Upper Right Flipper, if used. **RIGHT & LEFT BUTTONS:** These switches are *Double-stacked*. Pressing half-way down operates the Lower Flippers (respectively); pressing full down operates both the Lower Flipper & Upper Flippers (respectively) simultaneously.

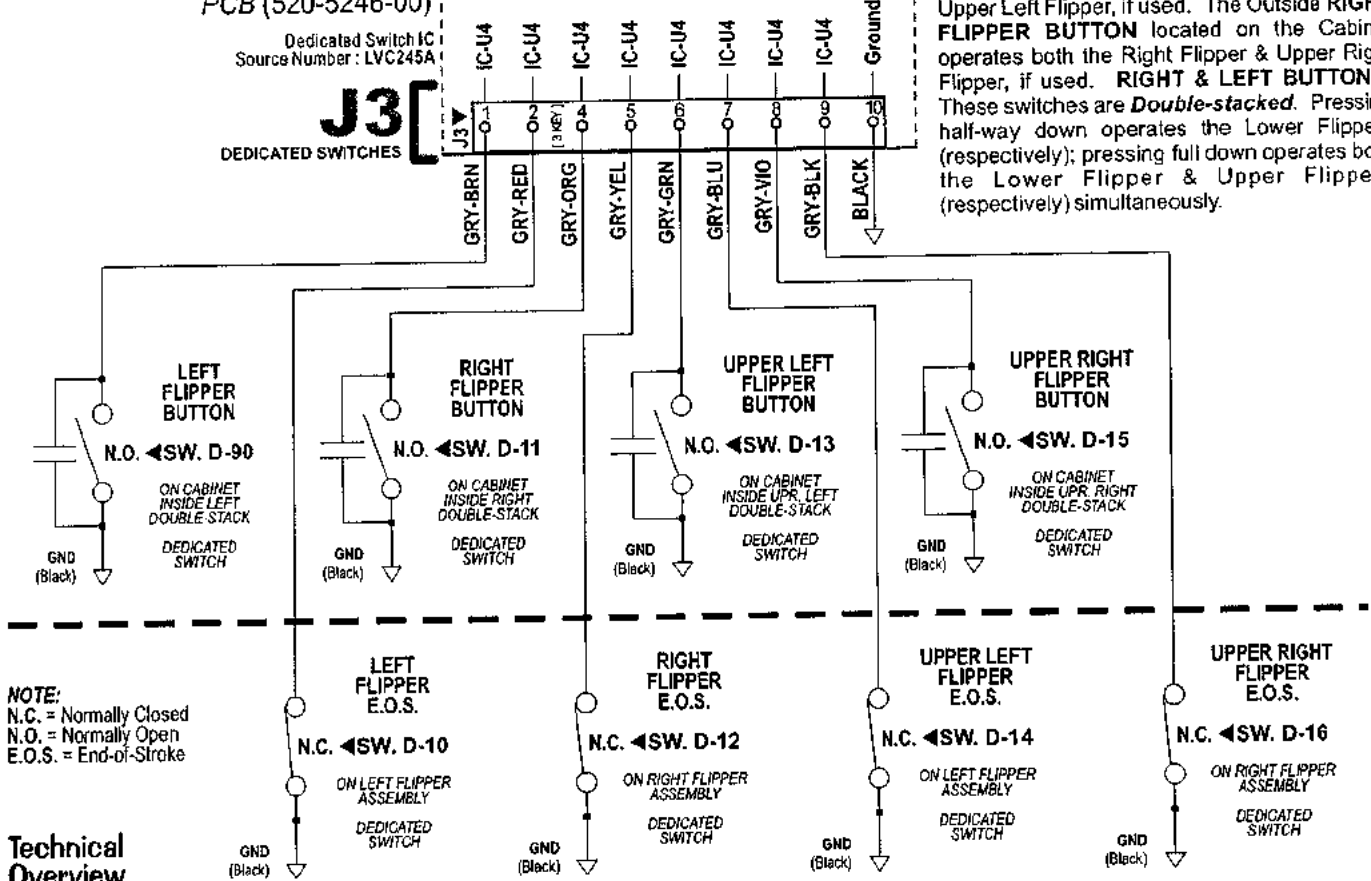

Technical Overview

Our **Flipper System** uses one supply voltage (+50VDC) for both *kick & hold*. Once the **Game CPU** detects a Flipper Cabinet Switch closure (*during game play*) it applies a 40msec pulse to the gate of the Flipper Drive Transistor (STP22NE10L). If it continues to detect a Flipper Cabinet Switch closure (*the player holding the button in*) it will continue to pulse the flipper drive transistor 1msec every 12msecs for the duration of the hold cycle.

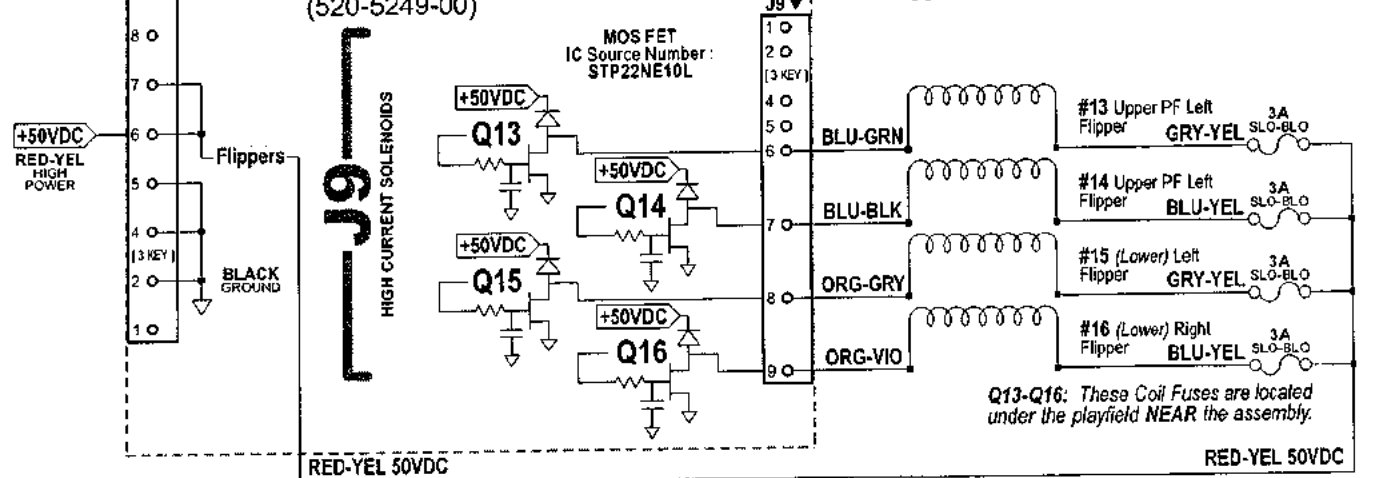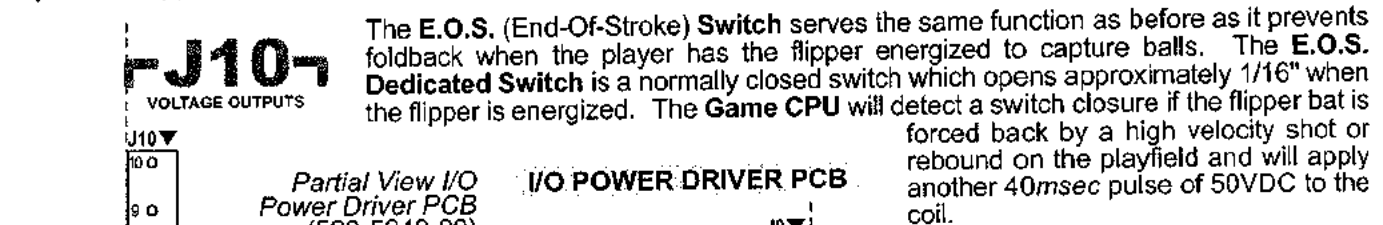

The **E.O.S. (End-Of-Stroke) Switch** serves the same function as before as it prevents foldback when the player has the flipper energized to capture balls. The **E.O.S. Dedicated Switch** is a normally closed switch which opens approximately 1/16" when the flipper is energized. The **Game CPU** will detect a switch closure if the flipper bat is forced back by a high velocity shot or rebound on the playfield and will apply another 40msec pulse of 50VDC to the coil.

Typical Under-

Playfield Fuses are rated:
3A 250v Slo-Blo
Do Not Over-Fuse


Playfield

NOTE:
Coil Diodes (1N4004) are integrated on the I/O Power Driver PCB. See Coils Detailed Wiring Diagram for actual number of flippers used on this game.



Playfield Wiring

Y25

Transformer Power Wiring Diagram

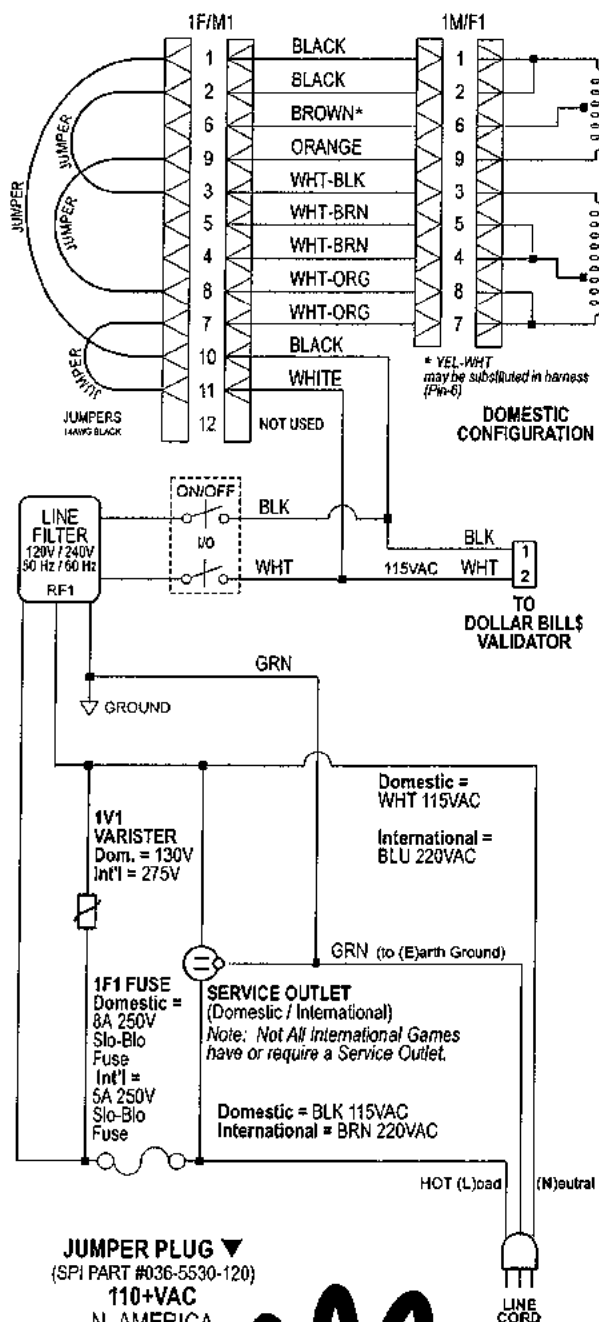


JUMPER PLUG ▼
 (SPI PART #036-5530-120)
110+VAC
 N. AMERICA
 LINE VOLTAGE

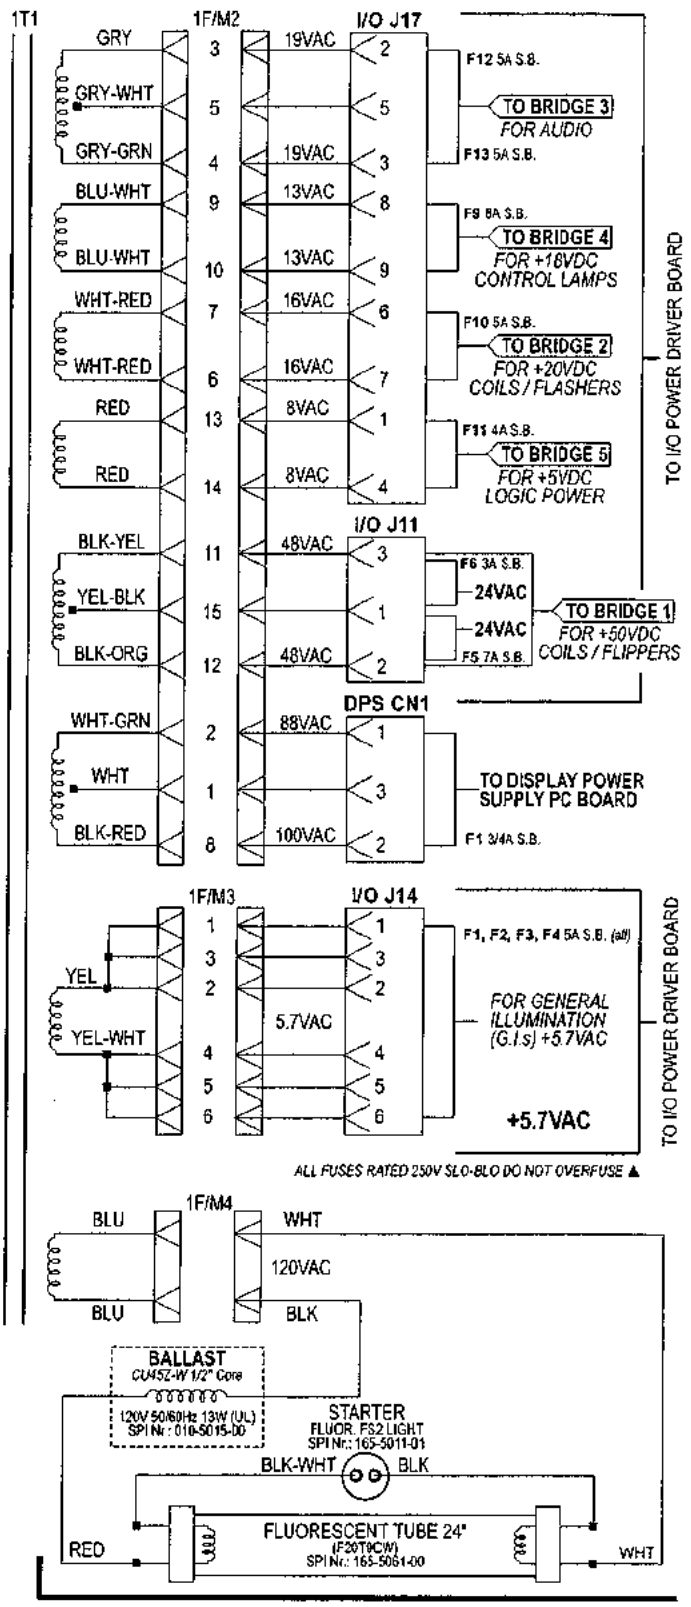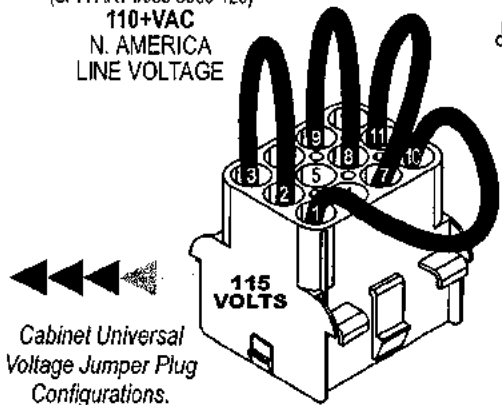

Y26

Cabinet Wiring Diagram

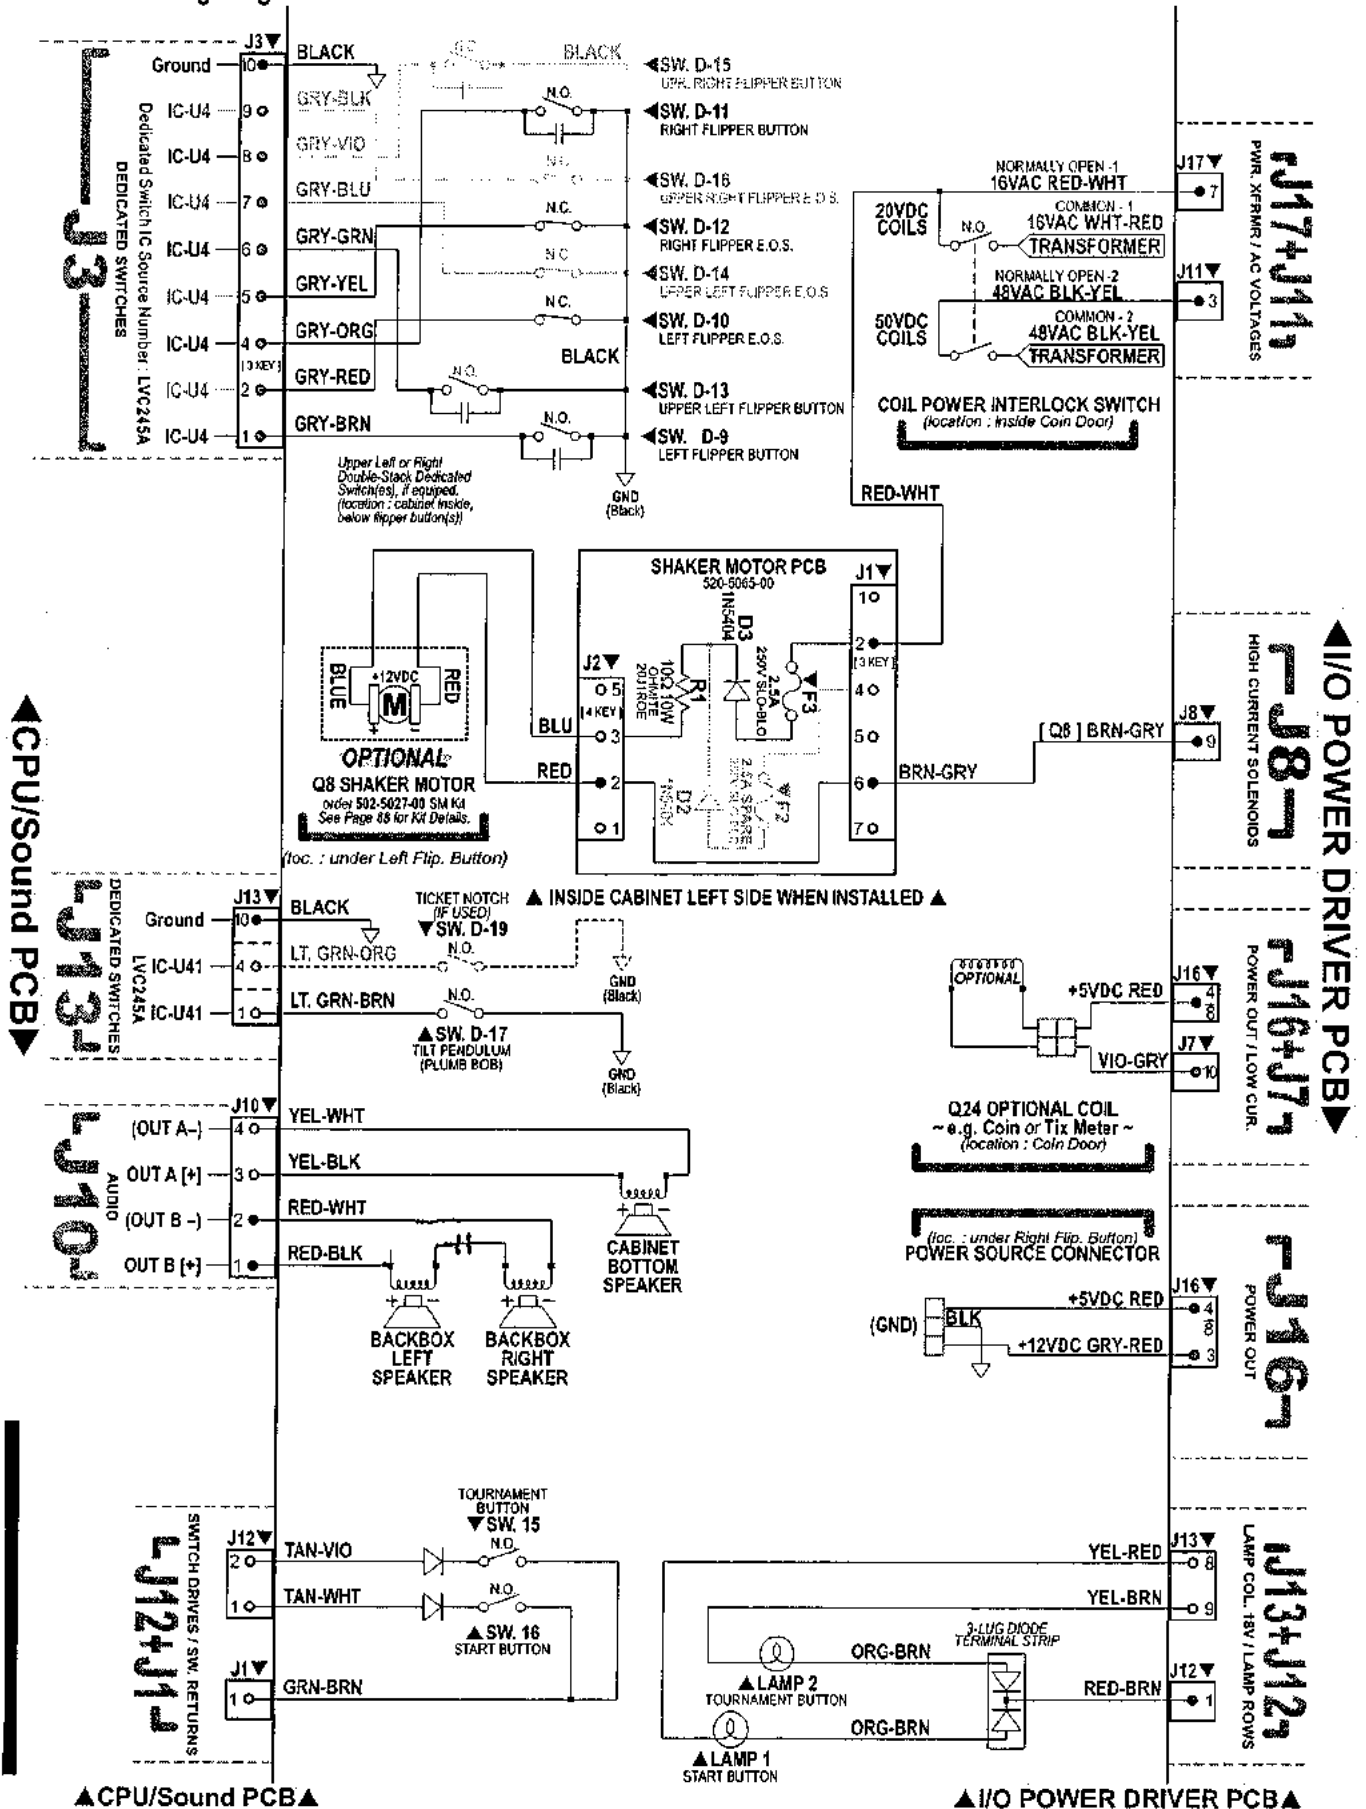

J17+J11
PWR. XFRMR/ AC VOLTAGES

J8
HIGH CURRENT SOLENOIDS

J16+J7
POWER OUT / LOW CUR.

J16
POWER OUT

J13+J12
LAMP COL. 18V / LAMP ROWS

CPU/Sound PCB

J13

J10

J12+J11
SW. DRIVES / SW. RETURNS


▲ CPU/Sound PCB ▲

▲ I/O POWER DRIVER PCB ▲

Cabinet and Coin Door Wiring

Y27

Coin Door Wiring Diagram

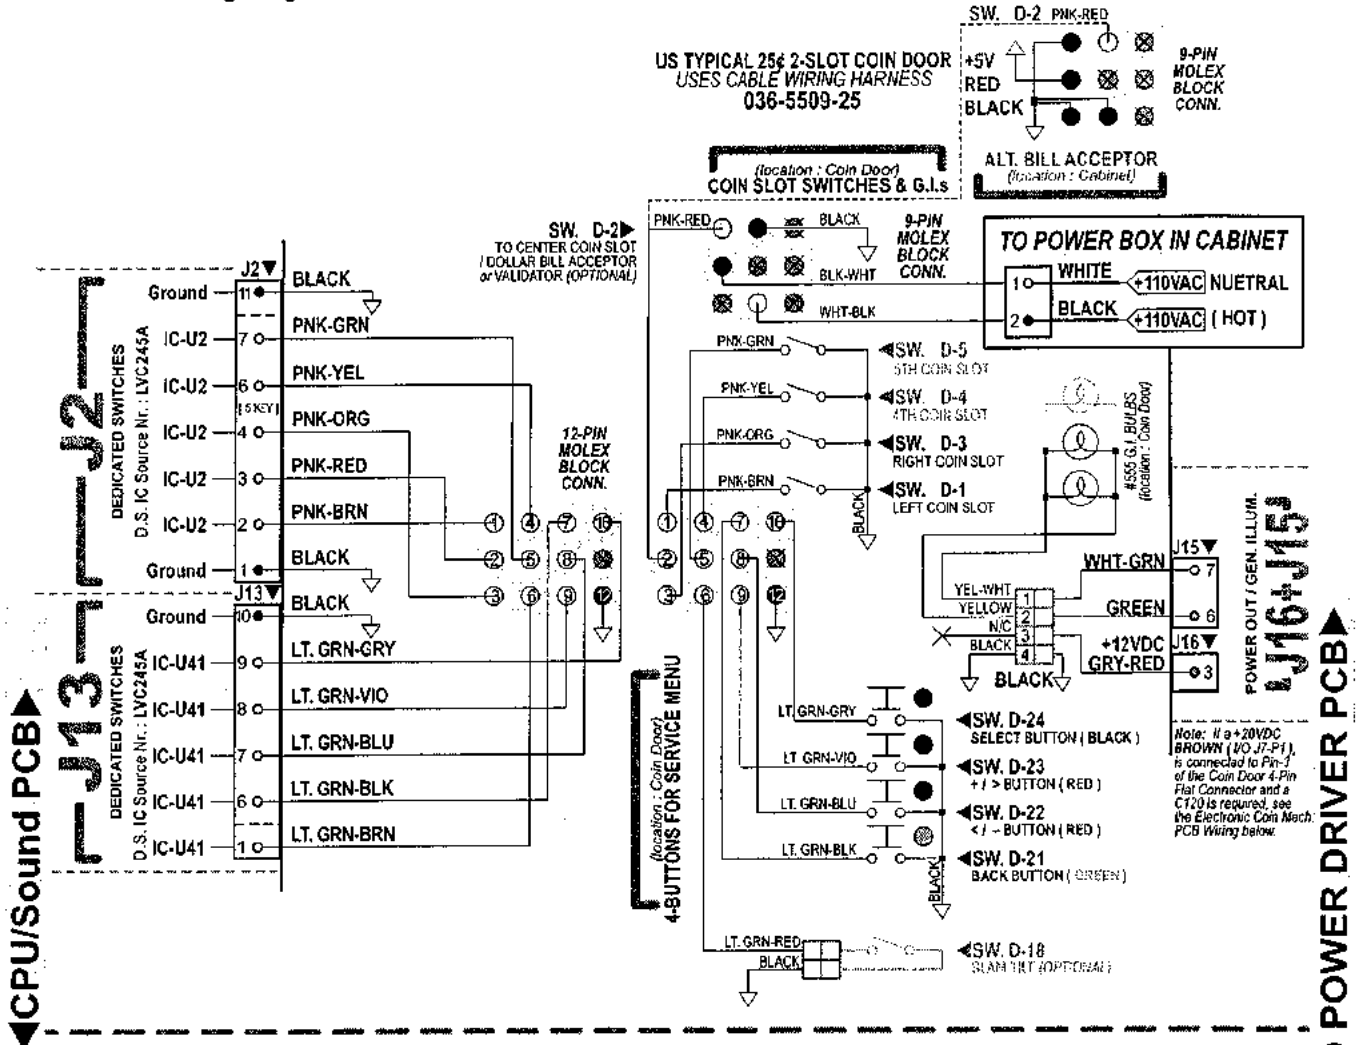


1-SLOT COIN DOOR WITH C120 CAPABILITIES (NO INTERFACE COIN MECH PCB REQUIRED)
 USES CABLE WIRING HARNESS
036-5509-31A (+12VDC GRY-RED)

036-5509-31B (ICT/KAL ONLY) / 036-5509-31C (ODA ONLY) / 036-5509-31D (SPAIN ONLY)

NON-US NON-C120 2-SLOT COIN DOOR
 USES CABLE WIRING HARNESS
036-5509-32

NON-US NON-C120 3-SLOT COIN DOOR
 USES CABLE WIRING HARNESS
036-5509-33


IF YOUR GAME HAS AN ELECTRONIC COIN MECH. INTERFACE PC BOARD (520-5193-00):
 1-SLOT COIN DOOR USE WITH C120 CAPABILITIES REQUIRING PCB 520-5193-00
 USES CABLE WIRING HARNESS
036-5509-31 (S.A.M. SYSTEM)

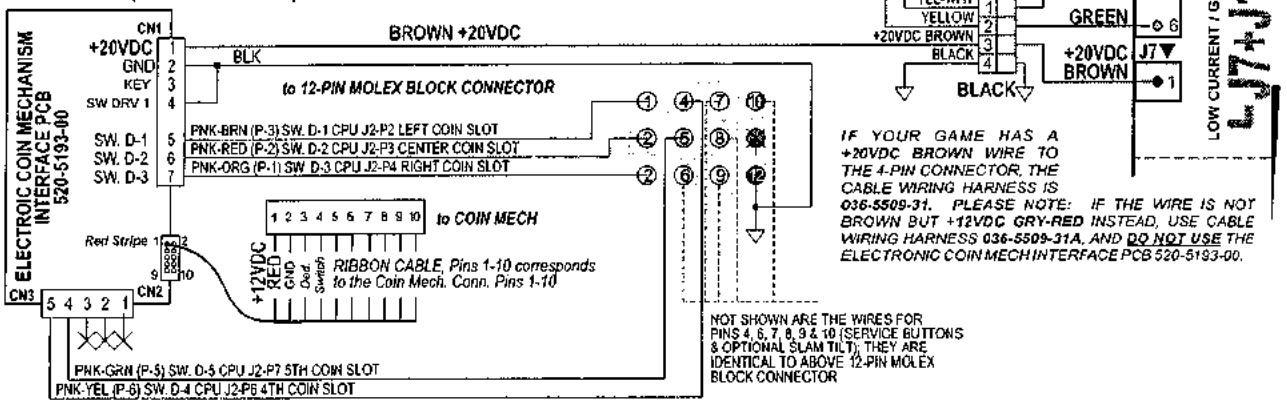


Cabinet and Coin Door Wiring

Voo

Cabinet Universal Voltage Jumper Plugs (for use with Universal AC Cable, 036-5530-00 ONLY)

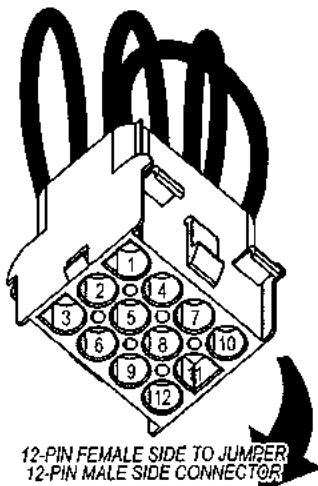

JUMPER PLUG ▼
(SPI PART #036-5530-120)
110+VAC
N. AMERICA
LINE VOLTAGE

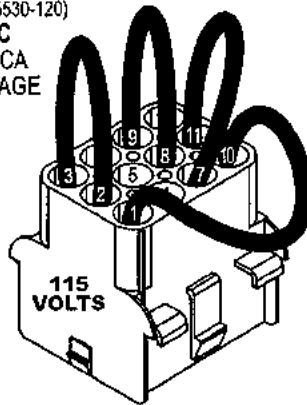


9-PIN MALE SIDE TO TRANSFORMER
9-PIN FEMALE SIDE CONN.

12-PIN FEMALE SIDE TO JUMPER
12-PIN MALE SIDE CONNECTOR

- 1 BLK
- 2 BLK
- 3 WHT-BLK
- 4 WHT-BRN
- 5 WHT-BRN
- 6 BRN (or YEL-WHT)
- 7 WHT-ORG
- 8 WHT-ORG
- 9 ORG
- 10 BLK
- 11 WHT
- 12 N/U

12-PIN F/M CONN.
BACK VIEW ▲


9-PIN F/M CONN.
▲ BACK VIEW

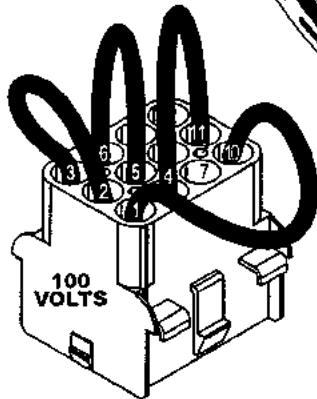


JUMPER PLUG ◀
(SPI PART #036-5530-100)
98VAC - 109VAC
JAPAN or
N. AMERICA LOW
LINE VOLTAGE

Black & White wires from
the POWER BOX, cabinet bottom
to 12-Pin Conn., Pins 10 & 11..


JUMPER PLUG ▼
(SPI PART #036-5530-206)
200VAC - 211VAC
EUROPE and
MID. EAST LOW
LINE VOLTAGE

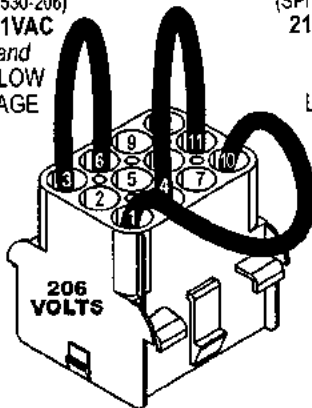


JUMPER PLUG ▼
(SPI PART #036-5530-220)
212VAC - 224VAC
EUROPE and
MID. EAST
LINE VOLTAGE

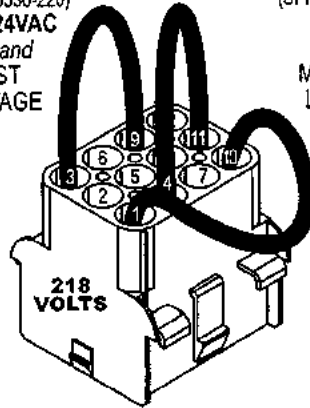


JUMPER PLUG ▼
(SPI PART #036-5530-230)
225+VAC
EUROPE and
MID. EAST HIGH
LINE VOLTAGE

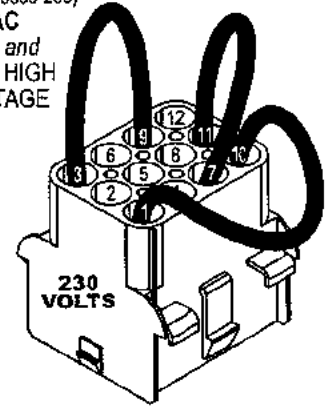

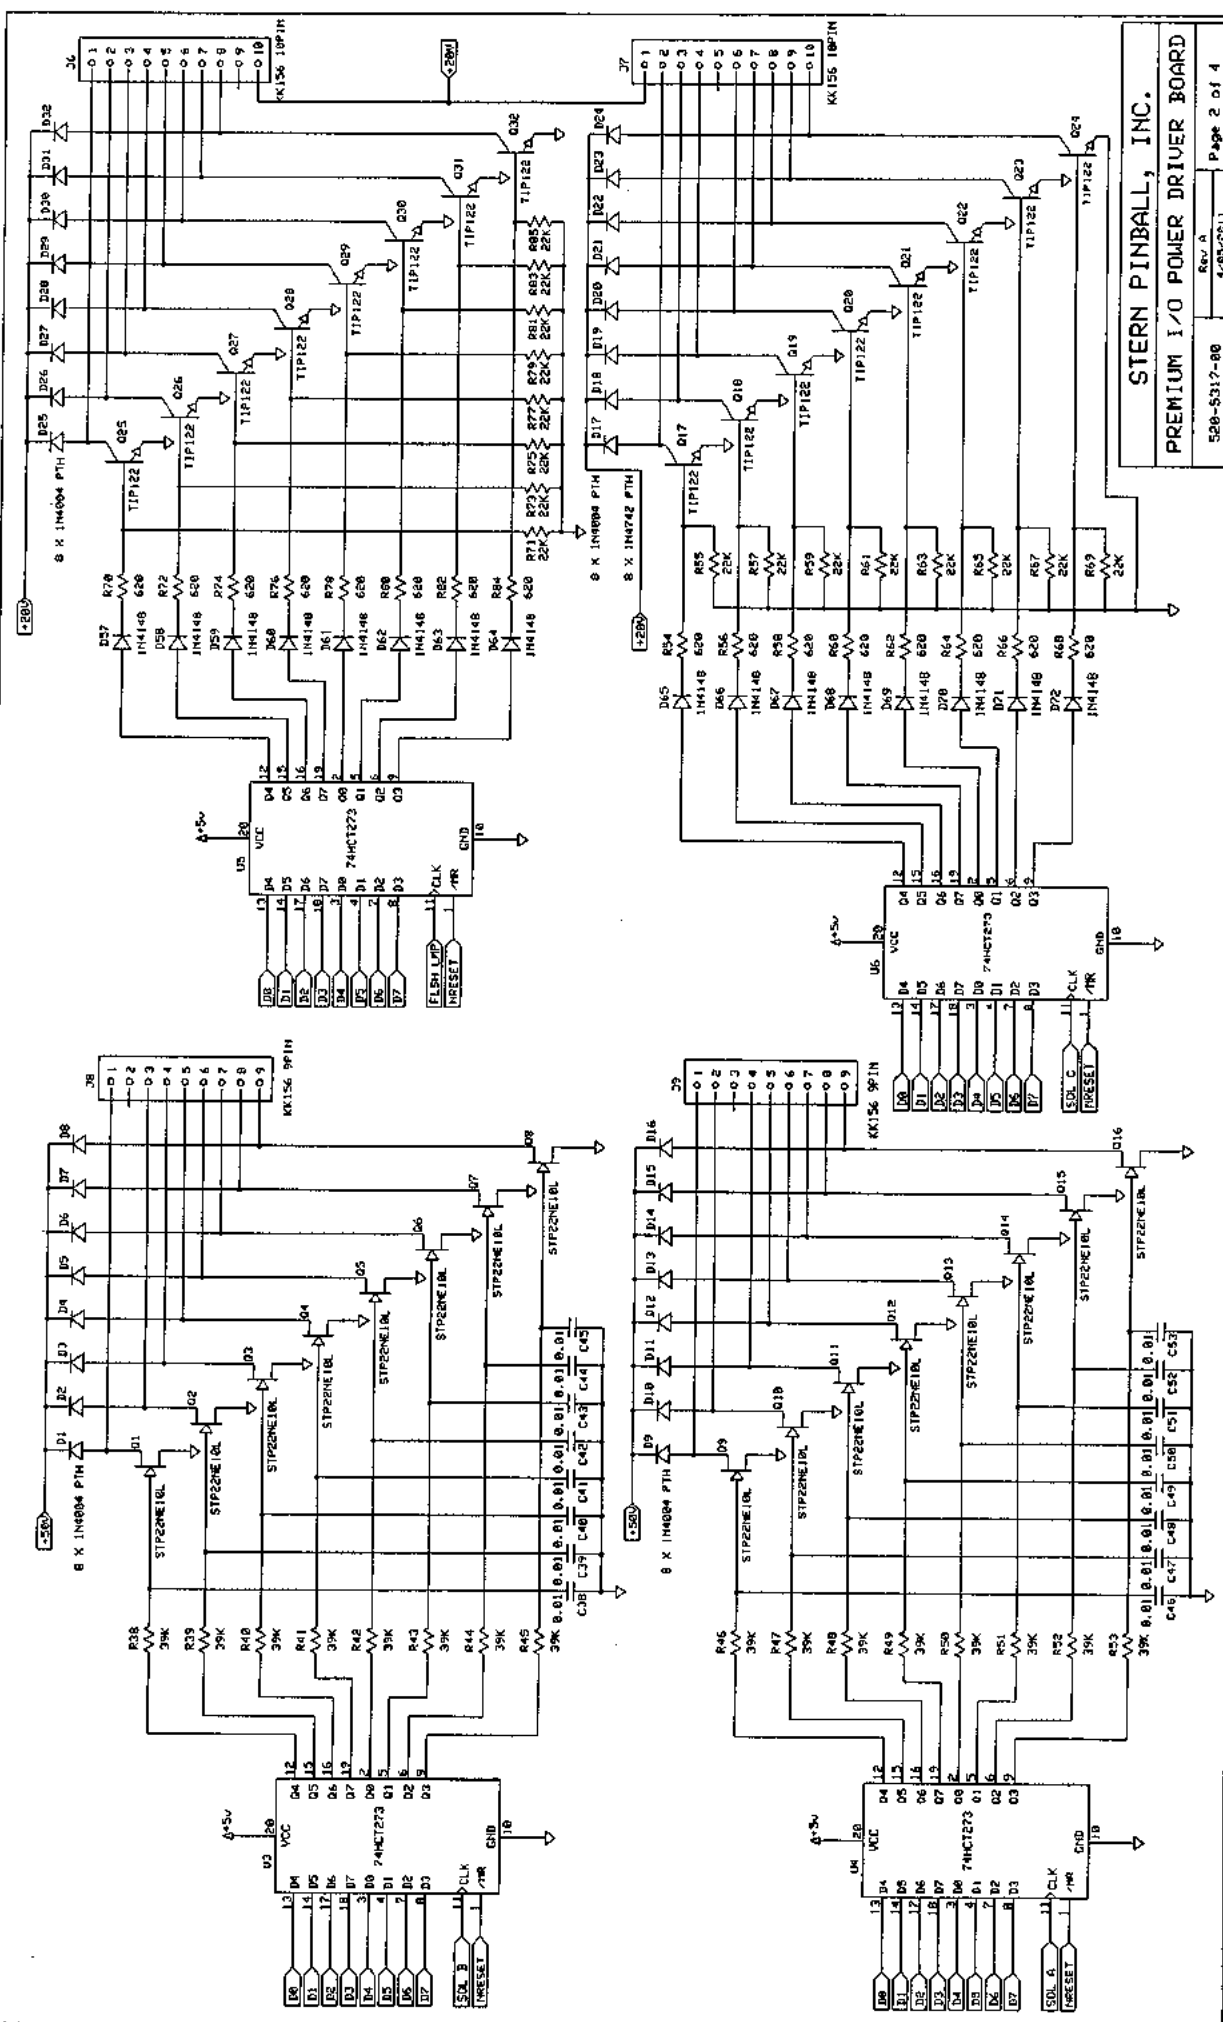







STERN PINBALL, INC.
PREMIUM I/O POWER DRIVER BOARD
 520-5317-00 Rev. A
 4-00/00.11 Page 2 of 4

Y31

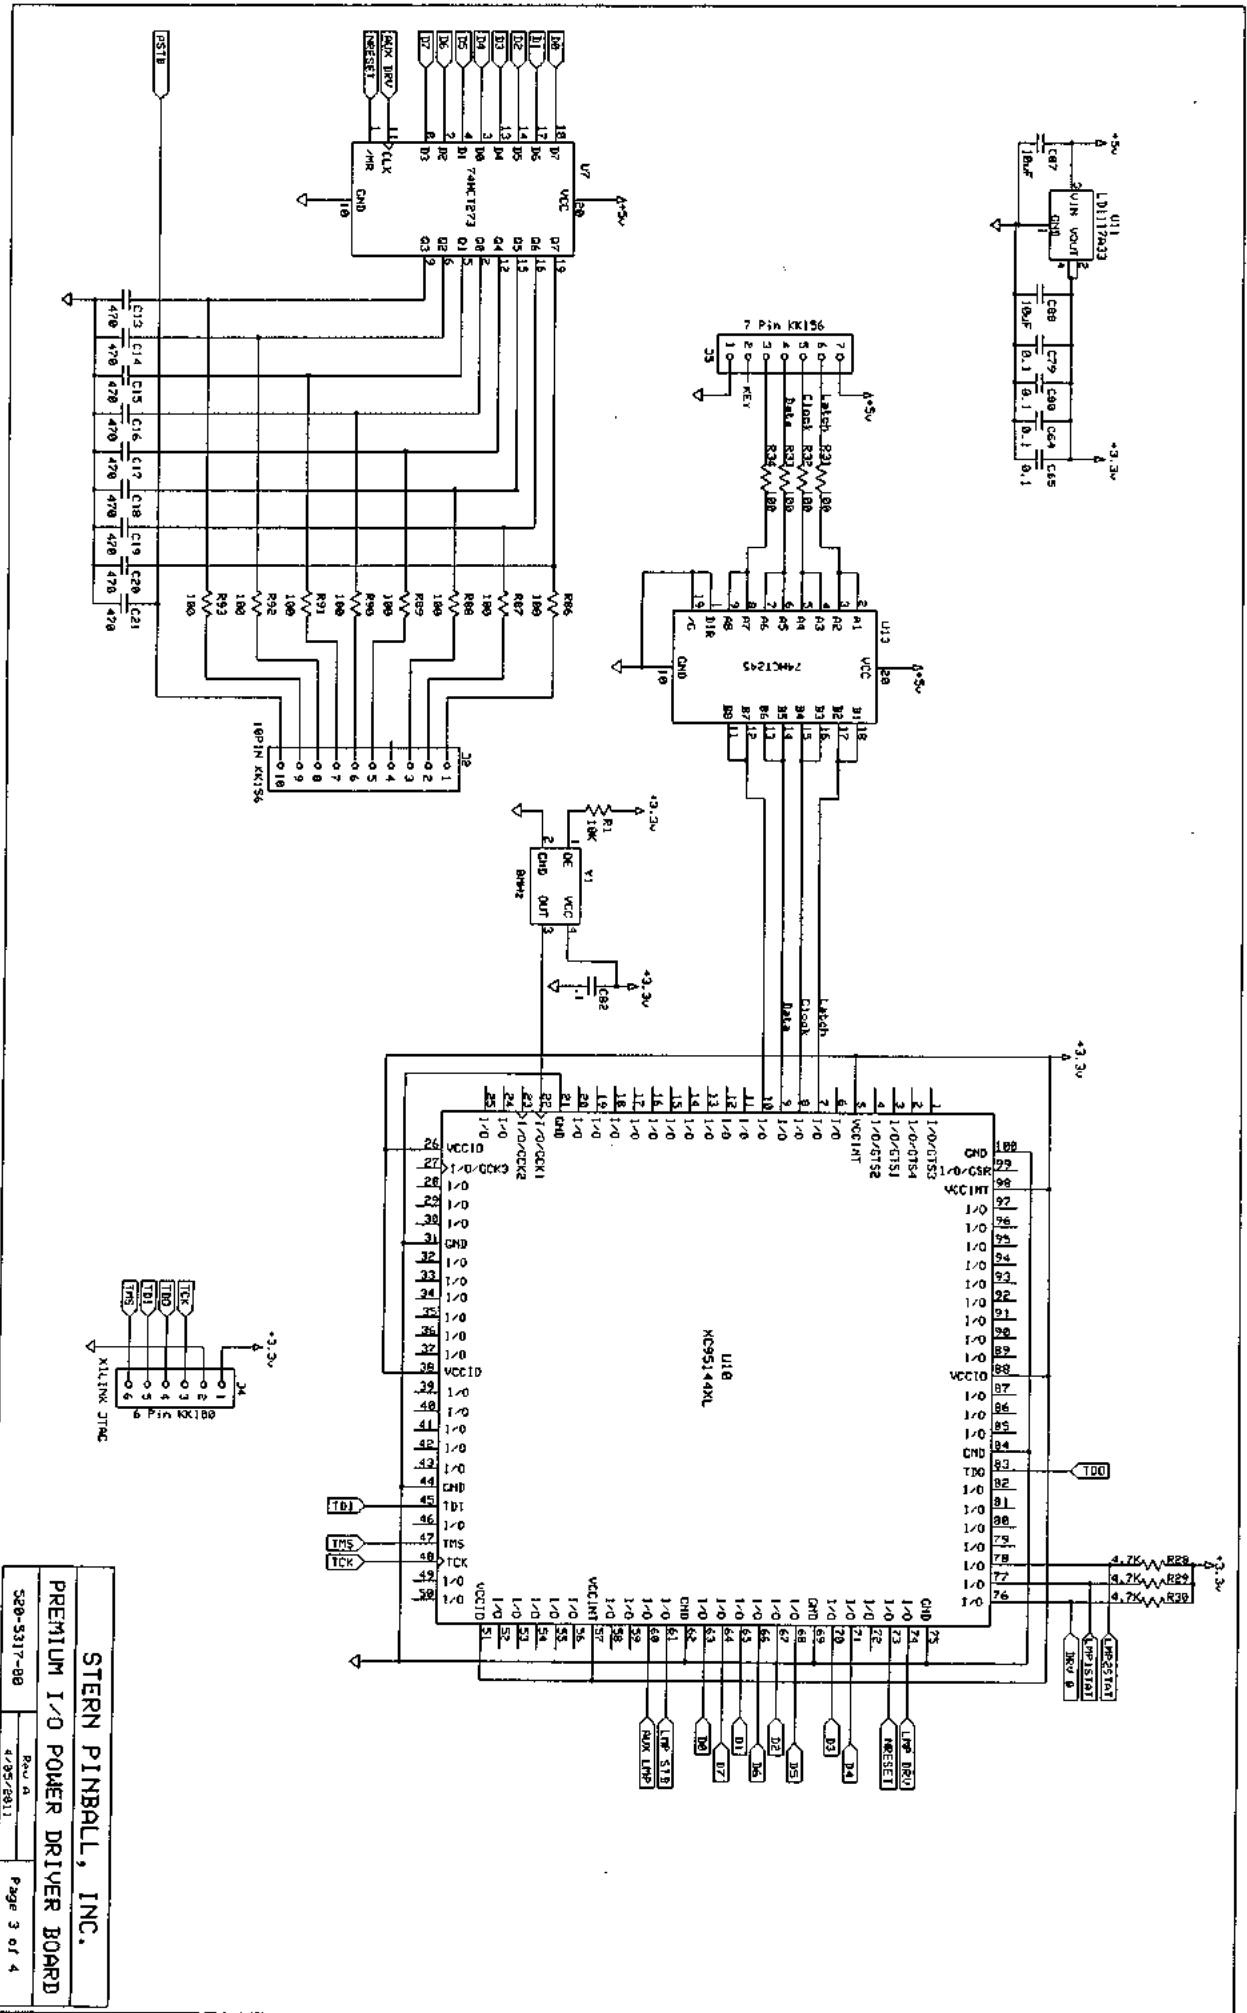

STERN PINBALL, INC.
 PREMIUM I/O POWER DRIVER BOARD
 S20-5317-00
 Rev. A
 4/25/2011
 Page 3 of 4


Y32

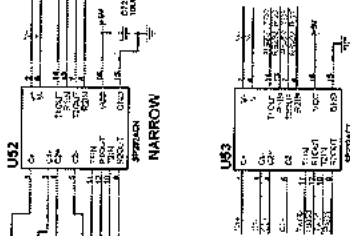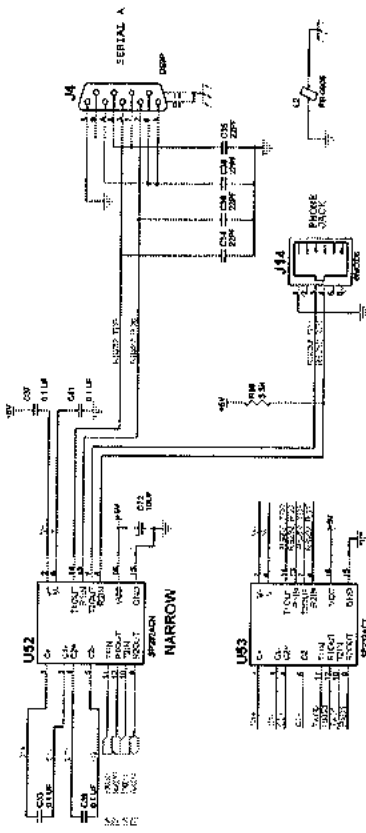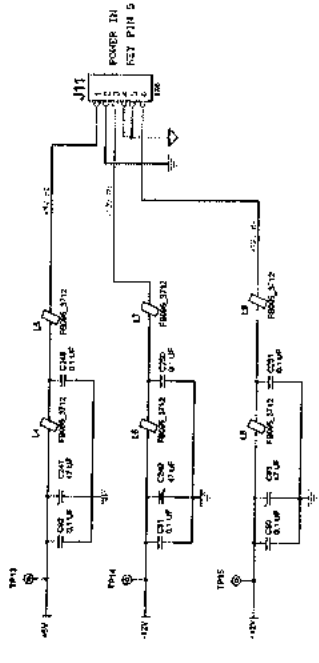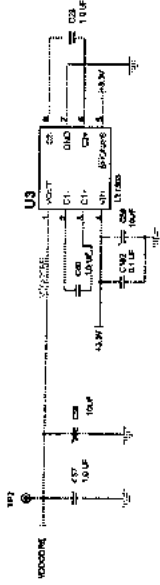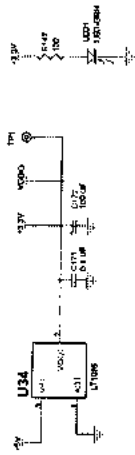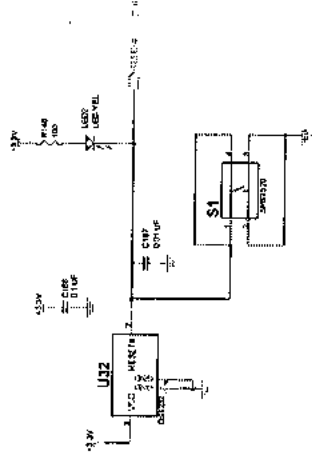


WIDE ALTERNATE FOOTPRINT



MOUNTING HOLES

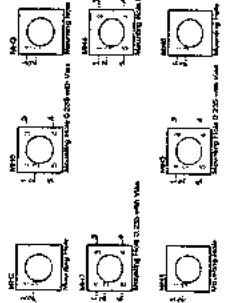

TOOLING HOLES

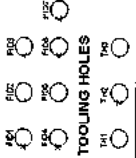

Stern 520-5246-02
 Right Hand
 PROSPERITY AND CONFIDENTIAL - REQUIRES RDA



Standard Adjustments continued.

- #3 **REPLAY AWARD:** Set to **CREDIT**, **TICKET***, **TOKEN*** or **EXTRA BALL**. Factory Default = **CREDIT**. Set the type of award to be given to the player when the appropriate Replay Score threshold or level is achieved. If awarding a **CREDIT**, **TICKET** or **TOKEN** is prohibited in your area, select **EXTRA BALL**. This adjustment is not shown if **NONE** is installed in **Replay Type** (Standard Adjustment 1).
- *Note: If TICKET or TOKEN is selected, the game will require an optional Ticket or Token Dispenser and then Q24 Option (Standard Adj. 55) must be changed accordingly.*
- #4 **REPLAY LEVELS:** Set between 1 – 4 for the number of Replay Levels to be active. Factory Default = 1. This adjustment is not shown if **NONE** is installed in **Replay Type** (Standard Adjustment 1).
- #5 **AUTO REPLAY START:** Set between 5,000,000 – 150,000,000 (increments of 1,000,000) for the Auto Replay Start threshold. Factory Default = __,000,000. This adjustment is shown only if **AUTO** is installed in **Replay Type** (Standard Adjustment 1).
- #6 **DYNAMIC REPLAY START:** Set between 5,000,000 – 150,000,000 (increments of 1,000,000) for the Dynamic Replay Start threshold. Factory Default = __,000,000. This adjustment is shown only if **DYNAMIC** is installed in **Replay Type** (Standard Adjustment 1).
- #7 **REPLAY LEVEL #1:** Set between 5,000,000 – 150,000,000 (increments of 1,000,000). Factory Default = __,000,000. Set the first or only Replay Level. This adjustment is shown only if **FIXED** is installed in **Replay Type** (Standard Adjustment 1).
- #8 **REPLAY LEVEL #2:** Set between 5,000,000 – 150,000,000 (increments of 1,000,000). Factory Default = __,000,000. Set the second Replay Level. This adjustment is shown only if **FIXED** is installed in **Replay Type** (Standard Adjustment 1) and 2 is installed in **Replay Levels** (Standard Adjustment 4).
- #9 **REPLAY LEVEL #3:** Set between 5,000,000 – 150,000,000 (increments of 1,000,000). Factory Default = __,000,000. Set the third Replay Level. This adjustment is shown only if **FIXED** is installed in **Replay Type** (Standard Adjustment 1) and 3 is installed in **Replay Levels** (Standard Adjustment 4).
- #10 **REPLAY LEVEL #4:** Set between 5,000,000 – 150,000,000 (increments of 1,000,000). Factory Default = __,000,000. Set the fourth Replay Level. This adjustment is shown only if **FIXED** is installed in **Replay Type** (Standard Adjustment 1) and 4 is installed in **Replay Levels** (Standard Adjustment 4).
- #11 **REPLAY BOOST:** Set to **YES** or **NO**. Factory Default = **YES**. When set to **YES**, while **FIXED** or **AUTO** maintains the Replay Levels, Replay Boost works as follows: If the Replay Level is 7,000,000 (regardless of the Replay Percentage), and the Player scores 20M, and receives the Replay Award, the next game the Current Replay Level is added to this base. Thus the next game, the Replay Level is 14,000,000. The Player again scores 20M. The next game the Player will need to achieve 21,000,000 to earn the Replay Award. If the Player does not achieve 21,000,000, the next game reverts back to the original 7,000,000 or the new adjusted level maintained by the Fixed or Autopercentaging Feature. This adjustment is shown only if **AUTO** or **FIXED** is installed in **Replay Type** (Standard Adjustment 1).
- #12 **SPECIAL LIMIT:** Set between 1 – 5, **UNLIMITED** or **NO SPECIALS**. Factory Default = 1. Set the maximum number of *Specials* that may be accumulated per game.
- #13 **SPECIAL PERCENTAGE:** Set between 1% – 50%. Factory Default = 10%. This adjustment allows the operator to adjust how frequently the **Special Feature** is made available to the player. This adjustment is not shown if **NO SPECIALS** is installed in **Special Limit** (Standard Adjustment 12).
- #14 **SPECIAL AWARD:** Set to **CREDIT**, **TICKET***, **TOKEN***, **POINTS** or **EXTRA BALL**. Factory Default = **CREDIT**. Select **EX. BALL** or **POINTS** if awarding a **CREDIT** or **TICKET / TOKEN** is prohibited in your area. This adjustment is not shown if **NO SPECIALS** is installed in **Special Limit** (Standard Adjustment 12).
- *Note: If TICKET or TOKEN is selected, the game will require an optional Ticket or Token Dispenser and then Q24 Option (Standard Adj. 55) must be changed accordingly.*
- #15 **FREE GAME LIMIT:** Set between 1 – 9, **UNLIMITED** or **NO FREE GAMES**. Factory Default = 5. Set the maximum number of *Free Games* that may be accumulated per game.
- #16 **EXTRA BALL LIMIT:** Set between 1 – 9, **UNLIMITED** or **NO EXTRA BALLS**. Factory Default = 5. Set the number of *Extra Balls* that may be accumulated per game.
- #17 **EXTRA BALL PERCENTAGE:** Set between 1% – 50%. Factory Default = 25%. This adjustment allows the operator to adjust how frequently the **Extra Ball Feature** is made available to the player. This adjustment is not shown if **NO EXTRA BALLS** is installed in **Extra Ball Limit** (Standard Adjustment 16).
- #18 **GAME PRICING:** There are two (2) methods available for *Coin Switch Programming*: **Standard & Custom**. Set between **AUSTRALIA 1 – UK 6** or **CUSTOM**. Factory Default = **USA 10**. *Shortcut: Set Custom Pricing and instructions, review the Utilities Section, Set Custom Pricing.* The appropriate Dip Switch Setting (Dip Sw. 1-8 location CPU/Sound PCB SW1) in relationship to the Pricing Scheme selected is important (view the tables on the following pages for more information).

Standard Adjustment 18, Game Pricing, continued on the next page.

S.F.I.

USA & International (non-Euro) Standard Pricing Select Table

CPU/SOUND PCB DIP-SWITCH SW1 SETTING		COUNTRY SETTING OPTION(S)	COIN MECHANISMS (SWITCHES) COINS THRU ... SLOT:				PRICING SCHEME Number of Plays (Credits) for Price Amount Shown See "Appendix J" for Coin Cards Examples & Info!				Requires SPI Coin Card(s) Part Number
Pos.	1 2 3 4 5 6 7 8	Default Highlighted	LEFT	CENTER	RIGHT	4TH	USD // UNITED STATES DOLLAR // [\$]				
ON	▲	USA 1	0.25	1.00	0.25	[]	1/0.25				755-5400-01-Y
OFF	▼	USA 2					1/0.50	2/0.75	3/1.00	755-5400-09-Y	
	▲	USA 3					1/0.50	For USA 8 and USA 7 Use: 755-5400-02-Y USA 8 Note: If player uses 1/4 25¢ quarter 2 plays, however, 47¢ and 3 plays			755-5400-02-Y
	▲	USA 4					1/0.50	2/1.00	3/1.50	5/2.00	755-5400-08-Y
	▲	USA 5					1/0.50	2/1.00	4/1.50	6/2.00	755-5400-00-Y
	▲	USA 6					1/1.00	3/1.00			755-5400-07-Y
	▲	USA 7					1/0.75	2/1.50	3/2.00		755-5400-11-Y
	▲	USA 8					1/1.00	3/2.00			
	▲	USA 9					1/1.00	3/2.00			
	▲	USA 10					1/1.00	3/2.00			
	▲	USA 11					1/1.00	3/2.00			
ON	▲	AUSTRALIA 1	0.20	1.00	2.00	[]	AUD // AUSTRALIAN DOLLARS // [\$AUS]				755-5406-00-Y (1 Side)
OFF	▼	AUSTRALIA 2					1/1.00	3/2.00			
	▲	AUSTRALIA 3					1/2.00	2/4.00	3/5.00		
	▲	AUSTRALIA 4					1/3.00	2/5.00	3/8.00	5/10.00	
	▲	AUSTRALIA 5					1/2.00	2/3.00			
	▲	AUSTRALIA 6					1/2.00	2/3.00			
ON	▲	CANADA 1 [25¢ door]	0.25	0.25	1.00	2.00	CAD // CANADIAN DOLLARS // [\$CAN]				755-5400-00-Y -01-Y or -02-Y
OFF	▼	CANADA 2 [dollar door]					1/1.00	3/2.00			
ON	▲	CANADA 1	1/1.00	3/2.00					755-5400-10-Y		
OFF	▼	CANADA 2									
ON	▲	CROATIA	1	2	5	[]	HRK // CROATIAN KUNA // [kuna]				755-5410-00-Y (2-Sided)
OFF	▼	CROATIA					1/3	2/5			
ON	▲	DENMARK 1	1	5	10	20	DKK // DANISH KRONER // [Kr]				755-5402-00-Y (2-Sided)
OFF	▼	DENMARK 2					1/2	2/4	3/5	4/7	5/9
ON	▲	JAPAN 1	100	[]	100	[]	JPY // JAPANESE YEN // [¥]				755-5408-01-Y (2-Sided)
OFF	▼	JAPAN 2					1/100	3/200			
ON	▲	LITHUANIA	1	2	5	[]	LTL // LITHUANIA LITAI // [Lt]				755-5416-00-Y (1 Side)
OFF	▼	LITHUANIA					1/2				
ON	▲	MIDDLE EAST	token		token	[]	TOKEN // Middle East currency used to buy token // [TOKEN]				755-5416-00-Y (use Side 1)
OFF	▼	MIDDLE EAST					1/1				
ON	▲	NEW ZEALAND 1	1	[]	2	[]	NZD // NEW ZEALAND DOLLAR // [\$NZD]				755-5406-00-Y (Side 2)
OFF	▼	NEW ZEALAND 2					1/1	3/2			
ON	▲	NORWAY 1	10	5	20	[]	NOK // NORWEGIAN KRONE // [Kr]				755-5403-01-Y or -02-Y / (2-Sided)
OFF	▼	NORWAY 2					1/10	3/20			
	▲	NORWAY 3					1/20	3/40			
	▲	NORWAY 4					1/20	3/40			
	▲	NORWAY 5					1/10	3/20			
	▲	NORWAY 6	1/20	3/40							
	▲	NORWAY 7	1/20	3/40							
	▲	NORWAY	1/20	3/40							
ON	▲	RUSSIA	▼ LEFT SWITCH CAN BE WIRED TO BILL ACCEPTOR ▼				RUB // RUSSIAN RUBLE // [Ruble]				755-5411-00-Y (2-Sided)
OFF	▼	RUSSIA	10	5	1	[]	1/5				
ON	▲	SO. AFRICA 1	0.50	1.00	2.00	5.00	ZAR // SOUTH AFRICAN RAND // [R]				755-5409-01-Y (2-Sided)
OFF	▼	SO. AFRICA 2					1/2.00	2/5.00			
ON	▲	SO. AFRICA 1	1/3.00	2/5.00							
OFF	▼	SO. AFRICA 2									
ON	▲	SWEDEN 1	1	5	10	[]	SEK // SWEDISH KRONOR // [kr]				755-5404-00-Y (2-Sided)
OFF	▼	SWEDEN 2					1/10	2/15	3/20		
ON	▲	SWEDEN 1	1/5	2/15	3/20						
OFF	▼	SWEDEN 2									
ON	▲	SWITZERLAND 1	1	2	5	[]	CHF // SWISS FRANCS // [Sf]				755-5405-00-Y (2-Sided)
OFF	▼	SWITZERLAND 2					1/1	2/2	3/3	4/4	6/5
ON	▲	SWITZERLAND 1	1/1	3/2	5/3	7/4	9/5				
OFF	▼	SWITZERLAND 2									
ON	▲	TAIWAN	10		10	[]	TWD // TAIWANESE DOLLAR // [TWD]				755-5412-00-Y (use Side 1)
OFF	▼	TAIWAN					1/10				
ON	▲	UK 1	▼ 5TH COIN SLOT NOT AVAILABLE WITH CUSTOM PRICING ▼				GBP // UNITED KINGDOM POUNDS // [£]				755-5407-00-Y
OFF	▼	UK 2	LEFT	CENTER	RIGHT	5TH	3/1.00	7/2.00			
	▲	UK 3					4/1.00			755-5407-01-Y	
	▲	UK 4	0.10	0.50	1.00	0.20	1/0.50	2/1.00	3/1.50	5/2.00	755-5407-01-Y
	▲	UK 5					1/0.30	2/0.60	3/0.90	4/1.00	755-5407-01-Y
	▲	UK 6					1/1.00	3/2.00			755-5407-01-Y
	▲	UK 6					2/2.00				755-5407-01-Y

36

ATTENTION: UK 5TH COIN SLOT TIED TO 6TH CHANNEL ON ELEC COIN MECH

▲ Coin Only



Standard Adjustment 18, Game Pricing, continued.

Euro 1-12 Summary & International (Euro) Standard Pricing Select Table

CPU/SOUND PCB DIP SWITCH SW1 SETTING		COUNTRY SETTING OPTION(S)	COIN MECHANISMS (SWITCHES) COINS THRU ... SLOT:				PRICING SCHEME	Requires SPI Coin Card(s) Part Number			
Pos.	1 2 3 4 5 6 7 8	Default Highlighted	LEFT	CENTER	RIGHT	4TH	Number of Plays (Credits) for Price Amount Shown See "Appendix J" for Coin Cards Examples & Info!				
ON	S E E B E L O W	Euro 1	0.50	1.00	2.00	0.20 <i>optional</i>	EUR // EUROPEAN UNION EUROS // €				
OFF	S E T T I N G S	Euro 2					1/0.50	2/1.00	3/1.50	5/2.00	755-5401-01-Y
		Euro 3					1/0.50	2/1.00	3/1.50	6/2.00	755-5401-02-Y
		Euro 4					1/0.50	3/1.00	4/1.50	7/2.00	755-5401-03-Y
		Euro 5					1/0.50	3/1.00	4/1.50	7/2.00	755-5401-04-Y
		Euro 6					2/0.50				755-5401-05-Y
		Euro 7					1/1.00	2/2.00	3/3.00	5/4.00	755-5401-06-Y
		Euro 8					1/1.00	3/2.00			755-5401-07-Y
		Euro 9					1/1.00	2/1.50	3/2.00		755-5401-08-Y
		Euro 10					1/1.00	3/2.00	7/3.00		755-5401-09-Y
		Euro 11					1/1.00	4/2.00			755-5401-10-Y
		Euro 12					2/1.00	4/2.00	6/3.00	9/4.00	755-5401-11-Y

For a different Euro Pricing Scheme (other than Factory Default listed below), scroll through Standard Adjustment 18: Euro 1-12 or CUSTOM* for new setting (reference above Euro 1-12 Summary). Keep the Country Dip Switch Setting the same as listed below.

Pos.	1 2 3 4 5 6 7 8	Default Highlighted	EUR // EUROPEAN UNION EUROS // €							
ON	▲ ▼ ▼ ▼ ▼ ▼ ▼ ▼	AUSTRIA Euro 9	0.50	1.00	2.00	1/1.00	2/1.50	3/2.00	755-5401-09-Y	
OFF	▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼									
Pos.	1 2 3 4 5 6 7 8	Default Highlighted	EUR // EUROPEAN UNION EUROS // €							
ON	▲ ▼ ▼ ▼ ▼ ▼ ▼ ▼	BELGIUM Euro 1	0.50	1.00	2.00	1/0.50			755-5401-01-Y	
OFF	▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼									
Pos.	1 2 3 4 5 6 7 8	Default Highlighted	EUR // EUROPEAN UNION EUROS // €							
ON	▲ ▲ ▼ ▼ ▼ ▼ ▼ ▼	FINLAND Euro 8	0.50	1.00	2.00	1/1.00	3/2.00		755-5401-08-Y	
OFF	▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼									
Pos.	1 2 3 4 5 6 7 8	Default Highlighted	EUR // EUROPEAN UNION EUROS // €							
ON	▲ ▲ ▼ ▼ ▼ ▼ ▼ ▼	FRANCE Euro 10	0.50	1.00	2.00	1/1.00	3/2.00	7/3.00	755-5401-10-Y	
OFF	▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼									
Pos.	1 2 3 4 5 6 7 8	Default Highlighted	EUR // EUROPEAN UNION EUROS // €							
ON	▲ ▲ ▲ ▼ ▼ ▼ ▼ ▼	GERMANY 1				1/0.50			755-5401-01-Y	
OFF	▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	GERMANY 2	0.50	1.00	2.00	1/0.50	2/1.00	3/1.50	5/2.00	755-5401-02-Y
		GERMANY 3				1/0.50	2/1.00	3/1.50	6/2.00	755-5401-04-Y
Pos.	1 2 3 4 5 6 7 8	Default Highlighted	EUR // EUROPEAN UNION EUROS // €							
ON	▲ ▲ ▲ ▲ ▼ ▼ ▼ ▼	GREECE Euro 8	0.50	1.00	2.00	1/1.00	3/2.00		755-5401-08-Y	
OFF	▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼									
Pos.	1 2 3 4 5 6 7 8	Default Highlighted	EUR // EUROPEAN UNION EUROS // €							
ON	▲ ▼ ▼ ▼ ▲ ▼ ▼ ▼	ITALY 1	0.50		0.50	1/0.50			755-5401-01-Y	
OFF	▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	ITALY 2				1/1.00	3/2.00		755-5401-08-Y	
Pos.	1 2 3 4 5 6 7 8	Default Highlighted	EUR // EUROPEAN UNION EUROS // €							
ON	▲ ▼ ▼ ▲ ▼ ▼ ▼ ▼	NETHERLANDS Euro 3	0.50	1.00	2.00	1/0.50	3/1.00		755-5401-03-Y	
OFF	▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼									
Pos.	1 2 3 4 5 6 7 8	Default Highlighted	EUR // EUROPEAN UNION EUROS // €							
ON	▲ ▼ ▼ ▼ ▲ ▼ ▼ ▼	PORTUGAL Euro 1	0.50		0.50	1/0.50			755-5401-01-Y	
OFF	▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼									
Pos.	1 2 3 4 5 6 7 8	Default Highlighted	EUR // EUROPEAN UNION EUROS // €							
ON	▲ ▼ ▼ ▲ ▼ ▼ ▼ ▼	SPAIN Euro 8	0.50	1.00	2.00	1/1.00	3/2.00		755-5401-08-Y	
OFF	▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼									

HIGHLIGHTED = Factory Default **HIGHLIGHTED** = Not Shown on Coin Card

For the associated Coinage Card required if the Factory Default Setting was changed, view on-line at:
<http://www.sternpinball.com/coinagecards.shtml>

You can download and print the replacement card. Adobe® Reader 5.0 or higher required (links on site). Use Yellow Card Stock: ASTROBRIGHTS® SOLAR YELLOW #65 FROM WAUSAU PAPER PRODUCTS (Stock #22731)

#19 **MATCH PERCENTAGE:** Set between 0% - 10% or OFF. Factory Default = 9%. At 0% the Match Animation Feature occurs at the end of the game but never awards the Match Award (Standard Adjustment 20). Set to OFF, no Match Animation Feature is shown.

#20 **MATCH AWARD:** Set to CREDIT, TICKET* or TOKEN*. Factory Default = CREDIT. This adjustment is not shown if OFF is installed in Match Percentage (Standard Adjustment 19).

*Note: If TICKET or TOKEN is selected, the game will require an optional Ticket or Token Dispenser and then Q24 Option (Standard Adj. 55) must be changed accordingly.

#21 **BALLS PER GAME:** Set between 1 - 10. Factory Default = 3. Set the number of balls per game.

Standard Adjustments 22-36 continued on the next page. Standard Adjustments continued.



- #22 **TILT WARNINGS:** Set between 0 – 3. Factory Default = 2. Set the number of Plumb Bob Tilt Switch closures before the ball in play is tilted. *Each closure generates an audible alert and/or display alert.*
- #23 **CREDIT LIMIT:** Set between 4 – 50. Factory Default = 30. Set the maximum credits allowed.
- #24 **ALLOW HIGH SCORES:** Set to **YES** or **NO**. Factory Default = **YES**. When set to **YES**, if a player exceeds the Default Grand Champion or 1-4 High Scores, the player may receive a **High Score Award** (Standard Adjustment 25) and enter their **3 Initials** or **10-Letter Name** (Standard Adjustment 36). Set to **NO** to disable this feature. *The following Standard Adjustments 25-37 are not shown if **NO** is installed.*
- #25 **HIGH SCORE AWARD:** Set to **CREDIT**, **TICKET*** or **TOKEN***. Factory Default = **CREDIT**. Set the type of award to be given to the player when the appropriate **Grand Champion Score** or **High Score #1 – #4** threshold or level is achieved. If awarding a **CREDIT**, **TICKET** or **TOKEN** is prohibited in your area, install **NO** in **Allow High Scores** (Standard Adjustment 24). *This adjustment is not shown if **NO** is installed in **Allow High Scores** (Standard Adjustment 24).*
- * Note: If **TICKET** or **TOKEN** is selected, the game will require an optional Ticket or Token Dispenser and then Q24 Option (Standard Adj. 55) must be changed accordingly.*
- #26 **GRAND CHAMPION AWARDS:** Set between 0 – 5. Factory Default = 1. Set the number of **High Score Award(s)** (Std. Adj. 25), awarded for exceeding the Grand Champion Score (Standard Adjustment 31). *This adjustment is not shown if **NO** is installed in **Allow High Scores** (Standard Adjustment 24).*
- #27 **HIGH SCORE #1 AWARDS:** Set between 0 – 3. Factory Default = 1. Set the number of **High Score Award(s)** (Std. Adj. 25), awarded for exceeding the High Score #1 (Standard Adjustment 32). *This adjustment is not shown if **NO** is installed in **Allow High Scores** (Standard Adjustment 24).*
- #28 **HIGH SCORE #2 AWARDS:** Set between 0 – 2. Factory Default = 0. Set the number of **High Score Award(s)** (Std. Adj. 25), awarded for exceeding the High Score #2 (Standard Adjustment 33). *This adjustment is not shown if **NO** is installed in **Allow High Scores** (Standard Adjustment 24).*
- #29 **HIGH SCORE #3 AWARDS:** Set between 0 – 1. Factory Default = 0. Set the number of **High Score Award(s)** (Std. Adj. 25), awarded for exceeding the High Score #3 (Standard Adjustment 34). *This adjustment is not shown if **NO** is installed in **Allow High Scores** (Standard Adjustment 24).*
- #30 **HIGH SCORE #4 AWARDS:** Set between 0 – 1. Factory Default = 0. Set the number of **High Score Award(s)** (Std. Adj. 25), awarded for exceeding the High Score #4 (Standard Adjustment 35). *This adjustment is not shown if **NO** is installed in **Allow High Scores** (Standard Adjustment 24).*
- #31 **GRAND CHAMPION SCORE:** Set between 1,000,000 – 1,000,000,000 (increments of 1,000,000). Factory Default = __,000,000. Set the desired **Grand Champion Score** level a player needs to exceed to earn the **High Score Award** (Standard Adjustment 25). A score higher than the default, cannot be reset by Standard Adjustment 37, **HSTD Reset Count**. *The Grand Champion Score will revert to the Factory Default Score **ONLY** if a **Reset Grand Champion** is performed in the **RESET MENU** (via the **UTILITIES MENU**) or if the game is without power for more than 12 hours after the CPU/Sound PCB Coin Cell Battery is expired or removed. This adjustment is not shown if **NO** is installed in **Allow High Scores** (Standard Adjustment 24).*
- #32 **HIGH SCORE #1:** Set between 1,000,000 – 1,000,000,000. Factory Default = __,000,000. Set the desired **High Score #1** level a player needs to exceed to earn the **High Score Award** (Standard Adjustment 25). A score higher than the default, will be reset by Standard Adjustment 37, **HSTD Reset Count**. *The High Score will revert to the Factory Default Score **ONLY** if a **Reset High Scores** is performed in the **RESET MENU** (via the **UTILITIES MENU**) or if the game is without power for more than 12 hours after the CPU/Sound PCB Coin Cell Battery is expired or removed. This adjustment is not shown if **NO** is installed in **Allow High Scores** (Standard Adjustment 24).*
- #33 **HIGH SCORE #2:** Set between 1,000,000 – 1,000,000,000. Factory Default = __,000,000. Set the desired **High Score #2** level a player needs to exceed ... (continued in Standard Adjustment 32 definition above).
- #34 **HIGH SCORE #3:** Set between 1,000,000 – 1,000,000,000. Factory Default = __,000,000. Set the desired **High Score #3** level a player needs to exceed ... (continued in Standard Adjustment 32 definition above).
- #35 **HIGH SCORE #4:** Set between 1,000,000 – 1,000,000,000. Factory Default = __,000,000. Set the desired **High Score #4** level a player needs to exceed ... (continued in Standard Adjustment 32 definition above).
- #36 **HSTD (HIGH SCORE TO DATE) INITIALS:** Set to **3 INITIALS** or **10 LETTER NAME**. Factory Default = **3 INITIALS**. When set to **3 INITIALS**, the player is allowed only 3 initials to input. When set to **10 LETTER NAME**, the player is allowed to enter 10 initials to input. *This adjustment is not shown if **NO** is installed in **Allow High Scores** (Standard Adjustment 24).*

Standard Adjustments 37-50 continued on the next page.



Standard Adjustments continued.

- #37 **HSTD (HIGH SCORE TO DATE) RESET COUNT:** Set between **100 – 9900** or **OFF** (increments of 100). Factory Default = **2000**. Set the number of games between "automatic resets" of High Scores back to the Factory Defaults for **ONLY** Standard Adj. 32 – 35, **High Score #1 – #4**. The High Score will revert to the Factory Default Scores when the number of games stated is reached. **Reset High Scores** can be performed in the **RESET MENU** (via the **UTILITIES MENU**) anytime or if the game is without power for more than 12 hours after the CPU/Sound PCB Coin Cell Battery is expired or removed. This adjustment is not shown if **NO** is installed in **Allow High Scores** (Standard Adj. 24).
- #38 **FREE PLAY:** Set to **YES** or **NO**. Factory Default = **NO**. When set to **YES**, no coins are required for Game Play.
- #39 **LANGUAGE:** Set to **ENGLISH, GERMAN, FRENCH, SPANISH** or **ITALIAN**. Factory Default = **ENGLISH**. Set the language for the game. Language of game is also shown in the Dot Display (along with the Game Title and code version) at the start-up routine which follows a game reset or power-up.
- #40 **PLAYER LANGUAGE SELECT:** Set to **YES** or **NO**. Factory Default = **YES**. When set to **YES**, after the player presses the **Start Button** (to start a game with adequate credit), the player has the option to choose a language by pressing either **Flipper Button** before game start (options of languages installed are shown on the Dot Display). **Note:** If set to **NO** or if only one language is installed and the setting is set to **YES**, the game will start immediately after the **Start Button** press. Language(s) available are dependent on game destination from the factory. Other languages may be available on-line for download and installed on your game. With the proper dip switch installed, the language option(s) can be changed. For more information or help, call Technical Support at 800-542-5377 (708-345-7700).
- #41 **CUSTOM MESSAGE:** Set to **ON, CHANGE** or **OFF**. Factory Default = **ON**. Shortcut: **Enter Custom Message** and instructions, review the Utilities Section, **Enter Custom Message**.
- #42 **FLASH LAMP POWER:** Set to **NORMAL, OFF** or **DIM**. Factory Default = **NORMAL**. When set to **DIM**, the Flash Lamps impulse power is reduced by 25% and when set to **OFF** the Flash Lamps will not flash. For Flash Lamps used in this game, **Go To Flash Lamps Menu** via the **DIAGNOSTICS MENU** (see the Diagnostics Section).
- #43 **COIL PULSE POWER:** Set to **NORMAL, HARD** or **SOFT**. Factory Default = **NORMAL**. When set to **HARD**, the coil pulse power is **increased** by 12.5% of the normal pulse rate. When set to **SOFT** the coil pulse power is **decreased** by 12.5% of the normal pulse rate. This adjustment is provided to compensate for **Low Line** or **High Line** voltage conditions where the solenoids (coils) appear to **kicking too weak** or **too hard**. Adjust as required.
- #44 **KNOCKER VOLUME:** Set to **NORMAL, OFF** or **LOW**. Factory Default = **NORMAL**. When set to **LOW**, the volume is decreased 50%. When set to **OFF**, no sound is heard when the "knocker" is sounded. Test the knocker sound in the **Fire Knocker Test** via the **DIAGNOSTICS MENU** (see Section 3, Chapter 2, **GO TO DIAGNOSTICS MENU, Page 19**).
- #45 **GAME RESTART:** Set to **YES** or **NO**. Factory Default = **YES**. When set to **YES**, a new game may be started during any ball after the first ball is completed (if credits allow). Pressing the Start Button during the first ball will add additional players (up to 4, if credits allow). When set to **NO**, the game disables the Start Button after the first ball until the final ball is in play.
- #46 **BILL VALIDATOR:** Set to **YES** or **NO**. Factory Default = **NO**. When set to **YES**, in **Game Attract Mode** an "Insert Bill Animation" is shown in the display (or just the absence of the Coin Animation). When set to **NO**, an "Insert Coin Animation" is shown. (This adjustment will appear when implemented).
- #47 **MUSIC VOLUME:** Set between 1 – 15. Factory Default = 1. After volume is set via Service Buttons this adjustment can be utilized to adjust the background music (1 all the way on, 15 all the way off) while keeping the Special Sound Effects at the same level.
- #48 **BALL SAVE TIME:** Set between 0:01 – 0:15, **AUTO** or **NO BALL SAVES**. Factory Default = 0:05. When set to **NO BALL SAVES** this feature is unavailable. Set between 0:01 through 0:15 (single increments) for the ball to be sent back into play if the time set is not met (per ball). Set to **AUTO** to automatically adjust the Ball Save Timer based on the average ball time.
- #49 **TIMED PLUNGER:** Set to **OFF** or 0:01 – 1:00. Factory Default = **OFF**. The plunger will "Autoplunge" the ball (at the time set) when the ball is at the beginning of play, waiting for the player.
- #50 **FLIPPER BALL LAUNCH:** Set to **OFF, LEFT FLIPPER, RIGHT FLIPPER, EITHER FLIPPER** or **BOTH FLIPPERS**. Default is **OFF**. This feature allows the player to operate the Auto Ball Launch with the Flipper Button(s) depending on which setting is chosen.

Standard Adjustments 51-63 continued on the next page.



Standard Adjustments continued.

- #51 **COINDOOR BALL SAVER:** Set to **YES** or **NO**. Factory Default = **NO**. When set to **NO**, this feature is not available. When set to **YES**, this feature allows the Coin Door to be opened during game play; the ball will drain but the game will be placed "on hold". When the Coin Door is closed, the pinball will return to the Shooter Lane, and the game will resume. *Useful at locations where technicians change the cash box regularly at exact times of the day where players can be on the game.*
- #52 **COMPETITION MODE:** Set to **YES** or **NO**. Factory Default = **NO**. When set to **NO**, this feature is not available. Set to **YES**, this feature will equalize random game features and global score values during multi-player games by predetermined competition rules set by programming. If an **Install Competition** was made via the **INSTALLS MENU** (which automatically changes this setting to **YES**), and this setting was changed back to **NO**, the **Competition Mode** will be turned **OFF** (cancelled).
- #53 **CONSOLATION BALL:** Set to **YES** or **NO**. Factory Default = **YES**. When set to **YES**, the **EXTRA BALL** (lamp insert, location varies) will be lit on the last ball in play, if certain programming criteria is met.
- #54 **FAST BOOT:** Set to **YES** or **NO**. Factory Default = **YES**. When set to **NO** or if you hold both **Flipper Buttons** during Power-Up, this feature is not available and will display all normal Power-Up screens. When set to **YES**, the game will not display the normal informative Power-Up screens, specifically the CPU Version screen and the Location/Game ID screen. Regardless of the setting, normal Power-Up safety checks are still performed. *(This adjustment will appear when implemented).*
- #55 **Q24 OPTION:** Set to **COIN METER**, **TOKEN DISPENSER** or **KNOCKER**. Factory Default = **COIN METER**. This Coil (Solenoid) Location is left "open" at the Factory to allow for these optional Mechanisms to be added to the game. If selecting **TOKEN DISPENSER**, Standard Adjustments 3, 14, 20 & 25 should be changed to **TOKEN**. *Call Tech. Support at 1-800-542-5377 if more information is required on this option.*
- #56 **TICKET DISPENSER:** Set to **YES** or **NO**. Factory Default = **NO**. *This adjustment is required only for games which have an optional Deltronics (DL-1275-2 PCB Style, SPI Part Nr. 515-7275-00) Ticket Dispenser installed. Unique CPU Sound Bd. Dip Switch Setting required, changes the Default to YES.*
- #57 **PLAYER COMPETITION:** Set to **YES** or **NO**. Factory Default = **YES**. **Competition Mode** unrandomizes feature events, and standardizes game play and rule sets (varies from game to game) for fair competitions. With at least one credit posted, or with the game set for 'FREE PLAY', during the game-over Attract Mode, press the **Left Flipper Button** and hold it in for approximately one second. The following message will appear on the display for approximately 10 seconds: **'COMPETITION MODE READY ... PRESS START NOW'**. If a game is started (either by pressing the 'START' button for a regular game, or by pressing the 'TOURNAMENT START' button for a tournament game) while this message appears on the display, then competition mode will be enabled for all players during the game. General rules are covered in the Instruction Card. Other *Hints and/or Rules* can be made known on this game either visually (the *Dot Display* or *Flashing Light Inserts*) or can be audible.
- #58 **TEAM SCORES:** Set to **YES** or **NO**. Factory Default = **NO**. Set to **YES**, then Team Play will be made available. **Team Play only works in a 4-Player Game**. The totals for Players 1 / 3 (Team 1) & Players 2 / 4 (Team 2) are then displayed individually **as well as** the combined score for **BOTH TEAMS** to enable **Team Play (Doubles)**. *(This adjustment will appear when implemented).*
- #59 **LOCATION ID:** Set between **0** to **9999**. Factory Default = **0**. This adjustment allows the operator to assign a location identification number to the audit print-out sheet. *(Will not be affected by a Factory Reset.)*
- #60 **GAME ID:** Set between **0** to **9999**. Factory Default = **0**. This adjustment allows the operator to assign a game identification number to the audit print-out sheet. *(Will not be affected by a Factory Reset.)*
- #61 **TIME FORMAT:** Set to **12-HOUR** or **24-HOUR**. Factory Default = **12-HOUR**. This adjustments determines how the time is displayed. *Time used for Tournament and Data Dumps where a time stamp is required.*
- #62 **COIN INPUT DELAY:** Set between **30** to **60** or **OFF**. Factory Default = **30**. This adjustment creates a short time delay between the moment the coin is inserted into the **Coin Slot** to the moment the CPU/Sound PCB registers the coin (**30 = approximately 1/2 second**).
- #63 **LOST BALL RECOVERY:** Set to **YES** or **NO**. Factory Default = **NO**. Set to **YES**, at the start of the 5th consecutive ball search (with no scoring between searches), the game will consider any balls in play to be permanently lost and will attempt to recover from this situation by serving a new ball into play from the ball trough. Set to **NO** (to suppress this adjustment behavior) for the game to perform the "ball search" indefinitely until the lost balls are found or replaced.

STANDARD ADJUSTMENTS [#1 - #63] ▼

Nr.	STANDARD ADJUSTMENT NAME	USA DEFAULT	YOUR SETTING	Nr.	STANDARD ADJUSTMENT NAME	USA DEFAULT	YOUR SETTING
1	REPLAY TYPE	AUTO		32	HIGH SCORE #1	_,000,000	
2	‡ REPLAY PERCENTAGE	10%		33	HIGH SCORE #2	_,000,000	
3	‡ REPLAY AWARD	CREDIT		34	HIGH SCORE #3	_,000,000	
4	‡ REPLAY LEVELS	1		35	HIGH SCORE #4	_,000,000	
5	‡ AUTO REPLAY START	_,000,000		36	HSTD INITIALS	3 INITIALS	
6	‡ DYNAMIC REPLAY START	_,000,000		37	HSTD RESET COUNT	2000	
7	‡ REPLAY LEVEL #1	_,000,000		38	FREE PLAY	NO	
8	‡ REPLAY LEVEL #2	_,000,000		39	LANGUAGE	ENGLISH	
9	‡ REPLAY LEVEL #3	_,000,000		40	PLAYER LANGUAGE SELECT	YES	
10	‡ REPLAY LEVEL #4	_,000,000		41	CUSTOM MESSAGE	ON	
11	‡ REPLAY BOOST	YES		42	FLASH LAMP POWER	NORMAL	
12	SPECIAL LIMIT	1		43	COIL PULSE POWER	NORMAL	
13	‡ SPECIAL PERCENTAGE	10%		44	KNOCKER VOLUME	NORMAL	
14	SPECIAL AWARD	CREDIT		45	GAME RESTART	YES	
15	FREE GAME LIMIT	5		46	BILL VALIDATOR	NO	
16	EXTRA BALL LIMIT	5		47	MUSIC VOLUME	1	
17	‡ EXTRA BALL PERCENTAGE	25%		48	BALL SAVE TIME	0:05	
18	GAME PRICING	USA 10		49	TIMED PLUNGER	OFF	
19	MATCH PERCENTAGE	9%		50	FLIPPER BALL LAUNCH	OFF	
20	MATCH AWARD	CREDIT		51	COINDOOR BALL SAVER	NO	
21	BALLS PER GAME	3		52	COMPETITION MODE	NO	
22	TILT WARNINGS	2		53	CONSOLATION BALL	YES	
23	CREDIT LIMIT	30		54	FAST BOOT	YES	
24	ALLOW HIGH SCORES	YES		55	Q24 OPTION	COIN METER	
25	HIGH SCORE AWARD	CREDIT		56	TICKET DISPENSER	NO	
26	GRAND CHAMPION AWARDS	1		57	PLAYER COMPETITION	YES	
27	HIGH SCORE #1 AWARDS	1		58	TEAM SCORES	NO	
28	HIGH SCORE #2 AWARDS	0		59	LOCATION ID	0	
29	HIGH SCORE #3 AWARDS	0		60	GAME ID	0	
30	HIGH SCORE #4 AWARDS	0		61	TIME FORMAT	12-HOUR	
31	GRAND CHAMPION SCORE	_,000,000		62	COIN INPUT DELAY	30	
				63	LOST BALL RECOVERY	YES	

Factory Defaults Settings are subject to change during production (especially Standard Adjustments 2, 4, 5, 13, 16-17, 19, 31-35 & 47).
 ‡ Not all Standard Adjustments are shown. Depending on the setting (whether Factory Default or if changed by the operator), associated adjustments do not appear, if not required. Note: If Game Dip Switch other than USA is installed, different Defaults will appear.


Feature Adjustments [#1 - #+]

GAME To initiate, from the **ADJUSTMENTS MENU**, select the "GAME" Icon. The Dot Matrix Display will indicate the adjustment number (in this group), adjust. name, adjust. setting and comment line. The current adjustment will remain on the display until the next adjustment is viewed or when this sub-menu is exited.

>>> **FACTORY RESET or CODE UPDATE NOTE:** Don't forget, any changes you make to your adjustments will revert back to the Factory Default settings if you perform a Factory Reset or update your Game Code. See Utilities Section (**GO TO RESETS MENU** and **GO TO USB MENU**).

View the Coils Detailed Chart Menu to see if this game is Shaker Motor Enabled. If it is, set the options in the Feature Adjustment as seen below. (typically the last one).

SHAKER MOTOR (OPTIONAL) : Set to **NONE, MINIMAL USE, MODERATE USE** or **MAXIMAL USE**.
 Factory Default = **MODERATE USE**. Set to any of the varying "... USES" if an Optional Shaker Motor Kit (SPI Part Number 502-5027-00) was installed correctly in this pinball machine. See the assembly (kit) on the last page of Blue Pages (Major Assemblies). Also see Shaker Motor Coil (Q8) in the Coils Detailed Chart Table at the beginning of this Service Game Manual or the beginning of the Yellow Pages.

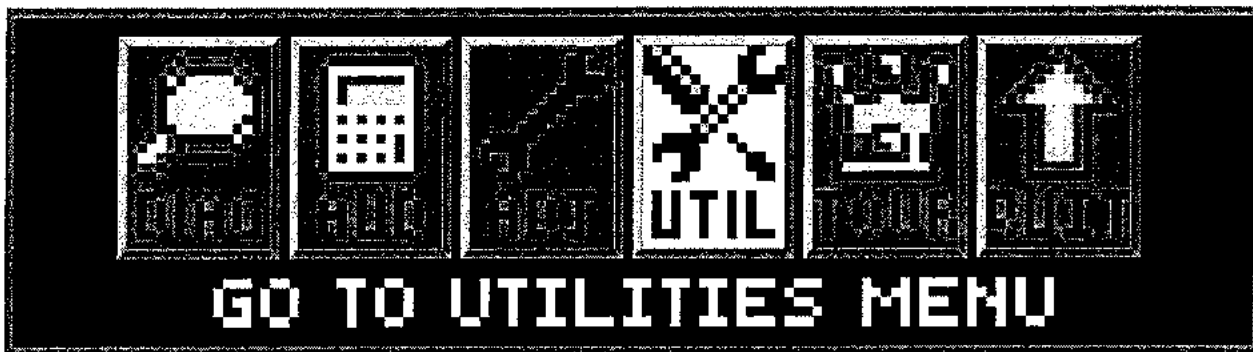

To initiate, from the **MAIN MENU**, select the "UTIL" *Icon*. The **UTILITIES MENU** provides ways to quickly and easily customize your game with **Installs** (*pre-sets for game Standard & Feature Adjustments*), set-up a **Custom Message** (*short-cut to Standard Adjustment 41, Custom Message*), set-up **Custom Pricing** (*short-cut to Standard Adjustment 18, to the Custom Pricing Sub-Menu*), set-up the **Date and Time** (*required if the date and time is needed to be accurate for data dumps and for tournaments*), reset certain particular game data or perform a complete **Factory Reset** and to download game data, update or backup game code in the **USB MENU**.

All **UTILITIES, INSTALLS, RESETS MENU** and **USB MENU** *Icons* and there usages are explained throughout this chapter in the same order as seen in the Dot Matrix Display. **NOTE:** Depending on Game Type, Version, selections made, Dip Switch settings, location and/or areas, some *Icons* may appear non-functional or may not appear at all. **Installs (Adjustments), Icons and/or functions, order and operation are subject to change. If in doubt use the Factory Default Settings (review Install Factory on the next page).**

In displays where changes can be made or to perform a function, use the **GREEN Button** to go [**BACK**], exit or escape, the **RED Buttons** to [< / -] MOVE BACK / LEFT / [+ / >] MOVE FORWARD / RIGHT to view the next audit in the group, and the **BLACK Button** to [**SELECT**] the sub-menus.



Go To Installs Menu

To initiate, from the **UTILITIES MENU**, select the "INST" *Icon*. The **INSTALLS MENU** provides 13 **Installs** to vary **Game Play Difficulty** (*set with Feature Adjustments*) or **Game Play Type** and **Install Factory** (*restores all adjustments to Factory Defaults*).

For **detailed customization** or to check current **Adjustments Defaults** (*either changed by YOU in the Adjustments Menu or by this INSTALLS MENU or for Factory Default Settings*), see **Section 3, Chapter 4, GO TO ADJUSTMENTS MENU**. After completing one or more of the **Installs** in this chapter, go back to the **ADJUSTMENTS MENU** to see which **Standard and/or Feature Adjustments** have changed (*Feature Adjustments and/or settings are subject to change during production, and may differ than what is described in the tables at the end of this chapter*). The **Dot Display** will indicate if a setting is a **Factory Default** or not. If the settings are not to your liking, perform **one** of the following:

- 1.: **Manually change the Standard & Feature Adjustments Settings** (*perform this task in the ADJUSTMENTS MENU, see the Adjustments Section*).
- 2.: **Install Factory** (*see the last install*) on how to reset all of the **Standard & Feature Adjustments** back to the **Factory Default Settings**.

Multiple **Installs** can be set to vary game play; however, for **Installs** that have *one or more* Adjustments in common, the **last** "Install" selected & **activated**, will **supersede** any previously changed Adjustment(s) from any prior **Installs**. Any adjustments which you changed and are not affected by the Install will remain as set.

For example, if you want a **5-BALL Game** set to **EXTRA EASY**: Select and **activate** the "5BAL" *Icon first* (which will typically change any **Feature** Difficulty Adjustments to **HARD**), **then** select & **activate** the "X.EZ" *Icon* to **change back** the Difficulty Adjustments to **EXTRA EASY**. However, if the "X.EZ" *Icon* was selected & **activated** first, **then** the "5BAL" *Icon* was selected & **activated**, the game will be set to a **5-BALL Game** set to **HARD**.

Remember, use the **GREEN Button** to go [**BACK**], exit or escape and the **BLACK Button** to [**SELECT**] to **INSTALL** your new setting(s).



Install Extra Easy

To initiate, from the **INSTALLS MENU**, select the "X.EZ" *Icon*. The **Dot Matrix Display** will indicate the **INSTALL EXTRA EASY**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Difficulty** level.

Installs Menu continued on the next page.

Installs Menu continued from previous page.



Install Easy

To initiate, from the **INSTALLS MENU**, select the "EASY" *Icon*. The Dot Matrix Display will indicate the **INSTALL EASY**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Difficulty** level.



Install Medium (Normal or Factory Settings)

To initiate, from the **INSTALLS MENU**, select the "FACT" *Icon*. The Dot Matrix Display will indicate the **INSTALL MEDIUM**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Difficulty** level.



Install Hard

To initiate, from the **INSTALLS MENU**, select the "HARD" *Icon*. The Dot Matrix Display will indicate the **INSTALL HARD**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Difficulty** level.



Install Extra Hard

To initiate, from the **INSTALLS MENU**, select the "X.HD" *Icon*. The Dot Matrix Display will indicate the **INSTALL EXTRA HARD**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Difficulty** level.



Install 3-Ball or 5-Ball

To initiate, from the **INSTALLS MENU**, select either the "3BAL" or "5BAL" *Icons*. The Dot Matrix Display will indicate the **INSTALL 3-BALL** or **5-BALL** depending on choice. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Type** to 3 Balls per game

(Factory Default is 3 Balls per game, not including extra balls earned by the player, if any).



Install Competition

To initiate, from the **INSTALLS MENU**, select the "COMP" *Icon*. The Dot Matrix Display will indicate the **INSTALL COMPETITION**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Type** to "Tournament" Rules. *Programming varies and is subject to change.*



Install Director's Cut

To initiate, from the **INSTALLS MENU**, select the "DCUT" *Icon*. The Dot Matrix Display will indicate the **INSTALL DIRECTOR'S CUT**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Type** to programmer's choice. *Programming varies and is subject to change.*



Install Home Play

To initiate, from the **INSTALLS MENU**, select the "HOME" *Icon*. The Dot Matrix Display will indicate the **INSTALL HOME PLAY**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Type** to "Home" Rules. *Programming varies and is subject to change.*



Install Novelty

To initiate, from the **INSTALLS MENU**, select the "NOV" *Icon*. The Dot Matrix Display will indicate the **INSTALL NOVELTY**. Follow the on-screen prompts to perform the **Install**.

***** This setting is recommended where local laws restrict certain game features. *****
Set the **Game Play Type** to "Restricted" Rules. *Programming varies and is subject to change.*



Install Add-A-Ball

To initiate, from the **INSTALLS MENU**, select the "A.A.B." *Icon*. The Dot Matrix Display will indicate the **INSTALL ADD-A-BALL**. Follow the on-screen prompts to perform the **Install**.

***** This setting is recommended where local laws restrict certain game features. *****
Set the **Game Play Type** to "Restricted" Rules. *Programming varies and is subject to change.*



Install Factory

To initiate, from the **INSTALLS MENU**, select the "FACT" *Icon*. The Dot Matrix Display will indicate the **INSTALL FACTORY**. Follow the on-screen prompts to perform the **Install**. **▲ CAUTION!** All **Standard and Feature Adjustments** which were changed in the **INSTALLS MENU** or **ADJUSTMENTS MENU** are returned to the **Factory Defaults** (as indicated in the Dot Display in the **ADJUSTMENTS MENU**). *Note: To perform a complete Factory Reset, GO TO THE RESETS MENU. Escape back to the UTILITIES MENU, select the "RESET" Icon, then select the "FACT" Icon in the RESETS MENU (review the end of this section, Reset Factory Settings).*



ABCD Enter Custom Message



To initiate, from the UTILITIES MENU, select the "ABCD CUST MSG" Icon. The SET CUSTOM MESSAGE (a short-cut for Standard Adjustment 41, Custom Message) provides an opportunity to have a text message appear in the the Attract Mode. Follow the on-screen prompts to complete [END].

Remember, use the GREEN Button to go [BACK], exit or escape, the RED Buttons to [</-] MOVE LEFT / CHOOSE NEXT [+ / >] MOVE RIGHT / CHOOSE PREVIOUS, and the BLACK Button to [SELECT] as 'OK'.



PRIC Set Custom Pricing



To initiate, from the UTILITIES MENU, select the "PRIC" Icon. The CUSTOM PRICING MENU (a short-cut for Standard Adjustment 18, Game Pricing, and setting selected is CUSTOM) provides an opportunity to set Custom Pricing.

Note ! MONETARY AMOUNT MUST BE SELECTED FIRST! Press [BACK] to - DECREASE or [SELECT] to + INCREASE the [< \$ >] monetary amount (e.g. look at the right side of the display from \$0.25 to \$0.50). Press [</-] to - DECREASE or [+ / >] to + INCREASE the credit quantity (e.g. look at the left side of the display from 0 CREDITS AT: to 1 CREDIT AT:).

IF EXAMPLE CUSTOM PRICING SETTING DESIRED IS :

1 Play for \$0.50, 3 Plays for \$1.00 and 7 Plays for \$2.00

THEN YOU WILL NEED TO PERFORM THE FOLLOWING :

REMINDER
In these menus:


Press [BACK] to - DECREASE [< \$]

Press [SELECT] to + INCREASE [\$ >]

Step 1 The starting display appears as below if no prior Custom Pricing was installed.



Step 2 Press [SELECT] to + INCREASE to \$0.50. Press [+ / >] to + INCREASE to 1 CREDIT AT:

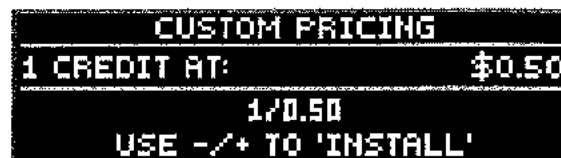

Step 3 Press [SELECT] to + INCREASE to \$1.00. Press [+ / >] to + INCREASE to 2 CREDITS AT:



Step 4 Press [SELECT] to + INCREASE to \$2.00. Press [+ / >] to + INCREASE to 4 CREDITS AT:



Step 5 Press [SELECT] to + INCREASE the amount once (example = \$2.25).



Step 6 Press [SELECT] to INSTALL. Press [</-] / [+ / >] or [BACK] to edit.



Press [</-] once or press [+ / >] eleven times until INSTALL appears.

Step 7 Press [SELECT], press [BACK] twice to exit the SERVICE MENU with your Custom Pricing installed.



To correct or make new changes, reenter, which brings you to Step 6. Press [BACK] repeatedly until the monetary amount shown is the desired amount and then continue following the above steps with your new or corrected settings. If you are still having difficulty or if you have any questions, please call Technical Support 800-542-5377 or 708-345-7700, option 1.



Set Date / Time

To initiate, from the **UTILITIES MENU**, select the "TIME" *Icon*. The **SET TIME MENU** appears with the **MONTH** flashing. Setting the date and time is required for 'Data Dumps' and Tournament Start and End Dates. If the setting of Standard Adjustment 61, **Time Format**, is set to **12-HOUR** (*Factory Default*) the time will be expressed in the **AM / PM** format. If Standard Adjustment 61, **Time Format**, is set to **24-HOUR** the time will be expressed in the **24-hour** format.



Go To Resets Menu

To initiate, from the **UTILITIES MENU**, select the "RESET" *Icon*. The **RESETS MENU** provides six (6) functions to reset *only the Coin Audits*, reset *only the Game Audits*, reset *only the Grand Champion Score*, reset *only the High Score(s)*, reset *only the paid Credits (includes Service Credits)* or to reset **ALL DATA** back to the **Factory Default Settings**.



Reset Coin Audits

To initiate, from the **RESET MENU**, select the "COIN" *Icon*. **▲ ONLY the Coin Audits** [Earnings Audits 5-12], will be reset to zero (0), *Factory Default Settings*. Follow the on-screen prompts to perform the **Reset**.



Reset Game Audits

To initiate, from the **RESET MENU**, select the "AUD" *Icon*. **▲ ONLY the Game Audits** [Earnings Audits 1-4, Standard Audits 1-59 and Feature Audits 1-XX*], will be reset to zero (0), *Factory Default Settings*. Follow the on-screen prompts to perform the **Reset**. *varies per game title.



Reset Grand Champion (Score)

To initiate, from the **RESET MENU**, select the "GC" *Icon*. **▲ ONLY the Grand Champion Score** [adjustable via Standard Adjustment 31], will be reset to *Factory Default Setting*. Follow the on-screen prompts to perform the **Reset**.



Reset High Scores

To initiate, from the **RESET MENU**, select the "HSTD" *Icon*. **▲ ONLY the High Score(s)** [adjustable via Standard Adjustments 32-35], will be reset to *Factory Default Setting(s)*. Follow the on-screen prompts to perform the **Reset**. **Note:** *High Scores (but not Grand Champion Score) are reset automatically every 2,000 games (Factory Default Setting) [adjustable via Standard Adjustment 37, HSTD Reset Count]*.



Reset Credits

To initiate, from the **RESET MENU**, select the "CRED" *Icon*. **▲ ONLY the Credits (includes Service Credits)** [adjustable via Standard Adjustment 23, **Credit Limit**], will be reset to zero (0), *Factory Default Settings*. Follow the on-screen prompts to perform the **Reset**.



Reset Factory Settings

To initiate, from the **RESET MENU**, select the "FACT" *Icon*. **▲ ALL GAME DATA IS RESET!** (*with the exception of Earnings Audit 13, Software Meter*). **NOTE: IF YOU HAD SET-UP CUSTOM PRICING OR HAD CHANGED ANY ADJUSTMENTS OR PERFORMED INSTALLS, IT IS SUGGESTED TO WRITE DOWN YOUR CHANGES PRIOR TO THE FACTORY RESET.** Follow the on-screen prompts to perform the **Reset**.



Go To USB Menu

To initiate, from the **UTILITIES MENU**, select the "USB" *Icon*. The **USB MENU** provides three (3) functions to download game data, update your game code or backup your code onto a USB Memory Stick. *Review the inside cover for information on how to update your game code.*



Update Game Code

To initiate, from the **USB MENU**, select the "UPDT" *Icon*. Follow the on-screen prompts or review the inside cover for more information.



Dump Audits to USB


To initiate, from the **USB MENU**, select the "DUMP" *Icon*. Follow the on-screen prompts to perform a **Data Dump** (download).

Note: *If Icon is not present, access via the Audits Menu, see the Audits Section.*



Backup to USB Memory Stick

To initiate, from the **USB MENU**, select the "BKUP" *Icon*. Follow the on-screen prompts to perform a **Backup** (game code only). This backup feature does not retain adjustments and/or settings changes made.

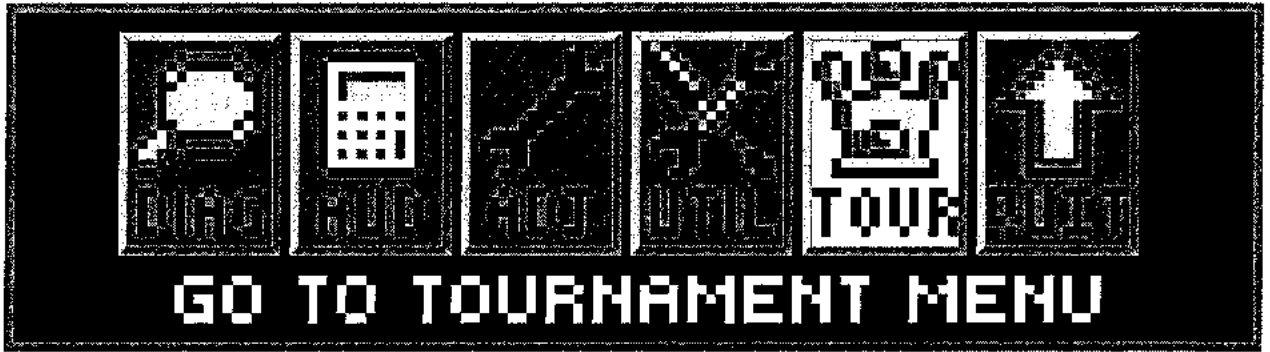

To initiate, from the **MAIN MENU**, select the "TOUR" *Icon*. The **TOURNAMENT MENU** provides ways to quickly and easily start and stop a tournament. Also, tournament data can be viewed (*audits, prize info, etc.*).

All **TOURNAMENT MENU** *Icons* and there usages are explained throughout this chapter in the same order as seen in the Dot Matrix Display. **NOTE:** Depending on Game Type, Version, selections made, Dip Switch settings, location and/or areas, some *Icons* may appear non-functional or may not appear at all. *Icons and/or functions, order and operation are subject to change.*

In displays where changes can be made or to perform a function, use the **GREEN Button** to go [**BACK**], exit or escape, the **RED Buttons** to [< / -] **HIGHLIGHT PREVIOUS** or **DECREASE** / [+ / >] **HIGHLIGHT NEXT** or **INCREASE** to highlight the desired option, and the **BLACK Button** to [**SELECT**] it or activate.

T Start Tournament

To initiate, from the **TOURNAMENT MENU**, select the "STRT" *Icon*. The **START TOURNAMENT MENU** allows the operator to start a tournament. Select **QUICK START** or **CUSTOM** Tournament Start. For the first time Tournament Set-Up, it is recommended to select **CUSTOM**. Follow the on-screen prompts. After completion of all options in **QUICK START** or **CUSTOM**, the Tournament is started, the **START TOURNAMENT MENU** is exited and returns to the **TOURNAMENT MENU**.

QUICK START :

- Increase or decrease the: • **DAYS, HOURS and MINUTES** • **PRIZE POOL \$ (DOLLAR) and ¢ (CENT) AMOUNT**
- **INCREMENT THE PRIZE POOL PER PLAY INCREASES \$ and ¢ AMOUNT**

CUSTOM START :

- Confirm the current date and time (*if it was not set previous via the UTILITIES MENU it can be set-up in this display as well*). Enter the **MONTH, DAY, YEAR** and **TIME**
- Choose the Tournament **Start Date: MONTH, DAY, YEAR** and **TIME**
- Choose the Tournament **End Date: MONTH, DAY, YEAR** and **TIME**
- Choose the **CREDITS** per play desired (01-10). Set the maximum number of *Credits* that may be accumulated per game. **Note:** *The current pricing is displayed; to change pricing GO TO THE ADJUSTMENTS MENU.*

- Increase or decrease the: • **PRIZE POOL \$ (DOLLAR) and ¢ (CENT) AMOUNT**
- **INCREMENT THE PRIZE POOL PER PLAY INCREASES \$ and ¢ AMOUNT**
- **MAXIMUM (CAP) PRIZE POOL \$ and ¢ AMOUNT.**

- Increase or decrease the number of **PRIZES** (01-05 **HIGH SCORE**; 02-05 **B'N'W**). Set the maximum # of *Prize Positions* to be awarded during a Tournament. **Selections are as follows** (*% distribution cannot be changed*):

		HIGH SCORE:					BUMP N' WIN :																
Set to 01	1 Winner	100%	(1)	Prize Pool	Cannot set to 01. Minimum of 2 winners required.																		
Set to 02	2 Winners	65%	(1)	35%	(2)	Set to 02	2 Winners	65%	(1)	35%	(2)												
Set to 03	3 Winners	50%	(1)	30%	(2)	20%	(3)	Set to 03	3 Winners	50%	(1)	25%	(2)	25%	(3)								
Set to 04	4 Winners	50%	(1)	25%	(2)	15%	(3)	10%	(4)	Set to 04	4 Winners	40%	(1)	20%	(2)	20%	(3)	20%	(4)				
Set to 05	5 Winners	50%	(1)	20%	(2)	15%	(3)	10%	(4)	5%	(5)	Set to 05	5 Winners	40%	(1)	15%	(2)	15%	(3)	15%	(4)	15%	(5)

- Select the **AWARD TYPE** (**CASH, POINTS, PRIZE, TICKETS** or **NONE**). Select **CASH** for the displays to represent the Prize Pool amount (*based on Jackpot Base and Max.*) in **\$Dollars**. Select **POINTS** for the display to represent the Prize Pool amount in **Points**. Select **PRIZE**, if applicable. Select **TICKET** for the display to represent the Prize Pool amount in **Tickets**. Select **NONE NOT TO** represent anything.

Custom Start continued on the next page.

CUSTOM START Continued.

The following option is available only if **CASH** was selected as the **AWARD TYPE**.

- Select the option to **SHOW PLAYER CASH** (YES or NO). Select **YES** for the display to represent the >>> previous <<< Tournament Winners & Cash amount (or Points, Prizes, etc.) will show in the **Attract Mode**.
- Select the kind of **TOURNAMENT** desired (BUMP 'N' WIN or HIGH SCORE).

The following options are available only if **BUMP 'N' WIN** was selected as the **TOURNAMENT TYPE**.

- Select or confirm the **BASE POINT AMOUNT** (00 or 1,000,000 – 4,294,967,295 increments of 1,000,000).
- Select or confirm the **RANGE AMOUNT** (00 or 1,000,000 – 4,294,967,295 increments of 1,000,000).
- Select the **BALLS** per game (1 – 10).



STOP TOURNAMENT

To initiate, from the **TOURNAMENT MENU**, select the "STOP" *Icon*. The **STOP TOURNAMENT MENU** allows the operator to stop a tournament. **Note:** This *Icon* only appears if a Tournament was set-up and is running (in place of the Start *Icon*).

STOP TOURNAMENT ARE YOU SURE?

- Use the **BLACK Button** to [SELECT] to confirm. Press the **BLACK Button** again to continue.

The **STOP TOURNAMENT MENU** is exited and returns to the **TOURNAMENT MENU**.



VIEW TOURNAMENT DATA

To initiate, from the **TOURNAMENT MENU**, select the "DATA" *Icon*. If no data is available, the display will indicate NO PREVIOUS DATA. Press the **GREEN Button** to escape [BACK] to the **TOURNAMENT MENU**.



TOURNAMENT AUDITS [#1 – #14]

To initiate, from the **TOURNAMENT MENU**, select the "AUD" *Icon*. The Dot Matrix Display will indicate the *audit number* (in this group), *audit name* and the *audit total* or *value*. The current audit will remain on the display until the next audit is viewed or when this sub-menu is exited.

- | | |
|----|---|
| 01 | TOTAL PLAYS : Total number of <i>Regular</i> and <i>Tournament Games</i> played while a <i>Tournament</i> is in progress. This total is derived by adding the below <i>Tournament Audit 02</i> with Regular Plays . |
| 02 | TOURNAMENT PLAYS : Total number of <i>Tournament Games</i> played while a <i>Tournament</i> is in progress. |
| 03 | TOTAL QUALIFYING PLAYS : Total number of times a player qualified (<i>invited to enter name</i>). |
| 04 | TOTAL GAME EARNINGS : Total Gross Earnings <i>accepted</i> , while a <i>Tournament</i> is active (<i>in progress</i>). |
| 05 | TOTAL TOUR. EARNINGS : Earnings (<i>Audit 04 less Reg. Game Earnings</i>) while a <i>Tournament</i> is in progress. |
| 06 | PRIZE POOL TOTAL : Total Prize Pool (<i>Jackpot</i>) Amount to be paid out while a <i>Tournament</i> is in progress. |
| 07 | NET EARNINGS : Provides the total Net Earnings (<i>Gross Earnings less Prize Pool</i>) while a <i>Tournament</i> is active. |
| 08 | ACCUM. TOTAL PLAYS : Accumulative total amount of <i>Regular & Tournament Games</i> played since the first <i>Tournament</i> was played. |
| 09 | ACCUM. TOUR. PLAYS : Accumulative total amount of <i>Tour. Games</i> played since 1st <i>Tournament</i> was played. |
| 10 | ACCUM. QUALIFYING PLAYS : Accumulative total number of times a player qualified (<i>invited to enter name</i>). |
| 11 | ACCUM. EARNINGS : Total Gross Earnings <i>accepted</i> , since the first <i>Tournament</i> was played. |
| 12 | ACCUM. TOUR EARNINGS : Accumulative total <i>Tournament Game Earnings</i> since the first <i>Tournament</i> was played. |
| 13 | ACCUM. JACKPOT : Accumulative total of Prize Pool Amounts paid out since the first <i>Tournament</i> was played. |
| 14 | # TOURNAMENTS : Number of <i>Tournaments</i> (<i>not individual Games</i>) since the first <i>Tournament</i> was played. |



SIGN MESSAGES A-B

To initiate, from the **TOURNAMENT MENU**, select the "A-B TEXT" *Icon*. At time of print, menu non-functional. If made available in future code updates, this menu will allow the operator to display "Location" and "Prize" Messages. Follow the on-screen prompts to complete [END].

Remember, use the **GREEN Button** to go [BACK], exit or escape, the **RED Buttons** to [< / -] MOVE LEFT / CHOOSE NEXT [+ / >] MOVE RIGHT / CHOOSE PREVIOUS, and the **BLACK Button** to [SELECT] as 'OK'.


SAM System Circuit Board and BOOT ROM Compatibility Chart

<u>Game Name</u>	<u>CPU Bd. No.</u>	<u>I/O PWR DRV Bd. No.</u>	<u>U9 Pinball Boot ROM</u>
World Poker Tour	520-5246-00	520-5249-00	V3.1
Pirates Of The Caribbean	520-5246-00	520-5249-00	V3.1
Family Guy	520-5246-00	520-5249-00	V3.1
Spider-Man	520-5246-00	520-5249-00	V3.1
Wheel Of Fortune	520-5246-00	520-5249-00	V3.1
NBA	520-5246-00	520-5249-00	V3.1
CSI	520-5246-00	520-5249-00	V3.1
Batman	520-5246-00	520-5249-00	V3.1
Indiana Jones	520-5246-00	520-5249-00	V3.1
Shrek	520-5246-00	520-5249-00	V3.1
24	520-5246-00	520-5249-00	V3.1
Avatar	520-5246-00	520-5249-00	V3.1
Big Buck Hunter	520-5246-00	520-5249-00	V3.1
Iron Man	520-5246-00	520-5249-00	V3.1
The Rolling Stones	520-5246-00	520-5249-00	V3.1
Tron	520-5246-00	520-5249-00	V3.1
Avatar L/E	520-5303-03	520-5249-00	V3.1
The Rolling Stones L/E	520-5303-03	520-5249-00	V3.1
Tron L/E	520-5303-03	520-5317-00	V3.1
Transformers	520-5246-02	520-5249-00	V2.0
Transformers L/E	520-5303-04	520-5317-00	V2.0
AC/DC	520-5337-01	520-5249-00	AC/DC 1.0
AC/DC (L/E)	520-5337-00	520-5317-00	AC/DC 1.0
X-MEN	520-5246-02	520-5249-00	V2.0
X-MEN (L/E)	520-5303-04	520-5317-00	V2.0
Avengers	520-5246-02	520-5249-00	V2.0
Avengers L/E	520-5303-04	520-5317-00	V2.0
Metallica	520-5337-01	520-5249-00	V1.0
Metallica L/E	520-5337-00	520-5317-00	V1.0
Batman (Standard)	520-5303-00	520-5249-00	V3.1
Iron Man (Classic)	520-5303-01	520-5304-00	Not Used
The Simpsons Kooky Carnival (RED)	520-5246-00	520-5249-00	V3.1

Service Menu Introduction

Important: The **Switch Bracket** holds the **Playfield Power Interlock**. It is located just inside the **Coin Door** frame (see pictorial of the **Coin Door** on the previous page). The **Button Switch** for the **Playfield Power Interlock Switch** must be pulled out for electro-mechanical device testing or diagnostic purposes (this is required). If this button is pushed in, the **Playfield Power** is disabled while the **Coin Door** is **OPEN**.


To get into the **SERVICE MENU MODE** review "**Function 3: SERVICE MENU**" on the next page. After Power-Up, push down the **Black [SELECT] Button** to begin. Looking at the display you will momentarily see "**SERVICE MENU**" followed by the **MAIN MENU**:

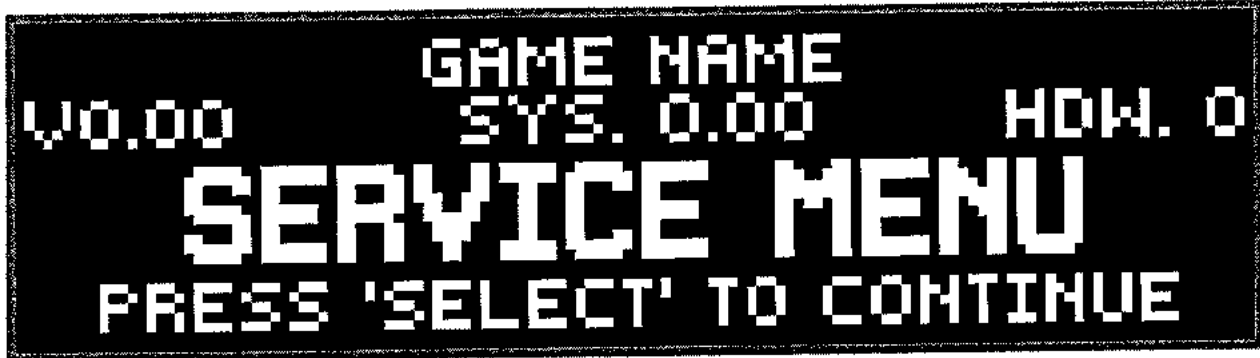

Service Menu Intro.

Use the **Red [</-] / [+ / >] Buttons** to move the selected **Icon** left or right, and the **Black [SELECT] Button** to activate the selected **Icon**.

The **MAIN MENU** now appears with the "**DIAG**" **Icon** (**GO TO DIAGNOSTICS MENU**) highlighted:

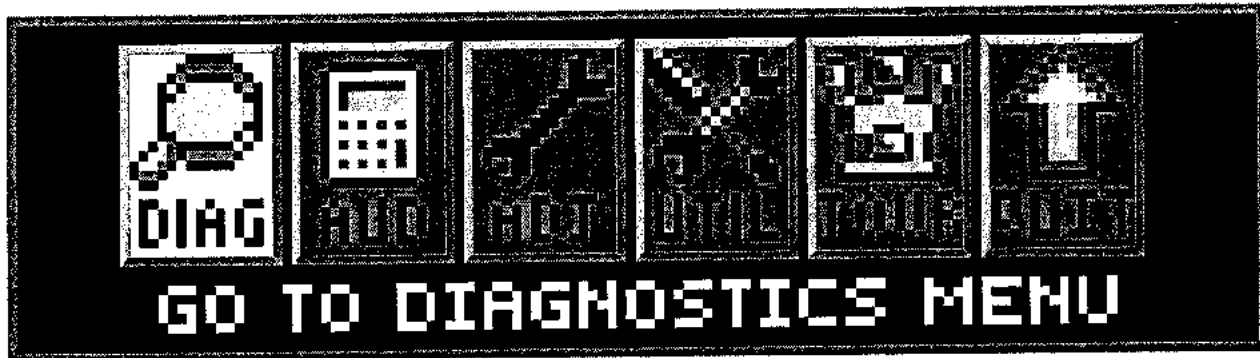


As the operator views the Menu Screen(s), the **MORE MORE** symbols indicates that there are more **Icons** to select in each direction. The **Icon** selected will blink. Pushing the **Black [SELECT] Button** will select the **Icon** and the Menu Screen will change to the menu selected. Select the **Green [BACK] Button** to move backwards through the menu levels. Press the **Green [BACK] Button** repeatedly or select the "**QUIT**" **Icon** to completely exit the **SERVICE MENU** Mode.

View the **SERVICE MENU Icon Tree** on the next pages for a complete overview of all menus used in this system. The "**HELP**" **Icon** provides an explanation of **ICON** usage or any other information in the Menu where the "**HELP**" **Icon** was selected (when available).

- DIAG:** GO TO DIAGNOSTICS MENU
- AUD:** GO TO AUDITS MENU
- ADJ:** GO TO ADJUSTMENTS MENU
- UTIL:** GO TO UTILITIES MENU
(INSTALLS, CUSTOM MSG., CUSTOM PRICING, SET TIME, RESET & USB)
- TOUR:** GO TO TOURNAMENT MENU (START TOURNAMENT, VIEW TOURNAMENT DATA, SIGN MESSAGES)


>> TO UPDATE THE GAME CODE, REVIEW THE STEPS ON THE INSIDE FRONT COVER OF THIS MANUAL.

Use both the manual and the display to help customize, troubleshoot and/or diagnose faults, if any.

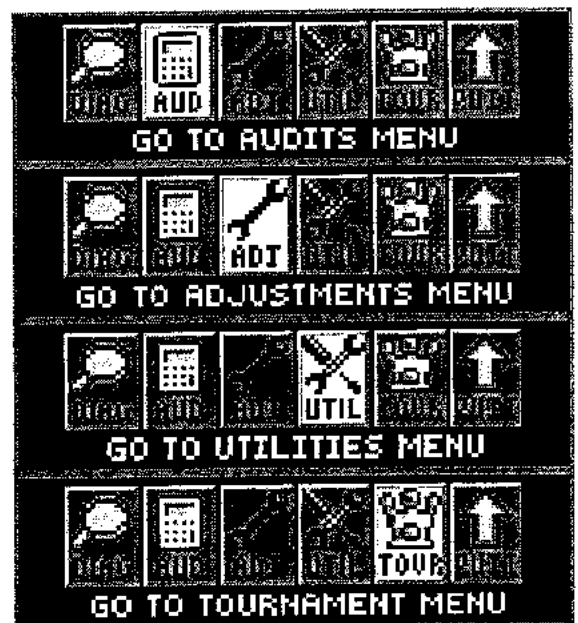


Service Switch X4 Set Access & Use

The 4-Button Service Switch Set provides access for *three (3) functions* available for your use: 1: **SERVICE CREDIT**, 2: **VOLUME [-] / [+]** and 3: **SERVICE MENU**.

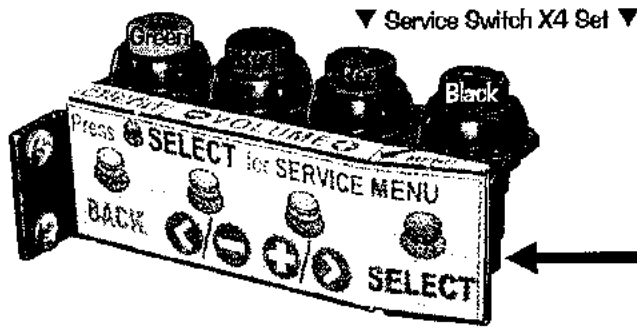

Inside Coin Door

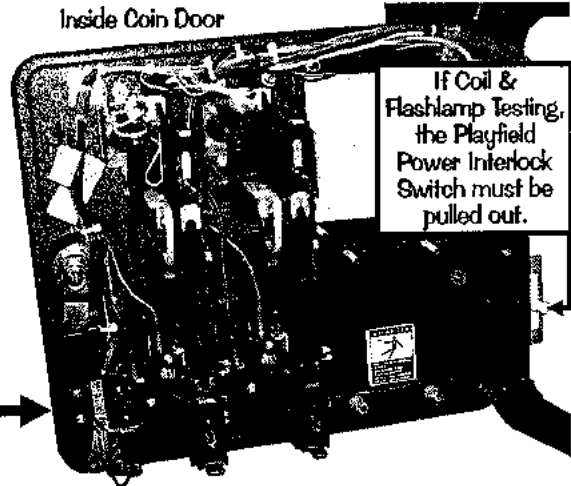


Service Menu Info.

To access any of these *three (3) functions* you must first open the **Coin Door** (see pictorial above) with the Game in the **Attract Mode** (not already in any Function or Menu stated below) and then follow below.

Pushing the GREEN BUTTON first.

◀ Function 1: SERVICE CREDITS MENU

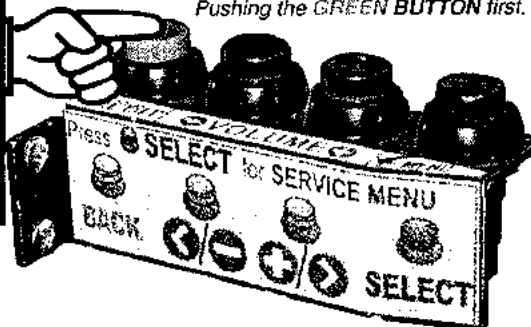


Pushing the Green [**SERVICE CREDIT**] Button first, adds a **Service Credit** per push (will not affect your audits as "paid" credits). This is useful for the technician to test games in regular play without affecting the game audits. Each depression adds 1 credit; up to 50 credits can be applied. **Standard Adjustment 23, Credit Limit**, determines this, however, it can be changed from 04-50; for details see the *Adjustments Section*.


Note: Once your credits are added, this menu will **automatically exit** a few seconds after the last button depression or when the Green [**BACK**] or Black [**SELECT**] Button is pushed. This function is disabled if **Standard Adjustment**

38, Free Play, is set to **YES**. The Service Credits are limited to the Credit Limit in addition to any paid credits present in the game (e.g. If the Credit Limit is 30, with 8 paid credits present, only 22 Credits can be applied.).

Pushing either RED BUTTON first.

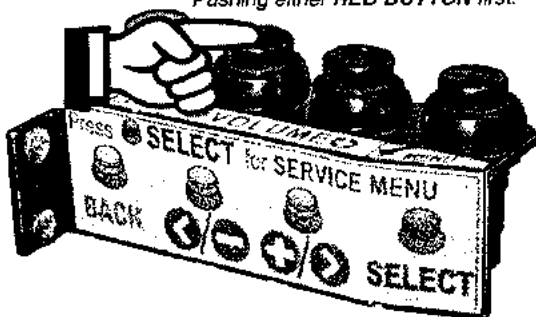

Pushing either RED BUTTON first.

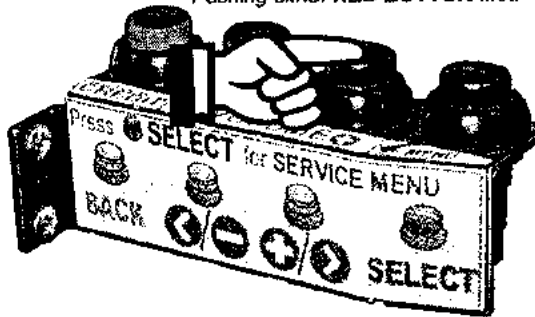


▲ Function 2: VOLUME MENU ▲

Pushing either of the Red [**VOLUME**] Buttons first, enters the **VOLUME MENU**. While in this Mode, to **DECREASE** the volume, hold down or depress the 1st Red [**</-**] Button until desired the volume is achieved; to **INCREASE** the volume, hold down or depress the 2nd Red [**+ / >**] Button until the desired volume is achieved.

Note: The volume can be set between 0-63; Once your adjustments are made, this menu will **automatically exit** a few seconds after the last button depression or when the Green [**BACK**] or Black [**SELECT**] Button is pushed.

Pushing the BLACK BUTTON first.

◀ Function 3: SERVICE MENU

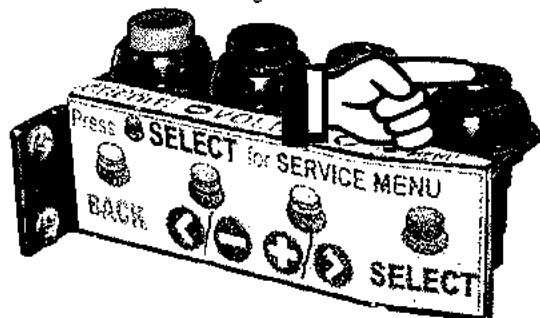


Pushing the Black [**SELECT**] Button first, enters the **SERVICE MENU**. Once in, navigate through all menus by depressing the **Service Menu Buttons**. Use the Red [**</-**] or [**+ / >**] Buttons to move **LEFT / RIGHT, NEXT/PREVIOUS** (audits/adjustments) or to **INCREASE / DECREASE** an adjustment (setting). Use the Black [**SELECT**] Button to select a highlighted *icon*, move to the next line of text or to answer "OK" where applicable. Use the Green [**BACK**] Button to exit or escape back.



Exit Service Menu

In the **MAIN MENU** and in all **SUB-MENUS** (where the "QUIT" Icon is present), if the "QUIT" Icon is selected and activated, or the Green [BACK] Button is selected repeatedly (depending on which sub-menu you're in...), the **SERVICE MENU** Session will be exited and returned to the **Attract Mode**.

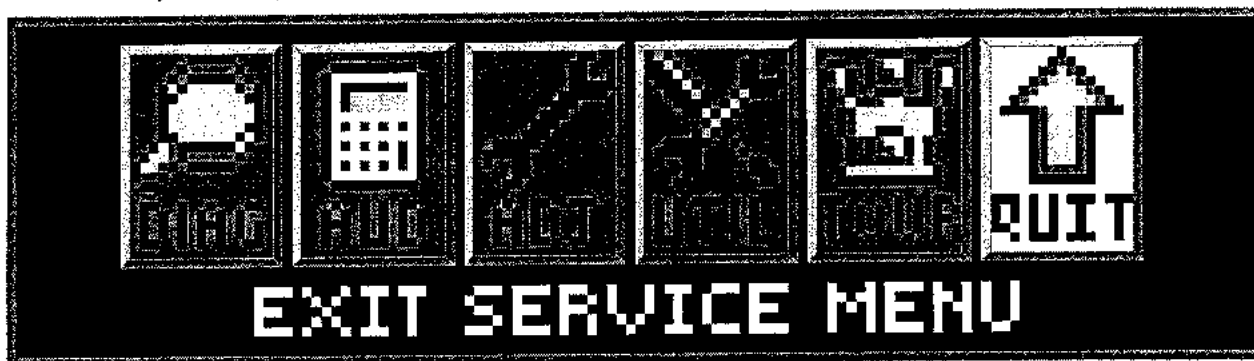

Turning the game on/off will start the *Power-Up Routine*. Upon **Power-Up**, the **DISPLAY** will indicate the **COUNTRY**, **FILE VERSION** and **LANGUAGE(S)** installed. **LANGUAGE/COUNTRY**: change via Dip Switch.



The below **Problem / Solution Table** was designed to answer some common problems frequently asked.

Problem / Solution Table

PROBLEM	SOLUTION
Will not enter the SERVICE MENU after depressing the Black [SELECT] Button .	<ul style="list-style-type: none"> • Check the Service Switches [GREEN, RED (x2) & BLACK Buttons] for loose connections or bad ground. • Check the associated wiring harness to/from the CPU/Sound Board, Connector J13. • Check CPU/Sound Board for possible failure.
All Service Buttons [* * * * * Buttons] appear nonfunctional.	<ul style="list-style-type: none"> • Check the Service Switches wiring harness for poor or no connection and/or broken wires.
The Green Button in the Attract Mode will not enter the SERVICE CREDITS MENU to add Service Credits.	<ul style="list-style-type: none"> • Check to make sure the Game is not in "Free Play." If the game is set to <i>Free Play</i>, adding <i>Service Credits</i> is not required. • Check the Service Switches wiring harness for poor or no connection and/or broken wires.
The Display "blanks out."	<ul style="list-style-type: none"> • Check the Dot Matrix Display for loose wiring harness for poor or no connection and/or broken wires. • Check F1 (3/4A Fuse) on the Display Power Supply Board. Refer to the <i>Yellow Pages (SCHEMATICS & TROUBLESHOOTING)</i>.
Icons "scroll" along continuously in the MAIN MENU .	<ul style="list-style-type: none"> • Check for a stuck switch on either of the Red Buttons.
The Start and Flipper Buttons do not select or activate icons in the SWITCH TEST MENU .	<ul style="list-style-type: none"> • This is normal. These switches are deactivated, as they are a part of the Switch Test. Refer to the <i>Diagnostics Section (GO TO DIAGNOSTICS MENU, Switch Test)</i>.
Can't move selection of icon with the Left and/or Right Flipper Buttons .	<ul style="list-style-type: none"> • Check the Flipper Buttons for loose connections or bad Ground and refer to Section 5, Chapter 2, <i>Playfield Wiring, #-Flipper Circuit Wiring Diagram</i>. • This is normal <i>only in Diagnostic's Switch & Active Switch Tests (see previous Problem)</i>.
Some icons appear non-functional in the MENU or missing.	<ul style="list-style-type: none"> • Some functionality of the Service Menu may not have been completed during development. If exists, it should only be a non-critical function, such as the "HELP" Icon, which will explain the usage of icons. When completed, a software update will correct the problem. Software updates are announced via Service Bulletins (if critical) and on our website http://www.sterpinball.com/GAME-code.shtml; view the <i>Game Code Library Message Board Marquee</i> or click <i>Previous Messages</i> for past announcements.
In COIL TEST MENU , the coils and flashlamps <i>do not</i> fire after pressing the Black [SELECT] Button .	<ul style="list-style-type: none"> • Ensure the POWER INTERLOCK SWITCH is pulled out (see the start of this Chapter).
In the SERVICE MENU , the volume cannot be adjusted with either of the Red Buttons .	<ul style="list-style-type: none"> • The Volume adjustment can only be made when in the Attract Mode (see the start of this Chapter).
In the SERVICE MENU , the display seems to lock up, or the Help Display appears to be non-functional.	<ul style="list-style-type: none"> • If you cannot clear the situation by exiting back one Menu, exit completely out of the SERVICE MENU, and re-enter. If the problem persists, call Technical Support for additional help.

IF YOU NOTE ANY OTHER PROBLEMS or HAVE ANY SYMPTOMS NOT DESCRIBED ABOVE, PLEASE CALL TECHNICAL SUPPORT 800-542-5377 (708-345-7700 OPTION #1), SO WE MAY ASSIST YOU.

Pinball Service Menu Icon Tree

These **non-selectable icons** appear in the selected Menu only when there are **MORE** icons to the **LEFT** or to the **RIGHT** available for selection.

MAIN MENU

- GO TO DIAGNOSTICS MENU
- GO TO AUDITS MENU
- GO TO ADJUSTMENTS MENU
- GO TO TOURS MENU
- GO TO SERVICE MENU
- EXIT SERVICE MENU

50V / 20V DISABLED
CLOSE COIN DOOR
OR PULL INTERLOCK SWITCH
TO RESTORE POWER.

*WHEN ENTERING THE NOTED MENUS, YOU MUST PULL OUT THE POWER INTERLOCK SWITCH FOR OPERATION WITH THE COIN DOOR OPEN.

EXIT THE SERVICE MENU BY SELECTING THIS ICON IN ANY MENU AND RETURN TO THE ATTRACT MODE.

TOURNAMENT MENU

- START TOURNAMENT
- STOP TOURNAMENT
- VIEW TOURNAMENT DATA
- TOUR LIGHTS
- SIGN MESSAGES A-B

UTILITIES MENU

- CONTINUED NEXT PAGE

ADJUSTMENTS MENU

- S.P.I. STANDARD ADJUSTMENTS
- GAME FEATURE ADJUSTMENTS

AUDITS MENU

- EARNINGS STANDARD AUDITS
- S.P.I. FEATURE AUDITS
- TOURAMENT AUDITS
- DUMP AUDITS TO USB

DIAGNOSTICS MENU

- GO TO SWITCH MENU
- GO TO COIL MENU
- GO TO FLASH LAMPS MENU
- GO TO LAMP MENU
- GAME SPECIFIC TESTS
- BALL TROUGH TEST
- TECHNICIAN ALERTS
- FIRE KNOCKER
- SOUNDY SPEAKER TEST
- BEGIN BURN IN
- DOT MATRIX TEST
- TICKETS DISPEN TEST

SWITCH MENU

- SWITCH TEST
- ACTIVE SWITCH TEST
- SWITCH ALERTS

COIL MENU

- SINGLE COIL TEST
- CYCLING COIL TEST

FLASH LAMPS MENU

- SINGLE FLASH LAMP TEST
- CYCLING FLASH LAMP TEST

LAMP MENU


- SINGLE LAMP TEST
- ALL LAMPS TEST
- ROW LAMPS TEST
- COLUMN LAMPS TEST
- ORDERED LAMPS TEST


CONTINUATION OF SUB-MENUS

CONTINUED NEXT PAGE

... MENUS CONT.

Pinball Service Menu Icon Tree Continued

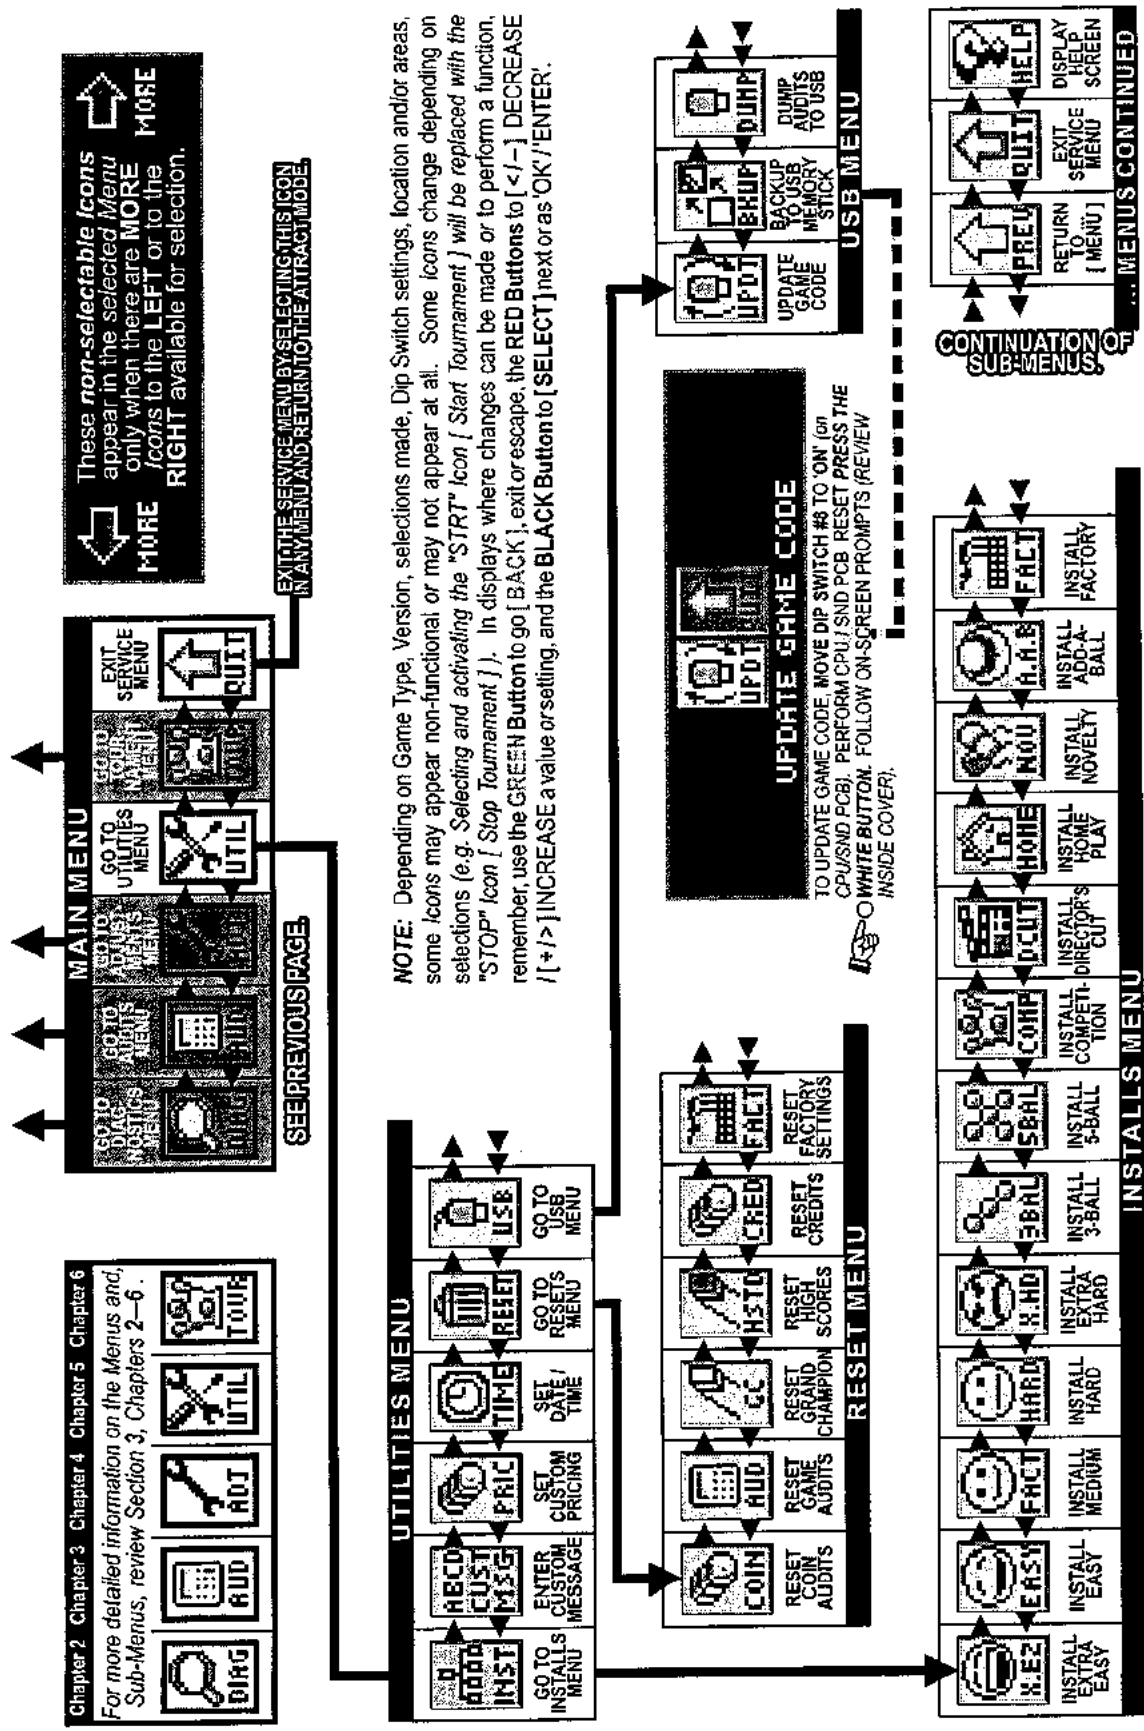

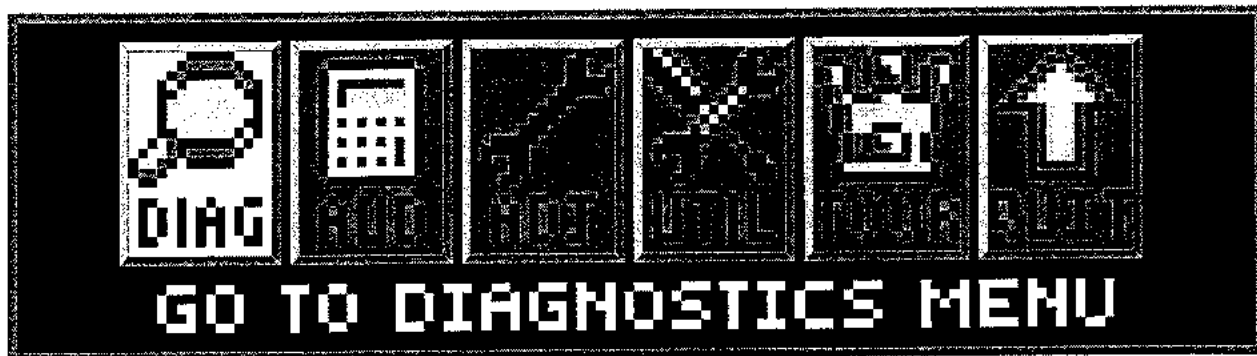

To initiate, from the **MAIN MENU**, select the "DIAG" *Icon*. The **DIAGNOSTICS MENU** provides tests for switches, coils, flash lamps, lamps, sounds and dots in the Dot Matrix Display. Each feature may be tested manually or automatically after entering the **SERVICE MENU** (see *Service Menu Introduction Section*). The [**CYCLING COIL TEST**] / [**FLASH LAMP TEST**] may be used for a quick verification of automatic test functions. The [**SWITCH TEST**] / [**SINGLE COIL TEST**] / [**SINGLE LAMP TEST**] / [**ALL LAMPS TEST**] / [**ROW LAMPS TEST**] / [**COLUMN LAMPS TEST**] / [**FLASH LAMP TEST**] may be used for troubleshooting.

All **DIAGNOSTICS MENU** *Icons* and there usages are explained throughout this chapter in the same order as seen in the Dot Matrix Display. **NOTE:** Depending on Game Type, Version, selections made, Dip Switch settings, location and/or areas, some *Icons* may appear non-functional or may not appear at all. Some *Icons* change depending on selections (e.g. *Selecting and activating the "START" Icon [Start Tournament] will be replaced with the "STOP" Icon [Stop Tournament]*). *Icons and/or functions, order and operation are subject to change.*

In displays where changes can be made or to perform a function, use the **GREEN Button** to go [**BACK**], exit or escape, the **RED Buttons** to [**</-**] MOVE BACK / LEFT / DECREASE / [**+ / >**] MOVE FORWARD / RIGHT / INCREASE a value or setting, and the **BLACK Button** to [**SELECT**] next or as "OK / ENTER / ENERGIZE."

Important: Upon Power-Up (Game CPU Reset) or opening the **Coin Door** watch the **Display** for any Alerts.*



This **audible / visual alert display** is shown when the **50V / 20V Power** is disabled (by opening the **Coin Door**). **PULL OUT THE INTERLOCK SWITCH ONLY WHILE IN THE SERVICE MENU FOR COIL OR SWITCH TESTING & BURN-IN WHEN THE COIN DOOR IS REQUIRED TO STAY OPEN FOR SERVICE BUTTON USE!** Pulling out the Power Interlock Switch or

pressing the 'escape' **Green [BACK] Button** will remove the alert display. Initial display presentation is accompanied by 3 audible tones (the bright display warning will go dim after approximately 30 seconds).



This **alert display** is shown momentarily during **Game Mode** or **Power-Up** to alert the operator of a device malfunction (device or mechanism doesn't energize or is energized repeatedly). **OPERATOR ALERT!** works by monitoring any switch activated device that has the potential to trap a ball when disabled (e.g. in the **Shooter Lane, Scoop or Eject Holes, etc.**). This alert can

also appear if a switch associated with a device (e.g. **Ball Trough, Auto Plunger, etc.**) is stuck closed (caused by a switch jam or stuck ball); the game will activate the device a predetermined number of times and if the problem is still detected, this device or switch will be noted in **Switch Alerts** (next page) and/or **Technician Alerts**.



Upon entering the **SERVICE MENU**, if an asterisk " * " is displayed after the words "SERVICE MENU," the game has detected possible faulty devices, switches and/or missing pinballs. Press the either of the **Red Buttons** (short-cut to the **TECHNICIAN ALERTS MENU**) or continue into the **SERVICE MENU** (press the **Black Button** again), select the "DIAG" *Icon* and "TECH" *Icon* for the **Technician Alerts** information.

CAUTION! Remove all pinballs from the **Ball Trough** prior to lifting the playfield to it's full upright position for servicing. **PULL OUT** the **Power Interlock Switch** for operation. To eject pinballs, select the "DIAG" *Icon* from the **MAIN MENU** to enter the **DIAGNOSTICS MENU**. Select the "CLR" *Icon* to enter the **BALL TROUGH TEST MENU**. Press the **Black [SELECT] Button**. To return to the **DIAGNOSTICS MENU**, press the **Green [BACK] Button**. This feature also useful to retrieve a pinball for game testing in **Switch or Coil Tests**.



Go To Switch Menu

To initiate, from the **DIAGNOSTICS MENU**, select the "SW" icon. Switches are configured in an 4 X 16 Matrix of Rows [Switch Drives] and Columns [Sw. Returns] with up to 64 possible switches. Dedicated Switches are configured in a 2 X 16 Matrix of Rows [Dedicated Sw. Drives / Ground] and Column [Ded. Switch Returns] with up to 32 possible dedicated switches (includes the 8 dip switch positions). The **SWITCH TEST MENU** consists of three (3) parts: **Switch & Active Switch Tests** and **Switch Alerts** to test all switches.

Reminder: The **Flipper & Start Buttons** (part of Switch Tests) are temporarily disabled as **Service Menu Navigation Buttons** during these test(s) so they can be tested and shown on-screen. Pressing the **Green [BACK] Button** (Dedicated Switch D-21), **Light Green-Black / Black (GND)**, will exit **Switch Test** or **Active Switch Test**.



Switch Test

To initiate, from the **SWITCH MENU**, select the "TEST" icon. Ensure the **Power Interlock Switch** is pulled out if testing with the Coin Door open and the activation of coils is required. Upon entering **Switch Test**, you will notice that some switches are already indicated as closed. In the examples, the 4-Ball Trough Switches #18, #19, #20 & #21 are shown closed (pinballs at rest in the ball trough), along with the Flipper E.O.S. Dedicated Switches D-10 & D-12 (End-of-Stroke Switches are 'normally closed'). If the game has more flippers with E.O.S. Dedicated Switches, CPU Dip Switch Setting other than 1-8 OFF or switches stuck closed, more dots will be indicated (enter **Active Switch Test** to reveal the names).

In **Switch Test**, close each switch and observe the display (switch closure is accompanied by a short audible tone). In the example, the **Black [SELECT] Button** Dedicated Switch D-24 is pressed. The Dot Matrix Display will light up (highlight) the corresponding dot in the on-screen matrix, display the switch name, switch number and the Switch Drive / Return wire colors. When not closing a switch, the display indicates **NONE** and the last switch number closure. For the Switch Matrix Grid and Dedicated Switch Grid, see Find-It-In-Front: Dr. Pinball, DR. 4 or escape out of this test and enter **Active Switch Test** (described below) to view the names of the switches closed. **Note:** Pressing the **Green [BACK] Button** (Ded. Switch D-21), **Lt. Green-Black / Black (GND)**, will exit the **Switch Test**.



CAUTION! COIL MECHANISMS WHEN ACTIVATED HAVE FAST MOVING PARTS! While performing **Switch Test** with the Coin Door closed or open (with the **Power Interlock Switch** is pulled out), **DO NOT USE YOUR FINGER** to test switches which are associated with a coil mechanism such as a Vertical Up-Kicker (hole with a switch), Slingshots, Bumpers, etc..



Active Switch Test

To initiate, from the **SWITCH MENU**, select the "ACT" icon. In **Active Switch Test**, if any switches are stuck closed (or normally closed from the presence of pinball(s) as in the Ball Trough), the display will flash the corresponding dot(s) in the on-screen matrix, display the name and the Switch Drive / Return wire colors. If more than one switch is closed, the switch information will change with each switch. This cycle continues until all switches are cleared or until **Active Switch Test** is exited. In the example, the **Black [SELECT] Button** Dedicated Switch D-24 is pressed and held down. The display will cycle and flash each dot, naming each switch which is closed. To determine the switch number, compare the highlighted dot to the same position in the Switch Matrix Grid at the beginning of this manual.



Switch Alerts

To initiate, from the **SWITCH MENU**, select the "ALRT" icon. In **Switch Alerts Menu**, possible inoperable switches are marked with an "X" (OUT OF SERVICE). Mark switches **IN** or **OUT OF SERVICE** by pressing the **Black Button** while the intended switch is highlighted and change with either of the **Red Buttons**. Switches which are determined as "OUT OF SERVICE" by the game or manually, will be automatically marked as "IN SERVICE" as soon as the game determines a valid switch closure (after adjusting, fixing or replacing the switch, then testing/actuating the switch). **Note:** A **Factory Reset** will also put the switch back "IN SERVICE" in which the game will need to redetermine if the switch should be marked **OUT OF SERVICE**.

Upon entering Switch Test, you will notice that some switches are already indicated as "closed".




D-24 position is highlighted and accompanied by a short audible tone when pressed.




After pressing the switch (to make it close), the display will indicate the last switch number.



Typical Switch Wiring & Schematic

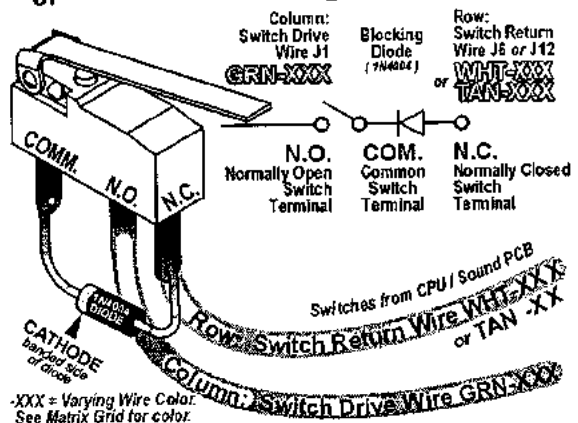

Dedicated Switch Schematic

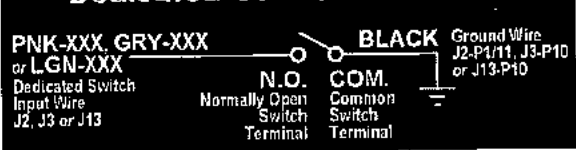

... D-24 is held down. The display will cycle and flash each dot, naming each switch ... closed.





Go To Coil Menu

To initiate, from the **DIAGNOSTICS MENU**, select the "COIL" *Icon*. Coils #01 – #16 are typically High Current Coils (although Low Current Coils may be used in these positions & will be noted). Coils #17 – #32 are typically Low Current Coils. Flash Lamps are typically used in positions #25 – #32 (although Flash Lamps may be used in any position and will be noted). Auxiliary Coils may be used in positions #33 – #35.

Remember, use the **GREEN Button** to go [BACK], exit or escape, the **RED Buttons** to [</-] GO BACK / [+/ >] GO FORWARD, and the **BLACK Button** to [SELECT] ENERGIZE the coil (solenoid) or flash lamp.



Single Coil Test

To initiate, from the **COIL MENU**, select the "TEST" *Icon*. Ensure the **Power Interlock Switch** is pulled out if testing with the Coin Door open. Upon entering

Single Coil Test, you will notice the #1 coil is shown. The Dot Matrix Display will indicate the coil or flash lamp name, coil (solenoid) or flash lamp number and the Coil or Flash Lamp Power Line / Drive Transistor Control Line wire colors. To determine the "Pin-Outs" from the I/O Power Driver Board, the Coil Voltage Gauge-Turns (e.g. 23-800) or lamp type (e.g. #89 or #906 Bulb), view the Coils Detailed Chart Table at the beginning of this manual or for more on troubleshooting and diagnosing, see the Yellow Pages (*Schematics & Wiring*).




Cycling Coil Test

To initiate, from the **COIL MENU**, select the "CYC" *Icon*. Ensure the **Power Interlock Switch** is pulled out if testing with the Coin Door open. The test pulses each regular coil or flash lamp sequentially (*cycling*) on the Playfield and in the Backbox (if coils or flash lamps are used). The Dot Matrix Display indicates the same information you will find in **Single Coil Test**.

COIL TEST
TROUGH UP-KICKER
#1
YEL-VIO BRN-BLK

Typical Coil Wiring & Schematic

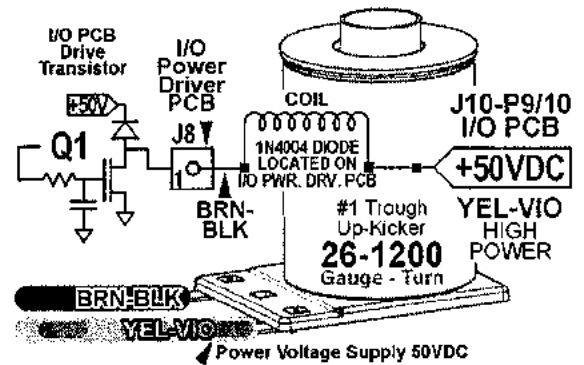

Go To Flash Lamps Menu

To initiate, from the **DIAGNOSTICS MENU**, select the "FLASH" *Icon*. The two tests allows the technician to easily spot any burned-out flash lamps and replace them. Unlike **Single Coil Test**, which tests *all* coil (solenoids), including flash lamps, **Single and Cycling Flash Lamp Tests**, test only the flash lamps used in the game. Flash Lamps are typically used in positions #25 – #32 (although Flash Lamps may be used in any position and will be noted).

Remember, use the **GREEN Button** to go [BACK], exit or escape, the **RED Buttons** to [</-] GO BACK / [+/ >] GO FORWARD, and the **BLACK Button** to [SELECT] ENERGIZE the flash lamp.




Single Flash Lamp Test

To initiate, from the **FLASH LAMPS MENU**, select the "TEST" *Icon*. Ensure the **Power Interlock Switch** is pulled out if testing with the Coin Door open. Upon entering **Single Flash Lamp Test**, you will notice the first Flash Lamp is shown. The Dot Matrix Display will indicate the flash lamp name, flash lamp number and the Flash Lamp Power Line / Drive Transistor Control Line wire colors. To determine the "Pin-Outs" from the I/O Power Driver Board or lamp type (e.g. #89 or #906 Bulb), view the Coils Detailed Chart Table at the beginning of this manual or for more on troubleshooting and diagnosing, see the Yellow Pages (*Schematics & Wiring*).

FLASH LAMP TEST
FLASH: NAME OF FLASHER
#25
ORG BLK-BRN

Bulb Types used for Flash Lamps

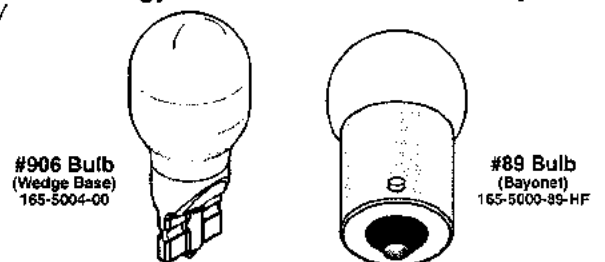

Cycling Flash Lamp Test

To initiate, from the **FLASH LAMPS MENU**, select the "CYC" *Icon*. Ensure the **Power Interlock Switch** is pulled out if testing with the Coin Door open. The test pulses each flash lamp sequentially (*cycling*) on the Playfield and in the Backbox (if flash lamps are used). The Dot Matrix Display indicates the same information you will find in **Single Flash Lamp Test**.



Go To Lamp Menu

To initiate, from the **DIAGNOSTICS MENU**, select the "LAMP" *Icon*. Controlled lamps are configured in and 8 X 10 Matrix of Rows [Lamp Returns / Ground] and Columns [Lamp Drives / 18VDC] with up to 80 lamps possible. The **LAMP TEST MENU** consists of five (5) parts: **Single Lamp Test**, **Test All Lamps**, **Row Lamps Test**, **Column Lamps Test** and **Ordered Lamps Test*** to test *all* lamps.

Remember, use the **GREEN Button** to go [**BACK**], exit or escape, the **RED Buttons** to [**< / -**] **GO BACK / LEFT** / [**+ / >**] **GO FORWARD / RIGHT**, and the **BLACK Button** to [**SELECT**] next or as "OK / ENTER."

Upon entering Single Lamp Test, ... the #1 lamp is shown. ... Display will light up ... the dot ... ▶



Single Lamp Test

To initiate, from the **LAMP MENU**, select the "ONE" *Icon*. As each lamp is selected, the lamp will light at it's location on the playfield as well as the Dot Matrix Display.

Upon entering **Single Lamp Test**, you will notice the #1 lamp is shown. The Dot Matrix Display will light up (*highlight*) the corresponding *dot* in the on-screen matrix, display the *lamp name*, *lamp number* and the *Lamp Return / Drive wire colors*. For the Lamp Matrix Grid, see the beginning section of this Service Game Manual.



Upon entering All Lamps Test, ... the Dot Matrix Display is flashing 'ALL LAMPS ON' ... ▶



All Lamps Test

To initiate, from the **LAMP MENU**, select the "ALL" *Icon*. Upon entering **All Lamps Test**, you will notice the Dot Matrix Display is flashing **ALL LAMPS ON** and the lamps on the playfield will be lit, alternating between the rows in the Lamp Matrix Grid. The Dot Matrix Display will light up (*highlight*) all of the *dots* in the on-screen matrix.



Upon entering Row Lamps Test, you will notice the #1 lamp row is shown. ▶



Row Lamps Test

To initiate, from the **LAMP MENU**, select the "ROW" *Icon*. As each lamp row is selected, the lamps in the row will light on the playfield as well as the Dot Matrix Display.

Upon entering **Row Lamps Test**, you will notice the #1 lamp row is shown. The Dot Matrix Display will light up (*highlight*) the corresponding row of *dots* in the on-screen matrix, display the *lamp row number*, the *Lamp Return wire colors*, the *I/O PCB Connector* and *transistor number*.



Upon entering Column Lamps Test, you will notice the #1 lamp column is shown. ▶




Column Lamps Test

To initiate, from the **LAMP MENU**, select the "COL" *Icon*. As each lamp column is selected, the lamps in the column will light on the playfield as well as the Dot Matrix Display.


Upon entering **Column Lamps Test**, you will notice the #1 lamp column is shown. The Dot Matrix Display will light up (*highlight*) the corresponding column of *dots* in the on-screen matrix, display the *lamp column number*, the *Lamp Drive (18VDC) wire colors*, the *I/O PCB Connector* and *IC number*.



Bulb Types used for Control Lamps

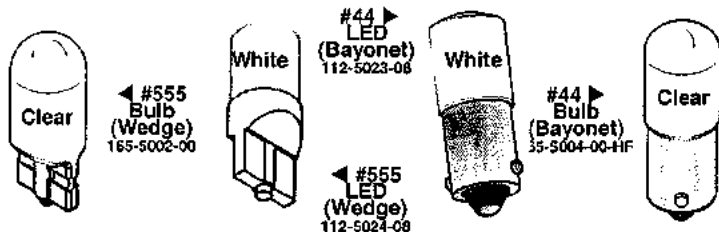

Typical Lamp Wiring & Schematic

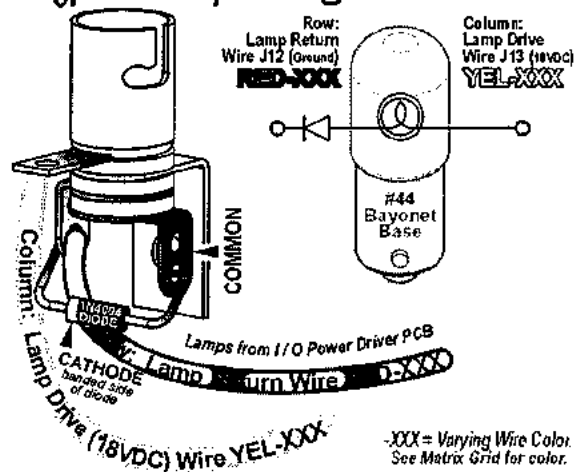

* If not required in this game, *Icon* will not be shown.



Ordered Lamps Test

To initiate, from the **LAMP MENU**, select the "ORD" *Icon*.

If required, this *Icon* will appear in the **LAMP MENU**. Identical to **Single Lamp Test**, however, the lamps lit are not in the Lamp Matrix numeric order, but ordered or arranged in separate localized grouping(s) for easier lamp checking.

-XXX = Varying Wire Color. See Matrix Grid for color.



Game-Specific Tests

To initiate, from the **DIAGNOSTICS MENU**, select the "GAME" icon. Ensure the Power Interlock Switch is pulled out when testing with the Coin Door open. This Menu is provided to allow the technician a simple method of testing game specific coils and/or switches, if required. If used, select the icon (and Sub-Menu icons, if any) and follow on-screen prompts.



Ball Trough Test

To initiate, from the **DIAGNOSTICS MENU**, select the "CLR" icon. Ensure the **Power Interlock Switch** is pulled out if testing with the Coin Door open. This Menu is provided to allow the technician a simple method of removing the balls from the trough and also, to test functionality of the trough, ensuring proper trough operation. Upon entering **Ball Trough Test**, you will notice that four switches are already indicated as closed. In the example, the 4-Ball Trough Switches #18, #19, #20 & #21 are shown closed (pinballs at rest in the ball trough). To return to the **DIAGNOSTICS MENU**, press the **Green [BACK] Button**.



Press the **Black [SELECT] Button** to eject the ball in the first position Switch #21 (VUK OPTO Trough #1 (R)). Simultaneously, the Dot Matrix Display and the playfield will eject the ball to the Trough Up-Kicker, eject from the Trough Up-Kicker into the Shooter Lane, momentarily closing Switch #23 (Shooter Lane), and is ejected onto the playfield where the technician can easily

retrieve the pinball or allow the ball(s) to re-enter the trough to continue **Ball Trough Test**. The Dot Matrix Display indicates Switch #18 (4-Ball Trough #4 (L)) as open as the remaining three (3) pinballs shift over one (1) position to the right. If the technician allows the ejected pinball to reenter the ball trough, the Dot Matrix Display will indicate Switch #18 as closed. **REMINDER:** Switch #22 is the stacking OPTO switch; if more than five (5) pinballs are used, the additional switches will be noted. Typically, four (4) pinballs are used and required for proper operation; if this amounts differs, it will be noted on the front page of this Service Game Manual.



CAUTION! Continuous use off the above test may overheat the Trough Up-Kicker Coil.



Technician Alerts

To initiate, from the **DIAGNOSTICS MENU**, select the "TECH" icon. This Menu is provided to show any switch or solenoid problems and/or missing pinballs. If upon entering the **SERVICE MENU** the display indicated an asterisk (*) and "USE +/- TO VIEW TECH. ALERTS", alerts are present.

TECHNICIAN ALERT - (0/0)

NO TECHNICIAN ALERTS

PRESS 'BACK' TO EXIT



After pressing either **Red [</-] / [+ / >] Button** or selecting this icon in the **DIAGNOSTICS MENU**, the display will indicate the alert(s). If there are 2 alerts present, the display will indicate (1/2) with the 1st alert on the display. Press the **Red [+ / >] Button** to view the second alert (2/2). The second number in the parenthesis () after the slash (/) indicates how many alerts are

present. Refer to the start of this chapter regarding "Upon entering the **SERVICE MENU ***" indication and to **SWITCH ALERTS**. To return to the **DIAGNOSTICS MENU**, press the **Green [BACK] Button**. **Note:** While in this menu, an option may be present to jump (short-cut) to the appropriate Testing Menu (e.g. Coil Test, Switch Test, Game Specific Test or Ticket Dispenser Test, if installed).

NOTE ON SWITCH DETECTION : During game play, activation of switches are continuously monitored. For a switch to be determined as inoperable or **OUT OF SERVICE**, up to twenty games or so must be played for a switch to be automatically marked as **OUT OF SERVICE**. In programming, if a switch is determined to be faulty, game play is compensated. Switches noted as **OUT OF SERVICE** are determined to be stuck closed or open depending on switch usage. Free up the switch actuator, adjust or replace, if necessary. Performing a valid switch closure will put the switch back "IN SERVICE."

Determination of switch usage can be checked in **Audits** (review the Audits Section). Find the associated Audit with the switch in question and check usage; compare the numbers to commonly used switches. After any switch is checked and repaired or replaced, it's suggested to test the switch in the **Switch Test** or **Single Coil Test** (reviewed earlier in this section) where the associated coil to the switch can be tested as well. After correcting the problem, the switch will marked "IN SERVICE" and the switch is again monitored as specified above. *Only you can determine if a switch marked OUT OF SERVICE is actually inoperable, or if it is just not getting actuated during game play.*

NOTE ON PINBALL DETECTION : While in **TECHNICIAN ALERTS MENU**, if the following is displayed, the game has detected one (1) or more pinball(s) missing and has compensated for the lost pinball(s) to provide normal game play.

Technician Alerts continued on the next page.



Technician Alerts continued from previous page.

During game play, a pinball can get trapped or stuck. If after approximately 15 seconds of inactivity or "no scoring," **Ball Search** is started. **Note:** If the pinball is in the Plunger Lane or "held" on the flipper, no **Ball Search** will be performed. The game will perform one **Ball Search** in an attempt to "find" or free-up the pinball.



If the game does not see a switch closure (indicating the pinball has not been found), the Dot Matrix Display may indicate [**LOCATING PINBALLS PLEASE WAIT ...**], during which **Ball Search** will continue until the timer runs out (this feature will not happen if the game is in Competition Mode; **Ball Search** will continue until the pinball is found, unstuck and/or replaced manually). The display will momentarily acknowledge the missing pinball(s). The game will provide another pinball into play and will compensate for the lost pinball. Game play will appear normal.

Note: This detection and compensation will happen with every pinball, if each suffers the same fate of a ball trap. If all balls get trapped, the game cannot be played or started until the situation is rectified.

Important: Determine where the pinball is! **Do not add pinball(s)** until it is determined the pinball(s) are indeed missing and not just stuck. The most common places for a pinball to be stuck is in device holes (ejects and VUKs) or ball troughs. Determine that all devices are functionally property. Check around plastic pieces and ramps to see if the pinball got jammed or stuck.

When the found pinball or a replacement pinball is added to the Ball Trough, the **Technician Alert** will immediately clear and will then indicate any remaining alerts (if present) or **NO TECHNICIAN ALERTS**.

Enter the **BALL TROUGH TEST** (review the previous page) to cycle the pinballs and to check proper switch and coil operation. If a pinball was added, and the originally stuck pinball has freed itself at a later time, the game will not operate correctly.



NOTE ON DEVICE MALFUNCTION : While in **TECHNICIAN ALERTS MENU**, if the following is displayed, the game has detected a "device malfunction." Check the device indicated (coil and/or switch).



Knocker Test

To initiate, from the **DIAGNOSTICS MENU**, select the "KNO-CKER" *Icon*. The digitally mastered "Knocker" is sounded. The *knocker sound* is used to alert the player if he/she has received a special, replay or a credit from the Match Award feature. Press the **Black [SELECT] Button** to activate the knocker. To return to the **DIAGNOSTICS MENU**, press the **Green [BACK] Button**.

FACTOID: The knocker got it's name from the 'original knocker' (20th century pinball games), which used a coil and when energized (fired), the plunger would strike a wood panel inside the cabinet.



Sound / Speaker Test

To initiate, from the **DIAGNOSTICS MENU**, select the "SPKR" *Icon*. This system produces true digital stereo sound from Backbox & Cabinet Speakers or "Mono" on the Cabinet Speaker (when used by itself). This Menu is provided to allow the technician a simple method of testing the speakers if rewired or replaced.



Upon entering **Sound / Speaker Test**, you will notice the Dot Matrix Display indicating the first option of *available* music and/or sound(s) in this test. Press the **Red [+ / >] Button** to cycle through the *available* music and/or sounds, and press the **Black [SELECT] Button** to play the option shown in the Dot Matrix Display. Press the **Green [BACK] Button** to exit.



Speaker Phase Testing


Connections to each of speakers are polarized and each must be connected appropriately for the best quality sound. If one speaker has the positive and negative connections reversed with respect to the other one, bass frequencies will not be produced properly and the overall sound quality will be poor. To test for proper speaker phasing, use the **Sound / Speaker Test** to cycle through the available music and sound.

Speaker Phase Testing cont. next page.



Speaker Phase Testing continued from previous page.

If the sound is not balanced or doesn't sound correct, check the speaker wiring.

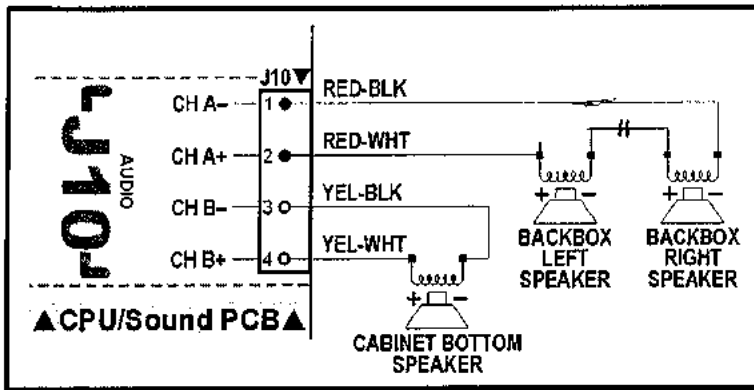

1. Check each speaker for polarity markings. If the speakers have polarity markings, verify that the Backbox Speaker's **RED-BLK** Wires and the Cabinet Speaker **YEL-BLK** Wire(s) are connected to the negative (-) terminal.

2. Disconnect the speaker output Connector **J10 (AUDIO)** from the CPU / Sound PCB (in the Backbox) and connect a 1.5-volt battery across each speaker pair one at a time while observing the speakers.

3. Make sure the positive (+) battery terminal is connected to the positive lead [J10, Pin-2, CH A+] (**RED-WHT**) or [J10, Pin-4, CH B+]

(**YEL-WHT**) each time. As the connection is made, check speaker cone movement; proper connections are indicated by outward movement.



Begin Burn-In

To initiate, from the **DIAGNOSTICS MENU**, select the "BURN" *Icon*. After selecting this *Icon*, press the **Black [SELECT] Button** to begin (initiate) the **Burn-In Test**. Ensure the **Power Interlock Switch** is pulled out if testing with the Coin Door open (required for coil function). Upon entering **Burn-In Test**, the game will exercise all CPU I/O Functions: **Dot Matrix Display Test**, **Coil Cycling Testing**, **All Lamps Test** and **Sound / Speaker Test**. Press the **Green [BACK] Button**, to pause and to view the cumulative Burn-In minutes. Press the **Green [BACK] Button** again to return to the **DIAGNOSTICS MENU**.


Note: To reset Burn-In minutes back to **0:00**, see Section 3, Chapter 5, **GO TO RESET MENU** (via the **UTILITIES MENU**), **Reset Factory Settings**. **CAUTION:** Performing a **FACTORY RESET** will reset all other information as well (read the Utilities Section (**GO TO RESET MENU**), for more information).




Dot Matrix Test

To initiate, from the **DIAGNOSTICS MENU**, select the "DOT TEST" *Icon*. After selecting this *Icon* the **Dot Matrix Test** immediately begins. The Dot Matrix Display will immediately and continuously illuminate and cycle each of the **5 Tests for 1 pass each**. To return to the **DIAGNOSTICS MENU**, press the **Green [BACK] Button**.


Test 1

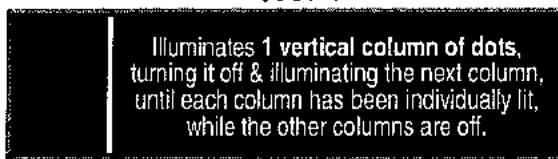


Test 2

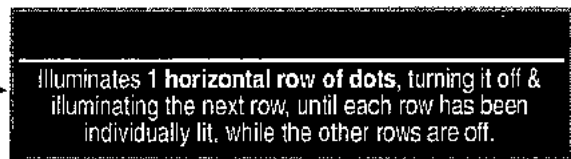


Test 3

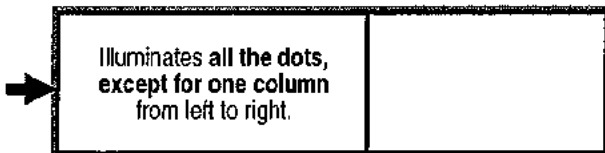


Test 4

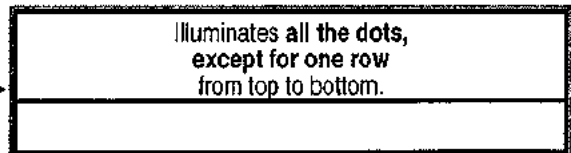

Test 5

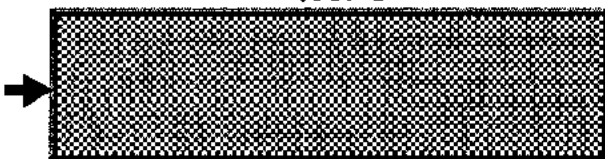

Test 1

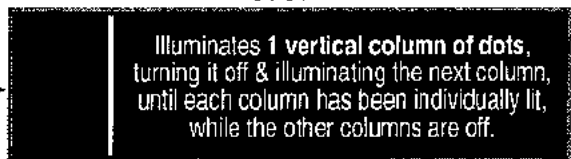



Ticket Dispenser Test

To initiate, from the **DIAGNOSTICS MENU**, select the "TIX" *Icon*. This Menu (*Icon*) will only appear if **Standard Adjustment 56, Ticket Dispenser**, is set to **YES** (Default = **NO***). ***Note:** *Some games shipped from the factory with a unique Dip Switch Setting will default to YES*. To view and/or change your setting, see *Adjustments Section (GO TO ADJUSTMENTS MENU)*. Please remember, if you install an optional Ticket Dispenser, and your default setting is "NO," you will have to reset it back to "YES" if a **Factory Reset** is performed.

After selecting this *Icon*, the **Ticket Dispenser Test** will start. With the Ticket Dispenser properly installed, manually feed your tickets into the dispenser. The dispenser will activate and pull in the first ticket. Press the **Black [SELECT] Button** (which energizes Coil #35, Aux 3: Switched Ground) to advance a ticket. Feeding your Tickets into the dispenser works because Coil #33, Aux 1: Ticket Advance (Enable) is always 'energized'. With a Ticket Meter installed, as one Ticket Passes through the Ticket Dispenser, one 'click' is fired to the Meter (Coil #34, Aux 2: Ticket Meter) for each ticket passing through. Dedicated Switch **D-19, Ticket Notch**, will also be indicated on-screen (*in combination with a audible sound*) as "closing" as the notch between the tickets passes through. In this test you can clear ticket jams and check and/or clear tickets in Escrow, if necessary. To return to the **DIAGNOSTICS MENU**, press the **Green [BACK] Button**.



To initiate, from the **MAIN MENU**, select the "AUD" *Icon*. The **AUDITS MENU** provides 99* Audits for accounting purposes and for evaluation of *Game Programming*. The Audits are divided into 4 groups: • **Earnings Audits** [#1 – #13], • **Standard Audits** [#1 – #59], • **Feature Audits (Programming Use Only)** [#1 – #+] and • **Tournament Audits** [#1 – #14], "T AUD" *Icon* provided as an alternate access to Tournament Audits (*if data is available). For more information on the **TOURNAMENT MENU**, review the *Tournament Section (GO TO TOURNAMENT MENU)*. Try the "DUMP AUDITS TO USB" feature to create a text file of your audits. Don't forget to set the **DATE & TIME** in the **UTILITIES MENU**. See the *Utilities Section (GO TO UTILITIES MENU)*, for more information.

Audits which are named **Proprietary** are also for **Future Expansion or Programming**. Game code may get upgraded during production; compare all Audits in the Dot Matrix Display with the manual and make any corrections, as necessary. Audits are subject to change (*with or without notice*).

All **AUDITS MENU** *Icons* and there usages are explained throughout this chapter in the same order as seen in the Dot Matrix Display. **NOTE:** Depending on Game Type, Version, selections made, Dip Switch settings, location and/or areas, some *Icons* may appear non-functional or may not appear at all. *Icons and/or functions, order and operation are subject to change.*

In displays where changes can be made or to perform a function, use the **GREEN Button** to go [**BACK**], exit or escape, the **RED Buttons** to [</-] MOVE BACK / LEFT / [+/>] MOVE FORWARD / RIGHT to view the next audit in the group, and the **BLACK Button** to [**SELECT**] the sub-menus.

Earnings Audits [#1 – #13]

To initiate, from the **AUDITS MENU**, select the "EARN" *Icon*. The Dot Matrix Display will indicate the *audit number (in this group), audit name and the audit total or value*. The current audit will remain on the display until the next audit is viewed or when this sub-menu is exited.

- #1 **TOTAL PAID CREDITS [0]** : Total number of *Paid Credits*.
- #2 **FREE GAME PERCENTAGE [0%]** : Percentage value is 'Total Free Plays' (Standard Audit 15) divided by 'Total Plays' (Standard Audit 16).
- #3 **AVERAGE BALL TIME [0:00]** : In seconds, the average ball time is derived from the total play time divided by Standard Audit 1, Total Balls Played.
- #4 **AVERAGE GAME TIME [0:00]** : The average game time is expressed in minutes and seconds.
- #5 **COINS THROUGH LEFT SLOT [0]** : Total 'Left Coin Slot' Dedicated Switch (D-1) closures.
- #6 **COINS THROUGH RIGHT SLOT [0]** : Total 'Right Coin Slot' Dedicated Switch (D-3) closures.
- #7 **COINS THROUGH CENTER SLOT [0]** : Total 'Center Coin Slot' Dedicated Switch (D-2) closures.
- #8 **COINS THROUGH FOURTH SLOT [0]** : Total '4th Coin Slot' Dedicated Switch (D-4) closures.
- #9 **COINS THROUGH FIFTH SLOT [0]** : Total '5th Coin Slot' Dedicated Switch (D-5) closures.
- #10 **TOTAL COINS [0]** : Total amount of coins registered through all the *Coin Slots*.
- #11 **TOTAL EARNINGS [USD 0.00]** : Total cash value accumulated since the last Factory Reset occurred (*review the Utilities Section (GO TO RESET MENU), Reset Coin Audits*).
- #12 **METER CLICKS [0]** : Total number of money clicks accumulated.
Based on the country's lowest coin denomination used for the game credit.
- #13 **SOFTWARE METER [0]** : Continuing total of Meter Clicks.
This audit cannot be reset; the display shows the constant addition of Meter Clicks.



Standard Audits [#1 - #59]

To initiate, from the **AUDITS MENU**, select the "S.P.I." Icon. The Dot Matrix Display will indicate the *audit number (in this group), audit name and the audit total or value*. The current audit will remain on the display until the next audit is viewed or when this sub-menu is exited.

- #1 **TOTAL BALLS PLAYED [0]**: Total number of *Regular and Extra Balls*.
- #2 **TOTAL EXTRA BALLS [0]**: Total number of *Extra Balls* awarded.
- #3 **EXTRA BALLS PERCENTAGE [0%]**: Percentage value is 'Total Extra Balls' (Standard Audit 2) divided by 'Total Plays' (Standard Audit 16).
- #4 **REPLAY 1 AWARDS [0]**: Total Awards (*Credits, Extra Balls or Scores*) for Level 1.
- #5 **REPLAY 2 AWARDS [0]**: Total Awards (*Credits, Extra Balls or Scores*) for Level 2.
- #6 **REPLAY 3 AWARDS [0]**: Total Awards (*Credits, Extra Balls or Scores*) for Level 3.
- #7 **REPLAY 4 AWARDS [0]**: Total Awards (*Credits, Extra Balls or Scores*) for Level 4.
- #8 **TOTAL REPLAYS [0]**: Total Awards (*Credits, Extra Balls or Scores*) for exceeding *Replay Score Levels*.
- #9 **REPLAY PERCENTAGE [0%]**: Percentage value is 'Total Replays' (Standard Audit 8) divided by 'Total Plays' (Standard Audit 16). *The percentage reflects replay total awards for exceeding replay score levels.*
- #10 **TOTAL SPECIALS [0]**: Total Awards (*Credits, Extra Balls, or Scores*) for making *Specials*.
- #11 **SPECIAL PERCENTAGE [0%]**: Percentage value is 'Total Specials' (Standard Audit 10) divided by 'Total Plays' (Standard Audit 16).
- #12 **TOTAL MATCHES [0]**: Total *Credits* awarded for matching the last two digits of the score with the *System-Generated Match Number* at the end of the game. Percentage of *Match Credits* is adjustable from **0%** to **10%** or **OFF** by Standard Adjustment 19, *Match Percentage, if enabled (review the Adjustments Section (GO TO ADJUSTMENTS MENU), Standard Adjustments)*.
- #13 **HIGH SCORE AWARDS [0]**: Total Awards (*Credits, Extra Balls, or Scores*) for exceeding the *High-Score-To-Date* scores.
- #14 **HIGH SCORE PERCENT [0%]**: Percentage value is 'High Score Awards' (Standard Audit 13) divided by 'Total Plays' (Standard Audit 16).
- #15 **TOTAL FREE PLAYS [0]**: Total *Free Credits* for *Replays, High-Score-To-Date, Specials and Match*.
- #16 **TOTAL PLAYS [0]**: This total is derived by adding the sum of 'Total Paid Credits' (Earnings Audit 1) and 'Total Free Plays' (Standard Audit 15). *Note: Free credits are not recorded in the Audit until actually used.*
- #17 **0.0M-1.99M SCORES [00]**: Total number of games the Player's final score was between **0** and **1,999,990** points.
- #18 **2.0M-3.99M SCORES [00]**: Total number of games the Player's final score was between **2,000,000** and **3,999,990** points.
- #19 **4.0M-5.99M SCORES [00]**: Total number of games the Player's final score was between **4,000,000** and **5,999,990** points.
- #20 **6.0M-7.99M SCORES [00]**: Total number of games the Player's final score was between **6,000,000** and **7,999,990** points.
- #21 **8.0M-9.99M SCORES [00]**: Total number of games the Player's final score was between **8,000,000** and **9,999,990** points.
- #22 **10.0M-12.49M SCORES [00]**: Total number of games the Player's final score was between **10,000,000** and **12,499,990** points.
- #23 **12.5M-14.99M SCORES [00]**: Total number of games the Player's final score was between **12,500,000** and **14,499,990** points.
- #24 **15.0M-17.49M SCORES [00]**: Total number of games the Player's final score was between **15,000,000** and **17,499,990** points.
- #25 **17.50M-19.99M SCORES [00]**: Total number of games the Player's final score was between **17,500,000** and **19,999,990** points.
- #26 **20.0M-24.99M SCORES [00]**: Total number of games the Player's final score was between **20,000,000** and **24,999,990** points.
- #27 **25.0M-29.99M SCORES [00]**: Total number of games the Player's final score was between **25,000,000** and **29,999,990** points.

Standard Audits 28-59 continued on the next page.



Standard Audits Continued

- #28 **30.0M–39.99M SCORES [00]** : Total number of games the Player's final score was between 30,000,000 and 39,999,990 points.
- #29 **40.0M–49.99M SCORES [00]** : Total number of games the Player's final score was between 40,000,000 and 49,999,990 points.
- #30 **50.0M–74.99M SCORES [00]** : Total number of games the Player's final score was between 50,000,000 and 74,999,990 points.
- #31 **75.0M–99.99M SCORES [00]** : Total number of games the Player's final score was between 75,000,000 and 99,999,990 points.
- #32 **100.0M–149.99M SCORES [00]** : Total number of games the Player's final score was between 100,000,000 and 149,999,990 points.
- #33 **150.0+M SCORES**: Total number of games the Player's final score was 150,000,000 points and over.
- #34 **AVERAGE SCORES [00]** : This total is derived by adding the Final Score of each game to a table and dividing this sum by 'Total Plays' (Standard Audit 16).
- #35 **SERVICE CREDITS [0]** : Total 'Green [SERVICE CREDIT] Button' Dedicated Switch (D-21) closures in **Attract Mode** (not while in the **SERVICE MENU**). See the *Service Menu Section, Service Switch X4 Set Access & Use*, for how to receive Service Credits. See the *Utilities Section (GO TO RESET MENU), Reset Credits*, for how to delete credits.
- #36 **BALL SEARCH STARTED [0]** : Total number of times the game performed a *Ball Search*.
- #37 **LOST BALL FEEDS [0]** : Total number of times the game added a pinball to play when it could not find a pinball after *Ball Search* (review the *Diagnostics Section (GO TO DIAGNOSTICS MENU), Technicians Alert [Pinball Detection]*).
- #38 **LOST BALL GAME STARTS [0]** : Total number of times the game started with a pinball missing from the ball trough at the start of a game (review the *Diagnostics Section (GO TO DIAGNOSTICS MENU), Technicians Alert [Pinball Detection]*).
- #39 **LEFT DRAINS [0]** : Total 'Left Outlane' Switch (24) closures.
- #40 **CENTER DRAINS [0]** : Total number of times the pinball had drained when the last switch closed was not the 'Left Outlane' (24) or the 'Right Outlane' Switch (29).
- #41 **RIGHT DRAINS [0]** : Total 'Right Outlane' Switch (29) closures.
- #42 **TILTS [0]** : Total 'Tilt Pendulum' Dedicated Switch (D-17) closures.
- #43 **TOTAL BALLS SAVED [0]** : Total number of times this feature was used. This feature is adjustable from 0:01–0:15, **AUTO** or **NO BALL SAVES** (review the *Adjustments Section (GO TO ADJUSTMENTS MENU), Standard Adj. 48, Ball Save Time*). This feature is enabled at the start of each pinball and is disabled as soon as a predetermined number of switches are "closed" or the allocated time has expired.
- #44 **LEFT FLIPPER USED [0]** : Total 'Left Flipper Button' Dedicated Switch (D-9) closures in **Game Mode**.
- #45 **RIGHT FLIPPER USED [0]** : Total 'Right Flipper Button' Dedicated Switch (D-11) closures in **Game Mode**.
- #46 **0 - 1 MINUTE GAMES [0]** : Total games in which the total game time was between 0:00 and 1:00 minute.
- #47 **1 - 1.5 MINUTE GAMES [0]** : Total games where play time was between 1:00 and 1:30 minutes.
- #48 **1.5 - 2 MINUTE GAMES [0]** : Total games where play time was between 1:30 and 2:00 minutes.
- #49 **2 - 2.5 MINUTE GAMES [0]** : Total games where play time was between 2:00 and 2:30 minutes.
- #50 **2.5 - 3 MINUTE GAMES [0]** : Total games where play time was between 2:30 and 3:00 minutes.
- #51 **3 - 3.5 MINUTE GAMES [0]** : Total games where play time was between 3:00 and 3:30 minutes.
- #52 **3.5 - 4 MINUTE GAMES [0]** : Total games where play time was between 3:30 and 4:00 minutes.
- #53 **4 - 5 MINUTE GAMES [0]** : Total games where play time was between 4:00 and 5:00 minutes.
- #54 **5 - 6 MINUTE GAMES [0]** : Total games where play time was between 5:00 and 6:00 minutes.
- #55 **6 - 8 MINUTE GAMES [0]** : Total games where play time was between 6:00 and 8:00 minutes.
- #56 **8 - 10 MINUTE GAMES [0]** : Total games where play time was between 8:00 and 10:00 minutes.
- #57 **10 - 15 MINUTE GAMES [0]** : Total games where play time was between 10:00 and 15:00 minutes.
- #58 **15+ MINUTE GAMES [0]** : Total games in which the total game time was 15:00 minutes and over.
- #59 **RECENT REPLAY PERCENT [0%]** : *Percent figured with programming thresholds for a determined number of games. The % reflects replay total awards for exceeding replay score levels.*

HOW TO UPDATE YOUR GAME CODE FOR S.A.M. SYSTEM MACHINES


USB Compatible Data Storage Device (Thumb, Flash or Jump Drives) required to copy game code into system.
 S.A.M. System compatible, tested & SPI approved USB Data Storage Devices 128MB+
 available through your local distributor. Ask for SPI Part Number 970-0128-00

* to get the Data Storage Device with the latest Game Code copied to it, add "game title" to above part number.

STYLE, COLOR, SIZE AND MANUFACTURER SUBJECT TO CHANGE.

Game Code is subject to change. Update this game with the latest code downloaded from our website, from another game or order through your local distributor (use SPI PN + name above).

Upon power-up the display will describe the version of code installed in your game. When directed to do so (via Service Bulletin or website announcement) you will need to update your code ... with the **BOOT FLASH EPROM*** installed, here's how:

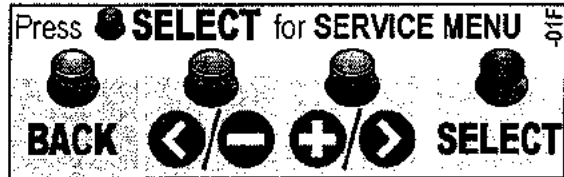



• Green Button
Press to Escape Back (or Exit).

•• Red Buttons
Press to move < Left , Right >.
Press to - Decrease or + Increase values or to change settings.

• Black Button
Press to Enter Select (or 'OK').

- STEP 1** Open the Back Box and locate the **8-Position Dip Switch (SW1 on the CPU/Sound Board).**
- STEP 2** Switch Dip Switch #8 to 'ON'.
 (***BOOT FLASH EPROM** must be installed.)
- STEP 3** Press the **White Reset Button (S1 RESET on the CPU/Sound Board)** or Power Cycle the game **OFF/ON** (ON/OFF Switch is located on the outside of the cabinet bottom, front right).
- STEP 4** Using the **4-Button Service Switch Set** (inside the Coin Door):
- 4A } Press [**SELECT**] to begin.
 - 4B } With the "UPDT" Icon highlighted, press [**SELECT**].
 - 4C } Insert the Data Storage Device [w/latest file(s)] into the USB Port.
 - 4D } If more than one file is present on the Data Storage Device, press [**<**] or [**>**] to locate your file. Press [**SELECT**] to update.
 - 4E } Follow on-screen prompts.

CPU/Sound Board (S.A.M. System)

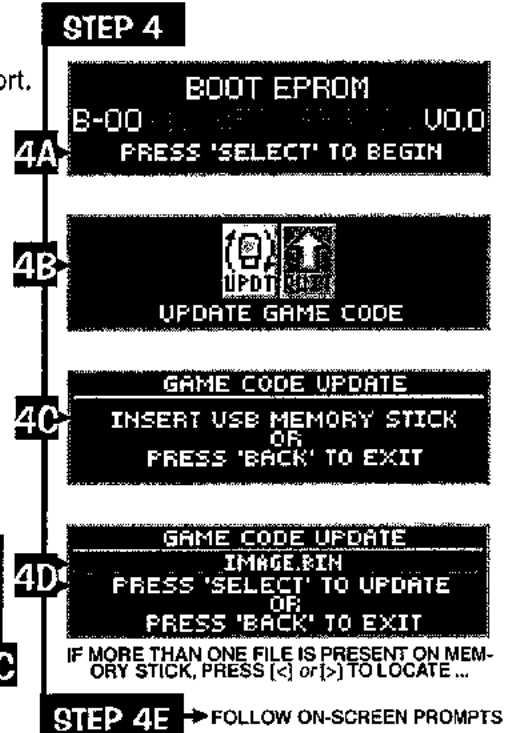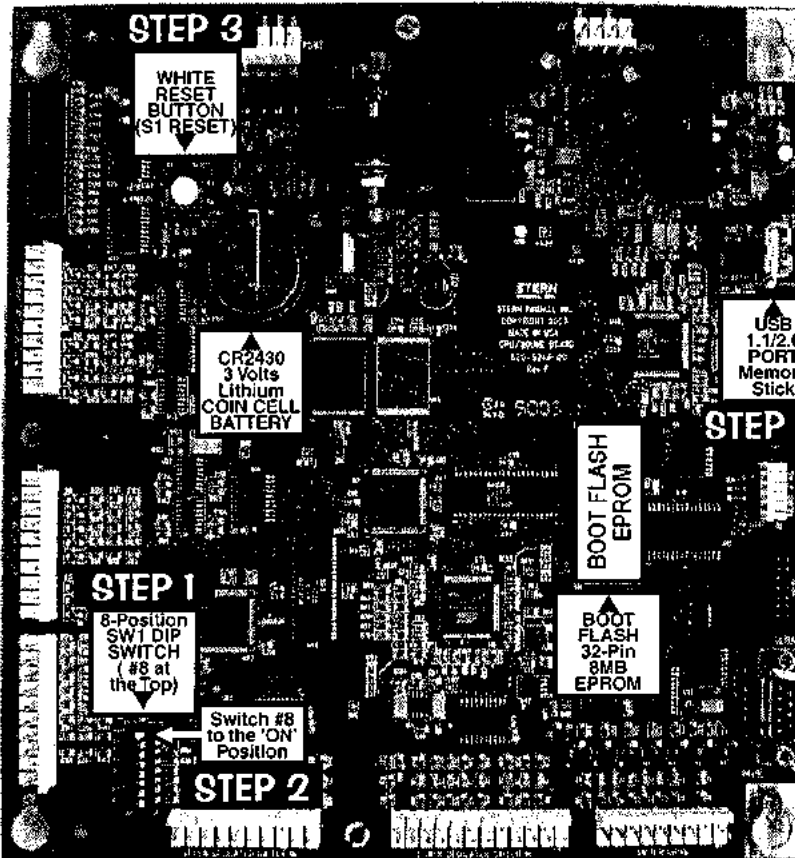


You can also retrieve your latest code from another game! From the **USB MENU** via the **UTILITIES MENU**, select the "BKUP" Icon instead and download to your Data Storage Device.





! Quick Tip ~ Try backing up your current code prior to installing your new code, just in case your Data Storage Device file was corrupted by a computer glitch while you were copying!

Got confused? Comments? Questions? Call Technical Support at 800-542-5377 or 708-345-7700 (Option 1).

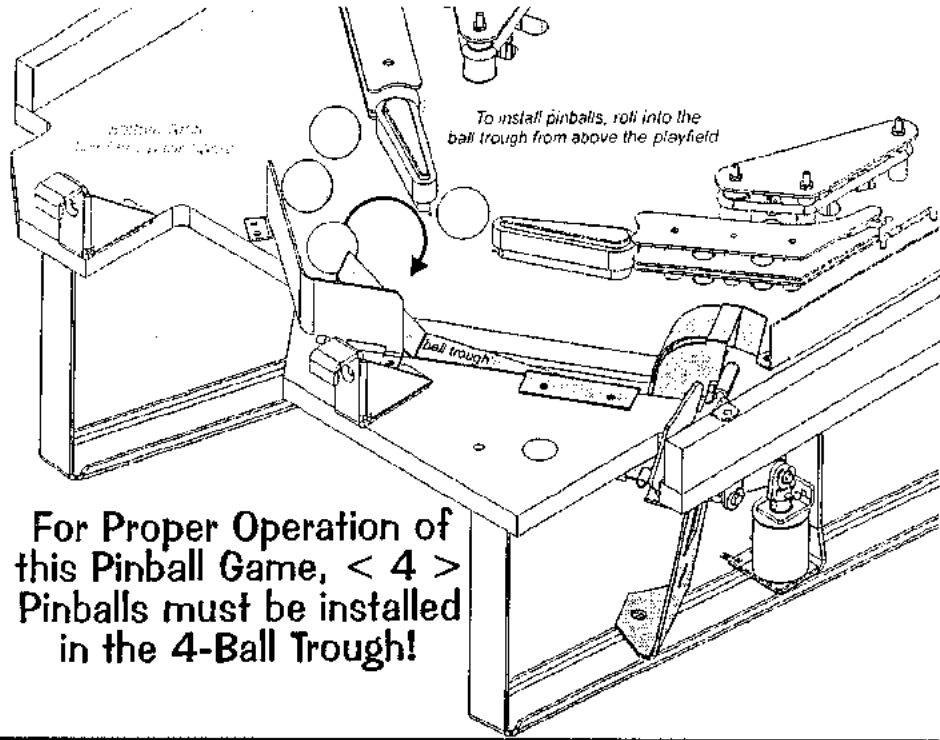

QUICK REFERENCE FUSE CHART			
3/4A S.B. 200-5000-17		3A S.B. 200-5000-08	
4A S.B. 200-5000-06		5A S.B. 200-5000-01	
7A S.B. 200-5000-03		8A S.B. 200-5000-05	
BACKBOX FUSES		CABINET FUSES	
I/O POWER DRIVER BOARD		POWER (SERVICE OUTLET) BOX	
<i>with RED LED STATUS INDICATORS (if any RED LED is OFF, check the fuse)</i>		<i>(Access through Coin Door inside cabinet, front bottom.)</i>	
F1	5A S.B. 5.7VAC-G.I. Lamps (BROWN-WHITE≡WHT-BRN)	8A S.B. 110-120V Main Line US / Canada / Japan	
F2	5A S.B. 5.7VAC-G.I. Lamps (YELLOW≡WHITE-YEL Circuit)	5A S.B. 220-240V Main Line International	
F3	5A S.B. 5.7VAC-G.I. Lamps (GREEN≡WHITE-GRN Circuit)		
F4	5A S.B. 5.7VAC-G.I. Lamps (VIOLET≡WHITE-VIO Circuit)		
F5	7A S.B. 50VDC Coils / Flippers (148VAC feed to BRDG 1)	PLAYFIELD FUSES	
F6	3A S.B. 24VAC Motor or Special Application	FLIPPER OR SPECIAL APPLICATION	
F7	4A S.B. 50VDC Magnet(s) or Special Application	<i>(Coil Fuses are located under the playfield near assembly.)</i>	
F8	3A S.B. 50VDC Coils	3A S.B. 50VDC R. Flipper (BLU-YEL≡RED-YEL)	
F9	5A S.B. 5VDC Logic Power (13VAC feed to BRDG 4)	3A S.B. 50VDC L. Flipper (GRY-YEL≡RED-YEL)	
F10	5A S.B. 20VDC Coils / Flashers (16VAC feed to BRDG 2)	3A S.B. 50VDC Additional Flipper Coil, if used.	
F12	5A S.B. 12VDC Audio (19VAC feed to BRDG 3)	3A S.B. 50VDC Spcl. Application Coil, if used.	
F13	5A S.B. 12VDC Audio (19VAC feed to BRDG 3)	<i>For location & more details on fuses, see Sec. 5, Chp. 2.</i>	

ALL FUSES ARE 250V S.B. (SLO-BLO)
SEE FUSE OR TABLES FOR AMP RATING
CAUTION FOR CONTINUED PROTECTION
AGAINST RISK OF FIRE, REPLACE ONLY WITH
SAME TYPE FUSE WITH IDENTICAL ELECTRICAL RATING!

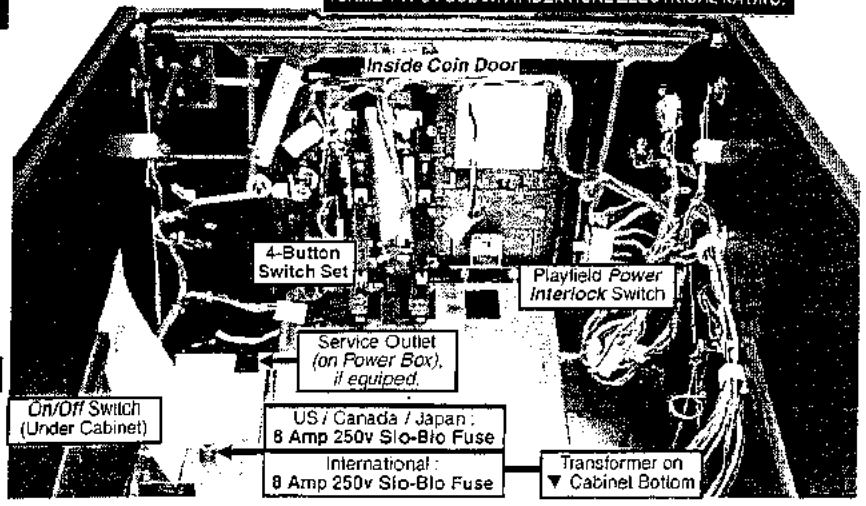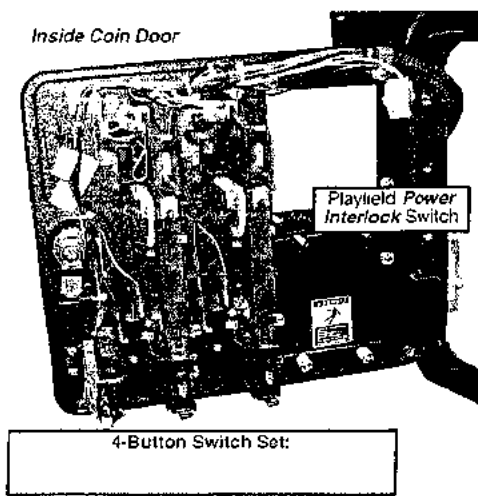

OPEN THE COIN DOOR TO ACCESS THE SERVICE SWITCH X4 SET.

● ● ● ● Service Switch X4 Set Overview

The four buttons (*inside Coin Door*) have dual functions depending if you have entered the **Service Menu** or not.

Functions in Game or Attract Mode

● Green Button Press for Service Credit(s).

●● Red Buttons Press for Volume Adjustment - for less (quieter), + for more (louder).

● Black Button Press for Service Menu entry.


Functions in the Service Menu

Press ● **SELECT** for SERVICE MENU

● Green Button Press to Escape Back (or Exit).

●● Red Buttons Press to move < Left, Right >. Press to - Decrease or + Increase values or to change settings.

● Black Button Press to Enter Select (or 'OK').

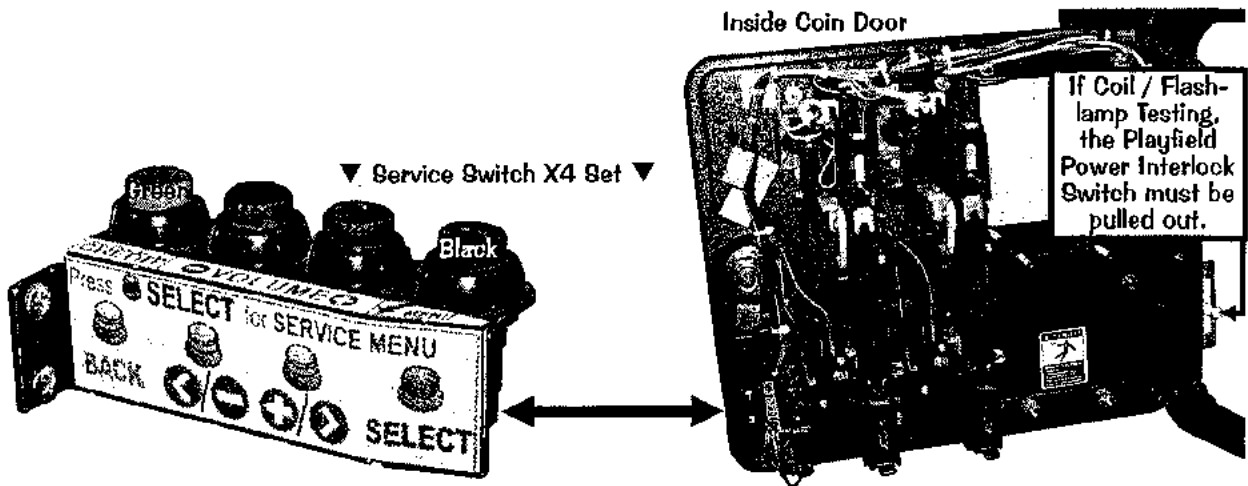

EXAMPLE:

To enter the **SERVICE MENU**, then enter the **SWITCH TEST MENU** via the **DIAGNOSTIC MENU**, perform the below steps.

Step 1 Press [**SELECT**].

Step 2 With the "DIAG" *Icon* highlighted, press [**SELECT**].

Step 3 With the "SW" *Icon* highlighted, press [**SELECT**].

Step 4 With the "TEST" *Icon* highlighted, press [**SELECT**].

Press any switch. If wired correctly, the information in the display will match the information in the Switch Matrix (see DR. 4).

Press [<] or [>] to move left or right through the menus.

Press [**BACK**] to go back a menu, exit or escape at any time.

Continue through the other menus.



The Service Menu is subject to change. Update this game with the latest code downloaded from our website with a USB Data Storage Device (64MB min., recommendation 128MB or higher). See the inside front cover for directions or in the Service Menu "Go To Utilities Menu" then "Go To USB Menu" and follow prompts.

DIAGNOSTIC AIDS

50V / 20V DISABLED
CLOSE COIN DOOR
OR PULL INTERLOCK SWITCH
TO RESTORE POWER

This **audible / visual alert display** is shown when the 50V / 20V Power is disabled (by opening the Coin Door). PULL OUT THE INTERLOCK SWITCH ONLY WHILE IN THE SERVICE MENU FOR COIL, SWITCH OR PLAY TESTING WHEN THE COIN DOOR IS REQUIRED TO STAY OPEN FOR SERVICE BUTTON USE! Pulling out the Power Interlock Switch or pressing the 'escape' Green [BACK] Button will remove the alert display. Initial display presentation is accompanied by 3 audible tones (the bright display warning will go dim after approximately 30 seconds).

OPERATOR ALERT!
AUTO PLUNGER
DEVICE MALFUNCTION

This **alert display** is shown momentarily during **Game Mode** or **Power-Up** to alert the operator of a device malfunction (device or mechanism doesn't energize or is energized repeatedly). **OPERATOR ALERT!** works by monitoring any switch activated device that has the potential to trap a ball when disabled (e.g. in the Shooter Lane, Scoop or Eject Holes, etc.). This alert can also appear if a switch associated with a device (e.g. Ball Trough, Auto Plunger, etc.) is stuck closed (caused by a switch jam or stuck ball); the game will activate the device a predetermined number of times and if the problem is still detected, this device or switch will be noted in **Switch Alerts** and/or **Technician Alerts**.

V0.00 GAME NAME
 SYS. 0.00 HDW. 0
SERVICE MENU *
 USE -/+ TO VIEW TECH. ALERTS

Upon entering the **SERVICE MENU**, if an asterisk "*" is displayed after the words "SERVICE MENU," the game has detected possible faulty devices, switches and/or missing pinballs. Press the either of the **Red Buttons** (short-cut to the **TECHNICIAN ALERTS MENU**) or continue into the **SERVICE MENU** (press the **Black Button** again), select the "DIAG" Icon and "TECH" Icon for the **Technician Alerts** information.

CPU DIP SWITCH SETTINGS


The 8-Pos. Dip Switch [SW1] Is on the CPU/Sound Board (between Conn. J3 & J13, lower left corner)

CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 USA ON: ▲ ▼ ▼ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 Germany ON: ▲ ▲ ▲ ▼ ▼ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 Russia ON: ▲ ▲ ▲ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 Australia ON: ▲ ▲ ▲ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 Greece ON: ▲ ▲ ▲ ▲ ▼ ▼ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 So. Africa ON: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼
CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 Austria ON: ▲ ▼ ▼ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 Italy ON: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 Spain ON: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 Belgium ON: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 Japan ON: ▲ ▼ ▼ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 Sweden ON: ▲ ▲ ▲ ▼ ▼ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼
CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 Canada 1 ON: ▲ ▲ ▼ ▼ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 Lithuania ON: ▲ ▲ ▼ ▼ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 Switzerland ON: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 Canada 2 ON: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 Middle East ON: ▲ ▲ ▲ ▼ ▼ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 Taiwan ON: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼
CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 Croatia ON: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 Netherlands ON: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 UK ON: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 Denmark ON: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 New Zealand ON: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CPU/SND PCB SETTING: Pos. 1 2 3 4 5 6 7 8 UPDATE CODE ON: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▲ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼
CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 Finland ON: ▲ ▼ ▼ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 Norway ON: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 Portugal ON: ▲ ▼ ▼ ▼ ▼ ▼ ▼ ▼ OFF: ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼			



Note: Slide Dip Switch 8 to Position ON (with Dip Switches 1-7 in the OFF Position) only to reboot the game with the latest version BOOT EPROM installed at U9 on the CPU/Sound Board (S.A.M. System only). Currently, this is also the procedure to update your game with the latest software code update file. For the latest version, visit our website. If you have questions about updating your game code, call Technical Support for assistance.




SWITCH MENU: SWITCH, ACTIVE, SINGLE & SERVICE

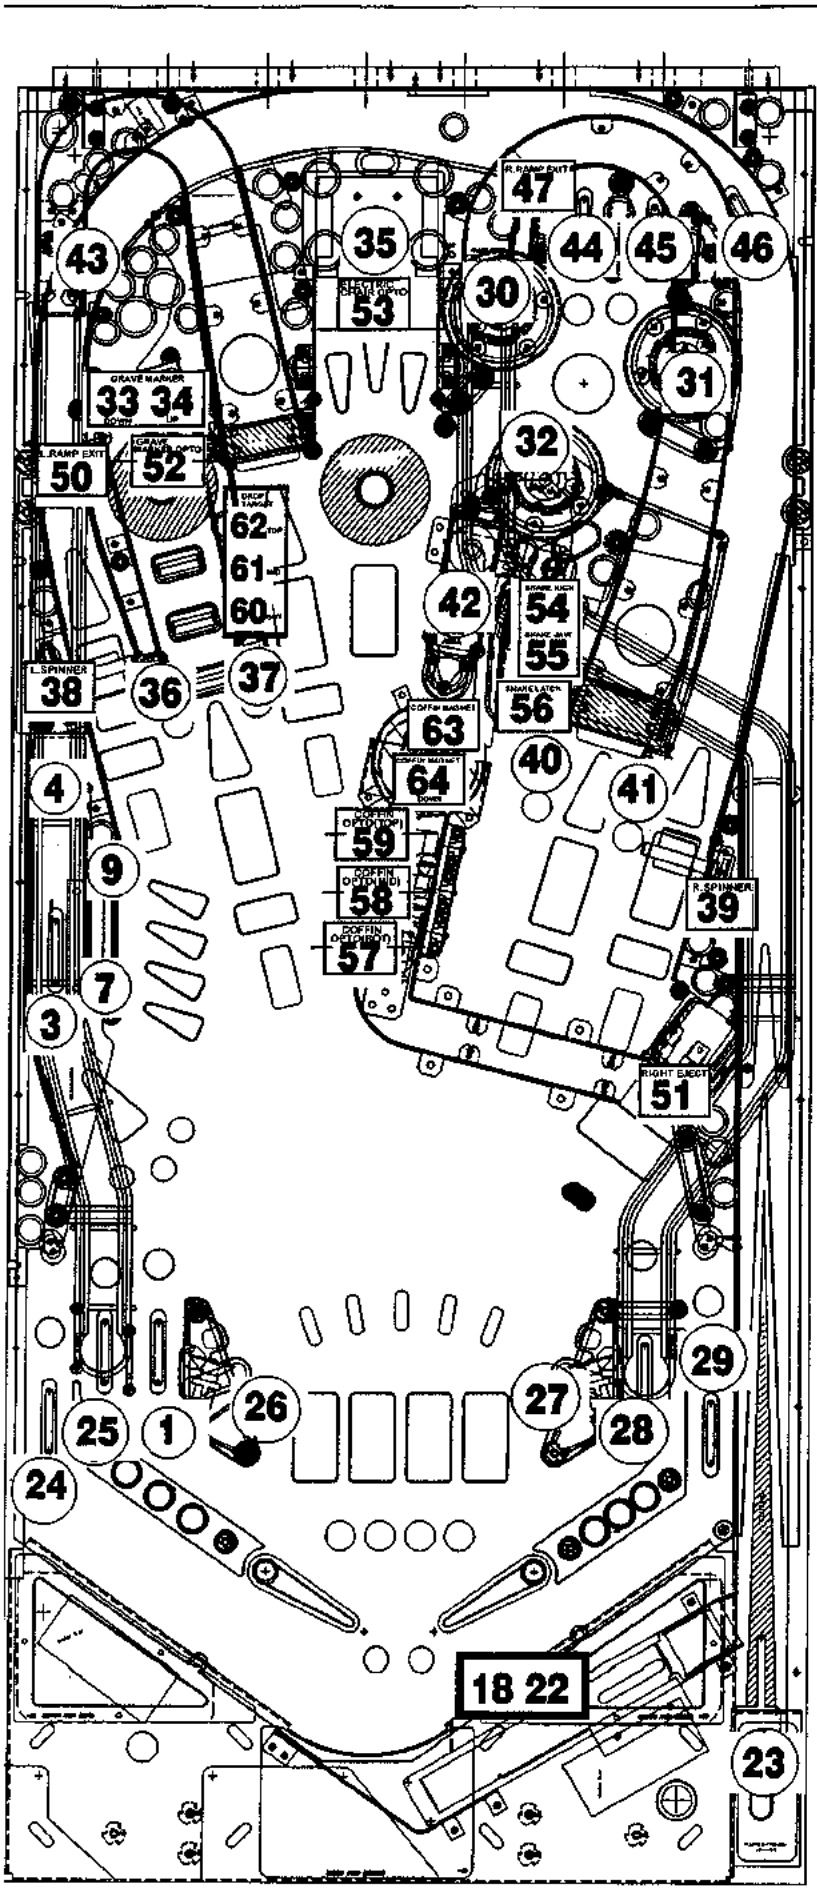

Typical Switch Wiring & Schematic

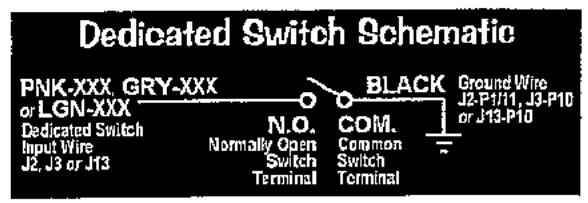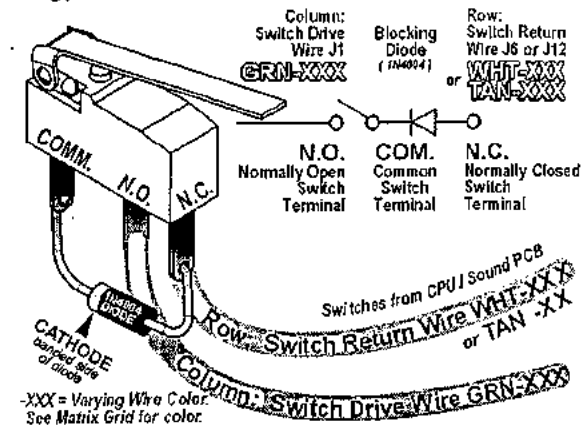

Typical Switch Wiring & Schematic ... with Switch Diode on a Terminal Strip (DOTS)

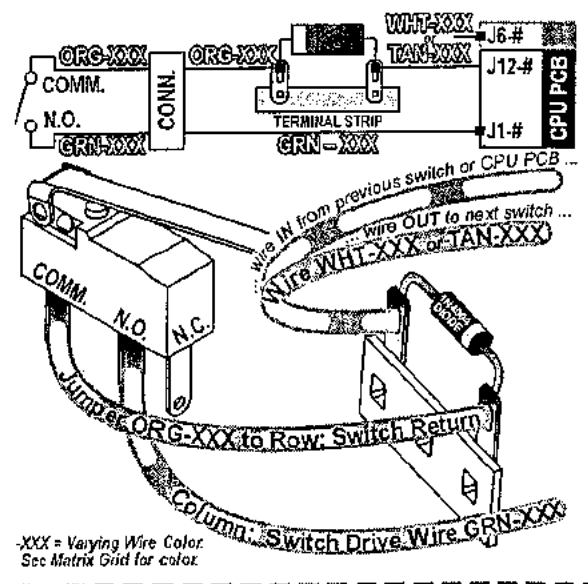


I/O
Power
Driver
Board






35

LAMP MATRIX GRID [#1 - #80] (Lamp Locations : next page)

	L.P. #1	L.P. #2	L.P. #3	L.P. #4	L.P. #5	L.P. #6	L.P. #7	L.P. #8
L.P. #9		L.P. #10	L.P. #11	L.P. #12	L.P. #13	L.P. #14	L.P. #15	L.P. #16
LED BD RIGHT LOOP ELECTRIC CHAIR 520-8779-01	LED BD RIGHT LOOP SNAKE 520-8779-01	LED BD RIGHT LOOP GRAVE MARKER 520-8779-01	LED BD RIGHT LOOP GRAVE MARKER 520-8779-01	L.P. #20	LED BD ELECTRIC CHAIR 520-8307-00	LED SNAKE (12-5033-04 (GRN))	LED EXTRA BALL (12-5033-02 (RED))	LED CRANK IT UP (12-5033-05 (BLU))
LED BD MYSTERY X2 520-5307-00	LED BD RETURN LANE 520-5307-00	LED BD RIGHT OUTLANE 520-5307-00	LED BD RIGHT ELECTRIC CHAIR 520-5307-00	L.P. #28	LED BD RIGHT RAMP SNAKE 520-5307-00	LED BD RIGHT RAMP GRAVE MARKER 520-5307-00	LED BD RIGHT RAMP STANDUP (R) 520-5307-00	LED BD RIGHT RAMP STANDUP (L) 520-5307-00
LED BD LEFT RAMP ELECTRIC CHAIR 520-8779-01	LED BD LEFT RAMP SNAKE 520-8779-01	LED BD LEFT RAMP GRAVE MARKER 520-8779-01	L.P. #35	LED BD L.P. #37	LED BD L.P. #38	LED BD L.P. #39	LED BD L.P. #40	
LED BD L.P. #41	LED BD LEFT RETURN LANE (IN) 520-5307-00	LED BD FUEL LANE AWARD #1 520-5307-00	LED BD FUEL LANE AWARD # 2 520-5307-00	LED BD FUEL LANE AWARD # 3 520-5307-00	LED BD GRAVE LANE GRAVE MARKER 520-5307-00	LED BD GRAVE LANE SNAKE 520-5307-00	LED BD GRAVE LANE ELECTRIC CHAIR 520-5307-00	
LED BD LEFT LOOP ELECTRIC CHAIR 520-8779-01	LED BD LEFT LOOP SNAKE 520-8779-01	LED BD LEFT LOOP GRAVE MARKER 520-8779-01	LED BD L.P. #52	LED BD SHOOT AGAIN (X2) 520-5307-00	LED BD L.P. #54	LED BD GUITAR PICK JAMES 520-5307-00	LED BD L.P. #56	
LED BD GUITAR PICK KIRK 520-5307-00	LED BD GUITAR PICK ROBERT 520-5307-00	LED BD GRAVE MARKER E.O.L. 520-5307-00	LED BD ELECTRIC CHAIR E.O.L. 510-7462-00	LED BD L.P. #61	LED BD SNAKE E.O.L. 520-5307-00	LED BD LEFT OUTLANE 520-5307-00	LED BD LEFT RETURN LANE (L) 520-5307-00	
LED BD GRAVE LANE STANDUP (R) 520-5307-00	LED BD LEFT TOP LANE 520-5307-00	LED BD RIGHT TOP LANE 520-5307-00	LED BD ELECTRIC CHAIR # 1 (LEFT) 520-5307-00	LED BD ELECTRIC CHAIR # 2 (CENTER) 520-5307-00	LED BD ELECTRIC CHAIR # 3 (RIGHT) 520-5307-00	LED GRAVE LANE STANDUP (L) 520-5307-00	LED START 520-5307-00	
LED BOTTOM POP BUMPER 112-5024-08	LED RIGHT POP BUMPER 112-5024-08	LED LEFT POP BUMPER 112-5024-08	LED L.P. #76	LED TOURNAMENT START 112-5024-08	L	E	U	F

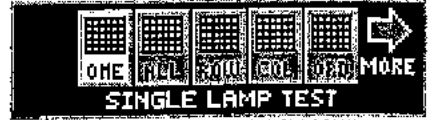

LAMP MENU: ONE, ALL, ROW, COLUMN & ORDERED

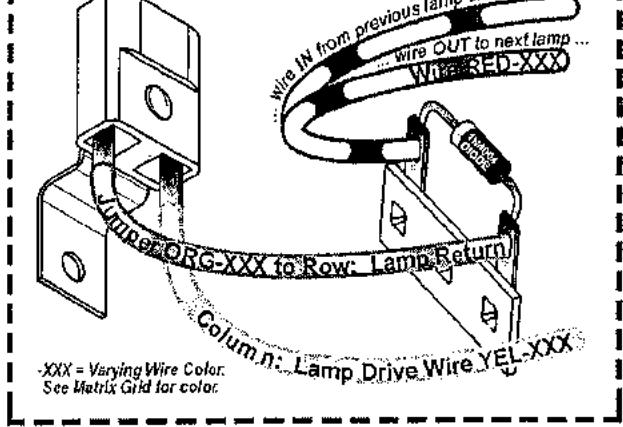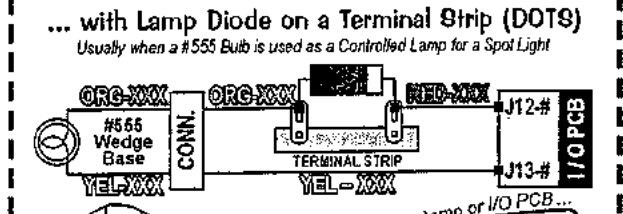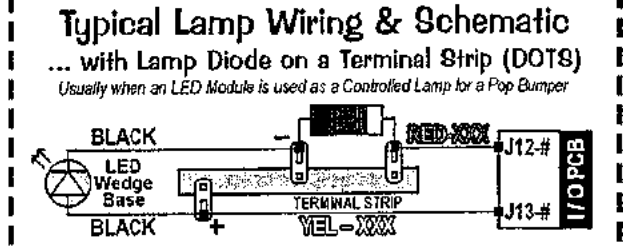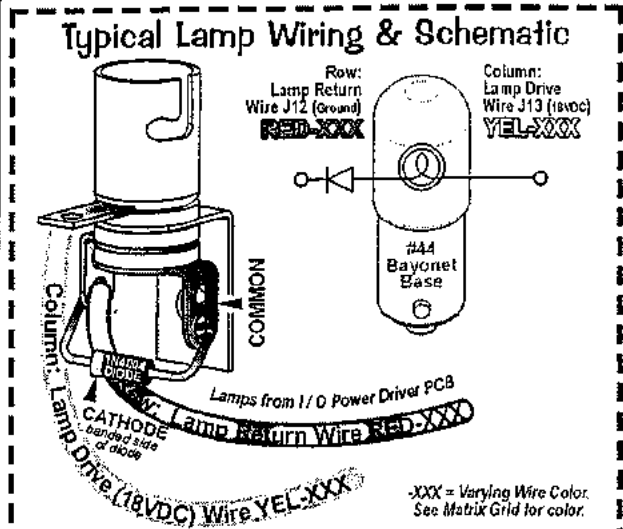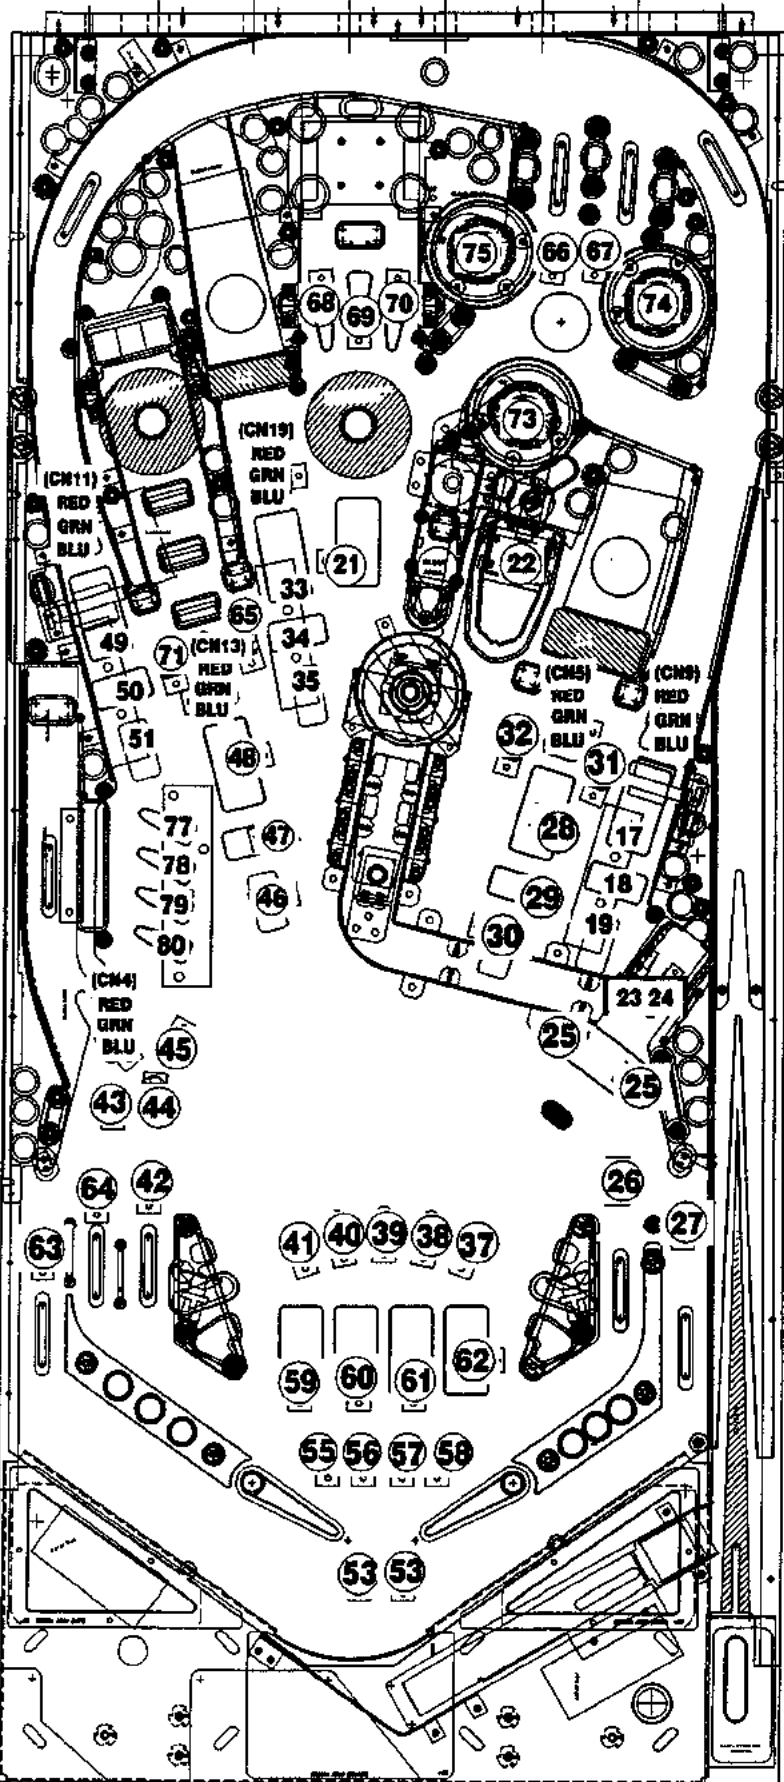

COILS DETAILED CHART TABLE




High Current Coils Group 1			Drive Transistor	Driver Output PCB	Power Line Color	Power Line Connection	Power Voltage	Drive Transistor Control Line Color	D.T. Control Line Connect	Coil GA-Turn or Bulb Type
#1	TROUGH UP-KICKER	Q1	I/O Power Driver	▲	YEL-VIO	J10-P9/10	50VDC	BRN-BLK	J8-P1	25-1200 090-5044-ND
#2	AUTO LAUNCH	Q2			YEL-VIO	J10-P9/10	50VDC	BRN-RED	J8-P3	24-94U 090-5038-ND
#3	GRAVE MARKER MAGNET	Q3			VIO-YEL	J10-P8	50VDC	BRN-ORG	J8-P4	22-850 511-5085-ND
#4	ELECTRIC CHAIR MAGNET	Q4			VIO-YEL	J10-P8	50VDC	BRN-YEL	J8-P5	22-850 511-5085-ND
#5	SNAKE EJECT	Q5			YEL-VIO	J10-P9/10	50VDC	BRN-GRN	J8-P6	23-800 090-5001-ND
#6	RIGHT EJECT	Q6			YEL-VIO	J10-P9/10	50VDC	BRN-BLU	J8-P7	23-800 090-5001-ND
#7		Q7						BRN-VIO	J8-P8	
#8	SHAKER MOTOR (OPTIONAL)	Q8			RED-WHT	J17-P7	16VAC	BRN-GRY	J8-P9	602-5027-00
High Current Coils Group 2			Drive Transistor	Driver Output PCB	Power Line Color	Power Line Connection	Power Voltage	Drive Transistor Control Line Color	D.T. Control Line Connect	Coil GA-Turn or Bulb Type
#9	LEFT POP BUMPER	Q9	I/O Power Driver	▲	YEL-VIO	J10-P9/10	50VDC	BLU-BRN	J8-P1	25-1200 090-5044-ND
#10	RIGHT POP BUMPER	Q10			YEL-VIO	J10-P9/10	50VDC	BLU-RED	J8-P2	25-1200 090-5044-ND
#11	BOTTOM POP BUMPER	Q11			YEL-VIO	J10-P9/10	50VDC	BLU-ORG	J8-P4	25-1200 090-5044-ND
#12	SNAKE JAW LATCH	Q12			YEL-VIO	J10-P9/10	50VDC	BLU-YEL	J8-P5	32-1250 090-5060-01
#13	LEFT SLINGSHOT	Q13			YEL-VIO	J10-P9/10	50VDC	BLU-GRN	J8-P6	25-1200 090-5044-ND
#14	RIGHT SLINGSHOT	Q14			YEL-VIO	J10-P9/10	50VDC	BLU-BLU	J8-P7	25-1200 090-5044-ND
#15	LEFT FLIPPER (50V RED/YEL)	Q15			GRY-YEL-3A Fuse-RED-YEL	J10-P6/7	50VDC	ORG-GRY	J8-P8	23-900 090-5020-30 MIN
#16	RIGHT FLIPPER (50V RED/YEL)	Q16			BLU-YEL-3A Fuse-RED-YEL	J10-P6/7	50VDC	ORG-VIO	J8-P9	23-900 090-5020-30 MIN
Low Current Coils Group 1			Drive Transistor	Driver Output PCB	Power Line Color	Power Line Connection	Power Voltage	Drive Transistor Control Line Color	D.T. Control Line Connect	Coil GA-Turn or Bulb Type
#17		Q17	I/O Power Driver	▲				VIO-BRN	J7-P2	
#18	ELECTRIC CHAIR (STEP-UP DRV BD)	Q18			YEL-VIO	J10-P9/10	50VDC	VIO-RED	J7-P3	32-1800 090-5031-08 MIN
#19	FLASH: GRAVE MARKER	Q19			ORG	J6-P10	20VDC	VIO-ORG	J7-P4	LED 112-5041-08
#20	GRAVE MARKER MOTOR	Q20			BRN	J7-P1	20VDC	VIO-YEL	J7-P6	041-5111-00
#21	FLASH: BACK PANEL (LEFT)	Q21			ORG	J6-P10	20VDC	VIO-GRN	J7-P7	#88 BULB 165-5000-89
#22	FLASH: BACK PANEL (RIGHT)	Q22			ORG	J6-P10	20VDC	VIO-BLU	J7-P8	#88 BULB 165-5000-89
#23	FLASH: LEFT RAMP	Q23			ORG	J6-P10	20VDC	VIO-BLK	J7-P9	#88 BULB 165-5000-89 LED
#24	OPTIONAL (e.g. COIN METER)	Q24			RED	J16-P4-8	5VDC	VIO-GRY	J7-P10	COIN METER
Low Current Coils Group 2			Drive Transistor	Driver Output PCB	Power Line Color	Power Line Connection	Power Voltage	Drive Transistor Control Line Color	D.T. Control Line Connect	Coil GA-Turn or Bulb Type
#25	FLASH: POP BUMPERS	Q25	I/O Power Driver	▲	ORG	J6-P10	20VDC	BLK-BRN	J6-P1	#89 BULB 165-5000-89
#26	FLASH: GRAVE MARKER (X2)	Q26			ORG	J6-P10	20VDC	BLK-RED	J6-P2	#88 BULB 165-5000-89
#27	FLASH; ELECTRIC CHAIR (X2)	Q27			ORG	J6-P10	20VDC	BLK-ORG	J6-P3	#89 BULB 165-5000-89
#28	FLASH: ELECTRIC CHAIR SPOT (X2)	Q28			ORG	J6-P10	20VDC	BLK-YEL	J6-P4	LED 112-5041-08
#29	FLASH: RIGHT RAMP	Q29			ORG	J6-P10	20VDC	BLK-GRN	J6-P5	#88 BULB 165-5000-89
#30	FLASH: SNAKE	Q30			ORG	J6-P10	20VDC	BLK-BLU	J6-P6	LED 112-5041-08
#31	FLASH: COFFIN INSERT (X2)	Q31			ORG	J6-P10	20VDC	BLK-VIO	J6-P7	#89 BULB 165-5000-89 LED
#32	FLASH: ELECTRIC CHAIR INSERT	Q32			ORG	J6-P10	20VDC	BLK-GRY	J6-P8	#89 BULB 165-5000-89

GO TO DIAGNOSTICS MENU

GO TO COIL MENU

SINGLE COIL TEST


 COIL MENU: SINGLE COIL & CYCLING COIL

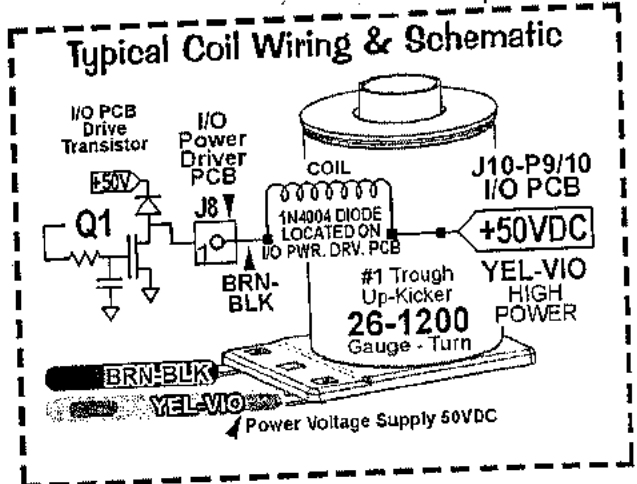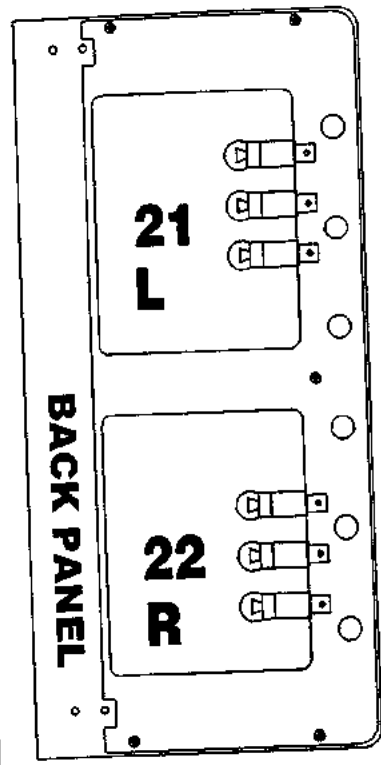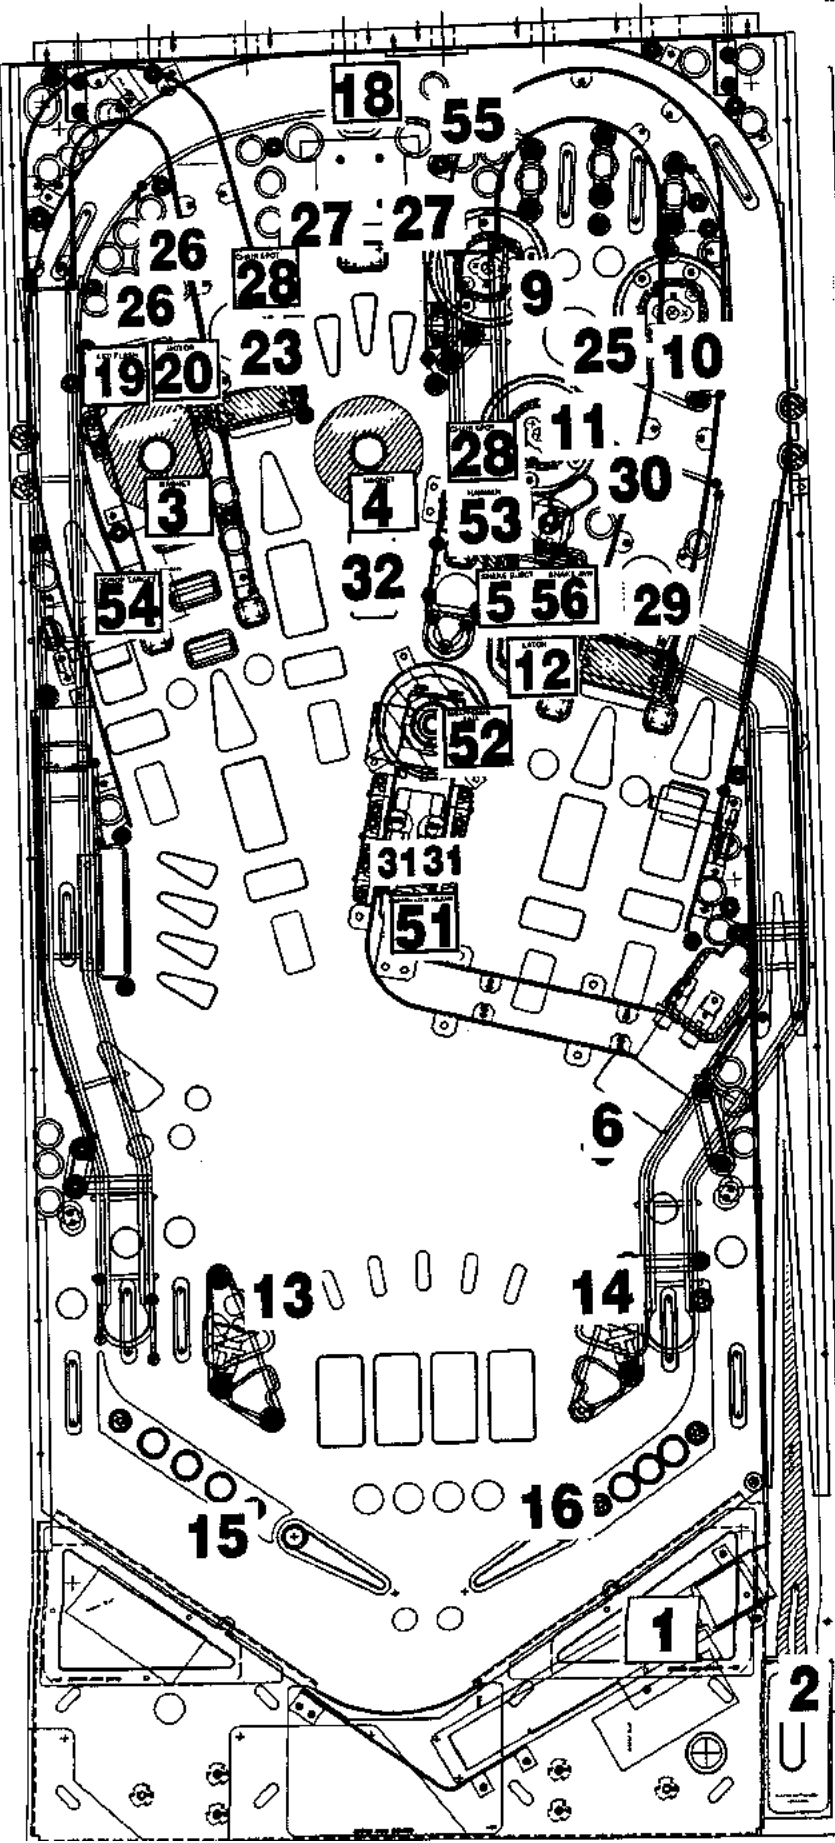

6 TRANSISTOR DRIVER BOARD COIL CHART.

<u>Driver N.O</u>	<u>Assembly Name</u>	<u>Drive Transistor N.O</u>	<u>PWR Line Color</u>	<u>PWR Voltage</u>	<u>Control Line Color</u>	<u>Coil Type</u>
51	COFFIN LOCK RELEASE	Q51	YEL-VIO	50VDC	YEL-BRN	27-1500 (090-5004-ND)
52	COFFIN MAGNET (DN)	Q52	YEL-VIO	50VDC	YEL-GRY	23-1100 (090-5030-ND)
53	HAMMER ASSEMBLY	Q53	YEL-VIO	50VDC	YEL-ORG	26-1200 (090-5044-ND)
54	DROP TRAGETS RESET	Q54	YEL-VIO	50VDC	YEL-BLK	24-940 (090-5036-ND)
55	LOOP UP POST	Q55	YEL-VIO	50VDC	YEL-GRN	26-1200 (090-5044-ND)
56	SNAKE JAW	Q56	YEL-VIO	50VDC	WHT-RED	26-1200 (090-5044-ND)

6 TRANSISTOR BOARD COIL MAP

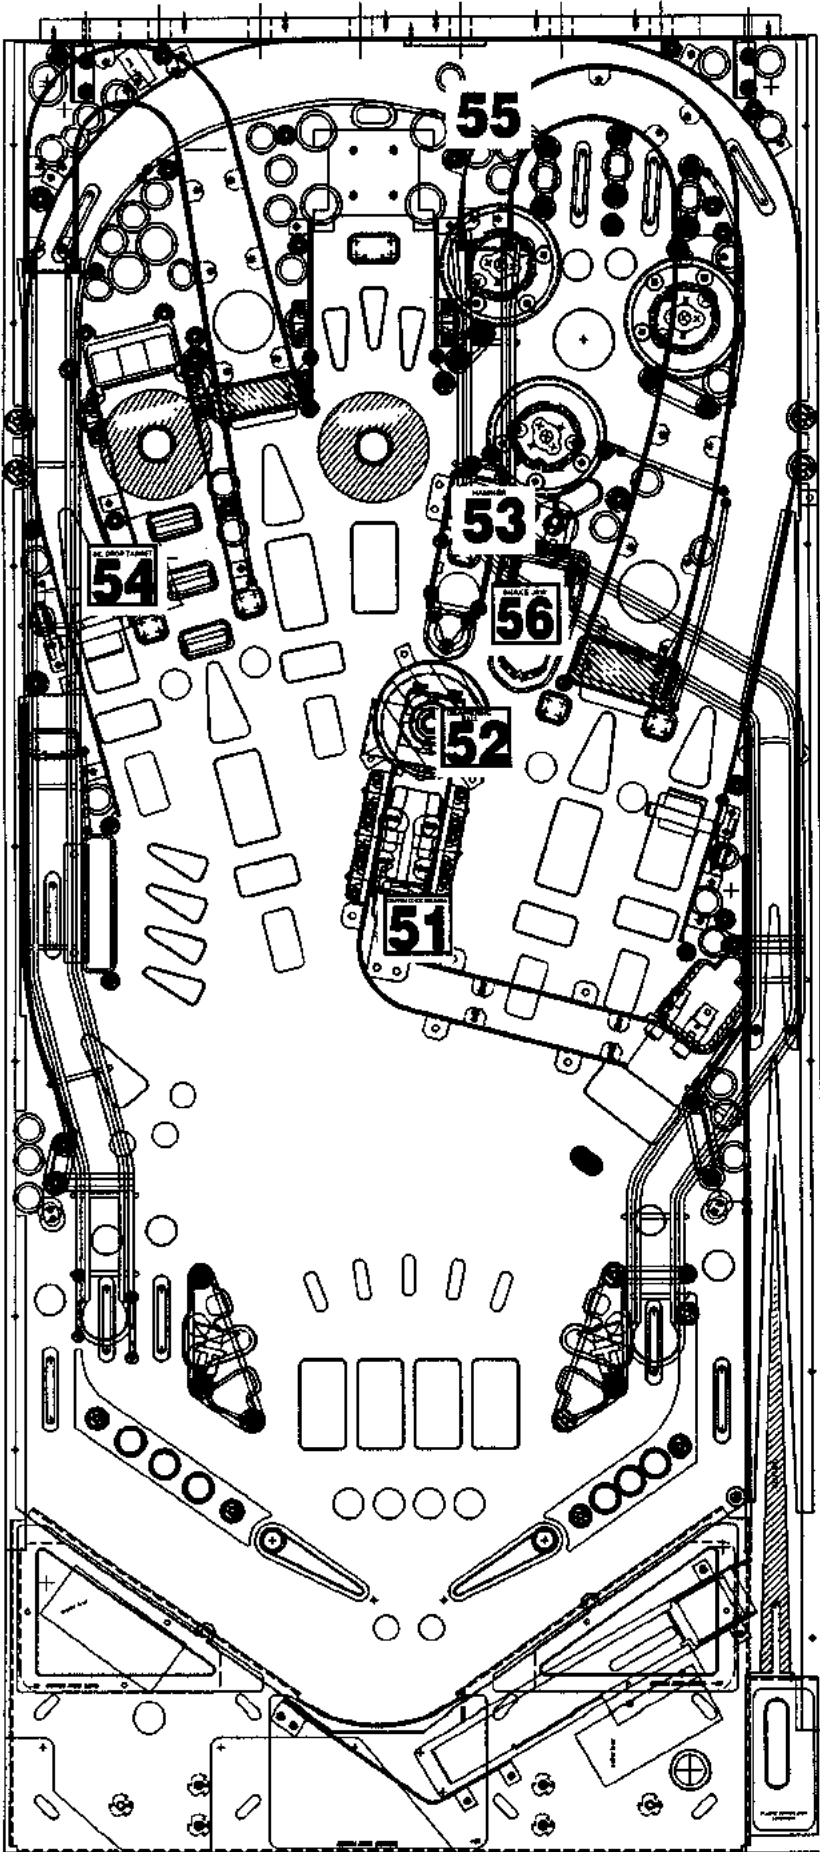



↑ CHOOSE EARNINGS or STANDARD AUDITS

GO TO AUDITS MENU: EARNINGS AUDITS [#1 – #13] / STANDARD AUDITS [#1 – #59]

Perform the below steps to review the audits. Enter the **SERVICE MENU**, then enter the **EARNINGS AUDITS** or **STANDARD AUDITS MENUS**. For audit definitions or summary, review the **Audits Section (GO TO AUDITS MENU)**. Try the **"DUMP AUDITS TO USB"** Feature to create a text file of your audits. Don't forget to set the **DATE & TIME** in the **UTILITIES MENU**. See the **Utilities Section (GO TO UTILITIES MENU)**.

Step 1 Press [**SELECT**].
Press [**BACK**] to exit for escape at any time.

Step 2 Press [**>**]. Go to the "AUD" Icon.
Press [**SELECT**].

Step 3 Press [**>**]. Go to the "EARN" or "S.P.I." Icon.
Press [**SELECT**].

Step 4 Press [**<**] [**>**] to move between audits.

Audit Number →
Audit Name →
Audit Result →

EARNINGS AUDIT #1
TOTAL PAID CREDITS
0

EARNINGS AUDITS [#1 – #13] ▼

Nr.	EARNINGS AUDIT NAME	YOUR RESULT	Nr.	EARNINGS AUDIT NAME	YOUR RESULT
1	TOTAL PAID CREDITS		8	COINS THROUGH FOURTH SLOT	
2	FREE GAME PERCENTAGE		9	COINS THROUGH FIFTH SLOT	
3	AVERAGE BALL TIME		10	TOTAL COINS	
4	AVERAGE GAME TIME		11	TOTAL EARNINGS	
5	COINS THROUGH LEFT SLOT		12	METER CLICKS	
6	COINS THROUGH RIGHT SLOT		13	SOFTWARE METER	
7	COINS THROUGH CENTER SLOT				

STANDARD AUDITS [#1 – #59] ▼

Nr.	STANDARD AUDIT NAME	YOUR RESULT	Nr.	STANDARD AUDIT NAME	YOUR RESULT	Nr.	STANDARD AUDIT NAME	YOUR RESULT
1	TOTAL BALLS PLAYED		21	8.0M – 9.99M SCORES		41	RIGHT DRAINS	
2	TOTAL EXTRA BALLS		22	10.0M – 12.49M SCORES		42	TILTS	
3	EXTRA BALL PERCENTAGE		23	12.5M – 14.99M SCORES		43	TOTAL BALLS SAVED	
4	REPLAY 1 AWARDS		24	15.0M – 17.49M SCORES		44	LEFT FLIPPER USED	
5	REPLAY 2 AWARDS		25	17.5M – 19.99M SCORES		45	RIGHT FLIPPER USED	
6	REPLAY 3 AWARDS		26	20.0M – 24.99M SCORES		46	0 – 1 MINUTE GAMES	
7	REPLAY 4 AWARDS		27	25.0M – 29.99M SCORES		47	1 – 1.5 MINUTE GAMES	
8	TOTAL REPLAYS		28	30.0M – 39.99M SCORES		48	1.5 – 2 MINUTE GAMES	
9	REPLAY PERCENTAGE		29	40.0M – 49.99M SCORES		49	2 – 2.5 MINUTE GAMES	
10	TOTAL SPECIALS		30	50.0M – 74.99M SCORES		50	2.5 – 3 MINUTE GAMES	
11	SPECIAL PERCENTAGE		31	75.0M – 99.99M SCORES		51	3 – 3.5 MINUTE GAMES	
12	TOTAL MATCHES		32	100.0M – 149.99M SCORES		52	3.5 – 4 MINUTE GAMES	
13	HIGH SCORE AWARDS		33	150.0M+ SCORES		53	4 – 5 MINUTE GAMES	
14	HIGH SCORE PERCENT		34	AVERAGE SCORES		54	5 – 6 MINUTE GAMES	
15	TOTAL FREE PLAYS		35	SERVICE CREDITS		55	6 – 8 MINUTE GAMES	
16	TOTAL PLAYS		36	BALL SEARCH STARTED		56	8 – 10 MINUTE GAMES	
17	0.0M – 1.99M SCORES		37	LOST BALL FEEDS		57	10 – 15 MINUTE GAMES	
18	2.0M – 3.99M SCORES		38	LOST BALL GAME STARTS		58	15+ MINUTE GAMES	
19	4.0M – 5.99M SCORES		39	LEFT DRAINS		59	RECENT REPLAY PERCENT	
20	6.0M – 7.99M SCORES		40	CENTER DRAINS				

Note: Audits are subject to change (with or without notice).



GO TO ADJUSTMENTS MENU: STANDARD ADJUSTMENTS [#1 - #63]

Perform the below steps to review the adjustments. Enter the **ADJUSTMENTS MENU**, then enter the **STANDARD ADJUSTMENTS MENU**. For adjustment definitions or summary, review the *Adjustments Section (GO TO ADJUSTMENTS MENU)*. See *Utilities Section (GO TO INSTALLS MENU)*, to easily change all adjustments required depending on the Install Type (Easy, Hard, 5-Ball, Home Play, etc.) desired.

Step 1 Press [SELECT]. Press [BACK] to exit or escape at any time.

Step 2 Press [>]. Go to the "ADJ" Icon. Press [SELECT].

Step 3 ... "S.P.I." Icon. Press [SELECT].



Step 4 **STANDARD ADJUSTMENT #1** appears with the Adjustment Name [REPLAY TYPE] flashing. With the Adjustment Name flashing, press [<] [>] to move between adjustments.

Step 5 To change the Adjustment Setting, press [SELECT]. With the Adjustment Setting flashing, press [<] [>] repeatedly until the desired setting appears. Press the [SELECT] to "install" the change. The Adjustment Comment (bottom text line) will indicate [INSTALLED/FACTORY DEFAULT], if the Factory Default Setting is selected or [INSTALLED] if the change is not the Factory Default Setting.

STANDARD ADJUSTMENTS [#1 - #63] ▼

Nr.	STANDARD ADJUSTMENT NAME	USA DEFAULT	YOUR SETTING
1	REPLAY TYPE	AUTO	
2	‡ REPLAY PERCENTAGE	10%	
3	‡ REPLAY AWARD	CREDIT	
4	‡ REPLAY LEVELS	1	
5	‡ AUTO REPLAY START	_,000,000	
6	‡ DYNAMIC REPLAY START	60,000,000	
7	‡ REPLAY LEVEL #1	15,000,000	
8	‡ REPLAY LEVEL #2	30,000,000	
9	‡ REPLAY LEVEL #3	45,000,000	
10	‡ REPLAY LEVEL #4	60,000,000	
11	‡ REPLAY BOOST	YES	
12	SPECIAL LIMIT	1	
13	‡ SPECIAL PERCENTAGE	10%	
14	SPECIAL AWARD	CREDIT	
15	FREE GAME LIMIT	5	
16	EXTRA BALL LIMIT	5	
17	‡ EXTRA BALL PERCENTAGE	25%	
18	GAME PRICING	USA 10	
19	MATCH PERCENTAGE	9%	
20	MATCH AWARD	CREDIT	
21	BALLS PER GAME	3	
22	TILT WARNINGS	2	
23	CREDIT LIMIT	30	
24	ALLOW HIGH SCORES	YES	
25	HIGH SCORE AWARD	CREDIT	
26	GRAND CHAMPION AWARDS	1	
27	HIGH SCORE #1 AWARDS	1	
28	HIGH SCORE #2 AWARDS	0	
29	HIGH SCORE #3 AWARDS	0	
30	HIGH SCORE #4 AWARDS	0	
31	GRAND CHAMPION SCORE	_,000,000	

Nr.	STANDARD ADJUSTMENT NAME	USA DEFAULT	YOUR SETTING
32	HIGH SCORE #1	_,000,000	
33	HIGH SCORE #2	_,000,000	
34	HIGH SCORE #3	_,000,000	
35	HIGH SCORE #4	_,000,000	
36	HSTD INITIALS	3 INITIALS	
37	HSTD RESET COUNT	2000	
38	FREE PLAY	NO	
39	LANGUAGE	ENGLISH	
40	PLAYER LANGUAGE SELECT	YES	
41	CUSTOM MESSAGE	ON	
42	FLASH LAMP POWER	NORMAL	
43	COIL PULSE POWER	NORMAL	
44	KNOCKER VOLUME	NORMAL	
45	GAME RESTART	YES	
46	BILL VALIDATOR	NO	
47	MUSIC VOLUME	1	
48	BALL SAVE TIME	0:05	
49	TIMED PLUNGER	OFF	
50	FLIPPER BALL LAUNCH	OFF	
51	COINDOOR BALL SAVER	NO	
52	COMPETITION MODE	NO	
53	CONSOLATION BALL	YES	
54	FAST BOOT	YES	
55	Q24 OPTION	COIN METER	
56	TICKET DISPENSER	NO	
57	PLAYER COMPETITION	YES	
58	TEAM SCORES	NO	
59	LOCATION ID	0	
60	GAME ID	0	
61	TIME FORMAT	12-HOUR	
62	COIN INPUT DELAY	30	
63	LOST BALL RECOVERY	YES	

Factory Defaults Settings are subject to change during production (especially Standard Adjustments 2, 4, 5, 13, 16-17, 19, 31-35 & 47). ‡ Not all Standard Adjustments are shown. Depending on the setting (whether Factory Default or if changed by the operator), associated adjustments do not appear, if not required. Note: If Game Dip Switch other than USA is installed, different Defaults will appear.



GO TO AUDITS MENU: FEATURE AUDITS [#1 - #+]

Perform the below steps to review the audits. Enter the **AUDITS MENU**, then enter the **FEATURE AUDITS MENU**. Try the **"DUMP AUDITS TO USB"** Feature to create a text file of your audits. *Don't forget to set the **DATE & TIME** in the **UTILITIES MENU**. See **Utilities Section (GO TO UTILITIES MENU)**, for more information.

Step 1 Press [**SELECT**]. Press [**BACK**] to exit or escape at any time.

Step 2 Press [**>**]. Go to the "AUD" Icon. Press [**SELECT**].

Audit Number
Audit Name
Audit Result



Step 3 Press [**>**]. Go to the "GAME" Icon. Press [**SELECT**].

Step 4 Press [**<**] [**>**] to move between audits.

% = AUDIT RESULT DIVIDED BY STANDARD AUDIT 16 (TOTAL PLAYS).

Feature Audits are subject to change (with or without notice). View **Feature Audits on the Dot Display only**. To export all audits to your memory stick (creating a text file), perform the following. Enter the **AUDITS MENU**, then enter the **DUMP AUDITS TO USB**. **Note:** The **"DUMP"** icon can also be accessed in the **USB MENU** via the **UTILITIES MENU** (see the **Utilities Section (GO TO USB MENU)** for details).



Step 1 Insert your **USB Compatible Memory Stick** into the USB port on the CPU/Sound Board (S.A.M. System). If the Memory Stick has space available and is free of errors, a dated file* is generated (* ensure your **Date & Time** is set prior to selecting or the dated file will have the default date of 20XX_01_01; see **Section 3, Chapter 5, SET DATE / TIME** via the **UTILITIES MENU** for details).



Step 2 Press [**SELECT**] to save the file to your Memory Stick. Press [**SELECT**] again to continue or [**BACK**] to exit or escape at any time.



Step 3 Remove the Memory Stick and insert into your PC or Mac to save the file (which can then be copied, printed or emailed). The audits are numbered sequentially *without* a number restart between the three types of audits (Earnings, Standard and Feature).



GO TO ADJUSTMENTS MENU: FEATURE ADJUSTMENTS [#1 - #+]

Perform the below steps to review the adjustments. Enter the **SERVICE MENU**, then enter the **FEATURE ADJUSTMENTS MENU**. For adjustment definitions or summary, review the **Adjustments Section (GO TO ADJUSTMENTS MENU)**. See **Utilities Section (GO TO INSTALLS MENU)**, to easily change all adjustments required depending on the **Install Type (Easy, Hard, 5-Ball, Home Play, etc.)** desired.

Step 1 Press [**SELECT**]. Press [**BACK**] to exit or escape at any time.

Step 2 Press [**>**]. Go to the "ADJ" Icon. Press [**SELECT**].

Adjustment Number
Adjustment Name
Adjustment Setting
Adjustment Comment




Step 3 Press [**>**]. Go to the "GAME" Icon. Press [**SELECT**].








Step 4 **FEATURE ADJUSTMENT #1** appears with the Adjustment Name [**FEATURE ADJ. NAME**] flashing. With the Adjustment Name flashing, press [**<**] [**>**] to move between adjustments.

Step 5 To change the Adjustment Setting, press [**SELECT**]. With the Adjustment Setting flashing, press [**<**] [**>**] repeatedly until the desired setting appears. Press the [**SELECT**] to "install" the change. The Adjustment Comment (bottom text line) will indicate [**INSTALLED/FACORY DEFAULT**], if the Factory Default Setting is selected or [**INSTALLED**] if the change is not the Factory Default Setting.

Feature Adjustments are subject to change (with or without notice). View **Feature Adjustments on the Dot Display only**. Use the **Installs Menu (via the UTILITIES MENU)** to automatically change a select group of Feature Adjustments (see the **Utilities Section**) or adjust them one-by-one.

GENERAL ILLUMINATION LIGHTING MAP

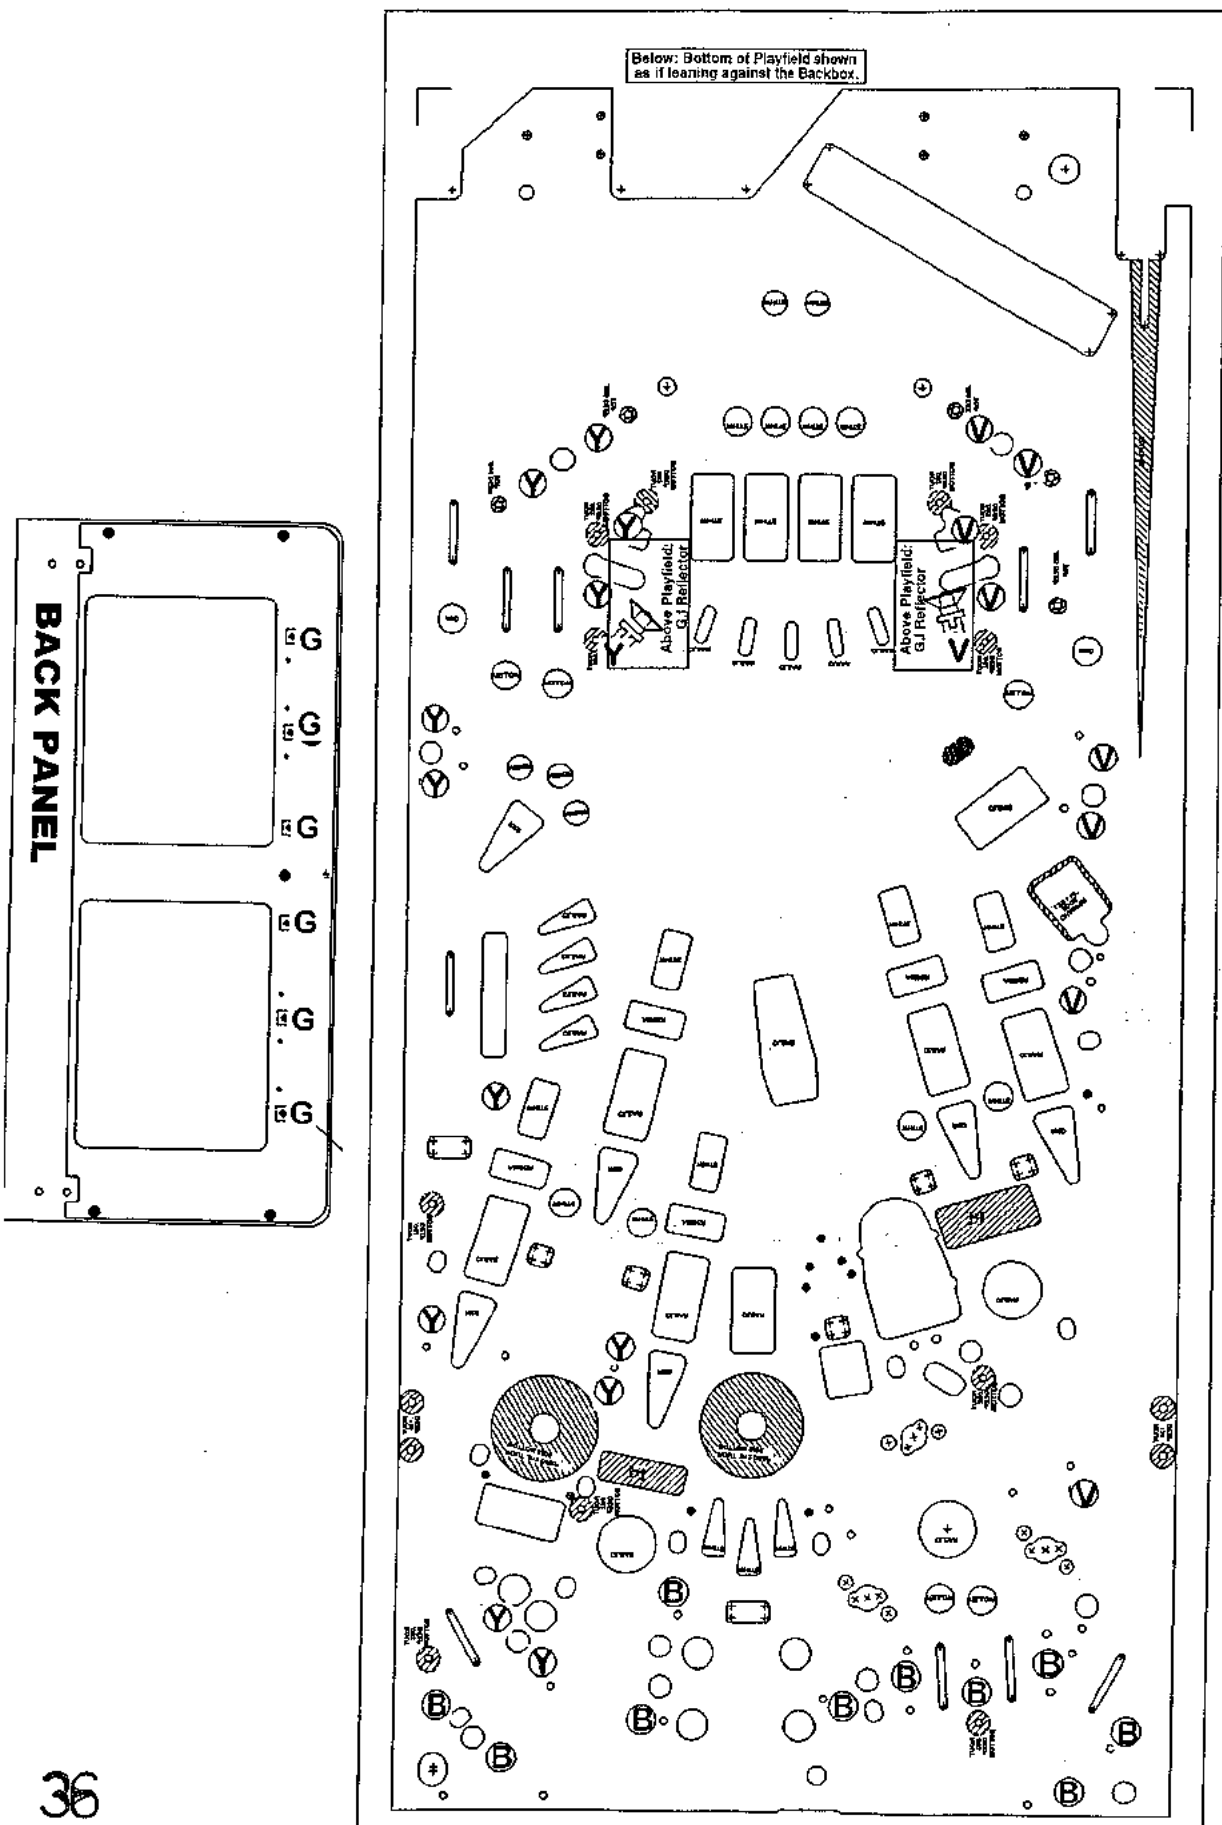

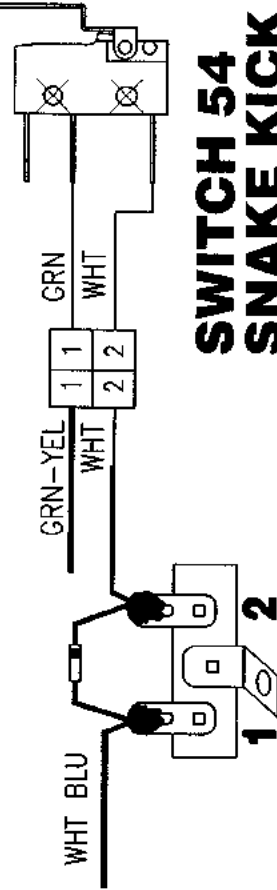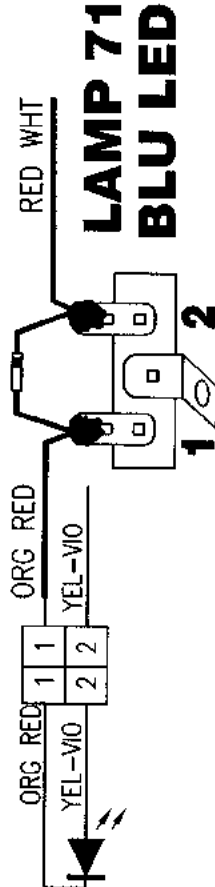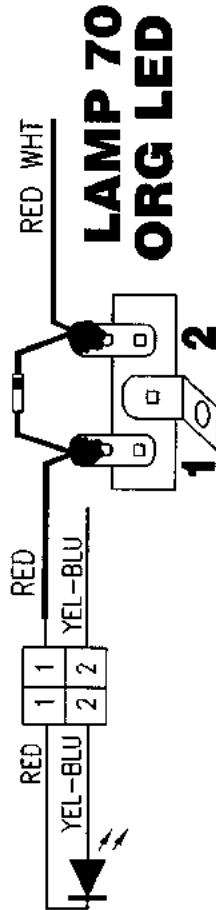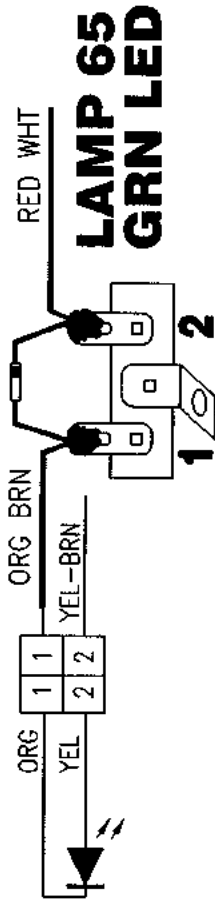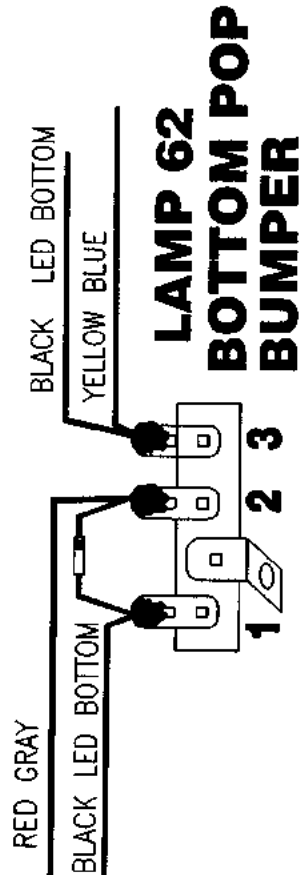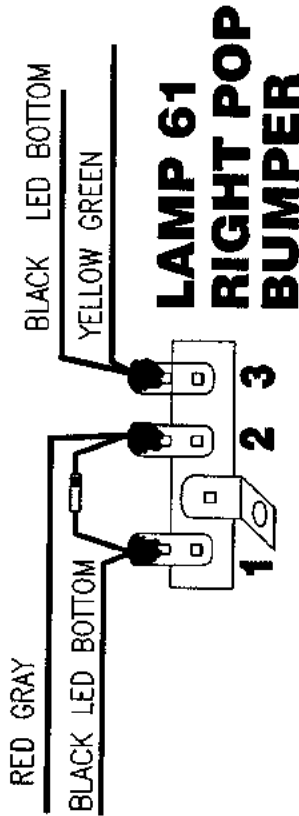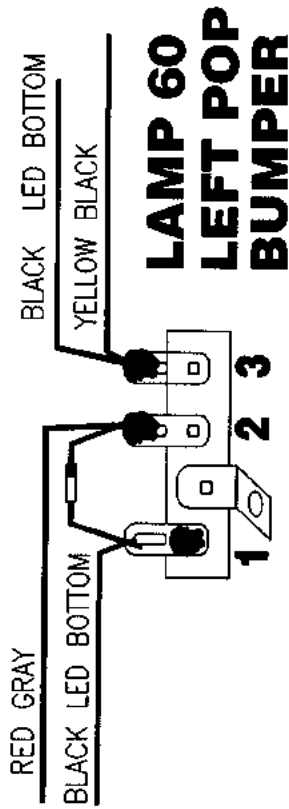

DOWN REYNA
1st USE


DATE 04-17-13
SCALE 1:1
REV .

TITLE DTS Configuration
METALLICA (PRO)

Stern Pinball, Inc
2020 JANICE AVE., MELROSE PARK, IL. 60160


PART NO.
DTS-MAP

Cabinet Universal Voltage Jumper Plugs (for use with Universal AC Cable, 036-5530-00 ONLY)

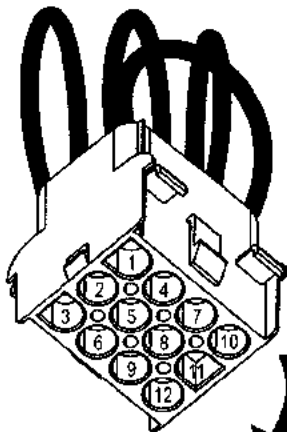

12-PIN FEMALE SIDE TO JUMPER
12-PIN MALE SIDE CONNECTOR

JUMPER PLUG ▼
(SPI PART #036-5530-120)
110+VAC
N. AMERICA
LINE VOLTAGE

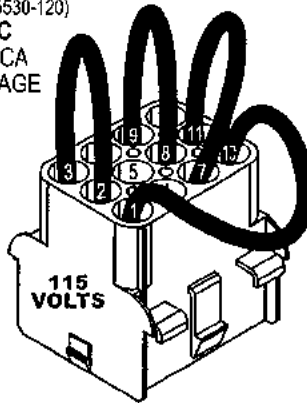


9-PIN MALE SIDE TO TRANSFORMER
9-PIN FEMALE SIDE CONN.

- 1 BLK
- 2 BLK
- 3 WHT-BLK
- 4 WHT-BRN
- 5 WHT-BRN
- 6 BRN (or YEL-WHT)
- 7 WHT-ORG
- 8 WHT-ORG
- 9 ORG
- 10 BLK
- 11 WHT
- 12 N/U

12-PIN F/M CONN.
BACK VIEW ▲


9-PIN F/M CONN.
▲ BACK VIEW

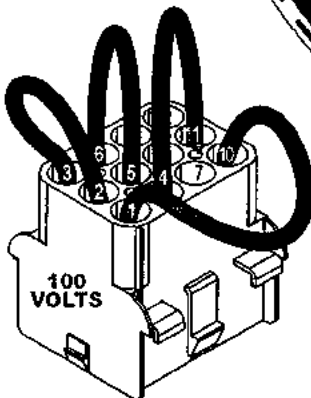


◀ JUMPER PLUG
(SPI PART #036-5530-100)
98VAC - 109VAC
JAPAN or
N. AMERICA LOW
LINE VOLTAGE

Black & White wires from
the POWER BOX, cabinet bottom
to 12-Pin Conn., Pins 10 & 11..


JUMPER PLUG ▼
(SPI PART #036-5530-206)
200VAC - 211VAC
EUROPE and
MID. EAST LOW
LINE VOLTAGE

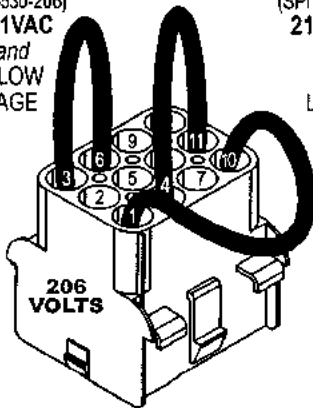


JUMPER PLUG ▼
(SPI PART #036-5530-220)
212VAC - 224VAC
EUROPE and
MID. EAST
LINE VOLTAGE

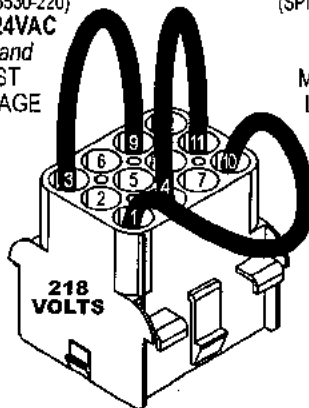


JUMPER PLUG ▼
(SPI PART #036-5530-230)
225+VAC
EUROPE and
MID. EAST HIGH
LINE VOLTAGE

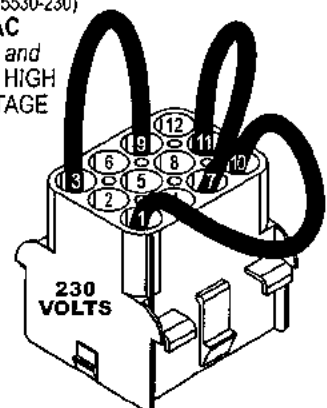

**Cabinet and Coin
Door Wiring**

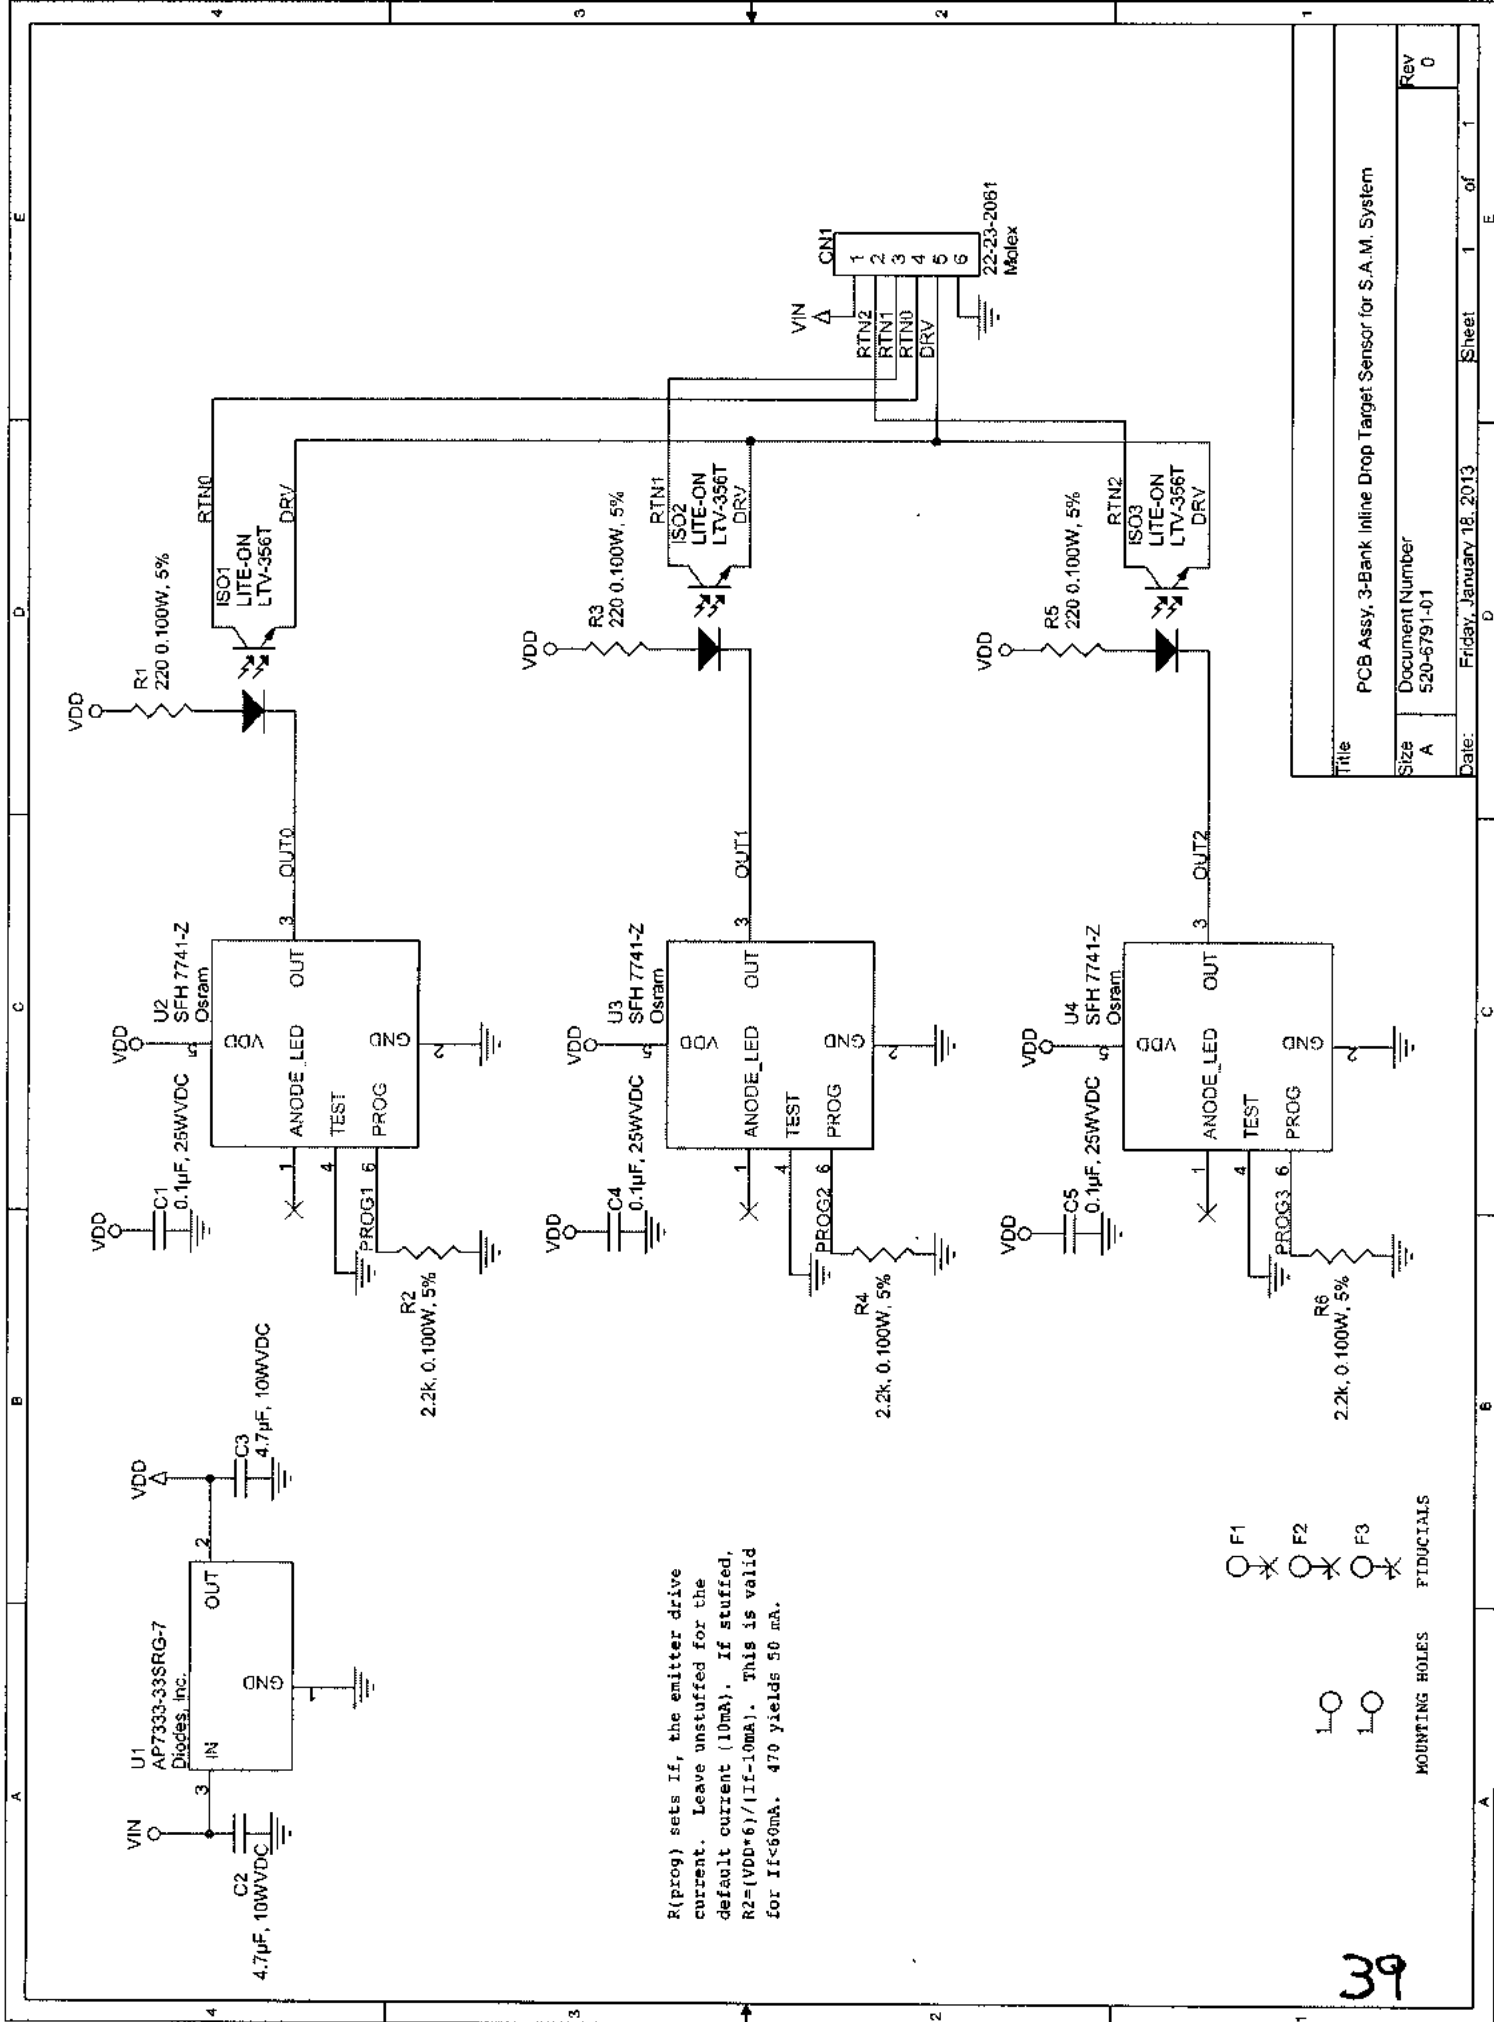

R(prog) sets I_f , the emitter drive current. Leave unstuffed for the default current (10mA). If stuffed, $R2 = (VDD * 6) / (I_f - 10mA)$. This is valid for $I_f < 60mA$. 470 yields 50 mA.

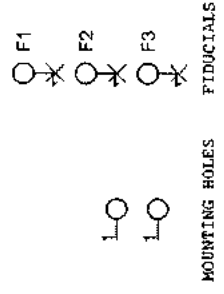

Title		PCB Assy. 3-Bank In-Line Drop Target Sensor for S.A.M. System	
Size	A	Document Number	520-5791-01
Date:	Friday, January 18, 2013	Sheet	1 of 1
Rev	0		



Go To Coil Menu

To initiate, from the **DIAGNOSTICS MENU**, select the "COIL" *Icon*. Coils #01 – #16 are typically High Current Coils (*although Low Current Coils may be used in these positions & will be noted*). Coils #17 – #32 are typically Low Current Coils. Flash Lamps are typically used in positions #25 – #32 (*although Flash Lamps may be used in any position and will be noted*). Auxiliary Coils may be used in positions #33 – #35.

Remember, use the **GREEN Button** to go [**BACK**], exit or escape, the **RED Buttons** to [**</-**] GO BACK / [**+ / >**] GO FORWARD, and the **BLACK Button** to [**SELECT**] ENERGIZE the coil (*solenoid*) or flash lamp.




Single Coil Test

To initiate, from the **COIL MENU**, select the "TEST" *Icon*. Ensure the **Power Interlock Switch** is pulled out if testing with the Coin Door open. Upon entering

Single Coil Test, you will notice the #1 coil is shown. The Dot Matrix Display will indicate the *coil or flash lamp name, coil (solenoid) or flash lamp number and the Coil or Flash Lamp Power Line / Drive Transistor Control Line wire colors*. To determine the "Pin-Outs" from the I/O Power Driver Board, the Coil Voltage Gauge-Turns (*e.g. 23-800*) or lamp type (*e.g. #89 or #906 Bulb*), view the Coils Detailed Chart Table at the beginning of this manual or for more on troubleshooting and diagnosing, see the Yellow Pages (*Schematics & Wiring*).



Typical Coil Wiring & Schematic

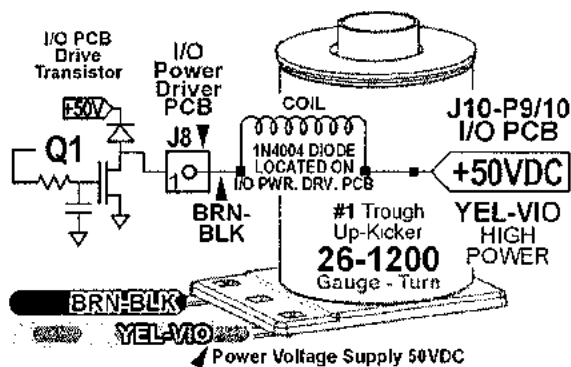

Cycling Coil Test

To initiate, from the **COIL MENU**, select the "CYC" *Icon*. Ensure the **Power Interlock Switch** is pulled out if testing with the Coin Door open. The test pulses each regular coil or flash lamp sequentially (*cycling*) on the Playfield and in the Backbox (*if coils or flash lamps are used*). The Dot Matrix Display indicates the same information you will find in **Single Coil Test**.



Go To Flash Lamps Menu

To initiate, from the **DIAGNOSTICS MENU**, select the "FLASH" *Icon*. The two tests allows the technician to easily spot any burned-out flash lamps and replace them. Unlike **Single Coil Test**, which tests *all* coil (*solenoids*), including flash lamps, **Single and Cycling Flash Lamp Tests**, test only the flash lamps used in the game. Flash Lamps are typically used in positions #25 – #32 (*although Flash Lamps may be used in any position and will be noted*).

Remember, use the **GREEN Button** to go [**BACK**], exit or escape, the **RED Buttons** to [**</-**] GO BACK / [**+ / >**] GO FORWARD, and the **BLACK Button** to [**SELECT**] ENERGIZE the flash lamp.




Single Flash Lamp Test

To initiate, from the **FLASH LAMPS MENU**, select the "TEST" *Icon*. Ensure the **Power Interlock Switch** is pulled out if testing with the Coin Door open. Upon entering **Single Flash Lamp Test**, you will notice the first Flash Lamp is shown. The Dot Matrix Display will indicate the *flash lamp name, flash lamp number and the Flash Lamp Power Line / Drive Transistor Control Line wire colors*. To determine the "Pin-Outs" from the I/O Power Driver Board or lamp type (*e.g. #89 or #906 Bulb*), view the Coils Detailed Chart Table at the beginning of this manual or for more on troubleshooting and diagnosing, see the Yellow Pages (*Schematics & Wiring*).



Bulb Types used for Flash Lamps

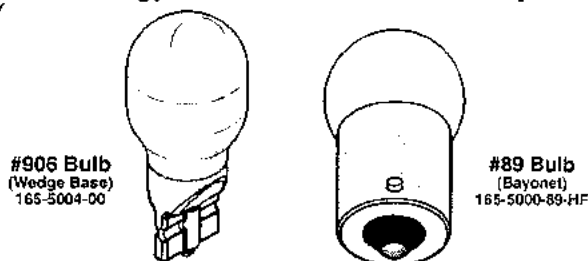

Cycling Flash Lamp Test

To initiate, from the **FLASH LAMPS MENU**, select the "CYC" *Icon*. Ensure the **Power Interlock Switch** is pulled out if testing with the Coin Door open. The test pulses each flash lamp sequentially (*cycling*) on the Playfield and in the Backbox (*if flash lamps are used*). The Dot Matrix Display indicates the same information you will find in **Single Flash Lamp Test**.

COILS DETAILED CHART TABLE



High Current Coils Group 1			Drive Transistor	Driver Output PCB	Power Line Color	Power Line Connection	Power Voltage	Drive Transistor Control Line Color	D.T. Control Line Connect	Cell GA-Turn or Bulb Type
#1	TROUGH UP-KICKER	Q1	▲ I/O Power Driver ▼		YEL-VIO	J10-P9/10	50VDC	BRN-BLK	J8-P1	28-1200 090-5044-ND
#2	AUTO LAUNCH	Q2		YEL-VIO	J10-P9/10	50VDC	BRN-RED	J8-P3	24-840 090-5036-ND	
#3	GRAVE MARKER MAGNET	Q3		VIO-YEL	J10-P8	50VDC	BRN-ORG	J8-P4	22-850 511-5065-ND	
#4	ELECTRIC CHAIR MAGNET	Q4		VIO-YEL	J10-P8	50VDC	BRN-YEL	J8-P5	22-850 511-5065-ND	
#5	SNAKE EJECT	Q5		YEL-VIO	J10-P9/10	50VDC	BRN-GRN	J8-P6	23-800 090-5001-ND	
#6	RIGHT EJECT	Q6		YEL-VIO	J10-P9/10	50VDC	BRN-BLU	J8-P7	23-800 090-5001-ND	
#7	LOOP UP POST DIVERTER	Q7		YEL-VIO	J10-P9/10	50VDC	BRN-VIO	J8-P8	28-1200 090-5044-ND	
#8	SHAKER MOTOR (OPTIONAL)	Q8		RED-WHT	J17-P7	16VAC	BRN-GRY	J8-P9	502-5027-00	
High Current Coils Group 2			Drive Transistor	Driver Output PCB	Power Line Color	Power Line Connection	Power Voltage	Drive Transistor Control Line Color	D.T. Control Line Connect	Cell GA-Turn or Bulb Type
#9	LEFT POP BUMPER	Q9	▲ I/O Power Driver ▼		YEL-VIO	J10-P9/10	50VDC	BLU-BRN	J4-P1	28-1200 090-5044-ND
#10	RIGHT POP BUMPER	Q10		YEL-VIO	J10-P9/10	50VDC	BLU-RED	J4-P2	28-1200 090-5044-ND	
#11	BOTTOM POP BUMPER	Q11		YEL-VIO	J10-P9/10	50VDC	BLU-ORG	J4-P4	28-1200 090-5044-ND	
#12	DROP TARGETS	Q12		YEL-VIO	J10-P9/10	50VDC	BLU-YEL	J4-P5	24-840 090-5036-ND	
#13	LEFT SLINGSHOT	Q13		YEL-VIO	J10-P9/10	50VDC	BLU-GRN	J4-P6	28-1200 090-5044-ND	
#14	RIGHT SLINGSHOT	Q14		YEL-VIO	J10-P9/10	50VDC	BLU-BLU	J4-P7	28-1200 090-5044-ND	
#15	LEFT FLIPPER (50V RED/YEL)	Q15		GRY-YEL-3A Fuse-RED-YEL	J10-P6/7	50VDC	ORG-GRY	J4-P8	23-800 090-5020-30 M	
#16	RIGHT FLIPPER (50V RED/YEL)	Q16		BLU-YEL-3A Fuse-RED-YEL	J10-P6/7	50VDC	ORG-VIO	J4-P9	23-800 090-5020-30 M	
Low Current Coils Group 1			Drive Transistor	Driver Output PCB	Power Line Color	Power Line Connection	Power Voltage	Drive Transistor Control Line Color	D.T. Control Line Connect	Cell GA-Turn or Bulb Type
#17		Q17	▲ I/O Power Driver ▼					VIO-BRN	J7-P2	
#18	ELECTRIC CHAIR (STEP-UP DRV BD)	Q18		YEL-VIO	J7-P1	50VDC	VIO-RED	J7-P3	32-1800 090-5031-05	
#19	FLASH: GRAVE MARKER	Q19		ORG	J6-P10	20VDC	VIO-ORG	J7-P4	LED 112-5041-08	
#20	FLASH: SNAKE	Q20		ORG	J6-P10	20VDC	VIO-YEL	J7-P5	LED 112-5041-08	
#21	FLASH: BACK PANEL (LEFT)	Q21		ORG	J6-P10	20VDC	VIO-GRN	J7-P7	# 89 BULB 165-5000-89	
#22	FLASH: BACK PANEL (RIGHT)	Q22		ORG	J6-P10	20VDC	VIO-BLU	J7-P8	# 89 BULB 165-5000-89	
#23	FLASH: LEFT RAMP	Q23		ORG	J6-P10	20VDC	VIO-BLK	J7-P9	# 89 BULB 165-5000-89	
#24	OPTIONAL (e.g. COIN METER)	Q24		RED	J16-P4-8	5VDC	VIO-GRY	J7-P10	COIN METER	
Low Current Coils Group 2			Drive Transistor	Driver Output PCB	Power Line Color	Power Line Connection	Power Voltage	Drive Transistor Control Line Color	D.T. Control Line Connect	Cell GA-Turn or Bulb Type
#25	FLASH: POP BUMPERS	Q25	▲ I/O Power Driver ▼		ORG	J6-P10	20VDC	BLK-BRN	J6-P1	# 89 BULB 165-5000-89
#26	FLASH: GRAVE MARKER (X2)	Q26		ORG	J6-P10	20VDC	BLK-RED	J6-P2	# 89 BULB 165-5000-89	
#27	FLASH: ELECTRIC CHAIR (X2)	Q27		ORG	J6-P10	20VDC	BLK-ORG	J6-P3	# 89 BULB 165-5000-89	
#28	FLASH: ELECTRIC CHAIR SPOT (X2)	Q28		ORG	J6-P10	20VDC	BLK-YEL	J6-P4	LED 112-5041-08	
#29	FLASH: RIGHT RAMP	Q29		ORG	J6-P10	20VDC	BLK-GRN	J6-P5	# 89 BULB 165-5000-89	
#30	FLASH: CAPTIVE BALL	Q30		ORG	J6-P10	20VDC	BLK-BLU	J6-P6	# 89 BULB 165-5000-89	
#31	FLASH: COFFIN INSERT (X2)	Q31		ORG	J6-P10	20VDC	BLK-VIO	J6-P7	# 89 BULB 165-5000-89 Use	
#32	FLASH: ELECTRIC CHAIR INSERT	Q32		ORG	J6-P10	20VDC	BLK-GRY	J6-P8	# 89 BULB 165-5000-89	

GO TO DIAGNOSTICS MENU

GO TO COIL MENU

SINGLE COIL TEST

COIL MENU: SINGLE COIL & CYCLING COIL

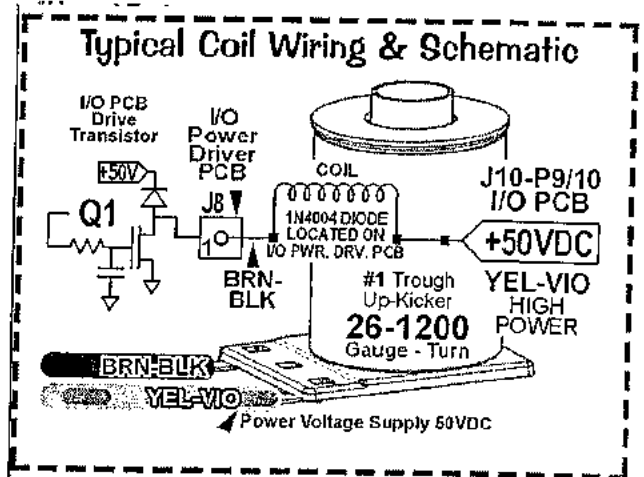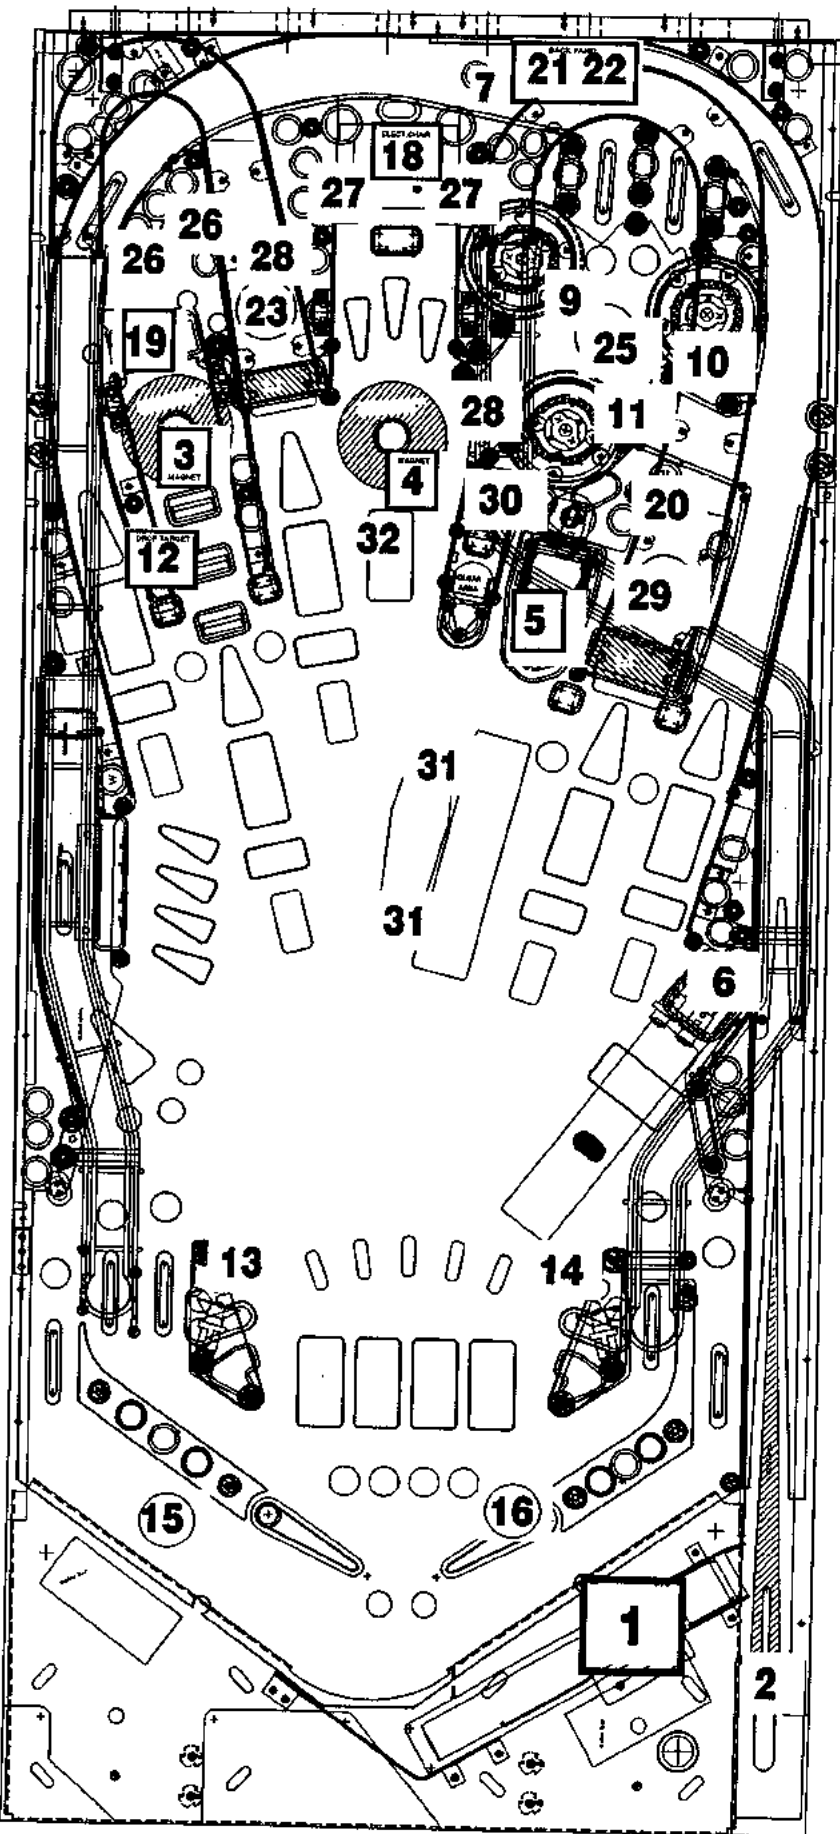



Go To Lamp Menu

To initiate, from the **DIAGNOSTICS MENU**, select the "LAMP" *icon*. Controlled lamps are configured in and 8 X 10 Matrix of Rows [Lamp Returns / Ground] and Columns [Lamp Drives / 18VDC] with up to 80 lamps possible. The **LAMP TEST MENU** consists of five (5) parts: **Single Lamp Test**, **Test All Lamps**, **Row Lamps Test**, **Column Lamps Test** and **Ordered Lamps Test*** to test *all* lamps.

Remember, use the **GREEN Button** to go [**BACK**], exit or escape, the **RED Buttons** to [**</-**] GO BACK / LEFT / [**+ / >**] GO FORWARD / RIGHT, and the **BLACK Button** to [**SELECT**] next or as "OK / ENTER."

Upon entering Single Lamp Test, ... the #1 lamp is shown, ... Display will light up ... the dot ... ▶



Single Lamp Test

To initiate, from the **LAMP MENU**, select the "ONE" *icon*. As each lamp is selected, the lamp will light at its location on the playfield as well as the Dot Matrix Display. Upon entering **Single Lamp Test**, you will notice the #1 lamp is shown. The Dot Matrix Display will light up (*highlight*) the corresponding *dot* in the on-screen matrix, display the *lamp name*, *lamp number* and the *Lamp Return / Drive wire colors*. For the Lamp Matrix Grid, see the beginning section of this Service Game Manual.



Upon entering All Lamps Test, ... the Dot Matrix Display is flashing "ALL LAMPS ON" ... ▶



All Lamps Test

To initiate, from the **LAMP MENU**, select the "ALL" *icon*. Upon entering **All Lamps Test**, you will notice the Dot Matrix Display is flashing **ALL LAMPS ON** and the lamps on the playfield will be lit, alternating between the rows in the Lamp Matrix Grid. The Dot Matrix Display will light up (*highlight*) all of the *dots* in the on-screen matrix.



Upon entering Row Lamps Test, you will notice the #1 lamp row is shown. ▶



Row Lamps Test

To initiate, from the **LAMP MENU**, select the "ROW" *icon*. As each lamp row is selected, the lamps in the row will light on the playfield as well as the Dot Matrix Display. Upon entering **Row Lamps Test**, you will notice the #1 lamp row is shown. The Dot Matrix Display will light up (*highlight*) the corresponding row of *dots* in the on-screen matrix, display the *lamp row number*, the *Lamp Return wire colors*, the *I/O PCB Connector* and *transistor number*.



Upon entering Column Lamps Test, you will notice the #1 lamp column is shown ▶




Column Lamps Test


To initiate, from the **LAMP MENU**, select the "COL" *icon*. As each lamp column is selected, the lamps in the column will light on the playfield as well as the Dot Matrix Display. Upon entering **Column Lamps Test**, you will notice the #1 lamp column is shown. The Dot Matrix Display will light up (*highlight*) the corresponding row of *dots* in the on-screen matrix, display the *lamp column number*, the *Lamp Drive (18VDC) wire colors*, the *I/O PCB Connector* and *IC number*.



Bulb Types used for Control Lamps

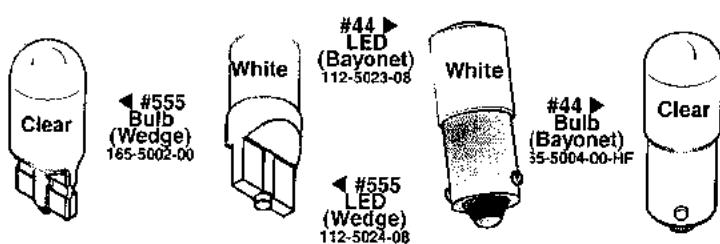

Typical Lamp Wiring & Schematic

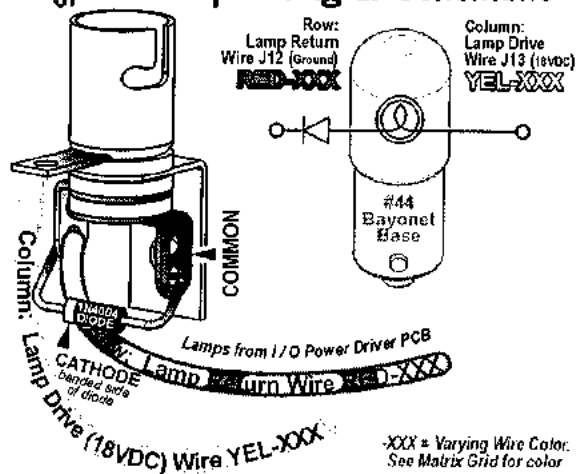

* If not required in this game, *Icon* will not be shown.



Ordered Lamps Test




To initiate, from the **LAMP MENU**, select the "ORD" *icon*. If required, this *icon* will appear in the **LAMP MENU**. Identical to **Single Lamp Test**, however, the lamps lit are not in the Lamp Matrix numeric order, but ordered or arranged in separate localized grouping(s) for easier lamp checking.

-XXX = Varying Wire Color. See Matrix Grid for color

LAMP MATRIX GRID #1 - #80 (Lamp Locations - next page)

I/O	01	02	03	04	05	06	07	08
Power Board	IC-U17	IC-U16	IC-U15	IC-U14	IC-U13	IC-U12	IC-U11	IC-U10
01	18VDC VEL-BRN J13-P9	18VDC VEL-RED J13-P8	18VDC VEL-ORG J13-P7	18VDC VEL-BLK J13-P6	18VDC VEL-GRN J13-P5	18VDC VEL-BLU J13-P4	18VDC VEL-VIO J13-P3	18VDC VEL-GRY J13-P1
02	# 555 LAMP L.P. #1 START BUTTON 185-5002-00	# 555 LAMP L.P. #2 TOURN BUTTON 185-5002-00	L.P. #3	# 555 LAMP L.P. #4 SHOOT AGAIN 185-5002-00 (X2)	# 44 LAMP L.P. #5 GUITAR PICK (JAMES) 185-5000-44HF	# 555 LAMP L.P. #6 GUITAR PICK (LARS) 185-5002-00	# 555 LAMP L.P. #7 GUITAR PICK (KIRK) 185-5002-00	# 44 LAMP L.P. #8 GUITAR PICK (ROBERT) 185-5000-44HF
03	# 555 LAMP L.P. #9 SNAKE (E.O.L.) 185-5002-00	# 555 LAMP L.P. #10 COFFIN (E.O.L.) 185-5002-00	# 555 LAMP L.P. #11 ELECTRIC CHAIR (E.O.L.) 185-5002-00	# 555 LAMP L.P. #12 GRAVE MARKER (E.O.L.) 185-5002-00 (X2)	# 44 LAMP L.P. #13 "E" 185-5000-44HF	# 555 LAMP L.P. #14 "1/4" 185-5002-00	# 555 LAMP L.P. #15 "1/2" 185-5002-00	# 555 LAMP L.P. #16 "3/4" 185-5002-00
04	# 44 LAMP L.P. #17 "F" 185-5000-44HF	# 555 LAMP L.P. #18 LEFT OUTLANE 185-5002-00	# 555 LAMP L.P. #19 L RETURN LANE (L) 185-5002-00	# 555 LAMP L.P. #20 L RETURN LANE (R) 185-5002-00	# 555 LAMP L.P. #21 FUEL LANE #1 185-5002-00	# 555 LAMP L.P. #22 FUEL LANE #2 185-5002-00	# 555 LAMP L.P. #23 FUEL LANE #3 185-5002-00	# 555 LAMP L.P. #24 FUEL LANE ARROW 185-5002-00
05	# 555 LAMP L.P. #25 RIGHT OUTLANE 185-5002-00	# 555 LAMP L.P. #26 RIGHT RETURN LANE 185-5002-00	# 44 LAMP L.P. #27 MYSTERY 185-5000-44HF (X2)	L.P. #28	# 555 LAMP L.P. #29 RIGHT LOOP GRAVE MARKER 185-5002-00	# 555 LAMP L.P. #30 RIGHT RAMP GRAVE MARKER 185-5002-00	# 555 LAMP L.P. #31 RIGHT RAMP SNAKE 185-5002-00	# 555 LAMP L.P. #32 RIGHT LOOP SNAKE 185-5002-00
06	# 555 LAMP L.P. #33 RIGHT LOOP ELECTRIC CHAIR 185-5002-00	# 555 LAMP L.P. #34 RIGHT RAMP ELECTRIC CHAIR 185-5002-00	# 555 LAMP L.P. #35 R RAMP STANDUP (R) 185-5002-00	# 555 LAMP L.P. #36 R LOOP ARROW 185-5002-00	# 555 LAMP L.P. #37 R RAMP ARROW 185-5002-00	# 555 LAMP L.P. #38 R RAMP STANDUP (L) 185-5002-00	L.P. #39	# 555 LAMP L.P. #40 GRAVE LANE GRAVE MARKER 185-5002-00
07	# 555 LAMP L.P. #41 GRAVE LANE SNAKE 185-5002-00	# 555 LAMP L.P. #42 "F"UEL 185-5002-00	# 555 LAMP L.P. #43 F"UEL 185-5002-00	# 555 LAMP L.P. #44 FU"EL 185-5002-00	# 555 LAMP L.P. #45 FU"EL 185-5002-00	# 555 LAMP L.P. #46 GRAVE LANE ELECTRIC CHAIR 185-5002-00	# 555 LAMP L.P. #47 LEFT LOOP GRAVE MARKER 185-5002-00	# 555 LAMP L.P. #48 LEFT LOOP SNAKE 185-5002-00
08	# 555 LAMP L.P. #49 GRAVE LANE STANDUP (L) 185-5002-00	# 555 LAMP L.P. #50 GRAVE LANE ARROW 185-5002-00	# 555 LAMP L.P. #51 GRAVE LANE STANDUP (R) 185-5002-00	# 555 LAMP L.P. #52 LEFT RAMP GRAVE MARKER 185-5002-00	# 555 LAMP L.P. #53 LEFT RAMP SNAKE 185-5002-00	# 555 LAMP L.P. #54 LEFT RAMP ELECTRIC CHAIR 185-5002-00	# 555 LAMP L.P. #55 L RAMP ARROW 185-5002-00	# 555 LAMP L.P. #56 L RAMP ELECTRIC CHAIR 185-5002-00
09	# 555 LAMP L.P. #57 LEFT LOOP ELECTRIC CHAIR 185-5002-00	# 555 LAMP L.P. #58 L LOOP ARROW 185-5002-00	L.P. #59	LED L.P. #60 LEFT POP BUMPER 114-5033-08	LED L.P. #61 RIGHT POP BUMPER 114-5033-08	LED L.P. #62 BOTTOM POP BUMPER 114-5033-08	LED L.P. #63 LEFT TOP LANE 185-5002-00	# 555 LAMP L.P. #64 RIGHT TOP LANE 185-5002-00
10	LED L.P. #65 SNAKE 112-5033-04 (GRN)	L.P. #66	# 555 LAMP L.P. #67 COFFIN 1 (BOT) 185-5054-02 (RED)	# 555 LAMP L.P. #68 COFFIN 2 (MID) 185-5054-02 (RED)	# 555 LAMP L.P. #69 COFFIN 3 (TOP) 185-5054-02 (RED)	LED L.P. #70 EXTRA BALL 114-5033-07 (ORG)	LED L.P. #71 CRANK IT UP 114-5033-05 (BLU)	L.P. #72
11	# 555 BULB L.P. #73 ELECTRIC CHAIR #1 (L) 185-5002-00	L.P. #74	# 44 LAMP L.P. #75 ELECTRIC CHAIR #2 (C) 185-5000-44HF	L.P. #76	L.P. #77	# 555 LAMP L.P. #78 ELECTRIC CHAIR #3 (R) 185-5002-00	L.P. #79	L.P. #80

* FOR MORE ABOUT DIODE ON-TERR. MINOR STRIPS & O.T.S. SEE SEC.5, CHR.2, PAGES 104-105 * Wire Color Abbreviations Used: BLK Black, BLU Blue, BRN Brown, GRV Gray, GRN Green, ORG Orange, RED Red, VIO Violet, WHT White, YEL Yellow

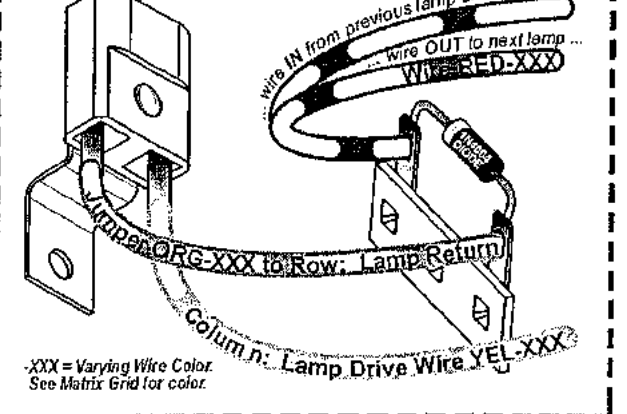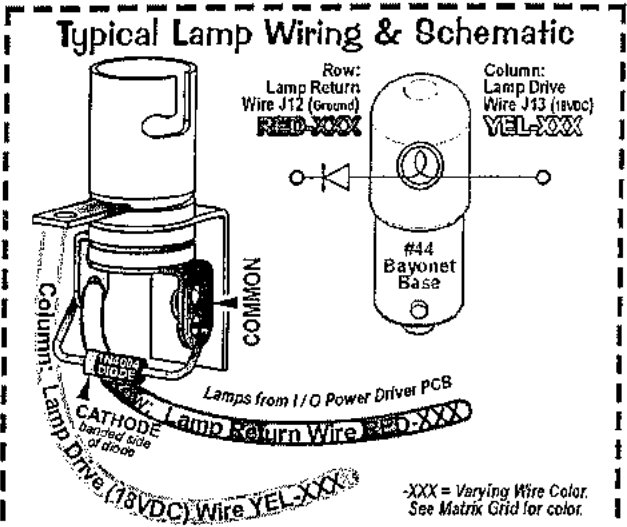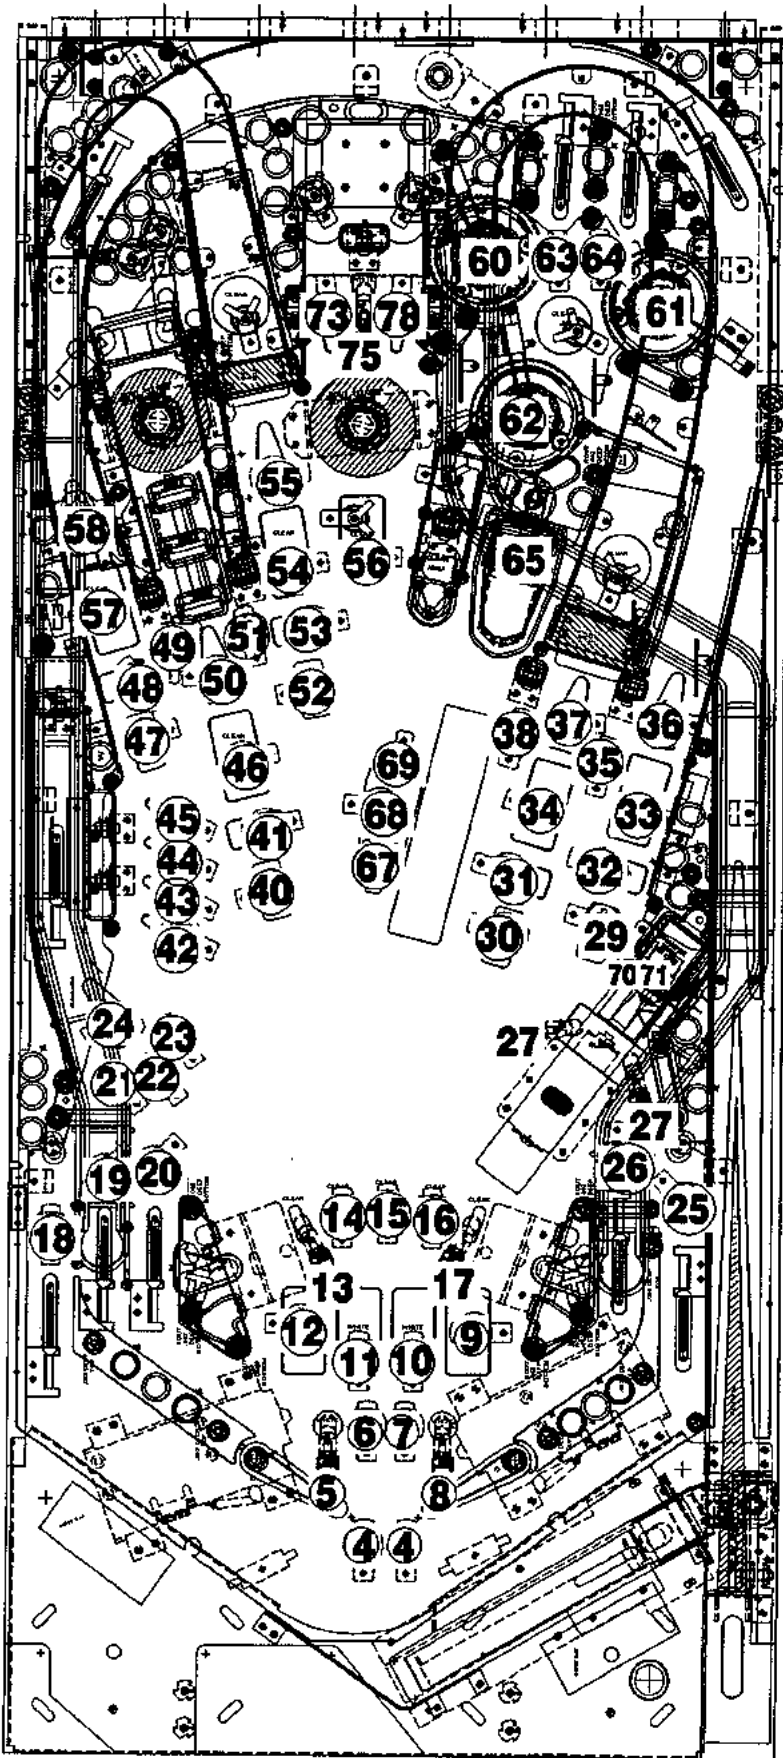

Game-Specific Tests

GAME

To initiate, from the **DIAGNOSTICS MENU**, select the "GAME" *Icon*. Ensure the **Power Interlock Switch** is pulled out when testing with the Coin Door open. This Menu is provided to allow the technician a simple method of testing game specific coils and/or switches, if required. If used, select the *Icon* (and Sub-Menu *Icons*, if any) and follow on-screen prompts.



Ball Trough Test

To initiate, from the **DIAGNOSTICS MENU**, select the "CLR" *Icon*. Ensure the **Power Interlock Switch** is pulled out if testing with the Coin Door open. This Menu is provided to allow the technician a simple method of removing the balls from the trough and also, to test functionality of the trough, ensuring proper trough operation. Upon entering **Ball Trough Test**, you will notice that four switches are already indicated as closed. In the example, the 4-Ball Trough Switches #18, #19, #20 & #21 are shown closed (*pinballs at rest in the ball trough*). To return to the **DIAGNOSTICS MENU**, press the **Green [BACK] Button**.



Press the **Black [SELECT] Button** to eject the ball in the first position Switch #21 (VUK OPTO Trough #1 (R)). Simultaneously, the Dot Matrix Display and the playfield will eject the ball to the Trough Up-Kicker, eject from the Trough Up-Kicker into the Shooter Lane, momentarily closing Switch #23 (*Shooter Lane*), and is ejected onto the playfield where the technician can easily

retrieve the pinball or allow the ball(s) to re-enter the trough to continue **Ball Trough Test**. The Dot Matrix Display indicates Switch #18 (4-Ball Trough #4 (L)) as open as the remaining three (3) pinballs shift over one (1) position to the right. If the technician allows the ejected pinball to reenter the ball trough, the Dot Matrix Display will indicate Switch #18 as closed. **REMINDER:** Switch #22 is the stacking OPTO switch; if more than five (5) pinballs are used, the additional switches will be noted. Typically, four (4) pinballs are used and required for proper operation; if this amounts differs, it will be noted on the front page of this Service Game Manual.



CAUTION! Continuous use off the above test may overheat the Trough Up-Kicker Coil.



Technician Alerts

To initiate, from the **DIAGNOSTICS MENU**, select the "TECH" *Icon*. This Menu is provided to show any switch or solenoid problems and/or missing pinballs. If upon entering the **SERVICE MENU** the display indicated an asterisk (*) and "USE +/- TO VIEW TECH. ALERTS", alerts are present.

TECHNICIAN ALERT - (0/0)

NO TECHNICIAN ALERTS

PRESS 'BACK' TO EXIT



After pressing either **Red [</-] / [+ / >] Button** or selecting this *Icon* in the **DIAGNOSTICS MENU**, the display will indicate the alert(s). If there are 2 alerts present, the display will indicate (1/2) with the 1st alert on the display. Press the **Red [+ / >] Button** to view the second alert (2/2). The second number in the parenthesis () after the slash (/) indicates how many alerts are

present. Refer to the start of this chapter regarding "Upon entering the **SERVICE MENU ***" indication and to **SWITCH ALERTS**. To return to the **DIAGNOSTICS MENU**, press the **Green [BACK] Button**. **Note:** While in this menu, an option may be present to jump (short-cut) to the appropriate Testing Menu (e.g. Coil Test, Switch Test, Game Specific Test or Ticket Dispenser Test, if installed).

NOTE ON SWITCH DETECTION : During game play, activation of switches are continuously monitored. For a switch to be determined as inoperable or **OUT OF SERVICE**, up to twenty games or so must be played for a switch to be automatically marked as **OUT OF SERVICE**. In programming, if a switch is determined to be faulty, game play is compensated. Switches noted as **OUT OF SERVICE** are determined to be stuck closed or open depending on switch usage. Free up the switch actuator, adjust or replace, if necessary. Performing a valid switch closure will put the switch back "IN SERVICE."

Determination of switch usage can be checked in **Audits** (review the *Audits Section*). Find the associated Audit with the switch in question and check usage; compare the numbers to commonly used switches. After any switch is checked and repaired or replaced, it's suggested to test the switch in the **Switch Test** or **Single Coil Test** (reviewed earlier in this section) where the associated coil to the switch can be tested as well. After correcting the problem, the switch will marked "IN SERVICE" and the switch is again monitored as specified above. Only you can determine if a switch marked **OUT OF SERVICE** is actually inoperable, or if it is just not getting actuated during game play.

NOTE ON PINBALL DETECTION : While in **TECHNICIAN ALERTS MENU**, if the following is displayed, the game has detected one (1) or more pinball(s) missing and has compensated for the lost pinball(s) to provide normal game play.

Technician Alerts continued on the next page.



Technician Alerts continued from previous page.

During game play, a pinball can get trapped or stuck. If after approximately 15 seconds of inactivity or "no scoring," **Ball Search** is started. **Note:** *If the pinball is in the Plunger Lane or "held" on the flipper, no Ball Search will be performed.* The game will perform one **Ball Search** in an attempt to "find" or free-up the pinball.



If the game does not see a switch closure (*indicating the pinball has not been found*), the Dot Matrix Display may indicate [**LOCATING PINBALLS PLEASE WAIT ...**], during which **Ball Search** will continue until the timer runs out (*this feature will not happen if the game is in Competition Mode; Ball Search will continue until the pinball is found, unstuck and/or replaced manually*). The display will momentarily acknowledge the missing pinball(s). The game will provide another pinball into play and will compensate for the lost pinball. Game play will appear normal.

Note: *This detection and compensation will happen with every pinball, if each suffers the same fate of a ball trap. If all balls get trapped, the game cannot be played or started until the situation is rectified.*

Important: *Determine where the pinball is! Do not add pinball(s) until it is determined the pinball(s) are indeed missing and not just stuck. The most common places for a pinball to be stuck is in device holes (ejects and VUKs) or ball troughs. Determine that all devices are functionally properly. Check around plastic pieces and ramps to see if the pinball got jammed or stuck.*

When the found pinball or a replacement pinball is added to the Ball Trough, the **Technician Alert** will immediately clear and will then indicate any remaining alerts (*if present*) or **NO TECHNICIAN ALERTS**.

Enter the **BALL TROUGH TEST** (*review the previous page*) to cycle the pinballs and to check proper switch and coil operation. *If a pinball was added, and the originally stuck pinball has freed itself at a later time, the game will not operate correctly.*



NOTE ON DEVICE MALFUNCTION : While in **TECHNICIAN ALERTS MENU**, if the following is displayed, the game has detected a "device malfunction." Check the device indicated (*coil and/or switch*).



Knocker Test

To initiate, from the **DIAGNOSTICS MENU**, select the "KNOCKER" *Icon*. The digitally mastered "Knocker" is sounded. The *knocker sound* is used to alert the player if he/she has received a special, replay or a credit from the Match Award feature. Press the **Black [SELECT] Button** to activate the knocker. To return to the **DIAGNOSTICS MENU**, press the **Green [BACK] Button**.


FACTOID: *The knocker got it's name from the 'original knocker' (20th century pinball games), which used a coil and when energized (fired), the plunger would strike a wood panel inside the cabinet.*



Sound / Speaker Test

To initiate, from the **DIAGNOSTICS MENU**, select the "SPKR" *Icon*. This system produces true digital stereo sound from Backbox & Cabinet Speakers or "Mono" on the Cabinet Speaker (*when used by itself*). This Menu is provided to allow the technician a simple method of testing the speakers if rewired or replaced.

Upon entering **Sound / Speaker Test**, you will notice the Dot Matrix Display indicating the first option of *available music and/or sound(s)* in this test. Press the **Red [+ / >] Button** to cycle through the *available music and/or sounds*, and press the **Black [SELECT] Button** to play the option shown in the Dot Matrix Display. Press the **Green [BACK] Button** to exit.

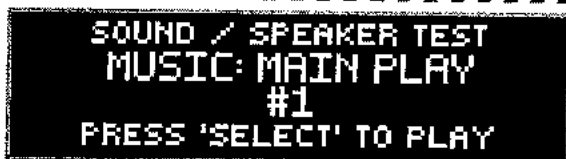

Speaker Phase Testing


Connections to each of speakers are polarized and each must be connected appropriately for the best quality sound. If one speaker has the positive and negative connections reversed with respect to the other one, bass frequencies will not be produced properly and the overall sound quality will be poor. To test for proper speaker phasing, use the **Sound / Speaker Test** to cycle through the available music and sound.

Speaker Phase Testing cont. next page.



Speaker Phase Testing continued from previous page.

If the sound is not balanced or doesn't sound correct, check the speaker wiring.

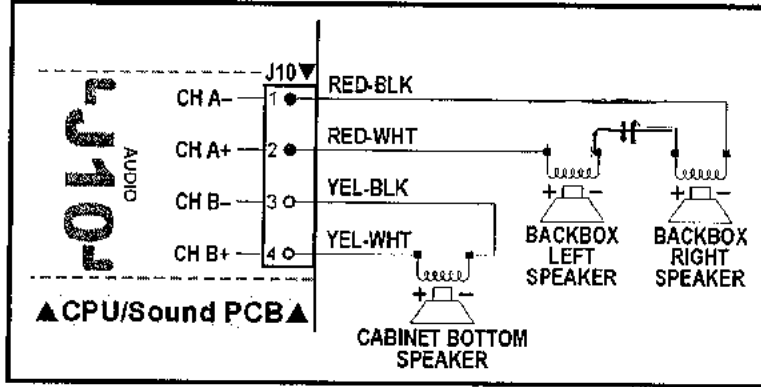

1. Check each speaker for polarity markings. If the speakers have polarity markings, verify that the Backbox Speaker's **RED-BLK** Wires and the Cabinet Speaker **YEL-BLK** Wire(s) are connected to the negative (-) terminal.

2. Disconnect the speaker output Connector **J10 (AUDIO)** from the CPU / Sound PCB (in the Backbox) and connect a 1.5-volt battery across each speaker pair one at a time while observing the speakers.

3. Make sure the positive (+) battery terminal is connected to the positive lead [J10, Pin-2, CH A+] (**RED-WHT**) or [J10, Pin-4, CH B+]

(**YEL-WHT**) each time. As the connection is made, check speaker cone movement; proper connections are indicated by outward movement.



Begin Burn-In

To initiate, from the **DIAGNOSTICS MENU**, select the "BURN" Icon. After selecting this Icon, press the **Black [SELECT] Button** to begin (initiate) the **Burn-In Test**. Ensure the **Power Interlock Switch** is pulled out if testing with the Coin Door open (required for coil function). Upon entering **Burn-In Test**, the game will exercise all CPU I/O Functions: **Dot Matrix Display Test**, **Coil Cycling Testing**, **All Lamps Test** and **Sound / Speaker Test**. Press the **Green [BACK] Button**, to pause and to view the cumulative Burn-In minutes. Press the **Green [BACK] Button** again to return to the **DIAGNOSTICS MENU**.


Note: To reset Burn-In minutes back to 0:00, see Section 3, Chapter 5, **GO TO RESET MENU** (via the **UTILITIES MENU**), **Reset Factory Settings**. **CAUTION:** Performing a **FACTORY RESET** will reset all other information as well (read the Utilities Section (**GO TO RESET MENU**), for more information).




Dot Matrix Test

To initiate, from the **DIAGNOSTICS MENU**, select the "DOT TEST" Icon. After selecting this Icon the **Dot Matrix Test** immediately begins. The Dot Matrix Display will immediately and continuously illuminate and cycle each of the **5 Tests for 1 pass each**. To return to the **DIAGNOSTICS MENU**, press the **Green [BACK] Button**.


Test 1

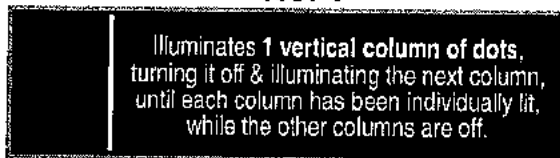


Test 2

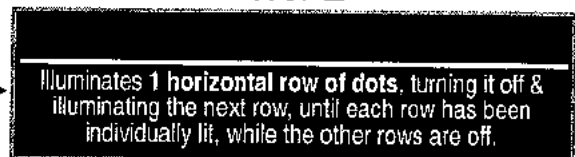


Test 3

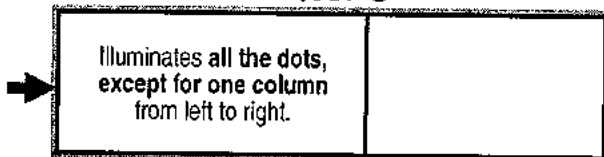


Test 4

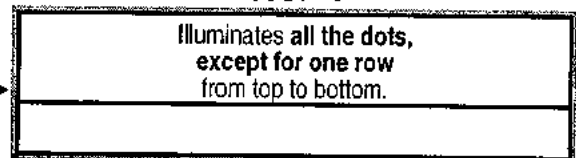

Test 5

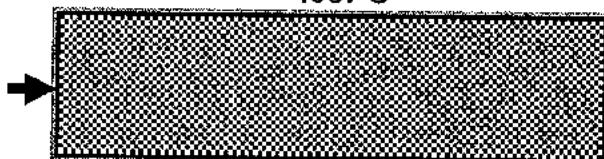

Test 1

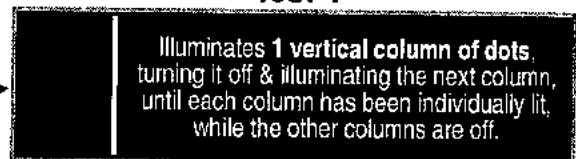



Ticket Dispenser Test

To initiate, from the **DIAGNOSTICS MENU**, select the "TIX" *Icon*. This Menu (*Icon*) will only appear if **Standard Adjustment 56, Ticket Dispenser**, is set to **YES** (Default = **NO***). ***Note:** Some games shipped from the factory with a unique Dip Switch Setting will default to **YES**. To view and/or change your setting, see Adjustments Section (**GO TO ADJUSTMENTS MENU**). Please remember, if you install an optional Ticket Dispenser, and your default setting is "NO," you will have to reset it back to "YES" if a **Factory Reset** is performed.

After selecting this *Icon*, the **Ticket Dispenser Test** will start. With the Ticket Dispenser properly installed, manually feed your tickets into the dispenser. The dispenser will activate and pull in the first ticket. Press the **Black [SELECT] Button** (which energizes Coil #35, Aux 3: Switched Ground) to advance a ticket. Feeding your Tickets into the dispenser works because Coil #33, Aux 1: Ticket Advance (Enable) is always 'energized'. With a Ticket Meter installed, as one Ticket Passes through the Ticket Dispenser, one 'click' is fired to the Meter (Coil #34, Aux 2: Ticket Meter) for each ticket passing through. Dedicated Switch **D-19, Ticket Notch**, will also be indicated on-screen (*in combination with a audible sound*) as "closing" as the notch between the tickets passes through. In this test you can clear ticket jams and check and/or clear tickets in Escrow, if necessary. To return to the **DIAGNOSTICS MENU**, press the **Green [BACK] Button**.



CHOOSE EARNINGS or STANDARD AUDITS

GO TO AUDITS MENU: EARNINGS AUDITS [#1 - #13] / STANDARD AUDITS [#1 - #59]

Perform the below steps to review the audits. Enter the **SERVICE MENU**, then enter the **EARNINGS AUDITS** or **STANDARD AUDITS** MENUS. For audit definitions or summary, review the Audits Section (**GO TO AUDITS MENU**). Try the "DUMP AUDITS TO USB" Feature to create a text file of your audits. Don't forget to set the **DATE & TIME** in the **UTILITIES MENU**. See the Utilities Section (**GO TO UTILITIES MENU**).

Step 1 Press [**SELECT**].
Press [**BACK**] to exit for escape at any time.

Audit Number
Audit Name
Audit Result

EARNINGS AUDIT #1
TOTAL PAID CREDITS
0

Step 2 Press [**>**]. Go to the "AUD" icon.
Press [**SELECT**].

EARNINGS AUDITS [#1 - #13] ▼

Step 3 Press [**>**]. Go to the "EARN" or "S.P.I." icon.
Press [**SELECT**].

Step 4 Press [**<**] [**>**] to move between audits.

Nr.	EARNINGS AUDIT NAME	YOUR RESULT
1	TOTAL PAID CREDITS	
2	FREE GAME PERCENTAGE	
3	AVERAGE BALL TIME	
4	AVERAGE GAME TIME	
5	COINS THROUGH LEFT SLOT	
6	COINS THROUGH RIGHT SLOT	
7	COINS THROUGH CENTER SLOT	

Nr.	EARNINGS AUDIT NAME	YOUR RESULT
8	COINS THROUGH FOURTH SLOT	
9	COINS THROUGH FIFTH SLOT	
10	TOTAL COINS	
11	TOTAL EARNINGS	
12	METER CLICKS	
13	SOFTWARE METER	

STANDARD AUDITS [#1 - #59] ▼

Nr.	STANDARD AUDIT NAME	YOUR RESULT
1	TOTAL BALLS PLAYED	
2	TOTAL EXTRA BALLS	
3	EXTRA BALL PERCENTAGE	
4	REPLAY 1 AWARDS	
5	REPLAY 2 AWARDS	
6	REPLAY 3 AWARDS	
7	REPLAY 4 AWARDS	
8	TOTAL REPLAYS	
9	REPLAY PERCENTAGE	
10	TOTAL SPECIALS	
11	SPECIAL PERCENTAGE	
12	TOTAL MATCHES	
13	HIGH SCORE AWARDS	
14	HIGH SCORE PERCENT	
15	TOTAL FREE PLAYS	
16	TOTAL PLAYS	
17	0.0M - 1.99M SCORES	
18	2.0M - 3.99M SCORES	
19	4.0M - 5.99M SCORES	
20	6.0M - 7.99M SCORES	

Nr.	STANDARD AUDIT NAME	YOUR RESULT
21	8.0M - 9.99M SCORES	
22	10.0M - 12.49M SCORES	
23	12.5M - 14.99M SCORES	
24	15.0M - 17.49M SCORES	
25	17.5M - 19.99M SCORES	
26	20.0M - 24.99M SCORES	
27	25.0M - 29.99M SCORES	
28	30.0M - 39.99M SCORES	
29	40.0M - 49.99M SCORES	
30	50.0M - 74.99M SCORES	
31	75.0M - 99.99M SCORES	
32	100.0M - 149.99M SCORES	
33	150.0M+ SCORES	
34	AVERAGE SCORES	
35	SERVICE CREDITS	
36	BALL SEARCH STARTED	
37	LOST BALL FEEDS	
38	LOST BALL GAME STARTS	
39	LEFT DRAINS	
40	CENTER DRAINS	

Nr.	STANDARD AUDIT NAME	YOUR RESULT
41	RIGHT DRAINS	
42	TILTS	
43	TOTAL BALLS SAVED	
44	LEFT FLIPPER USED	
45	RIGHT FLIPPER USED	
46	0 - 1 MINUTE GAMES	
47	1 - 1.5 MINUTE GAMES	
48	1.5 - 2 MINUTE GAMES	
49	2 - 2.5 MINUTE GAMES	
50	2.5 - 3 MINUTE GAMES	
51	3 - 3.5 MINUTE GAMES	
52	3.5 - 4 MINUTE GAMES	
53	4 - 5 MINUTE GAMES	
54	5 - 6 MINUTE GAMES	
55	6 - 8 MINUTE GAMES	
56	8 - 10 MINUTE GAMES	
57	10 - 15 MINUTE GAMES	
58	15+ MINUTE GAMES	
59	RECENT REPLAY PERCENT	

Note: Audits are subject to change (with or without notice).

STANDARD ADJUSTMENTS [#1 - #63] ▼

Nr.	STANDARD ADJUSTMENT NAME	USA DEFAULT	YOUR SETTING	Nr.	STANDARD ADJUSTMENT NAME	USA DEFAULT	YOUR SETTING
1	REPLAY TYPE	AUTO		32	HIGH SCORE #1	___,000,000	
2	‡ REPLAY PERCENTAGE	10%		33	HIGH SCORE #2	___,000,000	
3	‡ REPLAY AWARD	CREDIT		34	HIGH SCORE #3	___,000,000	
4	‡ REPLAY LEVELS	1		35	HIGH SCORE #4	___,000,000	
5	‡ AUTO REPLAY START	___,000,000		36	HSTD INITIALS	3 INITIALS	
6	‡ DYNAMIC REPLAY START	___,000,000		37	HSTD RESET COUNT	2000	
7	‡ REPLAY LEVEL #1	___,000,000		38	FREE PLAY	NO	
8	‡ REPLAY LEVEL #2	___,000,000		39	LANGUAGE	ENGLISH	
9	‡ REPLAY LEVEL #3	___,000,000		40	PLAYER LANGUAGE SELECT	YES	
10	‡ REPLAY LEVEL #4	___,000,000		41	CUSTOM MESSAGE	ON	
11	‡ REPLAY BOOST	YES		42	FLASH LAMP POWER	NORMAL	
12	SPECIAL LIMIT	1		43	COIL PULSE POWER	NORMAL	
13	‡ SPECIAL PERCENTAGE	10%		44	KNOCKER VOLUME	NORMAL	
14	SPECIAL AWARD	CREDIT		45	GAME RESTART	YES	
15	FREE GAME LIMIT	5		46	BILL VALIDATOR	NO	
16	EXTRA BALL LIMIT	5		47	MUSIC VOLUME	1	
17	‡ EXTRA BALL PERCENTAGE	25%		48	BALL SAVE TIME	0:05	
18	GAME PRICING	USA 10		49	TIMED PLUNGER	OFF	
19	MATCH PERCENTAGE	9%		50	FLIPPER BALL LAUNCH	OFF	
20	MATCH AWARD	CREDIT		51	COINDOOR BALL SAVER	NO	
21	BALLS PER GAME	3		52	COMPETITION MODE	NO	
22	TILT WARNINGS	2		53	CONSOLATION BALL	YES	
23	CREDIT LIMIT	30		54	FAST BOOT	YES	
24	ALLOW HIGH SCORES	YES		55	Q24 OPTION	COIN METER	
25	HIGH SCORE AWARD	CREDIT		56	TICKET DISPENSER	NO	
26	GRAND CHAMPION AWARDS	1		57	PLAYER COMPETITION	YES	
27	HIGH SCORE #1 AWARDS	1		58	TEAM SCORES	NO	
28	HIGH SCORE #2 AWARDS	0		59	LOCATION ID	0	
29	HIGH SCORE #3 AWARDS	0		60	GAME ID	0	
30	HIGH SCORE #4 AWARDS	0		61	TIME FORMAT	12-HOUR	
31	GRAND CHAMPION SCORE	___,000,000		62	COIN INPUT DELAY	30	
				63	LOST BALL RECOVERY	YES	

Factory Defaults Settings are subject to change during production (especially Standard Adjustments 2, 4, 5, 13, 16-17, 19, 31-35 & 47).
 ‡ Not all Standard Adjustments are shown. Depending on the setting (whether Factory Default or if changed by the operator), associated adjustments do not appear, if not required. **Note:** If Game Dip Switch other than USA is installed, different Defaults will appear.

Feature Adjustments [#1 - #+]

GAME

To initiate, from the **ADJUSTMENTS MENU**, select the "GAME" icon. The Dot Matrix Display will indicate the adjustment number (in this group), adjust. name, adjust. setting and comment line. The current adjustment will remain on the display until the next adjustment is viewed or when this sub-menu is exited.

>>> **FACTORY RESET or CODE UPDATE NOTE:** Don't forget, any changes you make to your adjustments will revert back to the Factory Default settings if you perform a Factory Reset or update your Game Code. See Utilities Section (**GO TO RESETS MENU** and **GO TO USB MENU**).

View the Coils Detailed Chart Menu to see if this game is **Shaker Motor Enabled**. If it is, set the options in the Feature Adjustment as seen below. (typically the last one).

SHAKER MOTOR (OPTIONAL) : Set to **NONE**, **MINIMAL USE**, **MODERATE USE** or **MAXIMAL USE**.
 Factory Default = **MODERATE USE**. Set to any of the varying "... USES" if an Optional Shaker Motor Kit (SPI Part Number 502-5027-00) was installed correctly in this pinball machine. See the assembly (kit) on the last page of Blue Pages (Major Assemblies). Also see Shaker Motor Coil (Q8) in the Coils Detailed Chart Table at the beginning of this Service Game Manual or the beginning of the Yellow Pages.

**CPU/SOUND PCB
DIP SWITCH SW1
SETTING**

Pos.	1	2	3	4	5	6	7	8
ON	▲	▲	▲	▲	▲	▲	▲	▲
OFF	▼	▼	▼	▼	▼	▼	▼	▼

HIGHLIGHTED
= Factory Default

HIGHLIGHTED
= Not Shown on Coin Card

**COUNTRY
SETTING
OPTION(S)**

Default Highlighted
USA 1
USA 2
USA 3
USA 4
USA 5
USA 6
USA 7
USA 8
USA 9
USA 10
USA 11

**COIN MECHANISMS (SWITCHES)
COINS THRU ... SLOT:**

	LEFT	CENTER	RIGHT	4TH
0.25	1.00	0.25		

PRICING SCHEME

Number of Plays (Credits) for Price Amount Shown
See "Appendix J" for Coin Cards Examples & Info!

USD // UNITED STATES DOLLAR // (\$)

1/0.25		
1/0.50	2/0.75	3/1.00
1/0.50	For USA 6 and USA 7 use: 755-5400-02-Y USA 8 Note: If player uses X4 25¢ quarters - 2 plays. However, \$1 bill = 3 plays!	
1/0.50		
1/0.50	2/1.00	3/1.50
1/0.50		5/2.00
1/0.50	2/1.00	4/1.50
1/0.50		6/2.00
1/1.00		
1/0.75	2/1.50	3/2.00
1/1.00	3/2.00	

Requires SPI
Coin Card(s)
Part Number

755-5400-01-Y
755-5400-09-Y
755-5400-02-Y
755-5400-02-Y
755-5400-08-Y
755-5400-00-Y
755-5400-07-Y
755-5400-11-Y

Pos.	1	2	3	4	5	6	7	8
ON	▲	▲	▲	▲	▲	▲	▲	▲
OFF	▼	▼	▼	▼	▼	▼	▼	▼

Default Highlighted
AUSTRALIA 1
AUSTRALIA 2
AUSTRALIA 3
AUSTRALIA 4
AUSTRALIA 5
AUSTRALIA 6

0.20	1.00	2.00		
------	------	------	--	--

AUD // AUSTRALIAN DOLLARS // (\$AUS)

1/1.00	3/2.00
1/1.00	3/2.00
1/1.00	
1/2.00	
1/2.00	2/4.00
1/3.00	2/5.00
1/2.00	2/3.00
1/2.00	3/5.00
1/3.00	2/5.00
1/2.00	3/8.00
1/2.00	5/10.00

755-5406-00-Y
(1 Side)

Pos.	1	2	3	4	5	6	7	8
ON	▲	▲	▲	▲	▲	▲	▲	▲
OFF	▼	▼	▼	▼	▼	▼	▼	▼

Default Highlighted
CANADA 1
[25¢ door]
CANADA 2
[dollar door]

0.25	0.25	1.00	2.00
1.00		2.00	

CAD // CANADIAN DOLLARS // (\$CAN)

1/0.50	2/0.75	3/1.00
1/1.00	3/2.00	

755-5400-00-Y
-01-Y or -02-Y
755-5400-10-Y

Pos.	1	2	3	4	5	6	7	8
ON	▲	▲	▲	▲	▲	▲	▲	▲
OFF	▼	▼	▼	▼	▼	▼	▼	▼

Default Highlighted
CROATIA

1	2	5	
---	---	---	--

HRK // CROATIAN KUNA // (Kuna)

1/3	2/5
-----	-----

755-5410-00-Y
(2-Sided)

Pos.	1	2	3	4	5	6	7	8
ON	▲	▲	▲	▲	▲	▲	▲	▲
OFF	▼	▼	▼	▼	▼	▼	▼	▼

Default Highlighted
DENMARK 1
DENMARK 2

1	5	10	20
---	---	----	----

DKK // DANISH KRONE // (Kr)

1/3	2/5
1/2	2/4
3/5	4/7
5/9	7/10

755-5402-00-Y
(2-Sided)

Pos.	1	2	3	4	5	6	7	8
ON	▲	▲	▲	▲	▲	▲	▲	▲
OFF	▼	▼	▼	▼	▼	▼	▼	▼

Default Highlighted
JAPAN 1
JAPAN 2

100		100	
-----	--	-----	--

JPY // JAPANESE YEN // (¥)

1/100	
1/100	3/200

755-5408-01-Y
(2-Sided)

Pos.	1	2	3	4	5	6	7	8
ON	▲	▲	▲	▲	▲	▲	▲	▲
OFF	▼	▼	▼	▼	▼	▼	▼	▼

Default Highlighted
LITHUANIA

1	2	5	
---	---	---	--

LTL // LITHUANIA LITAI // (Lt)

1/2

755-5416-00-Y
(1 Side)

Pos.	1	2	3	4	5	6	7	8
ON	▲	▲	▲	▲	▲	▲	▲	▲
OFF	▼	▼	▼	▼	▼	▼	▼	▼

Default Highlighted
MIDDLE EAST

token		token	
-------	--	-------	--

TOKEN // Middle East currency used to buy token // (TOKEN)

1/1

755-5416-00-Y
(use Side 1)

Pos.	1	2	3	4	5	6	7	8
ON	▲	▲	▲	▲	▲	▲	▲	▲
OFF	▼	▼	▼	▼	▼	▼	▼	▼

Default Highlighted
NEW ZEALAND 1
NEW ZEALAND 2

1		2	
---	--	---	--

NZD // NEW ZEALAND DOLLAR // (\$NZD)

1/1	
1/1	3/2

755-5406-00-Y
(Side 2)

Pos.	1	2	3	4	5	6	7	8
ON	▲	▲	▲	▲	▲	▲	▲	▲
OFF	▼	▼	▼	▼	▼	▼	▼	▼

Default Highlighted
NORWAY 1
NORWAY 2
NORWAY 3
NORWAY 4

10	5	20	
----	---	----	--

NOK // NORWEGIAN KRONE // (Kr)

1/10	
1/10	3/20
1/20	
1/20	3/40

755-5403-01-Y
or -02-Y / (2-Sided)
755-5403-03-Y
(2-Sided)

Pos.	1	2	3	4	5	6	7	8
ON	▲	▲	▲	▲	▲	▲	▲	▲
OFF	▼	▼	▼	▼	▼	▼	▼	▼

Default Highlighted
RUSSIA

10	5	1	
----	---	---	--

RUB // RUSSIAN RUBLE // (Ruble)

1/5

755-5411-00-Y
(2-Sided)

Pos.	1	2	3	4	5	6	7	8
ON	▲	▲	▲	▲	▲	▲	▲	▲
OFF	▼	▼	▼	▼	▼	▼	▼	▼

Default Highlighted
SO. AFRICA 1
SO. AFRICA 2

0.50	1.00	2.00	5.00
------	------	------	------

ZAR // SOUTH AFRICAN RAND // (R)

1/2.00	
1/3.00	2/5.00

755-5409-01-Y
(2-Sided)

Pos.	1	2	3	4	5	6	7	8
ON	▲	▲	▲	▲	▲	▲	▲	▲
OFF	▼	▼	▼	▼	▼	▼	▼	▼

Default Highlighted
SWEDEN 1
SWEDEN 2

1	5	10	
---	---	----	--

SEK // SWEDISH KRONOR // (Kr)

1/10	2/15	3/20
1/5		

755-5404-00-Y
(2-Sided)

Pos.	1	2	3	4	5	6	7	8
ON	▲	▲	▲	▲	▲	▲	▲	▲
OFF	▼	▼	▼	▼	▼	▼	▼	▼

Default Highlighted
SWITZERLAND 1
SWITZERLAND 2

1	2	5	
---	---	---	--

CHF // SWISS FRANCS // (Sfr)

1/1	2/2	3/3	4/4	6/5
1/1	3/2	5/3	7/4	9/5

755-5405-00-Y
(2-Sided)

Pos.	1	2	3	4	5	6	7	8
ON	▲	▲	▲	▲	▲	▲	▲	▲
OFF	▼	▼	▼	▼	▼	▼	▼	▼

Default Highlighted
TAIWAN

10		10	
----	--	----	--

TWD // TAIWANESE DOLLAR // (TWD)

1/10

755-5412-00-Y
(use Side 1)

Pos.	1	2	3	4	5	6	7	8
ON	▲	▲	▲	▲	▲	▲	▲	▲
OFF	▼	▼	▼	▼	▼	▼	▼	▼

Default Highlighted
UK 1
UK 2
UK 3
UK 4
UK 5
UK 6

5TH COIN SLOT NOT AVAILABLE WITH CUSTOM PRICING ▼

LEFT	CENTER	RIGHT	5TH
0.10	0.50	1.00	0.20
			2£

GBP // UNITED KINGDOM POUNDS // (£)

3/1.00	7/2.00
4/1.00	
1/0.50	2/1.00
3/1.50	5/2.00
1/0.30	2/0.60
3/0.90	4/1.00
1/1.00	3/2.00
3/2.00	

755-5407-00-Y
755-5407-01-Y*
755-5407-01
755-5407-01-Y*
755-5407-01
755-5407-01-Y*

ATTENTION: UK 5TH
COIN SLOT TIED TO 6TH
CHANNEL ON ELEC.
COIN MECH

Adjustments



Game Pricing.

Euro 1-12 Summary & International (Euro) Standard Pricing Select Table

CPU/SOUND PCB DIP SWITCH SW1 SETTING		COUNTRY SETTING OPTION(S)	COIN MECHANISMS (SWITCHES) COINS THRU ... SLOT:				PRICING SCHEME	Requires SPI Coin Card(s) Part Number			
Pos.	1 2 3 4 5 6 7 8	Default Highlighted	LEFT	CENTER	RIGHT	4TB	Number of Plays (Credits) for Price Amount Shown See "Appendix J" for Coin Cards Examples & Info!				
ON	S E E B E L O W	Euro 1	0.50	1.00	2.00	0.20	EUR // EUROPEAN UNION EUROS // (€)	755-5401-01-Y			
OFF	S E T T I N G S	Euro 2					1/0.50	2/1.00	3/1.50	5/2.00	755-5401-02-Y
		Euro 3					1/0.50	3/1.00			755-5401-03-Y
		Euro 4					1/0.50	2/1.00	3/1.50	6/2.00	755-5401-04-Y
		Euro 5					1/0.50	3/1.00	4/1.50	7/2.00	755-5401-05-Y
		Euro 6					2/0.50				755-5401-06-Y
		Euro 7					1/1.00	2/2.00	3/3.00	5/4.00	755-5401-07-Y
		Euro 8					1/1.00	3/2.00			755-5401-08-Y
		Euro 9					1/1.00	2/1.50	3/2.00		755-5401-09-Y
		Euro 10					1/1.00	3/2.00	7/3.00		755-5401-10-Y
		Euro 11					1/1.00	4/2.00			755-5401-11-Y
		Euro 12					2/1.00	4/2.00	6/3.00	9/4.00	755-5401-12-Y

For a different Euro Pricing Scheme (other than Factory Default listed below), scroll through Standard Adjustment 18: Euro 1-12 or CUSTOM* for new setting (reference above Euro 1-12 Summary). Keep the Country Dip Switch Setting the same as listed below.

Pos.	1 2 3 4 5 6 7 8	Default Highlighted	EUR // EUROPEAN UNION EUROS // (€)				755-5401-09-Y		
ON	▲	AUSTRIA Euro 9	0.50	1.00	2.00	1/1.00	2/1.50	3/2.00	
OFF	▼								
Pos.	1 2 3 4 5 6 7 8	Default Highlighted	0.50	1.00	2.00	1/0.50		755-5401-01-Y	
ON	▲	BELGIUM Euro 1							
OFF	▼								
Pos.	1 2 3 4 5 6 7 8	Default Highlighted	0.50	1.00	2.00	1/1.00	3/2.00	755-5401-08-Y	
ON	▲	FINLAND Euro 8							
OFF	▼								
Pos.	1 2 3 4 5 6 7 8	Default Highlighted	0.50	1.00	2.00	1/1.00	3/2.00	7/3.00	755-5401-10-Y
ON	▲	FRANCE Euro 10							
OFF	▼								
Pos.	1 2 3 4 5 6 7 8	Default Highlighted	0.50	1.00	2.00	1/0.50		755-5401-01-Y	
ON	▲	GERMANY 1				1/0.50		755-5401-02-Y	
OFF	▼	GERMANY 2				2/1.00	3/1.50	5/2.00	
		GERMANY 3				1/0.50	2/1.00	3/1.50	6/2.00
Pos.	1 2 3 4 5 6 7 8	Default Highlighted	0.50	1.00	2.00	1/1.00	3/2.00	755-5401-08-Y	
ON	▲	GREECE Euro 8							
OFF	▼								
Pos.	1 2 3 4 5 6 7 8	Default Highlighted	0.50		0.50	1/0.50		755-5401-01-Y	
ON	▲	ITALY 1				1/1.00	3/2.00	755-5401-08-Y	
OFF	▼	ITALY 2							
Pos.	1 2 3 4 5 6 7 8	Default Highlighted	0.50	1.00	2.00	1/0.50	3/1.00	755-5401-03-Y	
ON	▲	NETHERLANDS Euro 3							
OFF	▼								
Pos.	1 2 3 4 5 6 7 8	Default Highlighted	0.50		0.50	1/0.50		755-5401-01-Y	
ON	▲	PORTUGAL Euro 1							
OFF	▼								
Pos.	1 2 3 4 5 6 7 8	Default Highlighted	0.50	1.00	2.00	1/1.00	3/2.00	755-5401-08-Y	
ON	▲	SPAIN Euro 8							
OFF	▼								

HIGHLIGHTED = Factory Default **HIGHLIGHTED** = Not Shown on Coin Card

For the associated Coinage Card required if the Factory Default Setting was changed, view on-line at: <http://www.sternpinball.com/coinagecards.shtml>

You can download and print the replacement card. Adobe® Reader 5.0 or higher required (links on site). Use Yellow Card Stock: ASTROBRIGHTS® SOLAR YELLOW #65 FROM WAUSAU PAPER PRODUCTS (Stock #22731)



To initiate, from the **MAIN MENU**, select the "UTIL" *Icon*. The **UTILITIES MENU** provides ways to quickly and easily customize your game with **Installs** (*pre-sets for game Standard & Feature Adjustments*), set-up a **Custom Message** (*short-cut to Standard Adjustment 41, Custom Message*), set-up **Custom Pricing** (*short-cut to Standard Adjustment 18, to the Custom Pricing Sub-Menu*), set-up the **Date and Time** (*required if the date and time is needed to be accurate for data dumps and for tournaments*), reset certain particular game data or perform a complete **Factory Reset** and to download game data, update or backup game code in the **USB MENU**.

All **UTILITIES, INSTALLS, RESETS MENU** and **USB MENU** *Icons* and their usages are explained throughout this chapter in the same order as seen in the Dot Matrix Display. **NOTE:** Depending on Game Type, Version, selections made, Dip Switch settings, location and/or areas, some *Icons* may appear non-functional or may not appear at all. **Installs (Adjustments), Icons and/or functions, order and operation are subject to change. If in doubt use the Factory Default Settings (review Install Factory on the next page).**

In displays where changes can be made or to perform a function, use the **GREEN Button** to go [**BACK**], exit or escape, the **RED Buttons** to [< / -] MOVE BACK / LEFT / [+ / >] MOVE FORWARD / RIGHT to view the next audit in the group, and the **BLACK Button** to [**SELECT**] the sub-menus.



Go To Installs Menu

To initiate, from the **UTILITIES MENU**, select the "INST" *Icon*. The **INSTALLS MENU** provides 13 **Installs** to vary **Game Play Difficulty** (*set with Feature Adjustments*) or **Game Play Type** and **Install Factory** (*restores all adjustments to Factory Defaults*).

For **detailed customization** or to check current **Adjustments Defaults** (*either changed by YOU in the Adjustments Menu or by this INSTALLS MENU or for Factory Default Settings*), see **Section 3, Chapter 4, GO TO ADJUSTMENTS MENU**. After completing one or more of the **Installs** in this chapter, go back to the **ADJUSTMENTS MENU** to see which **Standard and/or Feature Adjustments** have changed (*Feature Adjustments and/or settings are subject to change during production, and may differ than what is described in the tables at the end of this chapter*). The **Dot Display** will indicate if a setting is a **Factory Default** or not. If the settings are not to your liking, perform **one** of the following:

- 1.: **Manually change the Standard & Feature Adjustments Settings** (*perform this task in the ADJUSTMENTS MENU, see the Adjustments Section*).
- 2.: **Install Factory** (*see the last install*) on how to reset all of the **Standard & Feature Adjustments** back to the **Factory Default Settings**.

Multiple **Installs** can be set to vary game play; however, for **Installs** that have *one or more* Adjustments in common, the **last** "Install" selected & **activated**, will **supersede** any previously changed Adjustment(s) from any prior **Installs**. Any adjustments which you changed and are not affected by the **Install** will remain as set.

For example, if you want a **5-BALL Game** set to **EXTRA EASY**: Select and **activate** the "5BAL" *Icon* **first** (which will typically change any **Feature** Difficulty Adjustments to **HARD**), **then** select & **activate** the "X.EZ" *Icon* to **change back** the Difficulty Adjustments to **EXTRA EASY**. However, if the "X.EZ" *Icon* was selected & **activated** first, **then** the "5BAL" *Icon* was selected & **activated**, the game will be set to a **5-BALL Game** set to **HARD**.

Remember, use the **GREEN Button** to go [**BACK**], exit or escape and the **BLACK Button** to [**SELECT**] to **INSTALL** your new setting(s).



Install Extra Easy

To initiate, from the **INSTALLS MENU**, select the "X.EZ" *Icon*. The **Dot Matrix Display** will indicate the **INSTALL EXTRA EASY**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play** Difficulty level.

Installs Menu continued on the next page.

Installs Menu continued from previous page.



Install Easy

To initiate, from the **INSTALLS MENU**, select the "EASY" *Icon*. The Dot Matrix Display will indicate the **INSTALL EASY**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Difficulty** level.



Install Medium (Normal or Factory Settings)

To initiate, from the **INSTALLS MENU**, select the "FACT" *Icon*. The Dot Matrix Display will indicate the **INSTALL MEDIUM**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Difficulty** level.



Install Hard

To initiate, from the **INSTALLS MENU**, select the "HARD" *Icon*. The Dot Matrix Display will indicate the **INSTALL HARD**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Difficulty** level.



Install Extra Hard

To initiate, from the **INSTALLS MENU**, select the "X.HD" *Icon*. The Dot Matrix Display will indicate the **INSTALL EXTRA HARD**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Difficulty** level.



Install 3-Ball or 5-Ball

To initiate, from the **INSTALLS MENU**, select either the "3BAL" or "5BAL" *Icons*. The Dot Matrix Display will indicate the **INSTALL 3-BALL** or **5-BALL** depending on choice. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Type** to 3 Balls per game

(Factory Default is 3 Balls per game, not including extra balls earned by the player, if any).



Install Competition

To initiate, from the **INSTALLS MENU**, select the "COMP" *Icon*. The Dot Matrix Display will indicate the **INSTALL COMPETITION**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Type** to "Tournament" Rules. *Programming varies and is subject to change.*



Install Director's Cut

To initiate, from the **INSTALLS MENU**, select the "DCUT" *Icon*. The Dot Matrix Display will indicate the **INSTALL DIRECTOR'S CUT**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Type** to programmer's choice. *Programming varies and is subject to change.*



Install Home Play

To initiate, from the **INSTALLS MENU**, select the "HOME" *Icon*. The Dot Matrix Display will indicate the **INSTALL HOME PLAY**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Type** to "Home" Rules. *Programming varies and is subject to change.*



Install Novelty

To initiate, from the **INSTALLS MENU**, select the "NOV" *Icon*. The Dot Matrix Display will indicate the **INSTALL NOVELTY**. Follow the on-screen prompts to perform the **Install**.

***** This setting is recommended where local laws restrict certain game features. *****

Set the **Game Play Type** to "Restricted" Rules. *Programming varies and is subject to change.*



Install Add-A-Ball

To initiate, from the **INSTALLS MENU**, select the "A.A.B." *Icon*. The Dot Matrix Display will indicate the **INSTALL ADD-A-BALL**. Follow the on-screen prompts to perform the **Install**.

***** This setting is recommended where local laws restrict certain game features. *****

Set the **Game Play Type** to "Restricted" Rules. *Programming varies and is subject to change.*



Install Factory

To initiate, from the **INSTALLS MENU**, select the "FACT" *Icon*. The Dot Matrix Display will indicate the **INSTALL FACTORY**. Follow the on-screen prompts to perform the **Install**. **CAUTION!** All **Standard and Feature Adjustments** which were changed in the **INSTALLS MENU** or **ADJUSTMENTS MENU** are returned to the **Factory Defaults** (as indicated in the Dot Display in the **ADJUSTMENTS MENU**). *Note: To perform a complete Factory Reset, GO TO THE RESETS MENU. Escape back to the UTILITIES MENU, select the "RESET" Icon, then select the "FACT" Icon in the RESETS MENU (review the end of this section, Reset Factory Settings).*



Enter Custom Message

To initiate, from the **UTILITIES MENU**, select the "ABCD CUST MSG" *Icon*. The **SET CUSTOM MESSAGE** (a short-cut for *Standard Adjustment 41, Custom Message*) provides an opportunity to have a text message appear in the the **Attract Mode**. Follow the on-screen prompts to complete [END].

Remember, use the **GREEN Button** to go [**BACK**], exit or escape, the **RED Buttons** to [</-] MOVE LEFT / CHOOSE NEXT [+/>] MOVE RIGHT / CHOOSE PREVIOUS, and the **BLACK Button** to [**SELECT**] as 'OK'.



Set Custom Pricing

To initiate, from the **UTILITIES MENU**, select the "PRIC" *Icon*. The **CUSTOM PRICING MENU** (a short-cut for *Standard Adjustment 18, Game Pricing, and setting selected is CUSTOM*) provides an opportunity to set **Custom Pricing**.

Note! **MONETARY AMOUNT MUST BE SELECTED FIRST!** Press [**BACK**] to - DECREASE or [**SELECT**] to + INCREASE the [< \$ >] monetary amount (e.g. look at the right side of the display from \$0.25 to \$0.50). Press [</-] to - DECREASE or [+/>] to + INCREASE the **credit quantity** (e.g. look at the left side of the display from 0 CREDITS AT: to 1 CREDIT AT:).

REMINDER
In these menus:

Press [**BACK**] to - DECREASE [< \$]

Press [**SELECT**] to + INCREASE [\$ >]

IF EXAMPLE CUSTOM PRICING SETTING DESIRED IS :

1 Play for \$0.50, 3 Plays for \$1.00 and 7 Plays for \$2.00

THEN YOU WILL NEED TO PERFORM THE FOLLOWING :

Step 1 The starting display appears as below if no prior **Custom Pricing** was installed.

```
CUSTOM PRICING
0 CREDITS AT:          $0.25
USE -/ + TO CHANGE CREDITS
```

Step 2 Press [**SELECT**] to + INCREASE to \$0.50. Press [+/>] to + INCREASE to 1 CREDIT AT:

```
CUSTOM PRICING
1 CREDIT AT:          $0.50
1/0.50
USE -/ + TO 'INSTALL'
```

Step 3 Press [**SELECT**] to + INCREASE to \$1.00. Press [+/>] to + INCREASE to 2 CREDITS AT:

```
CUSTOM PRICING
2 CREDITS AT:          $1.00
1/0.50 3/1.00
USE -/ + TO CHANGE CREDITS
```

Step 4 Press [**SELECT**] to + INCREASE to \$2.00. Press [+/>] to + INCREASE to 4 CREDITS AT:

```
CUSTOM PRICING
4 CREDITS AT:          $2.00
1/0.50 3/1.00 7/2.00
USE -/ + TO CHANGE CREDITS
```

Step 5 Press [**SELECT**] to + INCREASE the amount once (example = \$2.25).

```
CUSTOM PRICING
0 CREDITS AT:          $2.25
1/0.50 3/1.00 7/2.00
USE -/ + TO 'INSTALL'
```

Step 6 Press [**SELECT**] to **INSTALL**. Press [</-]/[+/>] or [**BACK**] to edit.

```
CUSTOM PRICING
INSTALL
1/0.50 3/1.00 7/2.00
PRESS 'SELECT' TO INSTALL
```

Press [</-] once or press [+/>] eleven times until **INSTALL** appears.

Step 7 Press [**SELECT**], press [**BACK**] twice to exit the **SERVICE MENU** with your **Custom Pricing** installed.

```
CUSTOM PRICING
INSTALLED
PRESS 'SELECT' TO CONTINUE
```

To correct or make new changes, reenter, which brings you to **Step 6**. Press [**BACK**] repeatedly until the monetary amount shown is the desired amount and then continue following the above steps with your new or corrected settings. If you are still having difficulty or if you have any questions, please call **Technical Support** 800-542-5377 or 708-345-7700, option 1.



Set Date / Time

To initiate, from the **UTILITIES MENU**, select the "TIME" *Icon*. The **SET TIME MENU** appears with the **MONTH** flashing. Setting the date and time is required for 'Data Dumps' and Tournament Start and End Dates. If the setting of Standard Adjustment 61, **Time Format**, is set to **12-HOUR** (*Factory Default*) the time will be expressed in the **AM / PM format**. If Standard Adjustment 61, **Time Format**, is set to **24-HOUR** the time will be expressed in the **24-hour format**.



Go To Resets Menu

To initiate, from the **UTILITIES MENU**, select the "RESET" *Icon*. The **RESETS MENU** provides six (6) functions to reset *only the Coin Audits*, reset *only the Game Audits*, reset *only the Grand Champion Score*, reset *only the High Score(s)*, reset *only the paid Credits (includes Service Credits)* or to reset **ALL DATA** back to the **Factory Default Settings**.



Reset Coin Audits

To initiate, from the **RESET MENU**, select the "COIN" *Icon*. **▲ ONLY the Coin Audits** [Earnings Audits 5-12], will be reset to zero (0), *Factory Default Settings*. Follow the on-screen prompts to perform the **Reset**.



Reset Game Audits

To initiate, from the **RESET MENU**, select the "AUD" *Icon*. **▲ ONLY the Game Audits** [Earnings Audits 1-4, Standard Audits 1-59 and Feature Audits 1-XX*], will be reset to zero (0), *Factory Default Settings*. Follow the on-screen prompts to perform the **Reset**. *varies per game title.



Reset Grand Champion (Score)

To initiate, from the **RESET MENU**, select the "GC" *Icon*. **▲ ONLY the Grand Champion Score** [adjustable via Standard Adjustment 31], will be reset to *Factory Default Setting*. Follow the on-screen prompts to perform the **Reset**.



Reset High Scores

To initiate, from the **RESET MENU**, select the "HSTD" *Icon*. **▲ ONLY the High Score(s)** [adjustable via Standard Adjustments 32-35], will be reset to *Factory Default Setting(s)*. Follow the on-screen prompts to perform the **Reset**. **Note: High Scores (but not Grand Champion Score) are reset automatically every 2,000 games (Factory Default Setting) [adjustable via Standard Adjustment 37, HSTD Reset Count]**.



Reset Credits

To initiate, from the **RESET MENU**, select the "CRED" *Icon*. **▲ ONLY the Credits (includes Service Credits)** [adjustable via Standard Adjustment 23, **Credit Limit**], will be reset to zero (0), *Factory Default Settings*. Follow the on-screen prompts to perform the **Reset**.



Reset Factory Settings

To initiate, from the **RESET MENU**, select the "FACT" *Icon*. **▲ ALL GAME DATA IS RESET!** (*with the exception of Earnings Audit 13, Software Meter*). **NOTE: IF YOU HAD SET-UP CUSTOM PRICING OR HAD CHANGED ANY ADJUSTMENTS OR PERFORMED INSTALLS, IT IS SUGGESTED TO WRITE DOWN YOUR CHANGES PRIOR TO THE FACTORY RESET.** Follow the on-screen prompts to perform the **Reset**.



Go To USB Menu

To initiate, from the **UTILITIES MENU**, select the "USB" *Icon*. The **USB MENU** provides three (3) functions to download game data, update your game code or backup your code onto a USB Memory Stick. *Review the inside cover for information on how to update your game code.*



Update Game Code

To initiate, from the **USB MENU**, select the "UPDT" *Icon*. Follow the on-screen prompts or review the inside cover for more information.



Dump Audits to USB


To initiate, from the **USB MENU**, select the "DUMP" *Icon*. Follow the on-screen prompts to perform a **Data Dump** (download).

Note: If Icon is not present, access via the Audits Menu, see the Audits Section.



Backup to USB Memory Stick

To initiate, from the **USB MENU**, select the "BKUP" *Icon*. Follow the on-screen prompts to perform a **Backup** (game code only). This backup feature does not retain adjustments and/or settings changes made.

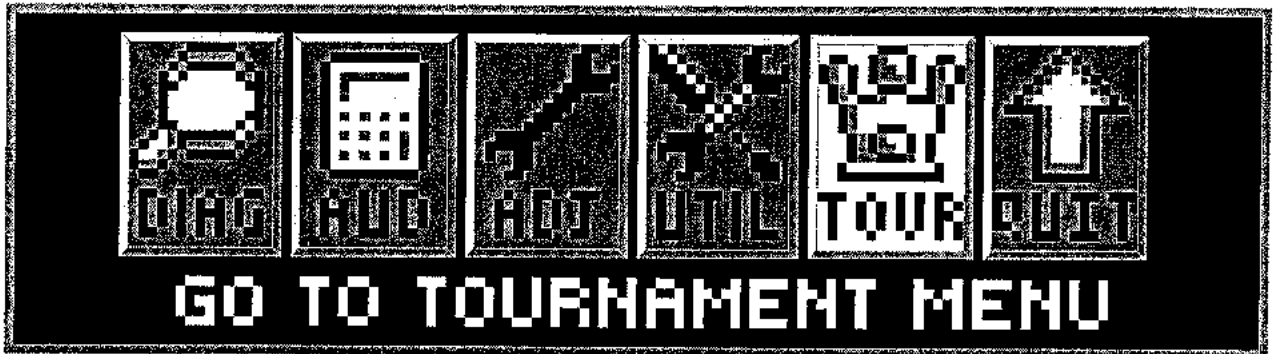

To initiate, from the **MAIN MENU**, select the "TOUR" *Icon*. The **TOURNAMENT MENU** provides ways to quickly and easily start and stop a tournament. Also, tournament data can be viewed (*audits, prize info, etc.*).

All **TOURNAMENT MENU** *Icons* and there usages are explained throughout this chapter in the same order as seen in the Dot Matrix Display. **NOTE:** Depending on Game Type, Version, selections made, Dip Switch settings, location and/or areas, some *Icons* may appear non-functional or may not appear at all. *Icons and/or functions, order and operation are subject to change.*

In displays where changes can be made or to perform a function, use the **GREEN Button** to go [**BACK**], exit or escape, the **RED Buttons** to [< / -] **HIGHLIGHT PREVIOUS** or **DECREASE** / [+ / >] **HIGHLIGHT NEXT** or **INCREASE** to highlight the desired option, and the **BLACK Button** to [**SELECT**] it or activate.



T Start Tournament

To initiate, from the **TOURNAMENT MENU**, select the "STRT" *Icon*. The **START TOURNAMENT MENU** allows the operator to start a tournament. Select **QUICK START** or **CUSTOM** Tournament Start. For the first time Tournament Set-Up, it is recommended to select **CUSTOM**. Follow the on-screen prompts. After completion of all options in **QUICK START** or **CUSTOM**, the Tournament is started, the **START TOURNAMENT MENU** is exited and returns to the **TOURNAMENT MENU**.

QUICK START :

Increase or decrease the: • **DAYS, HOURS and MINUTES** • **PRIZE POOL \$ (DOLLAR) and ¢ (CENT) AMOUNT**
 • **INCREMENT THE PRIZE POOL PER PLAY INCREASES \$ and ¢ AMOUNT**

CUSTOM START :

- Confirm the current date and time (*if it was not set previous via the UTILITIES MENU it can be set-up in this display as well*). Enter the **MONTH, DAY, YEAR** and **TIME**
- Choose the Tournament **Start Date: MONTH, DAY, YEAR** and **TIME**
- Choose the Tournament **End Date: MONTH, DAY, YEAR** and **TIME**
- Choose the **CREDITS** per play desired (01-10). Set the maximum number of *Credits* that may be accumulated per game. **Note:** *The current pricing is displayed; to change pricing GO TO THE ADJUSTMENTS MENU.*

Increase or decrease the: • **PRIZE POOL \$ (DOLLAR) and ¢ (CENT) AMOUNT**

- **INCREMENT THE PRIZE POOL PER PLAY INCREASES \$ and ¢ AMOUNT**
- **MAXIMUM (CAP) PRIZE POOL \$ and ¢ AMOUNT.**

- Increase or decrease the number of **PRIZES** (01-05 **HIGH SCORE**; 02-05 **B'N'W**). Set the maximum # of *Prize Positions* to be awarded during a Tournament. **Selections are as follows** (% distribution cannot be changed):

HIGH SCORE:		BUMP N' WIN :	
Set to 01	1 Winner 100% (1) Prize Pool	Cannot set to 01.	Minimum of 2 winners required.
Set to 02	2 Winners 65% (1) 35% (2)	Set to 02	2 Winners 65% (1) 35% (2)
Set to 03	3 Winners 50% (1) 30% (2) 20% (3)	Set to 03	3 Winners 50% (1) 25% (2) 25% (3)
Set to 04	4 Winners 50% (1) 25% (2) 15% (3) 10% (4)	Set to 04	4 Winners 40% (1) 20% (2) 20% (3) 20% (4)
Set to 05	5 Winners 50% (1) 20% (2) 15% (3) 10% (4) 5% (5)	Set to 05	5 Winners 40% (1) 15% (2) 15% (3) 15% (4) 15% (5)

- Select the **AWARD TYPE** (**CASH, POINTS, PRIZE, TICKETS** or **NONE**). Select **CASH** for the displays to represent the Prize Pool amount (*based on Jackpot Base and Max.*) in **\$Dollars**. Select **POINTS** for the display to represent the Prize Pool amount in *Points*. Select **PRIZE**, if applicable. Select **TICKET** for the display to represent the Prize Pool amount in *Tickets*. Select **NONE NOT TO** represent anything.

Custom Start continued on the next page.



©2013 Metallica

Please visit www.sternpinball.com
For part numbers and mechanical drawings.

Stern Pinball machines are assembled in Melrose Park, Illinois, USA; each pinball machine has unique characteristics that make it a one of a kind American made product. Each machine will have variations in appearance resulting from differences in the machine's particular wood parts, individual silk screened art and mechanical assemblies. Stern Pinball has inspected each game element to insure it meets our quality standards.

Pinball Service Game Manual

Please call, eMail or visit us online for technical support, questions or comments regarding this pinball game.

Go to www.sternpinball.com and click Tech. Support & Parts Sales



Find Service Game Manual (with updates), Game Code, Appendixes, Coin Cards, Service Bulletins and much more!

• Toll-Free: 1-800-KICKERS (542-5377) or 1-708-345-7700 • eMail: parts.service@sternpinball.com •

Stern® Pinball, Inc.
All Rights Reserved.
Printed in the U.S.A.
April 2013

SPI Part Number
780-50E1-00

HOW TO UPDATE YOUR GAME CODE FOR S.A.M. SYSTEM MACHINES

USB Compatible Data Storage Device (Thumb, Flash or Jump Drives) required to copy game code into system.
S.A.M. System compatible, tested & SPI approved USB Data Storage Devices 128MB+ available through your local distributor. Ask for **SPI Part Number 970-0128-00**


* to get the Data Storage Device with the latest Game Code copied to it, add "game title" to above part number.

STYLE, COLOR, SIZE AND MANUFACTURER SUBJECT TO CHANGE.

Game Code is subject to change. Update this game with the latest code downloaded from our website, from another game or order through your local distributor (use SPI PN + name above).



Upon power-up the display will describe the version of code installed in your game. When directed to do so (via Service Bulletin or website announcement) you will need to update your code ... with the **BOOT FLASH EPROM*** installed, here's how:

- STEP 1** Open the Back Box and locate the **8-Position Dip Switch (SW1 on the CPU/Sound Board).**
- STEP 2** Switch Dip Switch #8 to 'ON'.
(***BOOT FLASH EPROM** must be installed.)
- STEP 3** Press the **White Reset Button (S1 RESET on the CPU/Sound Board)** or Power Cycle the game **OFF/ON** (ON/OFF Switch is located on the outside of the cabinet bottom, front right).
- STEP 4** Using the **4-Button Service Switch Set** (inside the Coin Door):
- 4A) Press [SELECT] to begin.
 - 4B) With the "UPDT" Icon highlighted, press [SELECT].
 - 4C) Insert the Data Storage Device [w/latest file(s)] into the USB Port.
 - 4D) If more than one file is present on the Data Storage Device, press [<] or [>] to locate your file. Press [SELECT] to update.
 - 4E) Follow on-screen prompts.

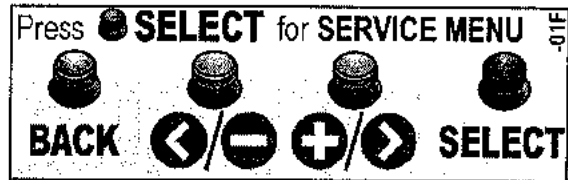

- Green Button
Press to Escape Back (or Exit).
- Red Buttons
Press to move < Left, Right >. Press to - Decrease or + Increase values or to change settings.
- Black Button
Press to Enter Select (or 'OK').

CPU/Sound Board (S.A.M. System)

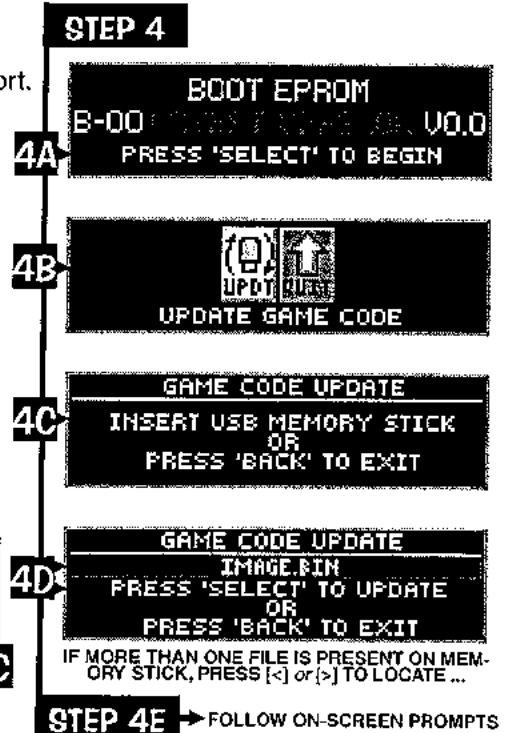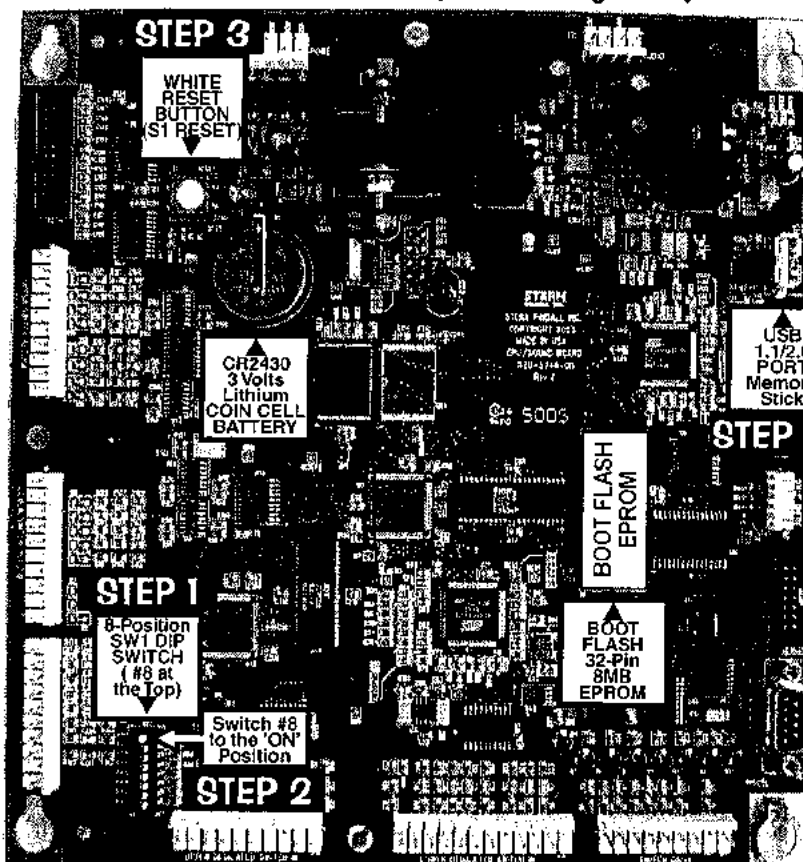


You can also retrieve your latest code from another game! From the **USB MENU** via the **UTILITIES MENU**, select the "BKUP" icon instead and download to your Data Storage Device.



! Quick Tip ~ Try backing up your current code prior to installing your new code, just in case your Data Storage Device file was corrupted by a computer glitch while you were copying /

Got confused? Comments? Questions? Call Technical Support at 800-542-5377 or 708-345-7700 (Option 1).

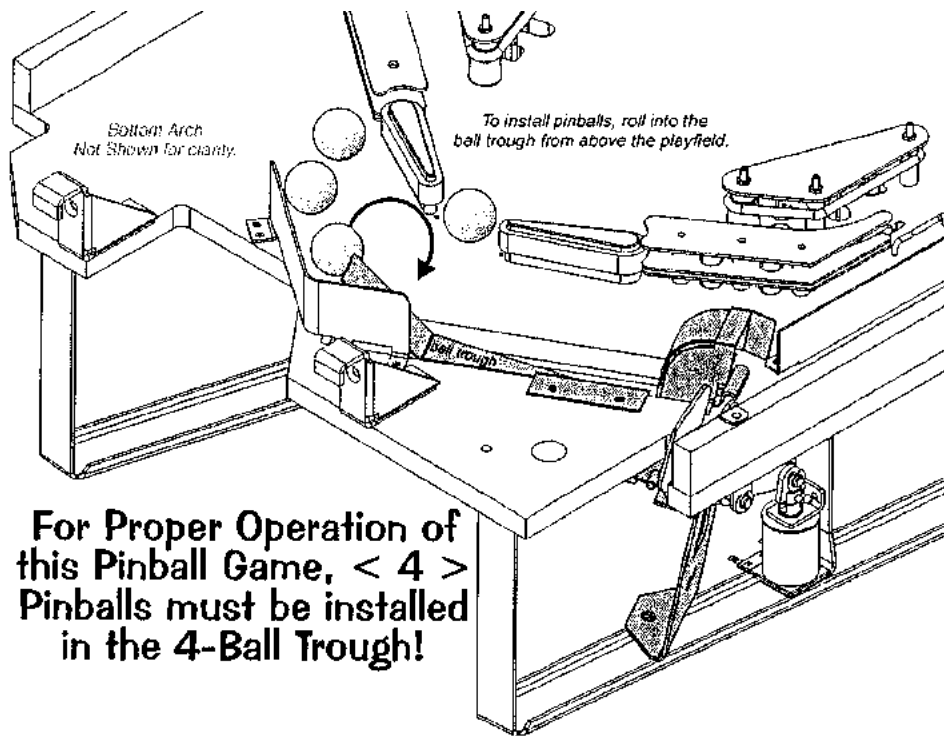



For Proper Operation of this Pinball Game, < 4 > Pinballs must be installed in the 4-Ball Trough!

Backbox Fuses*, Cabinet Fuses, Playfield Fuses and Cabinet Switches

**Note: The CPU/Sound PCB does not have fuses.*



QUICK REFERENCE FUSE CHART	
3/4A S.B. 200-5030-17	1/3A S.B. 200-5030-08
1/4A S.B. 200-5030-06	5A S.B. 200-5030-01
7A S.B. 200-5030-03	8A S.B. 200-5030-05
BACKBOX FUSES	
I/O POWER DRIVER BOARD	
with RED LED STATUS INDICATORS (if any RED LED is OFF, check the fuse)	
F1	5A S.B. 5.7VAC-G.I. Lamps (BROWN-WHITE-WHT-BRN)
F2	5A S.B. 5.7VAC-G.I. Lamps (YELLOW-WHITE-YEL-CIRCUIT)
F3	5A S.B. 5.7VAC-G.I. Lamps (GREEN-WHITE-GRN-CIRCUIT)
F4	5A S.B. 5.7VAC-G.I. Lamps (VIOLET-WHITE-VIO-CIRCUIT)
F5	7A S.B. 50VDC Coils / Flippers (48VAC feed to BRDG 1)
F6	3A S.B. 24VAC- Motor or Special Application
F7	4A S.B. 50VDC Magnet(s) or Special Application
F8	3A S.B. 50VDC Coils
F9	8A S.B. 18VDC Control Lamps (13VAC feed to BRDG 4)
F10	5A S.B. 20VDC Coils / Flashers (16VAC feed to BRDG 2)
F11	4A S.B. 5VDC Logic Power (8VAC feed to BRDG 5)
F12	5A S.B. 12VDC Audio (19VAC feed to BRDG 3)
F13	5A S.B. 12VDC Audio (19VAC feed to BRDG 3)
DISPLAY POWER SUPPLY BOARD	
F1	1/4A S.B. 90VDC High Voltage Dot Display Board
CABINET FUSES	
POWER (SERVICE OUTLET) BOX	
(Access through Coin Door inside cabinet, front bottom)	
8A S.B.	110-120V Main Line US / Canada / Japan
5A S.B.	220-240V Main Line International
PLAYFIELD FUSES	
FLIPPER OR SPECIAL APPLICATION	
(Coil Fuses are located under the playfield near assembly)	
3A S.B.	50VDC R. Flipper (BLU-YEL-RED-YEL)
3A S.B.	50VDC L. Flipper (GRY-YEL-RED-YEL)
3A S.B.	50VDC Additional Flipper Coil, if used
3A S.B.	50VDC Spcl. Application Coil, if used
For location & more details on fuses, see Sec. 5, Chp. 2.	
ALL FUSES ARE 250V S.B. (SLO-BLO) SEE FUSE OR TABLES FOR AMP RATING CAUTION: FOR CONTINUED PROTECTION AGAINST RISK OF FIRE, REPLACE ONLY WITH SAME TYPE FUSE WITH IDENTICAL ELECTRICAL RATING!	

Stern Pinball®, Inc. ©2008 820-6384-00 Rev. C

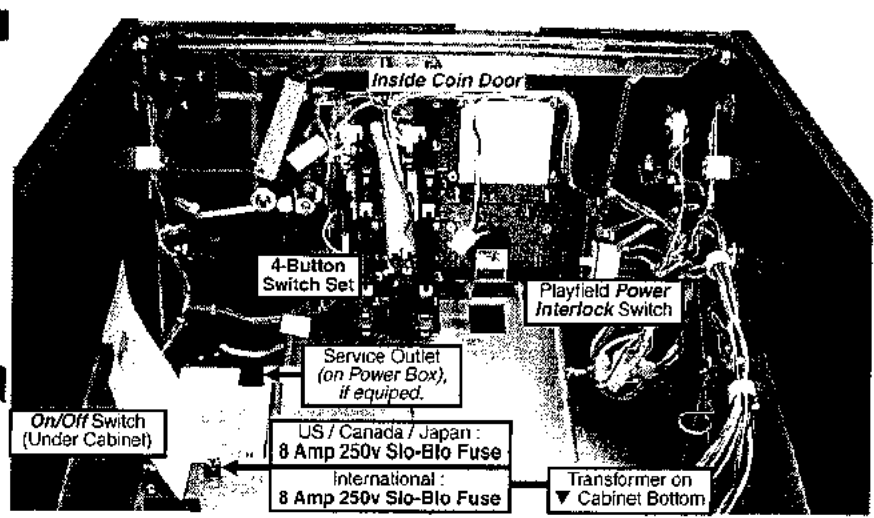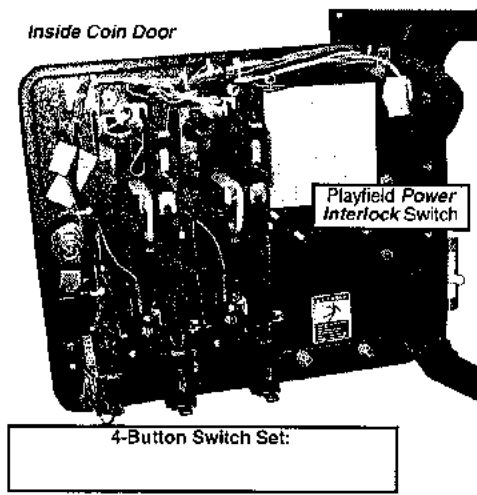


Service Switch X4 Set Access & Use

The 4-Button Service Switch Set provides access for *three (3) functions* available for your use: 1: SERVICE CREDIT, 2: VOLUME [-] / [+] and 3: SERVICE MENU.

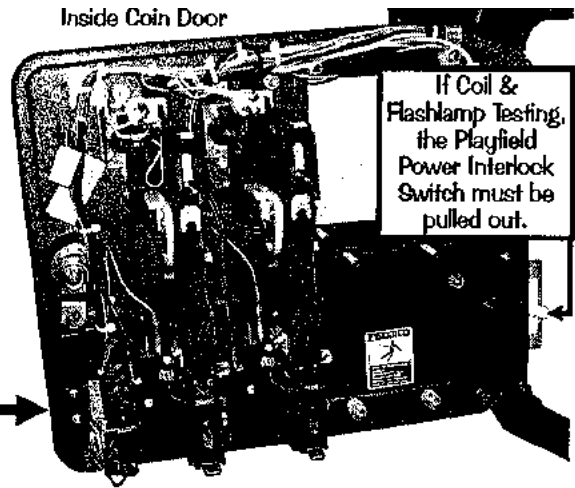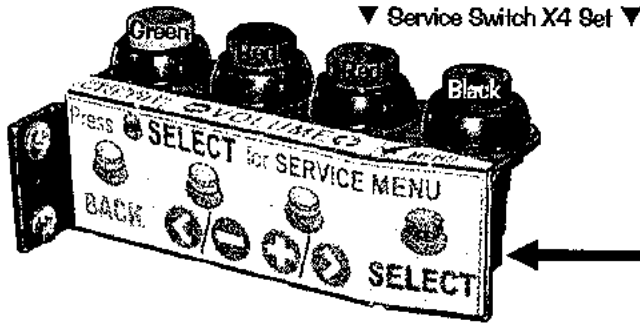

To access any of these *three (3) functions* you must first open the Coin Door (see pictorial above) with the Game in the *Attract Mode* (not already in any Function or Menu stated below) and then follow below.


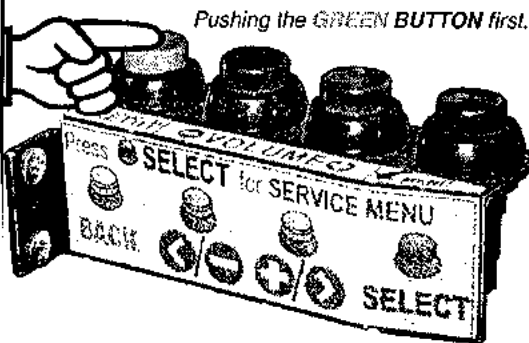


◀ Function 1: SERVICE CREDITS MENU

Pushing the Green [SERVICE CREDIT] Button first, adds a *Service Credit* per push (will not affect your audits as "paid" credits). This is useful for the technician to test games in regular play without affecting the game audits. Each depression adds 1 credit; up to 50 credits can be applied. Standard Adjustment 23, Credit Limit, determines this, however, it can be changed from 04-50; for details see the Adjustments Section.

Note: Once your credits are added, this menu will automatically exit a few seconds after the last button depression or when the Green [BACK] or Black [SELECT] Button is pushed. This function is disabled if Standard Adjustment


38, Free Play, is set to YES. The Service Credits are limited to the Credit Limit in addition to any paid credits present in the game (e.g. if the Credit Limit is 30, with 8 paid credits present, only 22 Credits can be applied.).

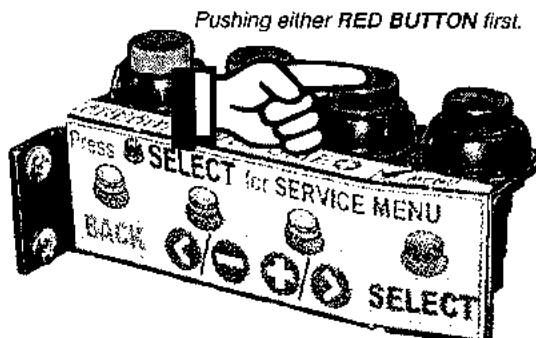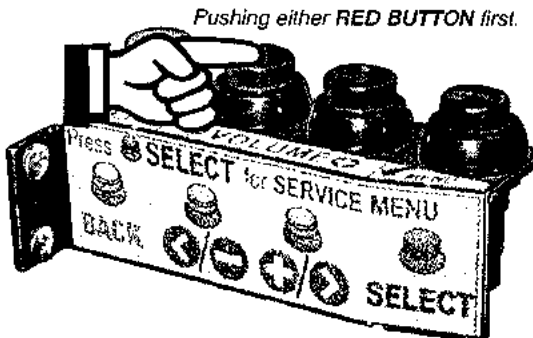

▲ Function 2: VOLUME MENU ▲

Pushing either of the Red [VOLUME] Buttons first, enters the *VOLUME MENU*. While in this Mode, to DECREASE the volume, hold down or depress the 1st Red [< / -] Button until desired the volume is achieved; to INCREASE the volume, hold down or depress the 2nd Red [+ / >] Button until the desired volume is achieved.

Note: The volume can be set between 0-63; Once your adjustments are made, this menu will automatically exit a few seconds after the last button depression or when the Green [BACK] or Black [SELECT] Button is pushed.

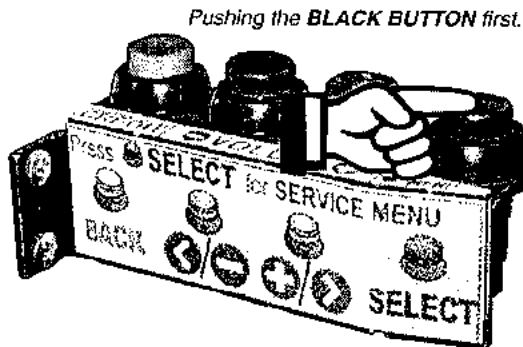

◀ Function 3: SERVICE MENU

Pushing the Black [SELECT] Button first, enters the *SERVICE MENU*. Once in, navigate through all menus by depressing the Service Menu Buttons. Use the Red [< / -] or [+ / >] Buttons to move LEFT / RIGHT, NEXT/PREVIOUS (audits/adjustments) or to INCREASE / DECREASE an adjustment (setting). Use the Black [SELECT] Button to select a highlighted icon, move to the next line of text or to answer "OK" where applicable. Use the Green [BACK] Button to exit or escape back.

DIAGNOSTIC AIDS

50V / 20V DISABLED
CLOSE COIN DOOR
OR PULL INTERLOCK SWITCH
TO RESTORE POWER

This *audible / visual alert display* is shown when the 50V / 20V Power is disabled (by opening the Coin Door). **PULL OUT THE INTERLOCK SWITCH ONLY WHILE IN THE SERVICE MENU** FOR COIL, SWITCH OR PLAY TESTING WHEN THE COIN DOOR IS REQUIRED TO STAY OPEN FOR SERVICE BUTTON USE! Pulling out the Power Interlock Switch or pressing the

'escape' Green [BACK] Button will remove the alert display. Initial display presentation is accompanied by 3 audible tones (the bright display warning will go dim after approximately 30 seconds).

OPERATOR ALERT!
AUTO PLUNGER
DEVICE MALFUNCTION

This *alert display* is shown momentarily during Game Mode or Power-Up to alert the operator of a device malfunction (device or mechanism doesn't energize or is energized repeatedly). **OPERATOR ALERT!** works by monitoring any switch activated device that has the potential to trap a ball when disabled (e.g. in the Shooter Lane, Scoop or Eject Holes, etc.). This alert can also appear if a switch associated with a device (e.g. Ball Trough, Auto Plunger, etc.) is stuck closed (caused by a switch jam or stuck ball); the game will activate the device a predetermined number of times and if the problem is still detected, this device or switch will be noted in **Switch Alerts and/or Technician Alerts**.

GAME NAME
 V0.00 SYS. 0.00 HDW. 0
SERVICE MENU *
USE -/+ TO VIEW TECH. ALERTS

Upon entering the **SERVICE MENU**, if an asterisk "*" is displayed after the words "SERVICE MENU," the game has detected possible faulty devices, switches and/or missing pinballs. Press the either of the **Red Buttons** (short-cut to the **TECHNICIAN ALERTS MENU**) or continue into the **SERVICE MENU** (press the **Black Button** again), select the "DIAG" icon and "TECH" icon for the Technician Alerts information.

CPU DIP SWITCH SETTINGS

The 8-Pos. Dip Switch [SW1] is on the CPU/Sound Board (between Conn. J3 & J13, lower left corner)

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
USA	ON								
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Germany	ON	▲	▲	▲	▲				
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Russia	ON	▲	▲	▲	▲				
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Australia	ON	▲	▲	▲	▲				
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Greece	ON	▲	▲	▲	▲				
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
So. Africa	ON	▲	▲	▲	▲				
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Austria	ON	▲							
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Italy	ON			▲					
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Spain	ON	▲	▲	▲	▲				
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Belgium	ON	▲							
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Japan	ON	▲	▲	▲	▲				
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Sweden	ON	▲	▲	▲	▲				
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Canada 1	ON	▲	▲	▲	▲				
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Lithuania	ON	▲	▲	▲	▲	▲			
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Switzerland	ON	▲	▲	▲	▲				
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Canada 2	ON	▲	▲	▲	▲				
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Middle East	ON	▲	▲	▲	▲	▲			
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Taiwan	ON	▲	▲	▲	▲				
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Croatia	ON	▲	▲	▲	▲				
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Netherlands	ON	▲	▲	▲	▲				
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
UK	ON	▲	▲	▲	▲				
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Denmark	ON	▲	▲	▲	▲				
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
New Zealand	ON	▲	▲	▲	▲	▲			
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU/SND PCB SETTING:	Pos.	1	2	3	4	5	6	7	8
UPDATE CODE	ON								▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Finland	ON	▲	▲	▲	▲				
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Norway	ON	▲	▲	▲	▲				
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
France	ON	▲	▲	▲	▲				
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Portugal	ON	▲	▲	▲	▲				
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

Note: Slide Dip Switch 8 to Position ON (with Dip Switches 1-7 in the OFF Position) only to reboot the game with the latest version BOOT EPROM installed at U9 on the CPU/Sound Board (S.A.M. System only). Currently, this is also the procedure to update your game with the latest software code update file. For the latest version, visit our website. If you have questions about updating your game code, call Technical Support for assistance.

Pinball Service Menu Icon Tree


These **non-selectable icons** appear in the selected Menu only when there are **MORE icons** to the LEFT or to the RIGHT available for selection.

MAIN MENU


- GO TO DIAGNOSTICS MENU [MAGNET]
- GO TO ADJUSTMENTS MENU [ADJ]
- GO TO TOUR NAME MENU [TOUR]
- EXIT SERVICE MENU [QUIT]

50V / 200V DISABLED
CLOSE COIN DOOR OR PULL INTERLOCK SWITCH TO RESTORE POWER

*WHEN ENTERING THE NOTED MENUS, YOU MUST PULL OUT THE POWER INTERLOCK SWITCH FOR OPERATION WITH THE COIN DOOR OPEN.

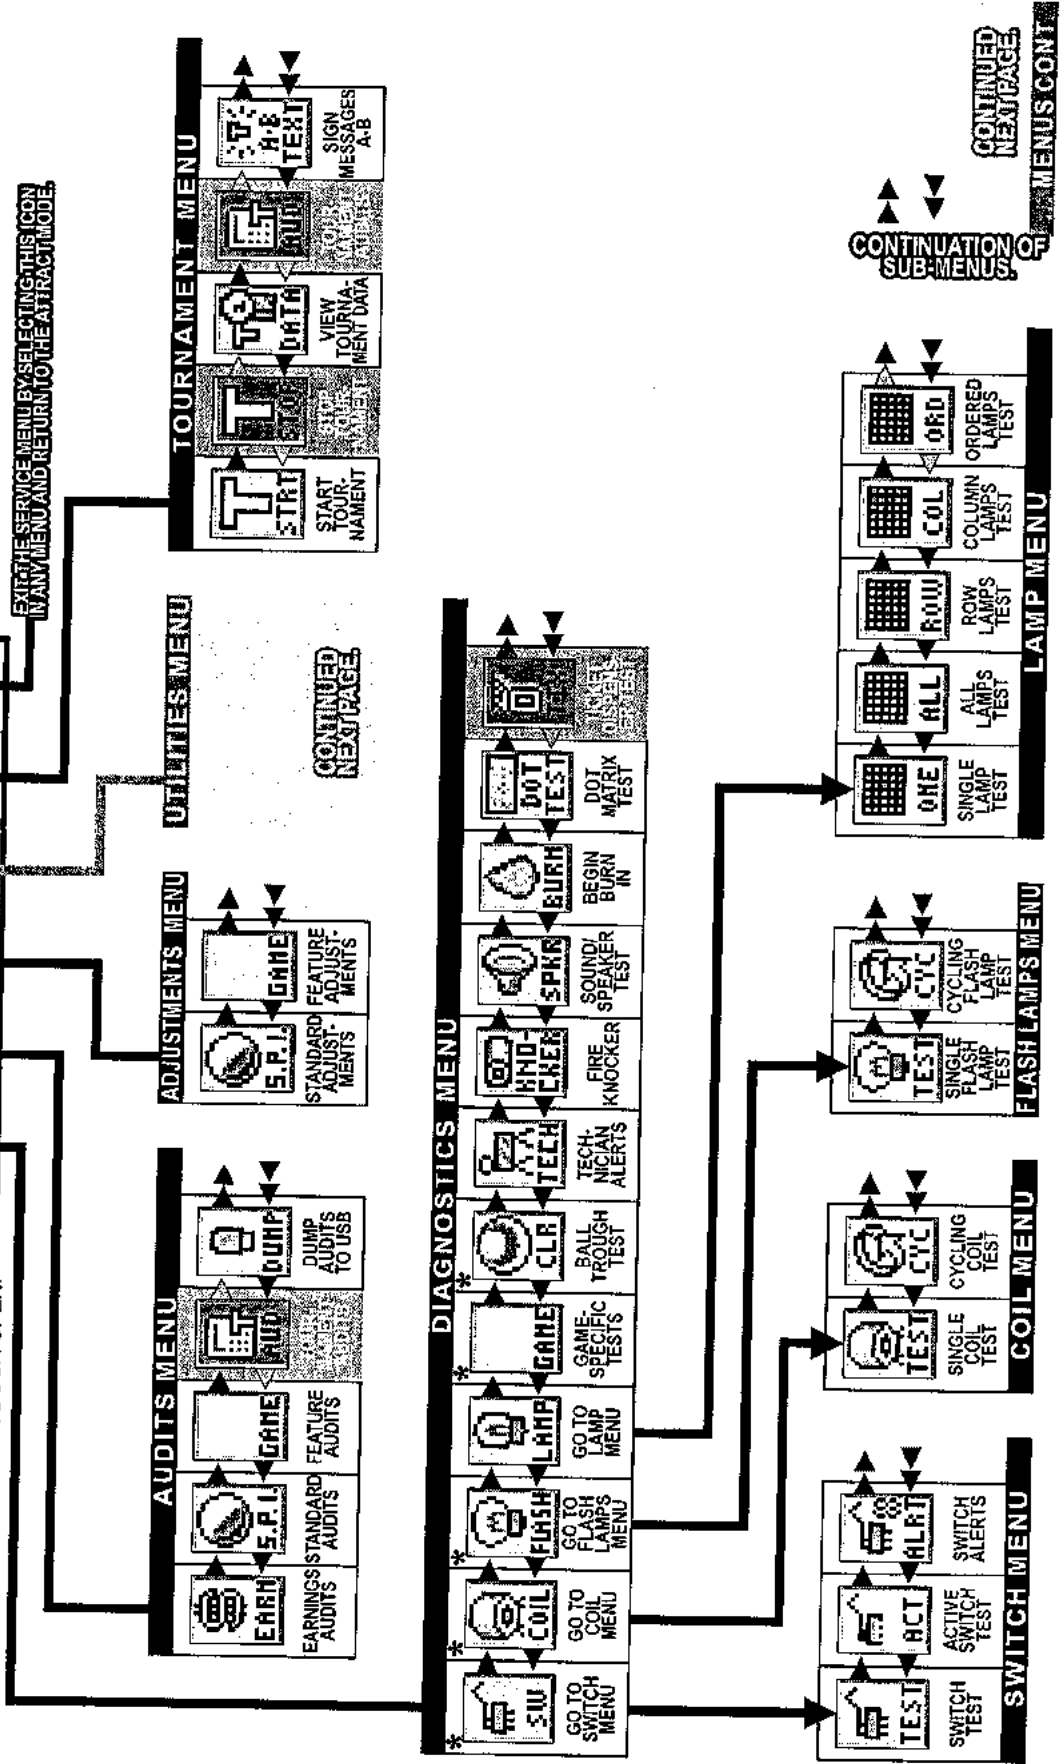

Pinball Service Menu Icon Tree Continued

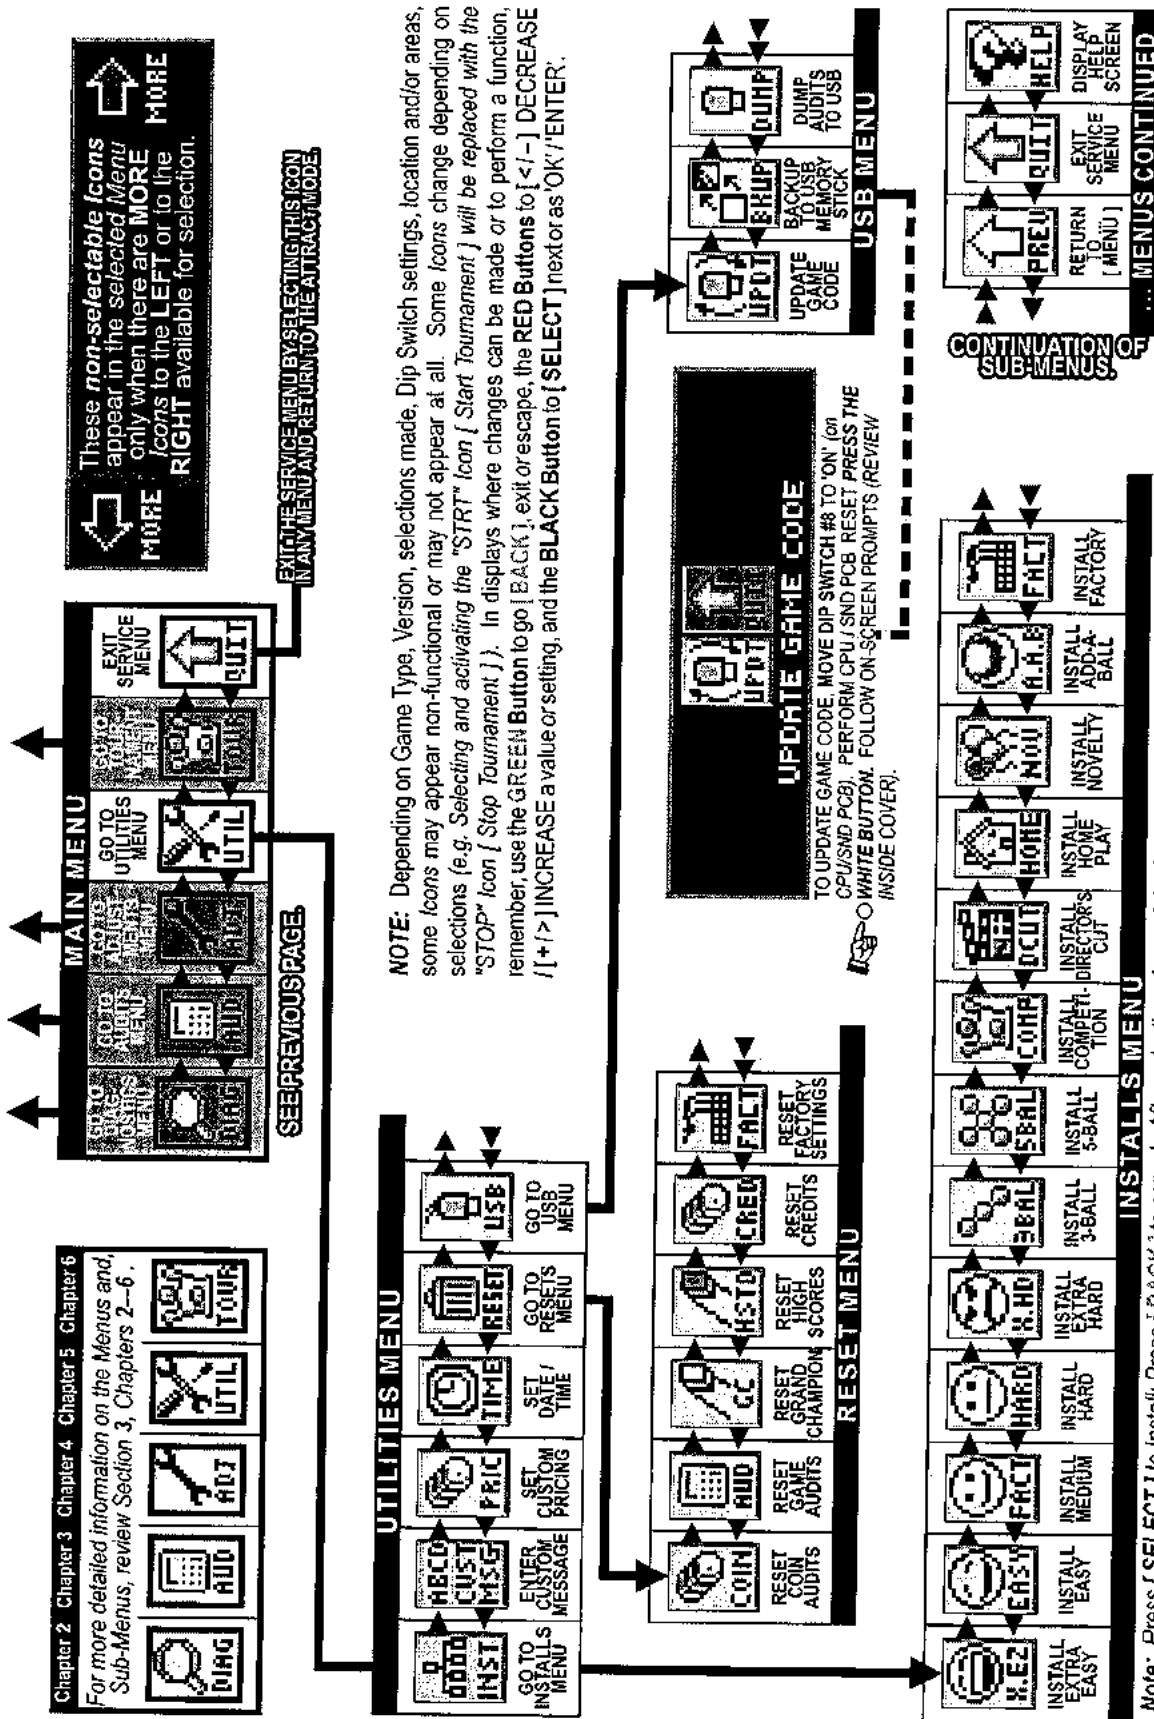

Service Menu Introduction

Important: The **Switch Bracket** holds the **Playfield Power Interlock**. It is located just inside the **Coin Door** frame (see pictorial of the **Coin Door** on the previous page). The **Button Switch** for the **Playfield Power Interlock Switch** must be pulled out for electro-mechanical device testing or diagnostic purposes (this is required). If this button is pushed in, the **Playfield Power** is disabled while the **Coin Door** is **OPEN**.

To get into the **SERVICE MENU MODE** review "Function 3: SERVICE MENU" on the next page. After Power-Up, push down the **Black [SELECT] Button** to begin. Looking at the display you will momentarily see "SERVICE MENU" followed by the **MAIN MENU**:



Use the **Red [</-] / [+/>] Buttons** to move the selected **Icon** left or right, and the **Black [SELECT] Button** to activate the selected **Icon**.

The **MAIN MENU** now appears with the "DIAG" **Icon** (**GO TO DIAGNOSTICS MENU**) highlighted:




As the operator views the Menu Screen(s), the **MORE MORE** symbols indicates that there are more **Icons** to select in each direction. The **Icon** selected will blink. Pushing the **Black [SELECT] Button** will select the **Icon** and the Menu Screen will change to the menu selected. Select the **Green [BACK] Button** to move backwards through the menu levels. Press the **Green [BACK] Button** repeatedly or select the "QUIT" **Icon** to completely exit the **SERVICE MENU Mode**.

View the **SERVICE MENU Icon Tree** on the next pages for a complete overview of all menus used in this system. The "HELP" **Icon** provides an explanation of **ICON** usage or any other information in the Menu where the "HELP" **Icon** was selected (when available).

DIAG: GO TO DIAGNOSTICS MENU
AUD: GO TO AUDITS MENU
ADJ: GO TO ADJUSTMENTS MENU
UTIL: GO TO UTILITIES MENU
 (INSTALLS, CUSTOM MSG., CUSTOM PRICING,
 SET TIME, RESET & USB)
TOUR: GO TO TOURNAMENT MENU (START TOURNAMENT,
 VIEW TOURNAMENT DATA, SIGN MESSAGES)

>> TO UPDATE THE GAME CODE, REVIEW THE STEPS ON THE INSIDE FRONT COVER OF THIS MANUAL.


Use both the manual and the display to help customize, troubleshoot and/or diagnose faults, if any.

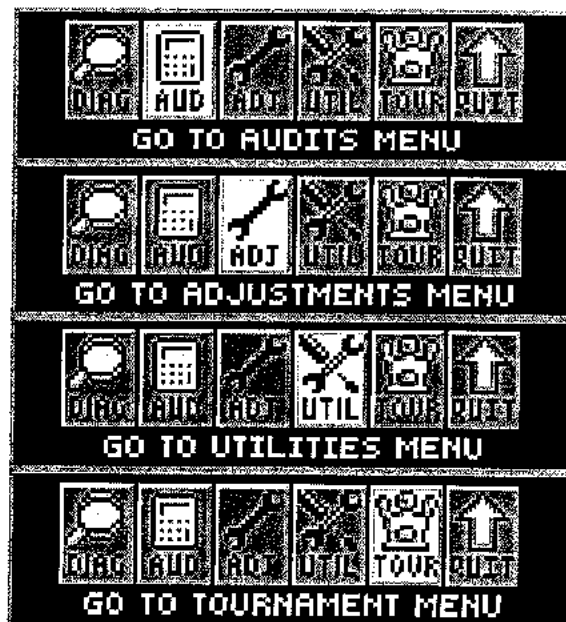



Exit Service Menu

In the **MAIN MENU** and in all **SUB-MENUS** (where the "QUIT" Icon is present), if the "QUIT" Icon is selected and activated, or the **Green [BACK] Button** is selected repeatedly (depending on which sub-menu you're in...), the **SERVICE MENU** Session will be exited and returned to the **Attract Mode**.

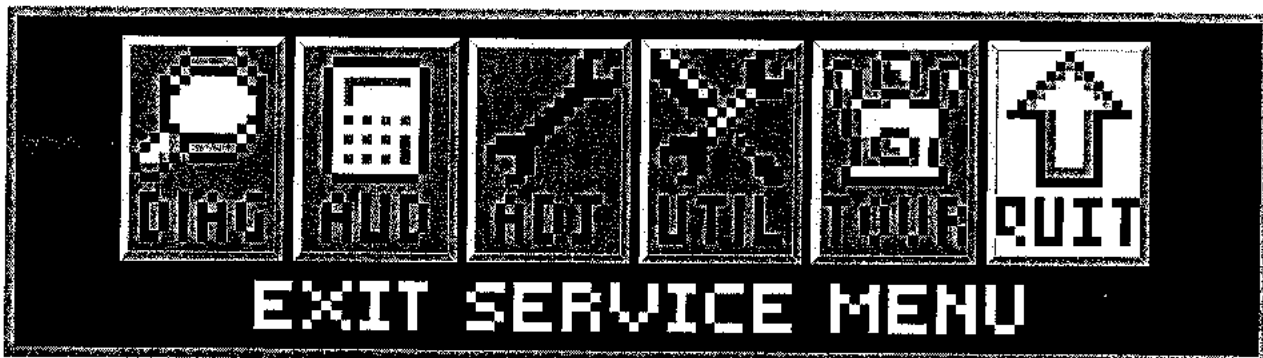

Turning the game on/off will start the *Power-Up Routine*. Upon **Power-Up**, the **DISPLAY** will indicate the **COUNTRY**, **FILE VERSION** and **LANGUAGE(S)** installed. **LANGUAGE/COUNTRY**: change via Dip Switch.



The below **Problem / Solution Table** was designed to answer some common problems frequently asked.

Problem / Solution Table

PROBLEM	SOLUTION
Will not enter the SERVICE MENU after depressing the Black [SELECT] Button .	<ul style="list-style-type: none"> • Check the Service Switches [GREEN, RED (x2) & BLACK Buttons] for loose connections or bad ground. • Check the associated wiring harness to/from the CPU/Sound Board, Connector J13. • Check CPU/Sound Board for possible failure.
All Service Buttons [* * * * Buttons] appear nonfunctional.	<ul style="list-style-type: none"> • Check the Service Switches wiring harness for poor or no connection and/or broken wires.
The Green Button in the Attract Mode will not enter the SERVICE CREDITS MENU to add Service Credits.	<ul style="list-style-type: none"> • Check to make sure the Game is not in "Free Play." <i>If the game is set to Free Play, adding Service Credits is not required.</i> • Check the Service Switches wiring harness for poor or no connection and/or broken wires.
The Display "blanks out."	<ul style="list-style-type: none"> • Check the Dot Matrix Display for loose wiring harness for poor or no connection and/or broken wires. • Check F1 (3/4A Fuse) on the Display Power Supply Board. <i>Refer to the Yellow Pages (SCHEMATICS & TROUBLESHOOTING).</i>
Icons "scroll" along continuously in the MAIN MENU .	<ul style="list-style-type: none"> • Check for a stuck switch on either of the Red Buttons.
The Start and Flipper Buttons do not select or activate Icons in the SWITCH TEST MENU .	<ul style="list-style-type: none"> • This is normal. These switches are deactivated, as they are a part of the Switch Test. <i>Refer to the Diagnostics Section (GO TO DIAGNOSTICS MENU, Switch Test).</i>
Can't move selection of Icon with the Left and/or Right Flipper Buttons .	<ul style="list-style-type: none"> • Check the Flipper Buttons for loose connections or bad Ground and refer to Section 5, Chapter 2, Playfield Wiring, #-Flipper Circuit Wiring Diagram. • This is normal <i>only in Diagnostic's Switch & Active Switch Tests (see previous Problem).</i>
Some Icons appear non-functional in the MENU or missing.	<ul style="list-style-type: none"> • Some functionality of the Service Menu may not have been completed during development. If exists, it should only be a non-critical function, such as the "HELP" Icon, which will explain the usage of icons. When completed, a software update will correct the problem. Software updates are announced via Service Bulletins (if critical) and on our website http://www.sternpinball.com/GAME-code.shtml; view the Game Code Library Message Board Marquee or click Previous Messages for past announcements.
In COIL TEST MENU , the coils and flashlamps <i>do not</i> fire after pressing the Black [SELECT] Button .	<ul style="list-style-type: none"> • Ensure the POWER INTERLOCK SWITCH <i>is pulled out (see the start of this Chapter).</i>
In the SERVICE MENU , the volume cannot be adjusted with either of the Red Buttons .	<ul style="list-style-type: none"> • The Volume adjustment can only be made when in the Attract Mode (see the start of this Chapter).
In the SERVICE MENU , the display seems to lock up, or the Help Display appears to be non-functional.	<ul style="list-style-type: none"> • If you cannot clear the situation by exiting back one Menu, exit completely out of the SERVICE MENU, and re-enter. If the problem persists, call Technical Support for additional help.

IF YOU NOTE ANY OTHER PROBLEMS or HAVE ANY SYMPTOMS NOT DESCRIBED ABOVE, PLEASE CALL TECHNICAL SUPPORT 800-542-5377 (708-345-7700 OPTION #1), SO WE MAY ASSIST YOU.



To initiate, from the **MAIN MENU**, select the "DIAG" *Icon*. The **DIAGNOSTICS MENU** provides tests for switches, coils, flash lamps, lamps, sounds and dots in the Dot Matrix Display. Each feature may be tested manually or automatically after entering the **SERVICE MENU** (see *Service Menu Introduction Section*).

The [**CYCLING COIL TEST**] / [**FLASH LAMP TEST**] may be used for a quick verification of automatic test functions. The [**SWITCH TEST**] / [**SINGLE COIL TEST**] / [**SINGLE LAMP TEST**] / [**ALL LAMPS TEST**] / [**ROW LAMPS TEST**] / [**COLUMN LAMPS TEST**] / [**FLASH LAMP TEST**] may be used for troubleshooting.

All **DIAGNOSTICS MENU** *Icons* and there usages are explained throughout this chapter in the same order as seen in the Dot Matrix Display. **NOTE:** Depending on Game Type, Version, selections made, Dip Switch settings, location and/or areas, some *Icons* may appear non-functional or may not appear at all. Some *Icons* change depending on selections (e.g. *Selecting and activating the "STRT" Icon [Start Tournament] will be replaced with the "STOP" Icon [Stop Tournament]*). *Icons and/or functions, order and operation are subject to change.*

In displays where changes can be made or to perform a function, use the **GREEN Button** to go [**BACK**], exit or escape, the **RED Buttons** to [**</ -**] MOVE BACK / LEFT / DECREASE / [**+ / >**] MOVE FORWARD / RIGHT / INCREASE a value or setting, and the **BLACK Button** to [**SELECT**] next or as "OK / ENTER / ENERGIZE."

Important: Upon Power-Up (Game CPU Reset) or opening the *Coin Door* watch the *Display* for any Alerts.*



This *audible / visual alert display* is shown when the 50V / 20V Power is disabled (by opening the *Coin Door*). **PULL OUT THE INTERLOCK SWITCH ONLY WHILE IN THE SERVICE MENU FOR COIL OR SWITCH TESTING & BURN-IN WHEN THE COIN DOOR IS REQUIRED TO STAY OPEN FOR SERVICE BUTTON USE!** Pulling out the Power Interlock Switch or

pressing the 'escape' Green [**BACK**] Button will remove the alert display. Initial display presentation is accompanied by 3 audible tones (the bright display warning will go dim after approximately 30 seconds).



This *alert display* is shown momentarily during **Game Mode** or **Power-Up** to alert the operator of a device malfunction (device or mechanism doesn't energize or is energized repeatedly).

OPERATOR ALERT! works by monitoring any switch activated device that has the potential to trap a ball when disabled (e.g. in the *Shooter Lane, Scoop or Eject Holes, etc.*). This alert can

also appear if a switch associated with a device (e.g. *Ball Trough, Auto Plunger, etc.*) is stuck closed (caused by a switch jam or stuck ball); the game will activate the device a predetermined number of times and if the problem is still detected, this device or switch will be noted in **Switch Alerts** (next page) and/or **Technician Alerts**.



Upon entering the **SERVICE MENU**, if an asterisk "*" is displayed after the words "SERVICE MENU," the game has detected possible faulty devices, switches and/or missing pinballs. Press the either of the **Red Buttons** (short-cut to the **TECHNICIAN ALERTS MENU**) or continue into the **SERVICE MENU** (press the **Black Button** again), select the "DIAG" *Icon* and "TECH" *Icon* for the **Technician Alerts** information.

CAUTION! Remove all pinballs from the Ball Trough prior to lifting the playfield to it's full upright position for servicing. **PULL OUT** the **Power Interlock Switch** for operation. To eject pinballs, select the "DIAG" *Icon* from the **MAIN MENU** to enter the **DIAGNOSTICS MENU**. Select the "CLR" *Icon* to enter the **BALL TROUGH TEST MENU**. Press the **Black [SELECT] Button**. To return to the **DIAGNOSTICS MENU**, press the **Green [BACK] Button**. This feature also useful to retrieve a pinball for game testing in **Switch** or **Coil Tests**.



Go To Switch Menu

To initiate, from the **DIAGNOSTICS MENU**, select the "SW" *Icon*. Switches are configured in an 4 X 16 Matrix of Rows [Switch Drives] and Columns [Sw. Returns] with up to 64 possible switches. Dedicated Switches are configured in a 2 X 16 Matrix of Rows [Dedicated Sw. Drives / Ground] and Column [Ded. Switch Returns] with up to 32 possible dedicated switches (*includes the 8 dip switch positions*). The **SWITCH TEST MENU** consists of three (3) parts: **Switch & Active Switch Tests** and **Switch Alerts** to test *all* switches.

Reminder: The **Flipper & Start Buttons** (part of Switch Tests) are temporarily disabled as **Service Menu Navigation Buttons** during these test(s) so they can be tested and shown on-screen. Pressing the **Green [BACK] Button** (Dedicated Switch D-21), **Light Green-Black / Black (GND)**, will exit **Switch Test** or **Active Switch Test**.



Switch Test

To initiate, from the **SWITCH MENU**, select the "TEST" *Icon*. Ensure the **Power Interlock Switch** is pulled out if testing with the Coin Door open and the activation of coils is required. Upon entering **Switch Test**, you will notice that some switches are already indicated as closed. In the examples, the 4-Ball Trough Switches #18, #19, #20 & #21 are shown closed (*pinballs at rest in the ball trough*), along with the Flipper E.O.S. Dedicated Switches D-10 & D-12 (End-of-Stroke Switches are 'normally closed'). If the game has more flippers with E.O.S. Dedicated Switches, CPU Dip Switch Setting *other than 1-8 OFF* or switches stuck closed, more dots will be indicated (*enter Active Switch Test to reveal the names*).

In **Switch Test**, close each switch and observe the display (*switch closure is accompanied by a short audible tone*). In the example, the **Black [SELECT] Button** Dedicated Switch D-24 is pressed. The Dot Matrix Display will light up (*highlight*) the corresponding dot in the on-screen matrix, display the *switch name, switch number and the Switch Drive / Return wire colors*. When not closing a switch, the display indicates **NONE** and the last switch number closure. For the Switch Matrix Grid and Dedicated Switch Grid, see **Find-It-In-Front: Dr. Pinball, DR. 4** or escape out of this test and enter **Active Switch Test** (*described below*) to view the names of the switches closed. **Note:** Pressing the **Green [BACK] Button** (Ded. Switch D-21), **Lt. Green-Black / Black (GND)**, will exit the **Switch Test**.

CAUTION! COIL MECHANISMS WHEN ACTIVATED HAVE FAST MOVING PARTS! While performing **Switch Test** with the Coin Door closed or open (*with the Power Interlock Switch is pulled out*), **DO NOT USE YOUR FINGER** to test switches which are associated with a coil mechanism such as a Vertical Up-Kicker (*hole with a switch*), Slingshots, Bumpers, etc..



Active Switch Test

To initiate, from the **SWITCH MENU**, select the "ACT" *Icon*. In **Active Switch Test**, if any switches are stuck closed (*or normally closed from the presence of pinball(s) as in the Ball Trough*), the display will flash the corresponding dot(s) in the on-screen matrix, display the *name and the Switch Drive / Return wire colors*. If more than one switch is closed, the switch information will change with each switch. This cycle continues until all switches are cleared or until **Active Switch Test** is exited. In the example, the **Black [SELECT] Button** Dedicated Switch D-24 is pressed and held down. The display will cycle and flash each dot, naming each switch which is closed. To determine the *switch number*, compare the highlighted dot to the same position in the Switch Matrix Grid at the beginning of this manual.



Switch Alerts

To initiate, from the **SWITCH MENU**, select the "ALRT" *Icon*. In **Switch Alerts Menu**, possible inoperable switches are marked with an "X" (**OUT OF SERVICE**). Mark switches **IN** or **OUT OF SERVICE** by pressing the **Black Button** while the intended switch is highlighted and change with either of the **Red Buttons**. Switches which are determined as "OUT OF SERVICE" by the game or manually, will be automatically marked as "IN SERVICE" as soon as the game determines a valid switch closure (*after adjusting, fixing or replacing the switch, then testing/actuating the switch*). **Note:** A **Factory Reset** will also put the switch back "IN SERVICE" in which the game will need to redetermine if the switch should be marked **OUT OF SERVICE**.

Upon entering Switch Test, you will notice that some switches are already indicated as 'closed' ▼




D-24 position is highlighted and accompanied by a short audible tone when pressed. ▼




After pressing the switch (to make it close), the display will indicate the last switch number. ▼



Typical Switch Wiring & Schematic

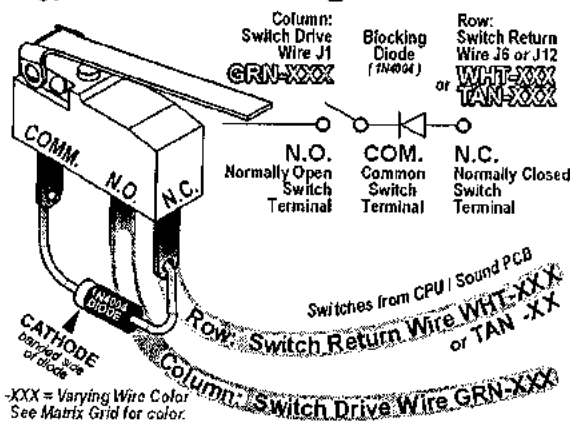




Dedicated Switch Schematic

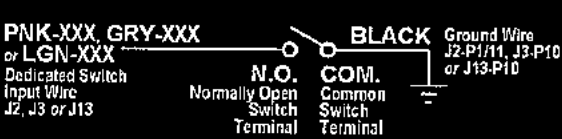

D-24 is held down. The display will cycle and flash each dot, naming each switch ... closed. ▼



Playfield - Rubber Parts Black ■, White □ & Blue ■ (Rings Actual Size) †

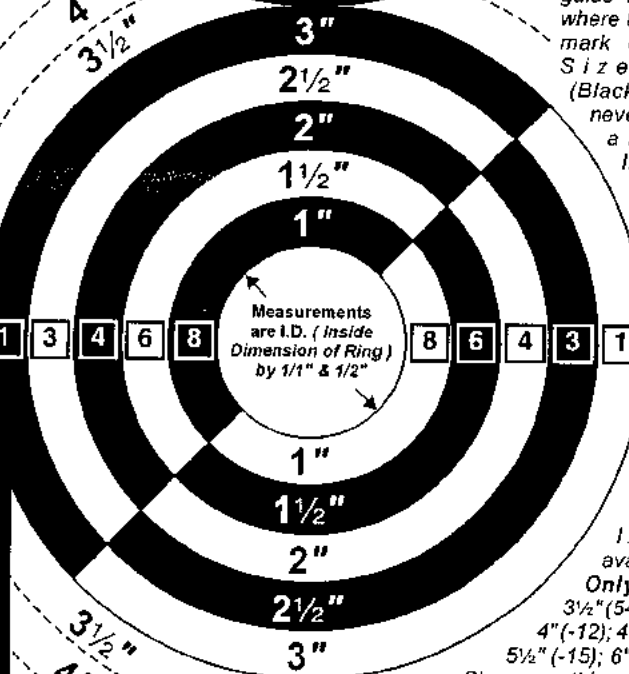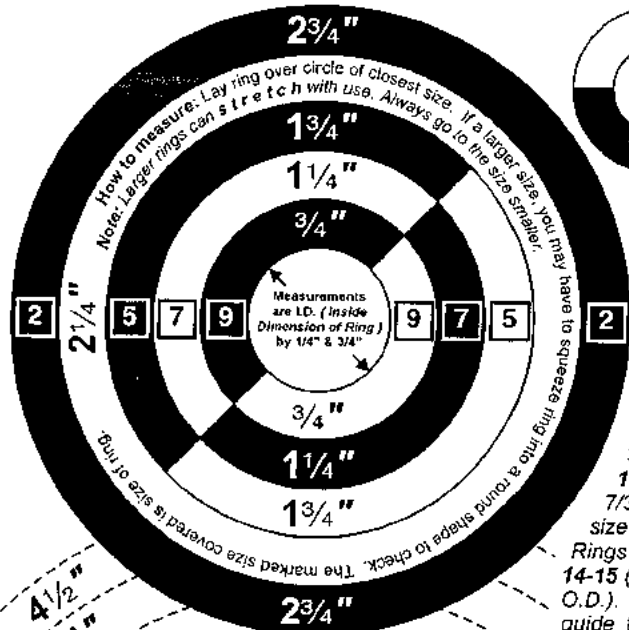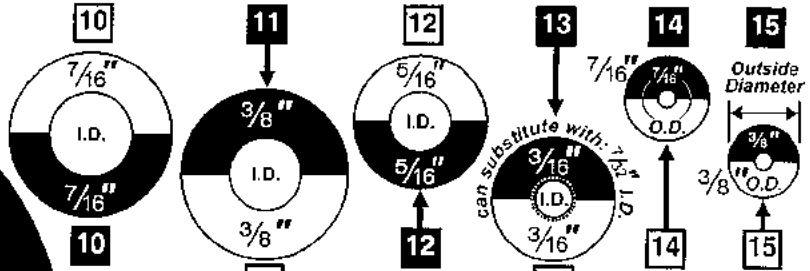

Items 1-13 are measured by the Inside Diameter (I.D.). Items 1-9 and 11 are approximately 1/4" thick. Items 10, 12-15 are approximately 3/16" thick. Item 13 can also be a 7/32" I.D. Ring. The size is imprinted on all Rings except for Items 14-15 (7/16" O.D. & 3/8" O.D.). Use this page as a guide to measure rings where the size imprint or mark does not exist. Size 2 1/4" I.D. (Black or White) was never used. Choose a Ring Size +/- 1/4" I.D. if required.

Note: Sizes larger than 3" I.D. currently available in Black Only (Not Used): 3 1/2" (545-5348-11); 4" (-12); 4 1/2" (-13); 5" (-14); 5 1/2" (-15); 6" (-16). Sizes Not Shown on this page, listed in the Parts Table below or are noted with N/U (Not Used) are currently not available.

Nr.	RUBBER RINGS	QTY.	SPI PART Nr.
1	3" I.D. Rubber Ring BLACK		545-5348-10
	3" I.D. Rubber Ring WHITE		545-5348-60
2	2 3/4" I.D. Rubber Ring BLK		545-5348-20
		N/U	
3	2 1/2" I.D. Rubber Ring BLK		545-5348-09
	2 1/2" I.D. Rubber Ring WHT		545-5348-59
4	2" I.D. Rubber Ring BLACK	2	545-5348-08
	2" I.D. Rubber Ring WHITE		545-5348-58
5	1 3/4" I.D. Rubber Ring BLK		545-5348-21
		N/U	
6	1 1/2" I.D. Rubber Ring BLK		545-5348-07
	1 1/2" I.D. Rubber Ring WHT		545-5348-57
7	1 1/4" I.D. Rubber Ring BLK		545-5348-06
	1 1/4" I.D. Rubber Ring WHT		545-5348-56
8	1" I.D. Rubber Ring BLACK	1	545-5348-05
	1" I.D. Rubber Ring WHITE		545-5348-55
9	3/4" I.D. Rubber Ring BLACK	1	545-5348-04
	3/4" I.D. Rubber Ring WHITE		545-5348-54
10	7/16" I.D. Rubber Ring BLK	1	545-5348-18
	7/16" I.D. Rubber Ring WHT		545-5348-68
11	3/8" I.D. Rubber Ring BLACK		545-5348-03
		N/U	
12	5/16" I.D. Rubber Ring BLK	2	545-5348-02
	5/16" I.D. Rubber Ring WHT		545-5348-52
13	3/16" I.D. Rubber Ring BLK	9	545-5348-01
	3/16" I.D. Rubber Ring WHT		545-5348-51
14	7/16" O.D. Rubber Ring BLK	12	545-5348-17
	7/16" O.D. Rubber Ring WHT		545-5348-67
		Note: Item 14, 7/16" O.D. Black Rings (Qty. 44 of 49) are used to cushion the Bayonet Sockets under the playfield (between bracket & playfield).	
15	3/8" O.D. Rubber Ring BLK		545-5348-19
	3/8" O.D. Rubber Ring WHT		545-5348-69
16	Small Flipper BLACK Ring (Soft Duro)		545-5207-00
	Small Flipper RED Ring (Soft Duro)		545-5207-22
	Large Flipper BLACK Ring (50 Duro)	2	545-5277-00
	Large Flipper YELLOW Ring (50 Duro) (use -06 40 Duro)		545-5277-04
17	Large Flipper WHITE Ring (50 Duro)		545-5277-08
	Large Flipper RED Ring (Soft Duro)		545-5277-22


Take Note:

For Blue Rubber Pads, see the next page and/or the Blue Pages for the assembly the pads are found on for the part number.

Nr.	RUBBER BUMPER PADS	QTY.	SPI PART Nr.
A*	Bumper BLK Pad (Lg. w/ grommet)		545-5428-00
	Item A are located on Flipper Assemblies. See next page for location.		
B*	Bumper BLK Pad (Sm. w/ grommet)	3	545-5105-00
	Item B are located on multiple assemblies. See next page for location.		

Nr.	RBR. BUMPER POST SLVS.	QTY.	SPI PART Nr.
D*	Bumper RED Post Sleeve (Tall)		545-5308-22
	Item D in RED use 545-5308-22; Item D in WHITE use 545-5308-08.		
E*	Bumper Post Sleeve (Short)		545-5151-00

Playfield Top – Rubber Parts

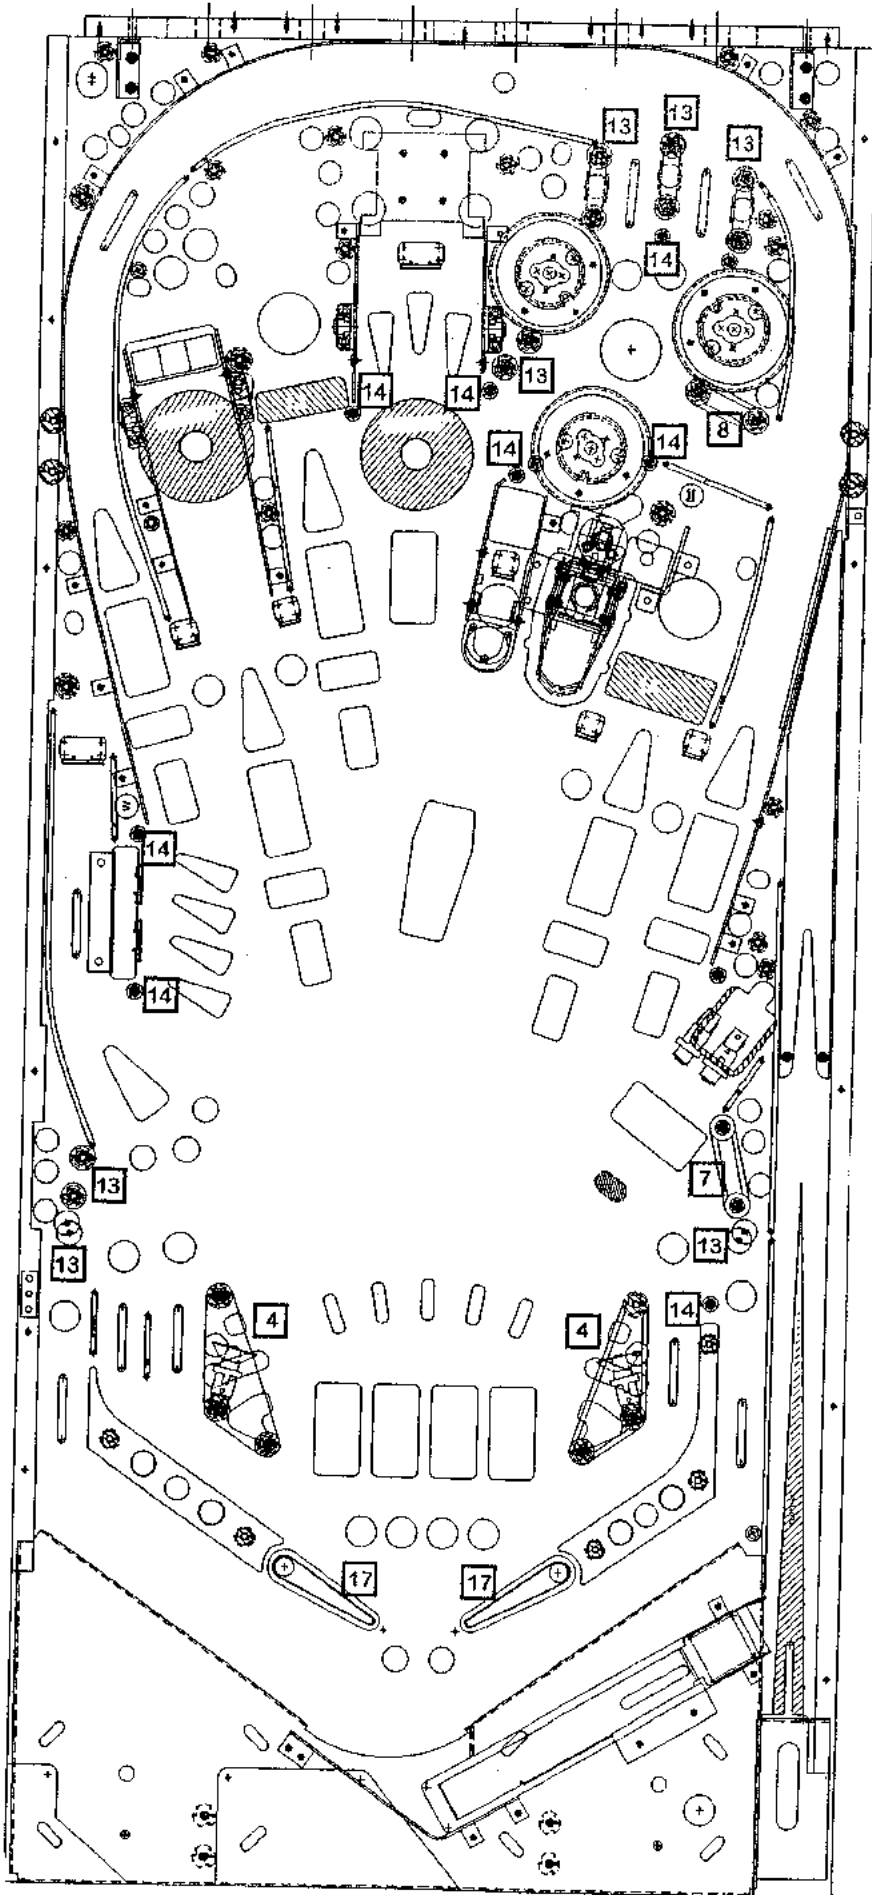


SAM System Circuit Board and BOOT ROM Compatibility Chart

Game Name	CPU Bd. No.	I/O PWR DRV Bd. No.	U9 Pinball Boot ROM
World Poker Tour	520-5246-00	520-5249-00	V3.1
Pirates Of The Caribbean	520-5246-00	520-5249-00	V3.1
Family Guy	520-5246-00	520-5249-00	V3.1
Spider-Man	520-5246-00	520-5249-00	V3.1
Wheel Of Fortune	520-5246-00	520-5249-00	V3.1
NBA	520-5246-00	520-5249-00	V3.1
CSI	520-5246-00	520-5249-00	V3.1
Batman	520-5246-00	520-5249-00	V3.1
Indiana Jones	520-5246-00	520-5249-00	V3.1
Shrek	520-5246-00	520-5249-00	V3.1
24	520-5246-00	520-5249-00	V3.1
Avatar	520-5246-00	520-5249-00	V3.1
Big Buck Hunter	520-5246-00	520-5249-00	V3.1
Iron Man	520-5246-00	520-5249-00	V3.1
The Rolling Stones	520-5246-00	520-5249-00	V3.1
Tron	520-5246-00	520-5249-00	V3.1
Avatar L/E	520-5303-03	520-5249-00	V3.1
The Rolling Stones L/E	520-5303-03	520-5249-00	V3.1
Tron L/E	520-5303-03	520-5317-00	V3.1
Transformers	520-5246-02	520-5249-00	V2.0
Transformers L/E	520-5303-04	520-5317-00	V2.0
AC/DC	520-5337-01	520-5249-00	AC/DC 1.0
AC/DC (L/E)	520-5337-00	520-5317-00	AC/DC 1.0
X-MEN	520-5246-02	520-5249-00	V2.0
X-MEN (L/E)	520-5303-04	520-5317-00	V2.0
Avengers	520-5246-02	520-5249-00	V2.0
Avengers L/E	520-5303-04	520-5317-00	V2.0
Metallica	520-5337-01	520-5249-00	V1.0
Metallica L/E	520-5337-00	520-5317-00	V1.0
Batman (Standard)	520-5303-00	520-5249-00	V3.1
Iron Man (Classic)	520-5303-01	520-5304-00	Not Used
The Simpsons Kooky Carnival (RED)	520-5246-00	520-5249-00	V3.1

ASSEMBLY, SNAKE HEAD METALLICA PRO 500-9813-01



ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	515-9669-01	WELDMENT, SNAKE UPPER JAW, JAMES PRO	1
2	511-7484-01	ASSY, SNAKE LOWER JAW, JAMES PRO	1
3	180-5209-00	SUB MINIATURE SWITCH - SIM. ROLLER	1
4	535-6539-00	SWITCH BODY PROTECT PLATE	1
5	237-5937-02	SCREW, 2-56 X 1/2" HWH MS	2
6	545-7828-00	MOLDED SNAKE HEAD, JAMES	1
7	237-5918-00	SCREW, 6-32 X 1/2" PPH MS ZINC	1
8	232-5201-00	SCREW, 6-32 X 3/8" PPH MS SEMS	1
9	232-5200-00	SCREW, 6-32 X 1/4" PPH SEMS	4
10	254-5000-19	NYLON SPACER - BLACK - 3/8 OD X .175 ID X 1/8"	1
11	242-5001-00	#6 WASHER	2
12	254-5000-09	NYLON SPACER - BLACK - 3/8 OD X .175 ID X 1/4"	1
13	237-5506-00	SCREW, 6-32 X 1" PPH MS	1
98*	605-5002-00	SHRINK TUBING 1/8" I.D.	.083 FT.
99*	036-5544-01	3" CABLE GENERIC SWITCH	1

* ITEM NOT SHOWN


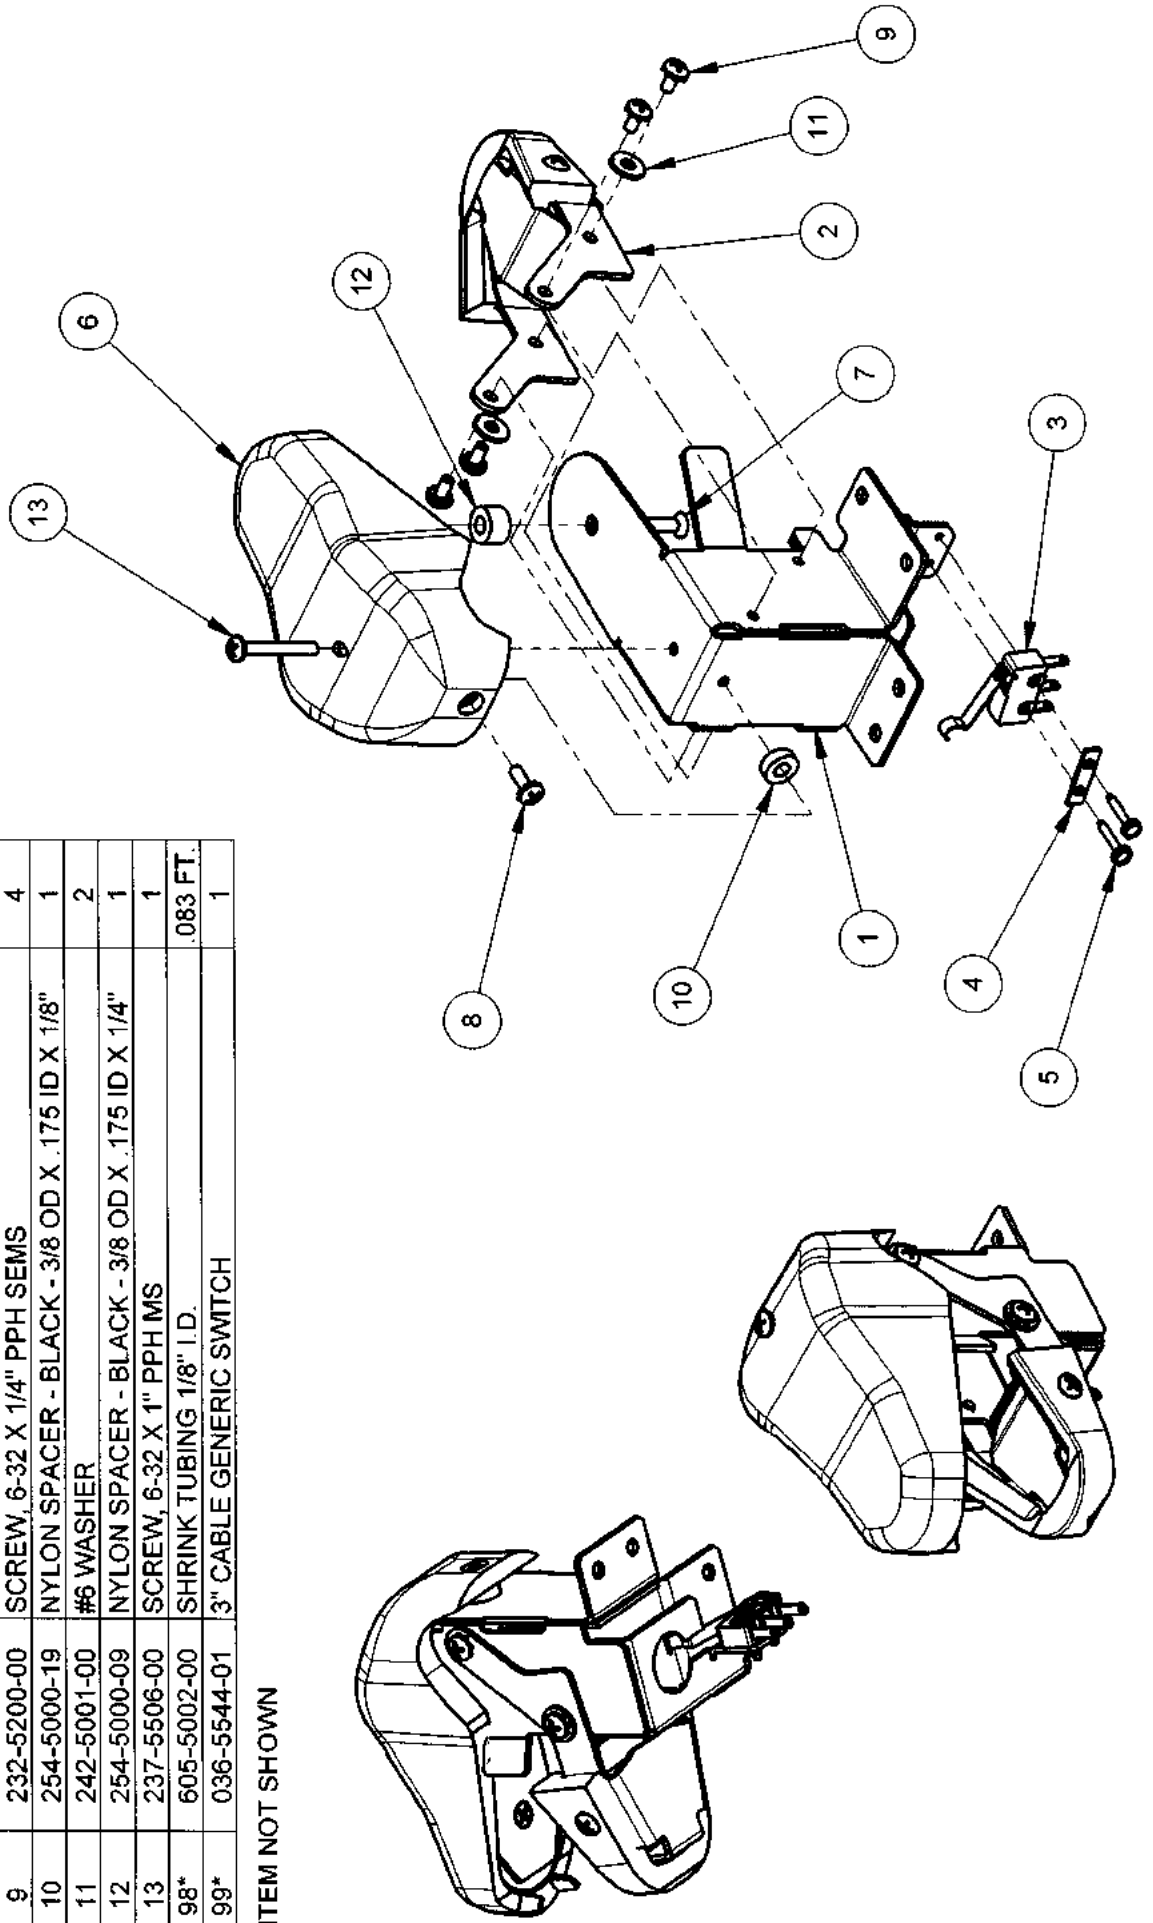


**ASSEMBLY, SNAKE LOWER JAW
METALLICA PRO
511-7484-01**

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	535-0707-01	LOWER JAW BRKT, SNAKE, JAMES PRO	1
2	545-7829-01	MODIFIED LOWER JAW, SNAKE, JAMES PRO	1
3	232-5201-00	SCREW, 6-32 X 3/8" PPH MS SEMS	2
4	535-0717-00	LOWER JAW COVER, SNAKE, JAMES	1

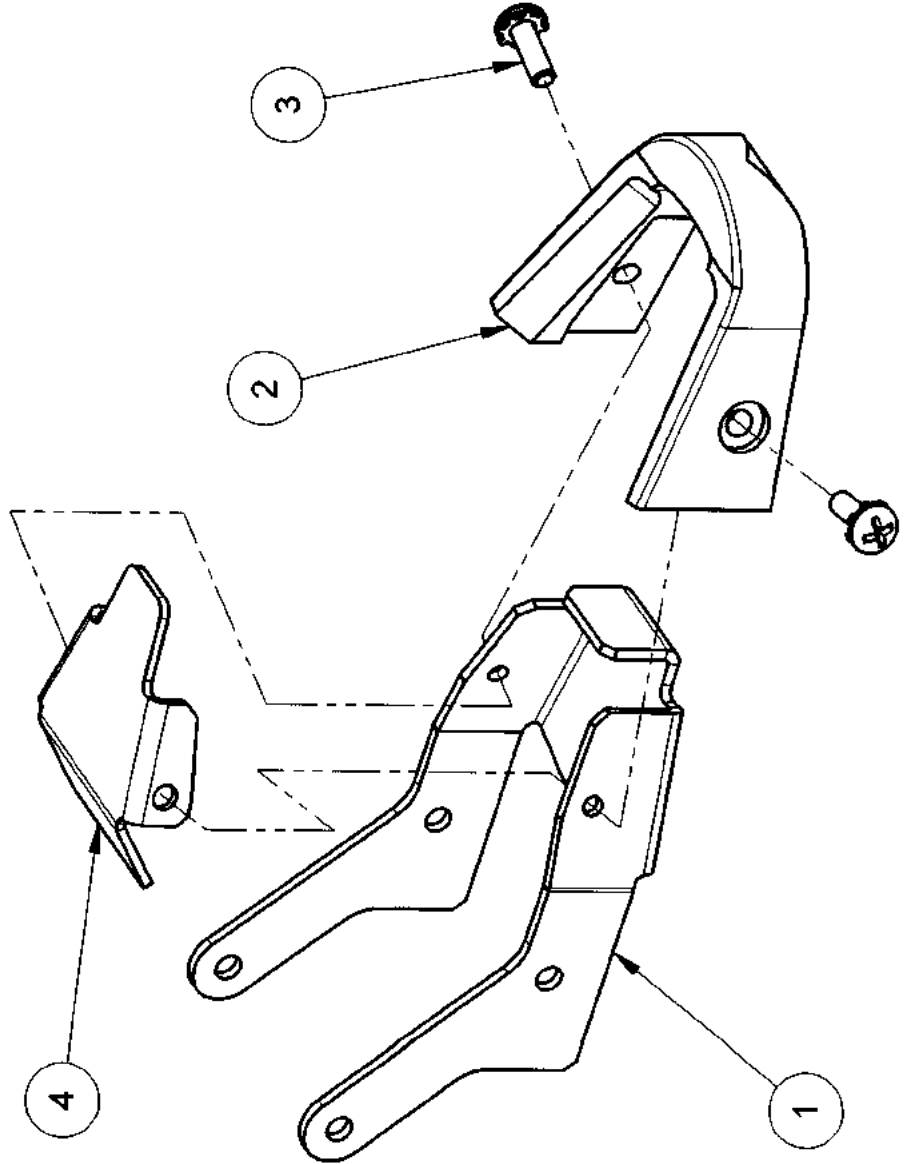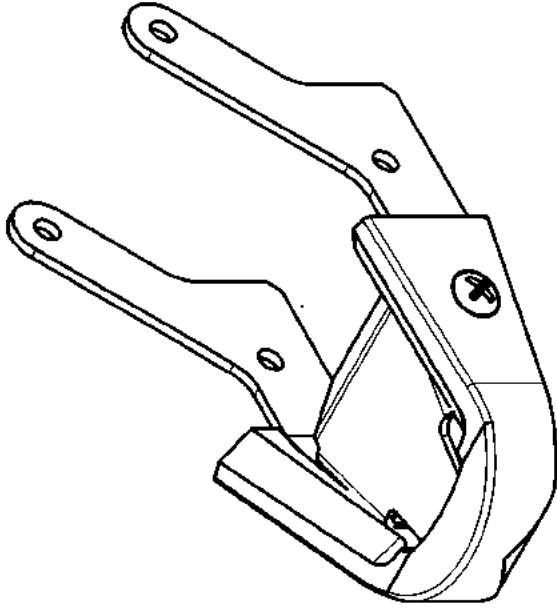


**VUK ASSEMBLY, SNAKE
METALLICA PRO
500-9815-01**

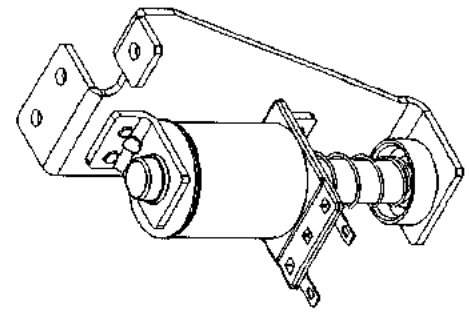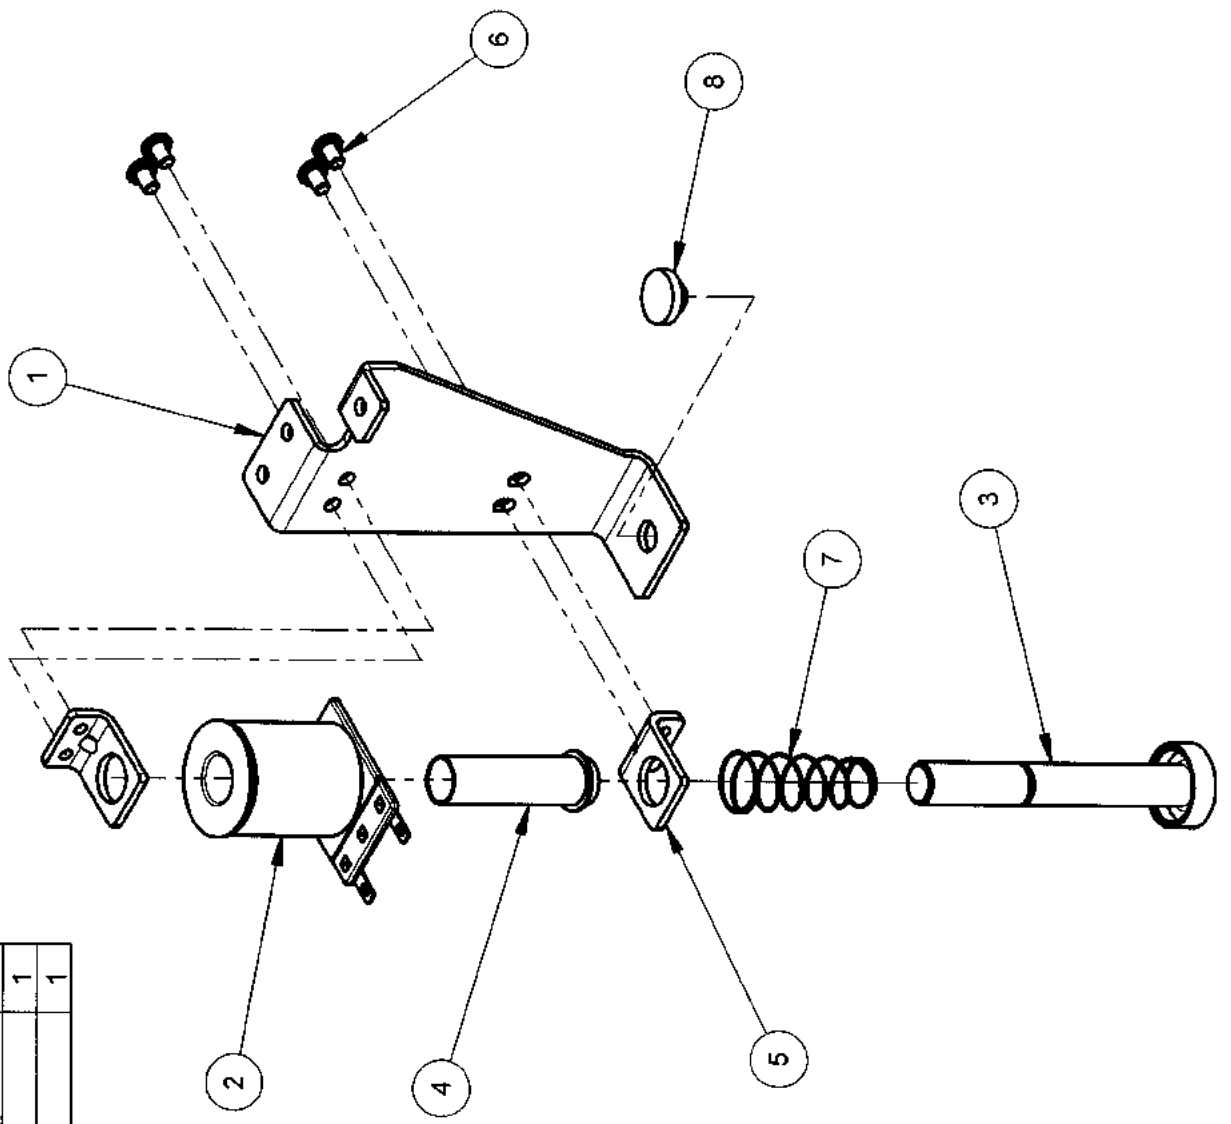

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	535-0705-01	COIL BRACKET, SNAKE, JAMES PRO	1
2	090-5001-ND	COIL - 23-800, NO DIODE	1
3	515-7309-00	PLUNGER ASSEMBLY	1
4	545-5076-01	COIL SLEEVE	1
5	535-5203-03	COIL RETAINING BRACKET	2
6	232-5300-00	SCREW, 8-32 X 1/4" PPH SEMS	4
7	266-5020-00	COMPRESSION SPRING-CONICAL	1
8	545-5105-00	RUBBER BUMPER	1
99*	036-5542-00	GENERIC COIL CABLE	1


* ITEM NOT SHOWN

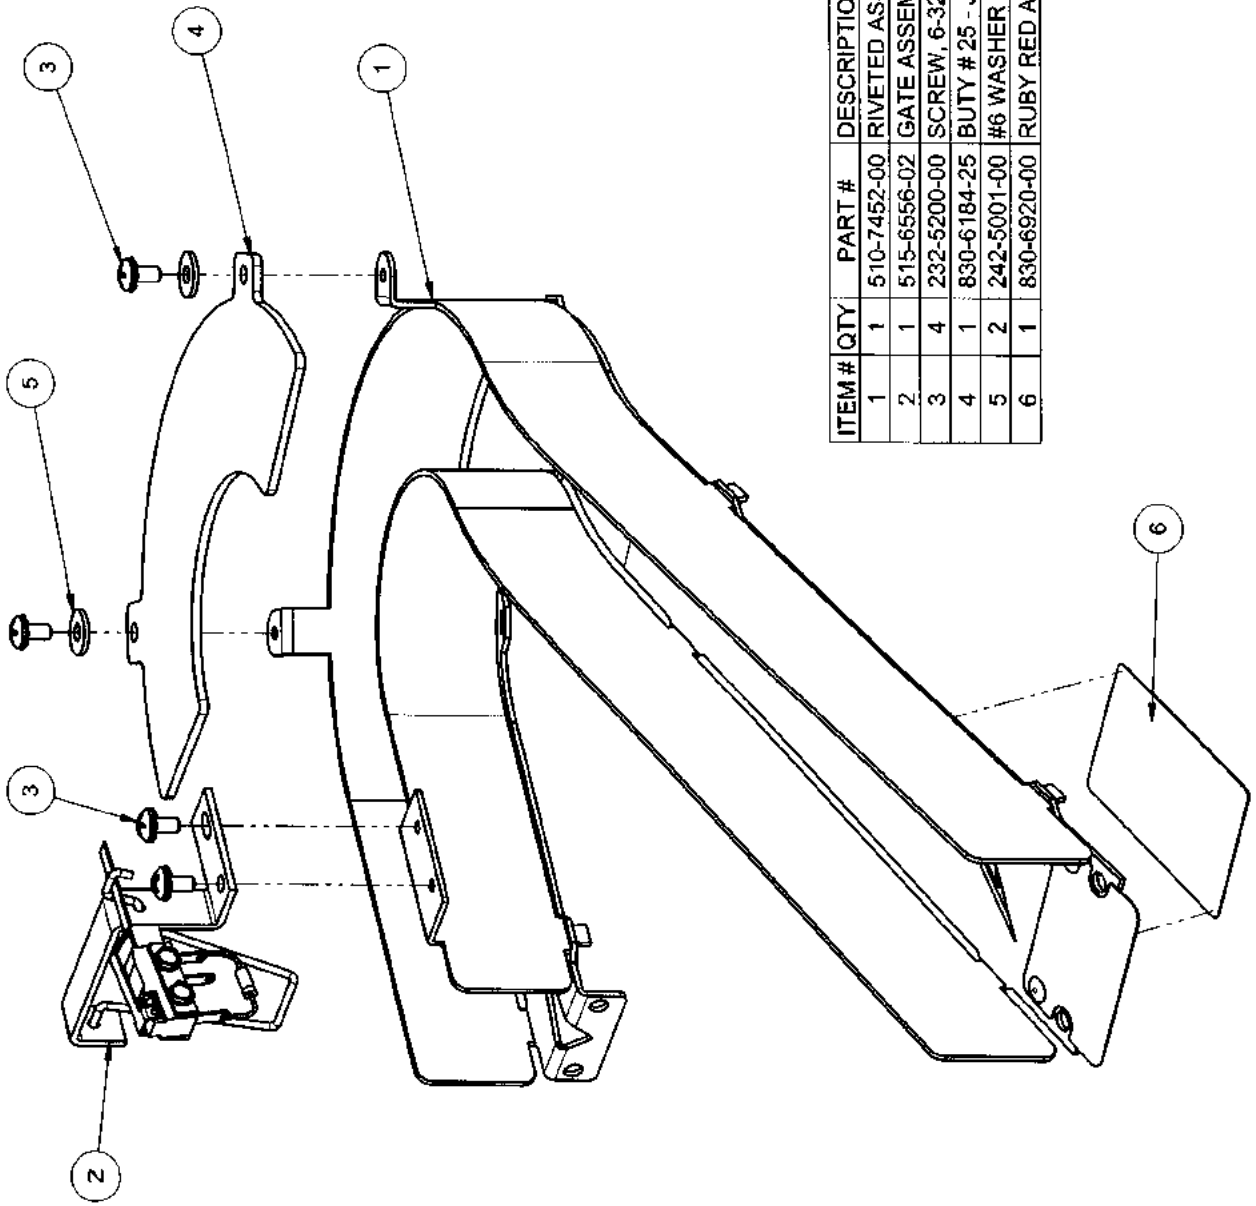

ITEM #	QTY	PART #	DESCRIPTION
1	1	510-7452-00	RIVETED ASSEMBLY - LEFT RAMP - JAMES
2	1	515-6556-02	GATE ASSEMBLY
3	4	232-5200-00	SCREW, 6-32 X 1/4" PPH SEMS
4	1	830-6184-25	BUTY # 25 - JAMES PRO
5	2	242-5001-00	#6 WASHER
6	1	830-6920-00	RUBY RED ADHESIVE FILM

LEFT RAMP ASSEMBLY - JAMES PRO

500-9807-00

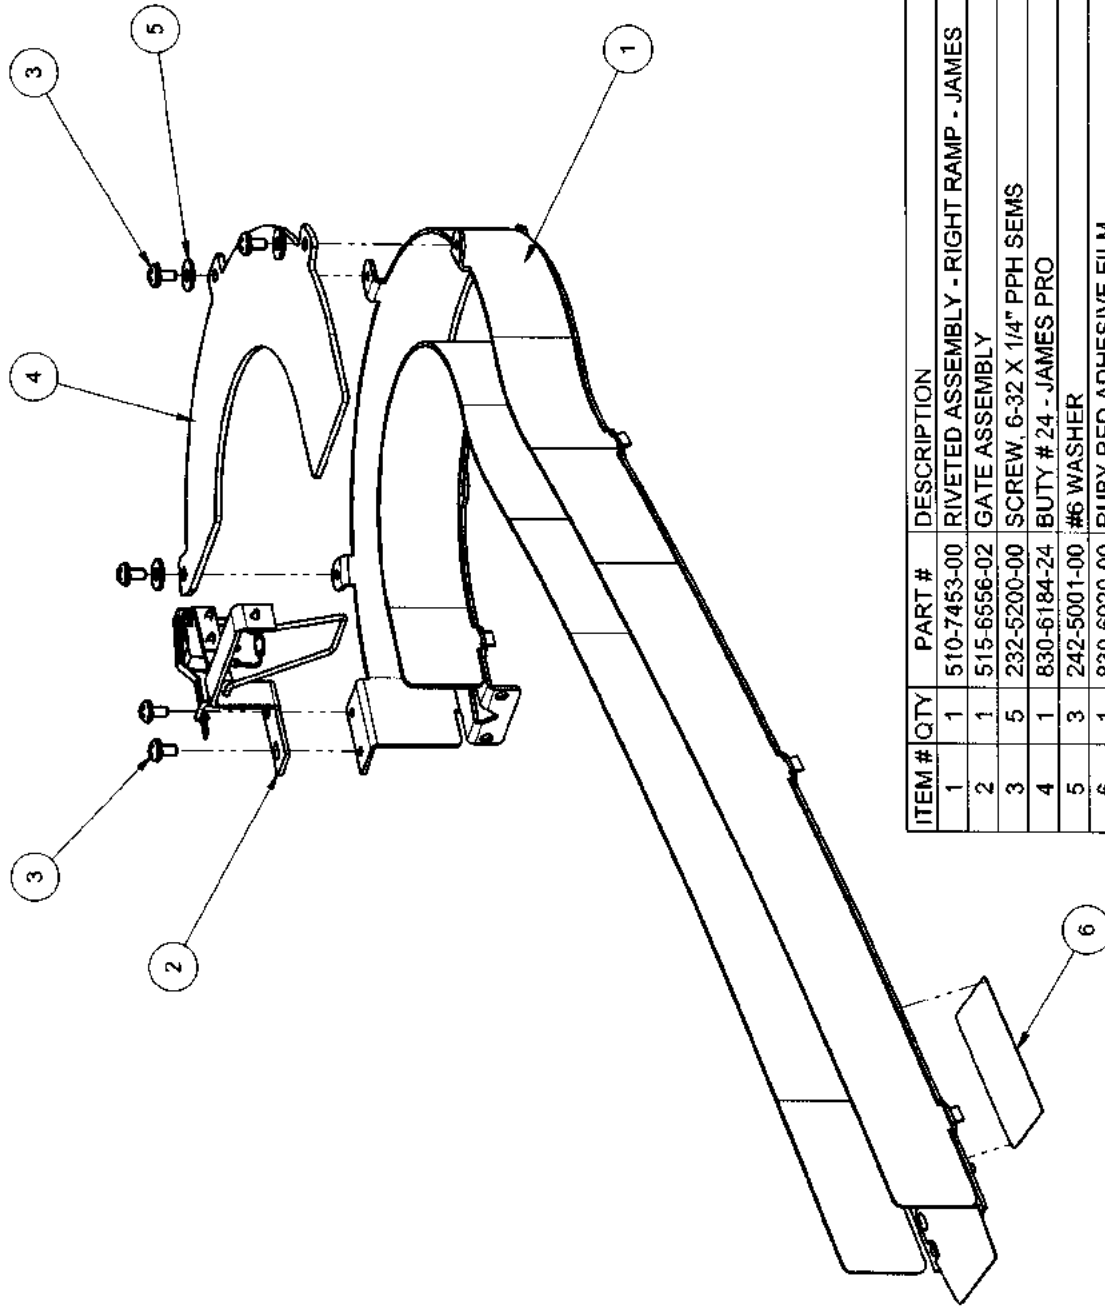


ITEM #	QTY	PART #	DESCRIPTION
1	1	510-7453-00	RIVETED ASSEMBLY - RIGHT RAMP - JAMES
2	1	515-6556-02	GATE ASSEMBLY
3	5	232-5200-00	SCREW, 6-32 X 1/4" PPH SEMS
4	1	830-6184-24	BUTY # 24 - JAMES PRO
5	3	242-5001-00	#6 WASHER
6	1	830-6920-00	RUBY RED ADHESIVE FILM

RAMP ASSEMBLY - RIGHT - JAMES PRO

500-9808-00


ITEM #	QTY	PART #	DESCRIPTION
1	1	515-7809-00	GRAVE MARKER BRACKET
2	1	545-7352-00	GRAVE MARKER - MOLDED
3	1	518-5114-08	MULTI-LED FLASHER ASSEMBLY - WEDGE BASE - WHITE
4	3	232-5200-00	SCREW, 6-32 X 1/4" PPH SEMS

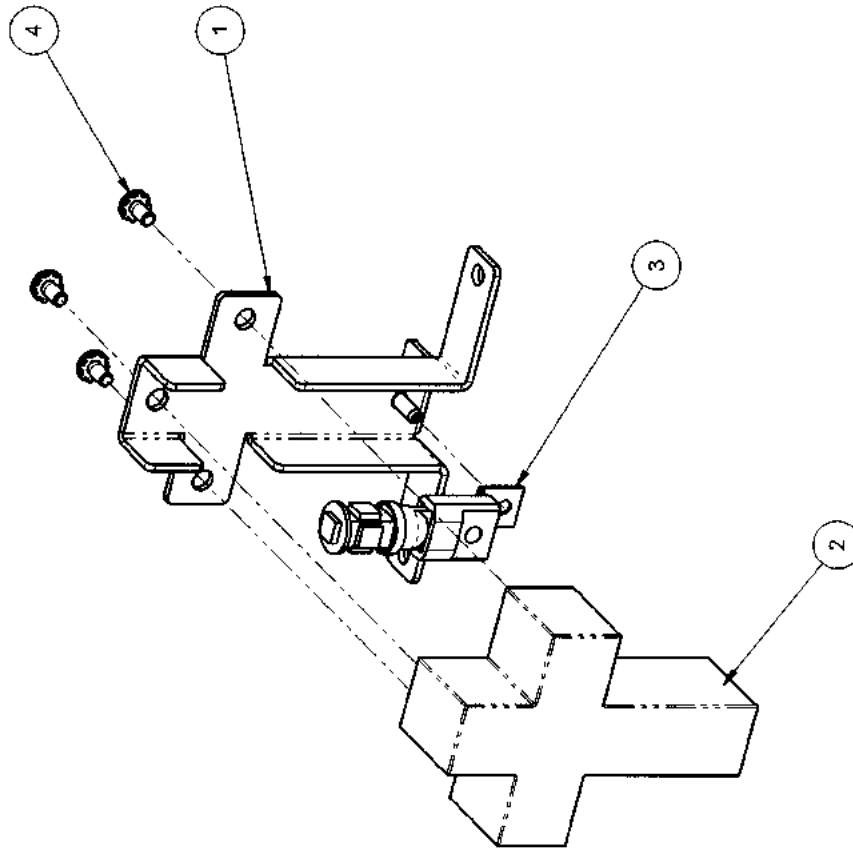

GRAVE MARKER - JAMES PRO

511-7487-00


ITEM #	QTY.	PART #	DESCRIPTION
1	1	595-5324-00	BACK PANEL - JAMES
2	6	518-5100-00-HF	SOCKET & BULB ASSY
3	6	518-5223-00-HF	1/2 LUG SOCKET/BULB ASSEMBLY - SHORT
4	14	234-5000-00	1/4" SCREW, #6 X 3/8" PHN.
5	2	660-5000-00	1/4" CABLE CLAMP
6	1	834-194-21	SPUTTER - JAMES PRO
7	1	232-5030-00	SPRINK #5 X 1/2" PHA
8	2	244-8132-00	8-12 MM CON LOCK NUT
9	1	244-2016-00	NTL ON LOCKER - BLACK 3/8" OD X .375 ID X 1 1/4"
10	1	202-2511-00	#8-32 X 1 1/4" PHN. SCREW
11	1	016-5866-04-E1	BACK PANEL CABLE - JAMES PRO

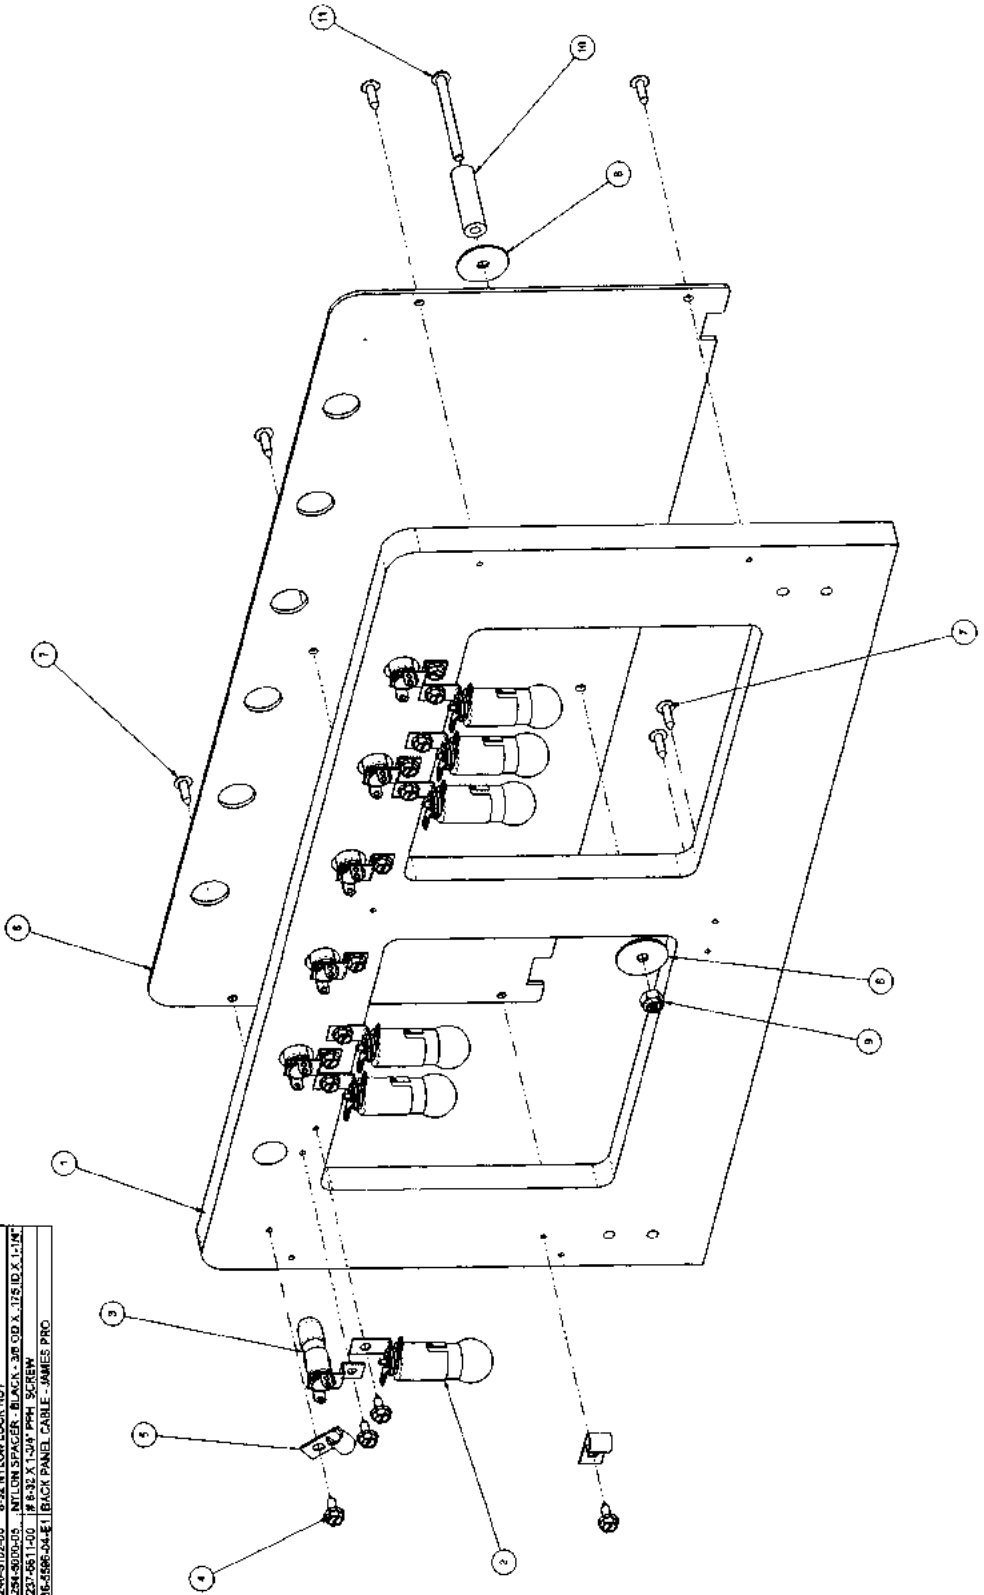

BACK PANEL ASSEMBLY - JAMES PRO


500-9806-00

Playfield - Metal Posts & Fin Shank Screws (Actual Size) †

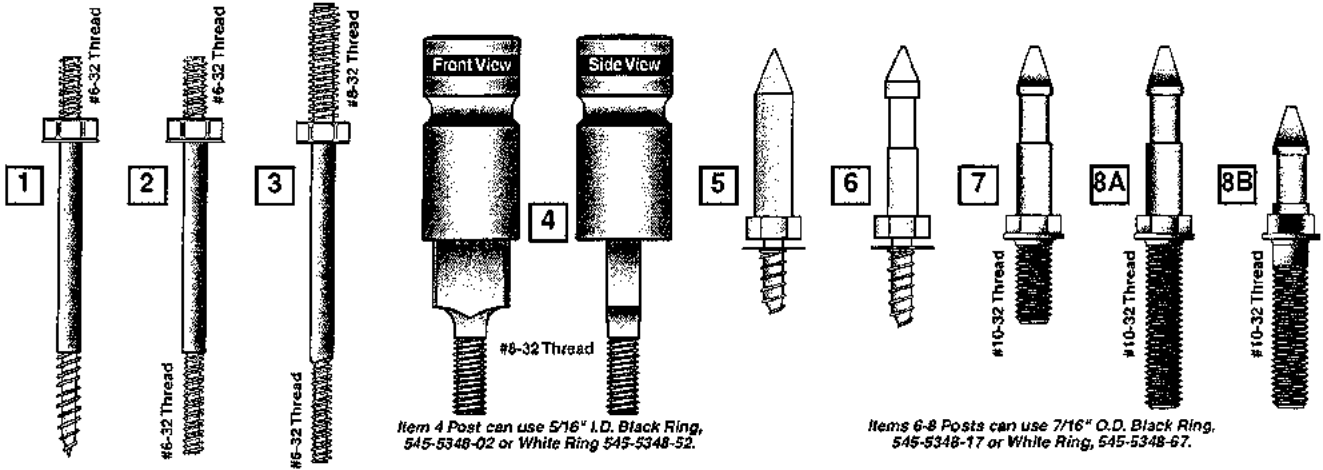


Item 4 Post can use 5/16" I.D. Black Ring, 545-5348-02 or White Ring 545-5348-52.

Items 6-8 Posts can use 7/16" O.D. Black Ring, 545-5348-17 or White Ring, 545-5348-67.

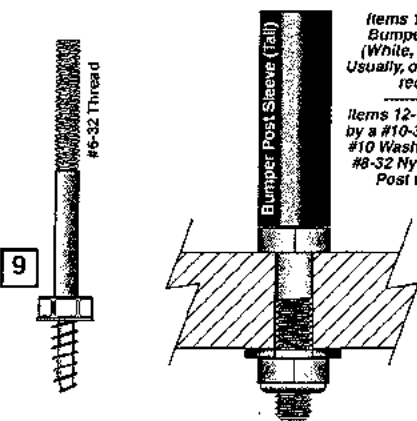

Items 11-16 & 18 Posts can use a Black Bumper Post Sleeve (Tail), 545-5308-00 (White, 545-5308-08 or Red, 545-5308-22) Usually, only Posts which are in the ball path require a Bumper Post Sleeve.

Items 12-15 & 18 Posts are typically secured by a #10-32 Nylon Stop Nut, 240-5203-00 and #10 Washer, 242-5010-00 (Item 11 Post use a #8-32 Nylon Stop Nut, 240-5102-00; Item 16 Post use a #8-32 T-Nut, 240-5101-00).

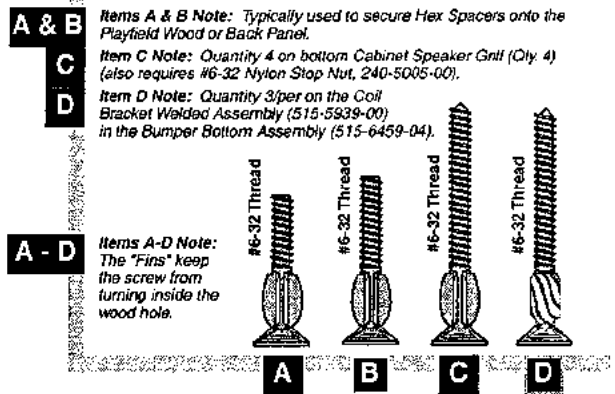


Items A & B Note: Typically used to secure Hex Spacers onto the Playfield Wood or Back Panel.

Item C Note: Quantity 4 on bottom Cabinet Speaker Grill (Qty. 4) (also requires #6-32 Nylon Stop Nut, 240-5005-00).

Item D Note: Quantity 3/pcr on the Coil Bracket Welded Assembly (515-5939-00) in the Bumper Bottom Assembly (515-6459-04).

Items A-D Note: The "Fins" keep the screw from turning inside the wood hole.

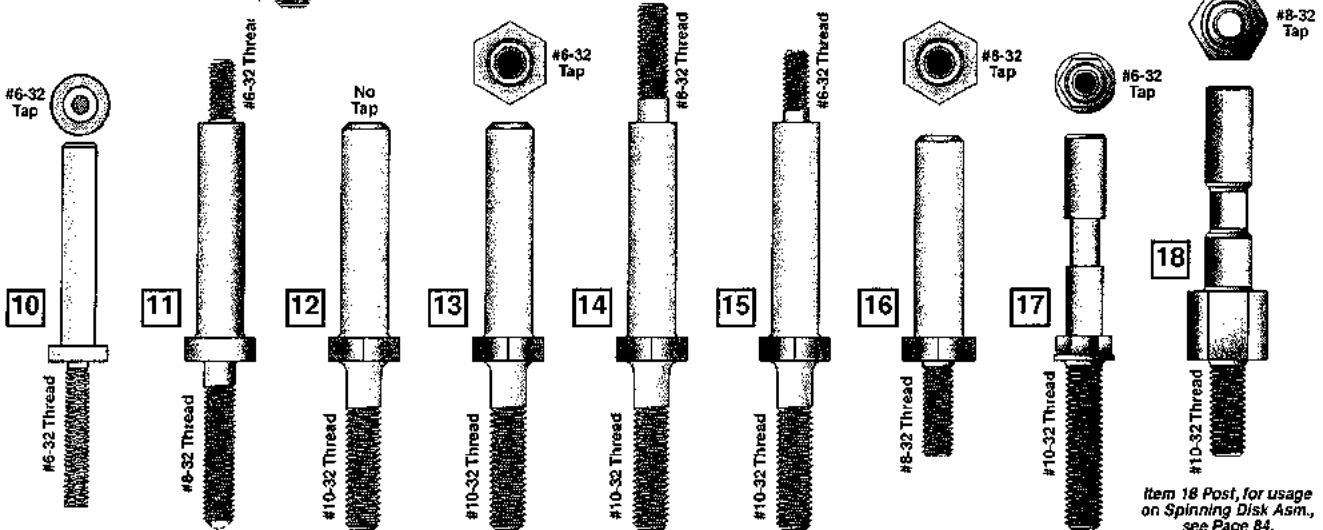

Item 18 Post, for usage on Spinning Disk Asm., see Page 84.

Parts Identification

Nr.	METAL POSTS	SPI PART Nr.	Nr.	METAL POSTS	SPI PART Nr.
1	Post [Fasten] #6-32 Thread // Wood Screw	530-5010-02	12	Post [Hex Base] NO TAP // 10-32 Thread	530-5332-00
2	Post [Fasten] #6-32 Thread // #6-32 Thread	530-5012-02	13	Post [Hex Bs.] #6-32 TAP // #10-32 Thread	530-5332-01
3	Post [Fasten] #8-32 Thread // #6-32 Thread	530-5008-00	14	Post [Hex Bs.] #8-32 Thread // #10-32 Thr.	530-5332-02
4	Post Brass [Adjustable, Sliding] #8-32 Thread	530-5621-00	15	Post [Hex Bs.] #6-32 Thread // #10-32 Thr.	530-5332-03
5	Mini-Post Wood Screw (no cut-away)	530-5004-01	16	Post [Hex Bs.] #8-32 TAP // #8-32 Thread	530-5332-04
6	Mini-Post Wood Screw	530-5004-00	17	Post [Hex Bs.+Groove] #6-32 TAP // #10-32 Thr.	530-5679-00
7	Mini-Post Machine Scr. // #10-32 .4" Thread	530-5005-01	18	Post [Hex Bs.+Groove] #8-32 TAP // #10-32 Thr.	530-5753-00
8A	Mini-Post MS // #10-32 .875" Thread	530-5005-00			
8B	Mini-Post Short MS // #10-32 .875" Thread	530-5749-00			
9	Post [Fasten] #6-32 Thread // Wood Screw	530-5263-01	Nr.	FIN SHANK SCREWS	SPI PART Nr.
10	Post #6-32 Tap // #6-32 Thread	530-5127-00	A	#6-32 X 3/4" Fin Shank Screw	237-5921-02
11	Post [Fasten] #6-32 Thread // #8-32 Thread	530-5007-00	B	#6-32 X 7/8" Fin Shank Screw	237-5921-04
			C	#6-32 X 1 1/4" Fin Shank Screw	237-5883-00
			D	#6-32 X 1 3/16" Spiral Fin Shank Screw	237-5957-00

P14

NOT ALL PARTS LISTED ABOVE ARE USED ON THIS GAME (QUANTITIES PER GAME WILL DIFFER). COMPARE ACTUAL PART ON GAME TO ABOVE DRAWINGS TO IDENTIFY THE PART NUMBER REQUIRED.

Playfield - Nylon Stop, KEPS, Hex, T-, Flange, Pal* & Wing Nuts* (Actual Size) †

Nr.	NYLON STOP NUTS*	SPI PART Nr.
N1	#6-32 Nylon Stop Nut	240-5005-00
N2	#6-32 N.S. Nut (with 1/4" Hex Body)	240-5010-00
N3	#8-32 Nylon Stop Nut	240-5102-00
N4	#10-32 Nylon Stop Nut	240-5203-00
N5	#10-24 Nylon Stop Nut	240-5206-00
<i>Item N5 used with #10-24 X 1-3/4" Carriage Bolt Square Neck Black (231-5022-00) located in the Cabinet for the Foto Lock (Male) (355-5006-01).</i>		
N6	#4-40 Nylon Stop Nut	240-5303-00
N7	#4-40 (18/8 Stainless) Nylon Stop Nut	240-5303-01
N8	5/16"-18 Nylon Stop Nut	240-5316-00



Nr.	KEPS NUTS*	SPI PART Nr.
K1	#6-32 Keps Nut (with Star Washer)	240-5008-00
K2	#6-32 Keps Nut (with 1/4" Hex Body)	240-5011-00
K3	#8-32 Keps Nut	240-5104-00
K4	#10-32 Keps Nut	240-5208-00
K5	#10-24 Keps Nut	240-5207-00
K6	#4-40 Keps Nut	240-5318-00



Nr.	HEX NUTS*	SPI PART Nr.
H1	#6-32 Hex Nut (No Star Washer)	240-5004-00
H2	#8-32 Hex Nut	240-5103-00
H3	#10-32 Hex Nut	240-5201-00
H4	#10-24 Hex Nut	240-5202-00
<i>Item H4 used with #10-24 X 1" Carriage Bolt Square Neck Black (231-5021-00) located in the Cabinet for the Side Armor Rear (towards Backbox).</i>		
H5	#10-32 X 3/8" Hex Nut	240-5209-00
H6	3/4"-16 Hex Nut	240-5315-00
H7	#2-56 Hex Nut	240-5301-00
H8	7/8"-14 Hex Nut	240-5317-00



Nr.	T-NUTS*	SPI PART Nr.
T1	#6-32 T-Nut	240-5002-00
T2	#6-32 T-Nut (with Side Cut Off)	240-5002-01
T3	#8-32 T-Nut	240-5101-00
T4	#10-32 (Black Oxide) T-Nut	240-5007-00
T5	#10-32 T-Nut (with Side Cut Off)	240-5205-00
T6	#10-32 X 5/16" 3-Prong T-Nut	240-5204-00
T7	#10-24 T-Nut	240-5200-00



Nr.	FLANGE NUT*	SPI PART Nr.
F1	1/4" X 20 Flange Nut	240-5300-00
<i>Item F1 used with 1/4-20 X 1-1/4 Sq. Neck Carriage Bolt Black (231-5003-00) located in the Cabinet for the Side Armor (Front) and Pivotal Hinges.</i>		



Nr.	PAL NUTS*	SPI PART Nr.
P1	Plastic Pal Nut (on Flipper Buttons)	240-5003-00
P2	Metal Pal Nut (on Flipper Buttons)	240-5003-01



* Not Shown

Nr.	WING NUTS*	SPI PART Nr.
W1	#6-32 Wing Nut	240-5001-00
W2	#8-32 Wing Nut	240-5100-00
W3	#10-24 Wing Nut	240-5211-00
W4	1/4"-20 Wing Nut	240-5302-00
W5	1/4"-20 Toggle Wing	240-5324-00

* Not Shown

Parts Identification


NOT ALL PARTS LISTED ABOVE ARE USED ON THIS GAME (QUANTITIES PER GAME WILL DIFFER). COMPARE ACTUAL PART ON GAME TO ABOVE DRAWINGS TO IDENTIFY THE PART NUMBER REQUIRED.

P15

Playfield Top - Hex Spacers (Actual Size) †

Hex Spacers:

#6-32 Tap

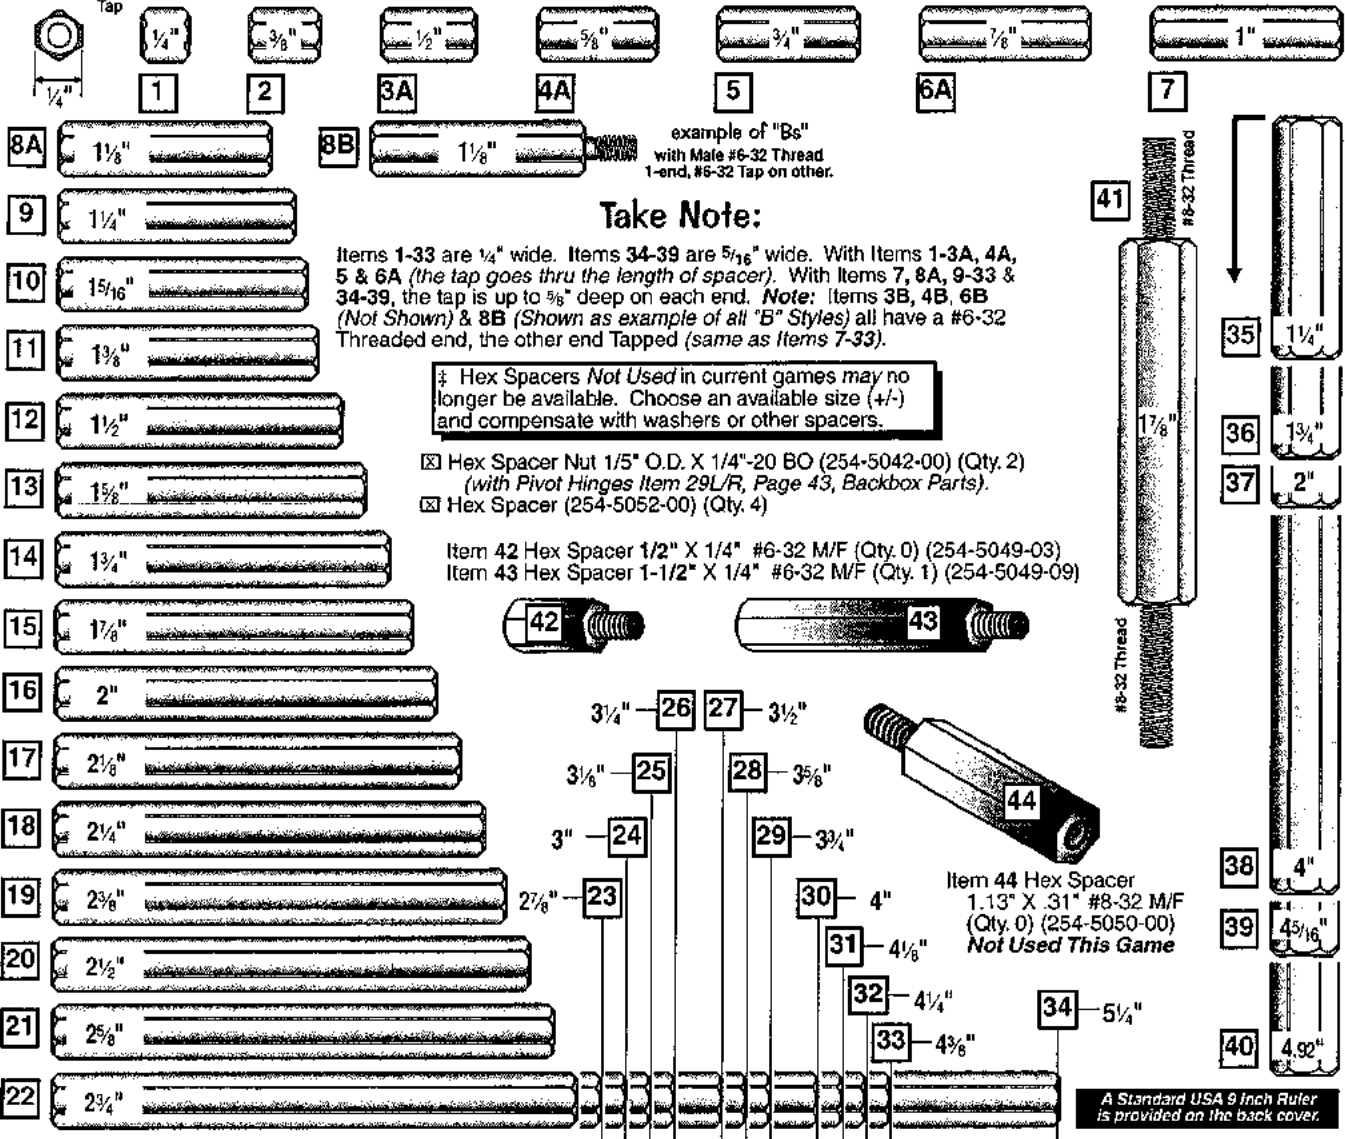


Parts Identification

Nr.	HEX SPACERS	SPI PART Nr.	Nr.	HEX SPACERS	SPI PART Nr.
1	1/4" X 1/4" #6-32 Tap (both ends)	254-5008-00	19	2 3/8" X 1/4" #6-32 Tap (both ends)	254-5008-28
2	3/8" X 1/4" #6-32 Tap (both ends)	254-5008-12	20	2 1/2" X 1/4" #6-32 Tap (both ends)	254-5008-16
3A	1/2" X 1/4" #6-32 Tap (both ends)	254-5008-03	21	2 5/8" X 1/4" #6-32 Tap (both ends)	254-5008-08
3B*	Identical to 3A with #6-32 Thread end	254-5024-03	22	2 3/4" X 1/4" #6-32 Tap (both ends)	254-5008-15
4A	5/8" X 1/4" #6-32 Tap (both ends)	254-5008-02	23	2 7/8" X 1/4" #6-32 Tap (both ends)	254-5008-31
4B*	Identical to 4A with #6-32 Thread end	254-5024-02	24	3" X 1/4" #6-32 Tap (both ends)	254-5008-14
5	3/4" X 1/4" #6-32 Tap (both ends)	254-5008-04	25	3 1/8" X 1/4" #6-32 Tap (both ends)	254-5008-19
6A	7/8" X 1/4" #6-32 Tap (both ends)	254-5008-05	26	3 1/4" X 1/4" #6-32 Tap (both ends)	254-5008-26
6B*	Identical to 6A with #6-32 Thread end	254-5024-05	27	3 1/2" X 1/4" #6-32 Tap (both ends)	254-5008-27
7	1" X 1/4" #6-32 Tap (both ends)	254-5008-06	28	3 5/8" X 1/4" #6-32 Tap (both ends)	254-5008-25
8A	1 1/8" X 1/4" #6-32 Tap (both ends)	254-5008-17	29	3 3/4" X 1/4" #6-32 Tap (both ends)	254-5008-36
8B	Identical to 8A with #6-32 Thread end	254-5024-17	30	4" X 1/4" #6-32 Tap (both ends)	254-5008-21
9	1 1/4" X 1/4" #6-32 Tap (both ends)	254-5008-11	31	4 1/8" X 1/4" #6-32 Tap (both ends)	254-5008-23
10	1 5/16" X 1/4" #6-32 Tap (both ends)	254-5008-34	32	4 1/4" X 1/4" #6-32 Tap (both ends)	254-5008-30
11 ‡	1 3/8" X 1/4" #6-32 Tap (both ends)	254-5008-33	33	4 3/8" X 1/4" #6-32 Tap (both ends)	254-5008-29
12	1 1/2" X 1/4" #6-32 Tap (both ends)	254-5008-09	34	5 1/4" X 1/4" #6-32 Tap (both ends)	254-5008-35
13 ‡	1 5/8" X 1/4" #6-32 Tap (both ends)	254-5008-13	35	1 1/4" X 5/16" #6-32 Tap (both ends)	254-5018-09
14	1 3/4" X 1/4" #6-32 Tap (both ends)	254-5008-10	36	1 3/4" X 5/16" #6-32 Tap (both ends)	254-5018-06
15 ‡	1 7/8" X 1/4" #6-32 Tap (both ends)	254-5008-20	37	2" X 5/16" #6-32 Tap (both ends)	254-5018-07
16	2" X 1/4" #6-32 Tap (both ends)	254-5008-07	38	4" X 5/16" #6-32 Tap (both ends)	254-5018-03
17	2 1/8" X 1/4" #6-32 Tap (both ends)	254-5008-32	39	4 5/16" X 5/16" #6-32 Tap (both ends)	254-5018-00
18	2 1/4" X 1/4" #6-32 Tap (both ends)	254-5008-18	40	4.92" X 5/16" #6-32 Tap (both ends)	254-5018-04

NOT ALL PARTS LISTED ABOVE ARE USED ON THIS GAME (QUANTITIES PER GAME WILL DIFFER). COMPARE ACTUAL PART ON GAME TO ABOVE DRAWINGS TO IDENTIFY THE PART NUMBER REQUIRED.

P16

Playfield Top - Plastic Posts & Spacers & Metal Spacers (Actual Size) †

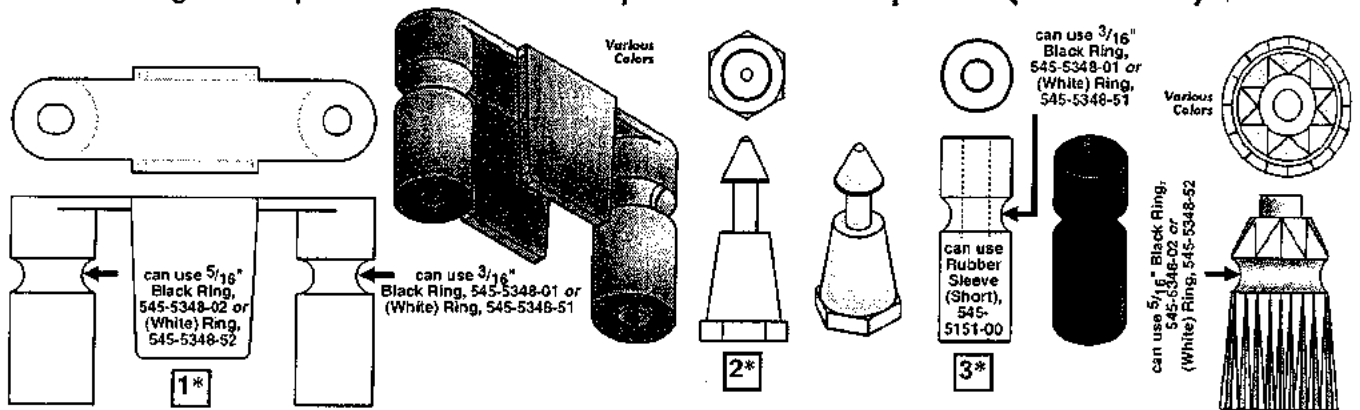

PLASTIC PART COLOR CHART








Nr.	Color	Nr.	Color	Nr.	Color
-00	Black	-06	Yellow	-12	Fluor. Blue
-01	Clear	-07	Orange	-13	Teal Green
-02	Red	-08	(White)	-14	(Gray)
-03	Amber	-09	Purple	-15	Luminescent
-04	Green	-10	Fluor. Org.	-16	Gold
-05	Blue	-11	Fluor. Green		

* Items 1 & 5 come in various colors. The "XX" (the last 2-Digits in the Part Number), should be replaced with the desired 2-Digit number from the above Color Chart (may not be available in every color; other colors used in prior games may no longer be available.) Call for availability.


O.D. & I.D.



5-11:
Height Shown X $\frac{9}{32}$ " O.D.
X .153" I.D.




† Items 5 through 11 dimensions are measured from bottom to just under the cut-away. Item 33 dimension is measured from top-to-top of curve. See pictorials with Items 11 & 33.

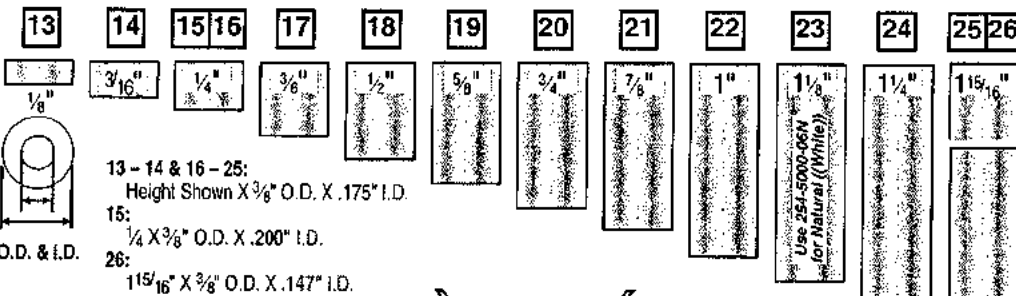

O.D. & I.D.

13-14 & 16-25:
Height Shown X $\frac{3}{8}$ " O.D. X .175" I.D.
15:
 $\frac{1}{4}$ X $\frac{3}{8}$ " O.D. X .200" I.D.
26:
 $1\frac{15}{16}$ X $\frac{3}{8}$ " O.D. X .147" I.D.


Note the Part Nr. & Material Difference

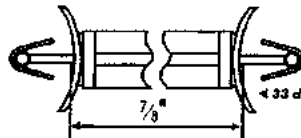

33†

† 33 dimension is measured from this point.

12: $\frac{1}{2}$ " O.D.
X $\frac{1}{4}$ " I.D.




O.D. & I.D.

27-31:
Height Shown
X $\frac{1}{4}$ " O.D.
X .147" I.D.


Nr.	PLASTIC POSTS & SPACERS	SPI PART Nr.	Nr.	PLASTIC POSTS & SPACERS	SPI PART Nr.
1**	Top Lane Plastic Mini-Lite Hood (XX-Color)	550-5061-XX	21	$\frac{7}{8}$ " X $\frac{3}{8}$ " O.D. X .175" I.D. Pls. Spacer (Gray)	254-5000-11
2**	Mini-Jewel Plastic Post (XX-Color)	550-5052-XX	22	1" X $\frac{3}{8}$ " O.D. X .175" I.D. Pls. Spacer (Gray)	254-5000-04
3**	1 1/16" 1-Groove Plastic Post (XX-Color)	550-5059-XX	23	1 1/8" X $\frac{3}{8}$ " O.D. X .175" I.D. Pls. Spcr. (Gray)	254-5000-06
Item 3 Only: Use Part Number (550-5059-00) for color Black.			Item 23 Only: Add the letter "N" for color Natural (if available) or "B" for color Black.		
4**	1-Groove Jewel Plastic Post (XX-Color)	550-5034-XX	24	1 1/4" X $\frac{3}{8}$ " O.D. X .175" I.D. Pls. Spcr. (Gray)	254-5000-05
Items 3 & 4 typically sec'd by: Post Fastening Scr. #8-32 Top / #6-32 Bot. (530-5012-02). Use Color Chart above for last 2-digits. Not all colors are available.			25	1 1/2" X $\frac{3}{8}$ " O.D. X .175" I.D. Pls. Spcr. (Gray)	254-5000-08
Items 1-4 Note: Use Color Chart above for last 2-digits. Not all colors are available.			26	1 15/16" X $\frac{3}{8}$ " O.D. X .147" I.D. Plastic Spacer (Gray)	254-5000-15
Items 13-26 Only: Spacers may also be Black in color (random from vendor).			Not Shown and listed for reference only: 254-5000-10: 2 1/2" X $\frac{3}{8}$ " O.D. X .175" I.D. -13: 5/16" X $\frac{1}{2}$ " X .147"; -16: 5/16" X 5/16" X .190"; -17: 1 1/2" X $\frac{3}{8}$ " O.D. X .175" I.D.		
5 †	3/4" Self Retain. Plastic Spacer (White)	254-5007-02	27	1/4" X 5/16" O.D. X .144" I.D. Metal Spacer	254-5014-03
6 †	9/16" Self Retain. Plastic Spacer (White)	254-5007-05	28	1/2" X 5/16" O.D. X .144" I.D. Metal Spacer	254-5014-00
7 †	3/8" Self Retain. Plastic Spacer (White)	254-5007-01	29	9/16" X 5/16" O.D. X .144" I.D. Metal Spacer	254-5014-04
8 †	1/2" Self Retain. Plastic Spacer (White)	254-5007-04	30	3/4" X 5/16" O.D. X .144" I.D. Metal Spacer	254-5014-01
9 †	5/8" Self Retain. Plastic Spacer (White)	254-5007-00	31	1 1/8" X 5/16" O.D. X .144" I.D. Metal Spacer	254-5014-02
10 †	3/4" Self Retain. Plastic Spacer (White)	254-5007-03	32	1" X 5/16" O.D. X .144" I.D. Metal Spacer	254-5001-00
11 †	1" Self Retain. Plastic Spacer (White)	254-5007-06	33†	7/8" Plastic Spacer Support (Dual-Locking)	254-5039-14
12 †	1/2" X 1/4" O.D. X .147" I.D. Pls. Spacer (White)	254-5000-03	34	Plastic Spacer, .5"	254-5054-00
13	1/8" X 3/8" O.D. X .175" I.D. Pls. Spacer (Gray)	254-5000-19	35	Plastic Spacer, 1.13"	254-5054-01
14	3/16" X 3/8" O.D. X .175" I.D. Pls. Spcr. (Gray)	254-5000-18			
15	1/4" X 3/8" O.D. X .200" I.D. Pls. Spcr. (Gray)	254-5000-02			
16	1/4" X 3/8" O.D. X .175" I.D. Pls. Spacer (Gray)	254-5000-09			
17	3/8" X 3/8" O.D. X .175" I.D. Pls. Spacer (Gray)	254-5000-12			
18	1/2" X 3/8" O.D. X .175" I.D. Pls. Spacer (Gray)	254-5000-01			
19	5/8" X 3/8" O.D. X .175" I.D. Pls. Spacer (Gray)	254-5000-14			
20	3/4" X 3/8" O.D. X .175" I.D. Pls. Spacer (Gray)	254-5000-07			

NOT ALL PARTS LISTED ABOVE ARE USED ON THIS GAME (QUANTITIES PER GAME WILL DIFFER). COMPARE ACTUAL PART ON GAME TO ABOVE DRAWINGS TO IDENTIFY THE P/N REQUIRED.

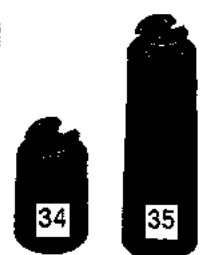

Parts Identification

Playfield Top & Bottom - Small Bayonet Sockets & Bulbs ■ (Actual Size) †

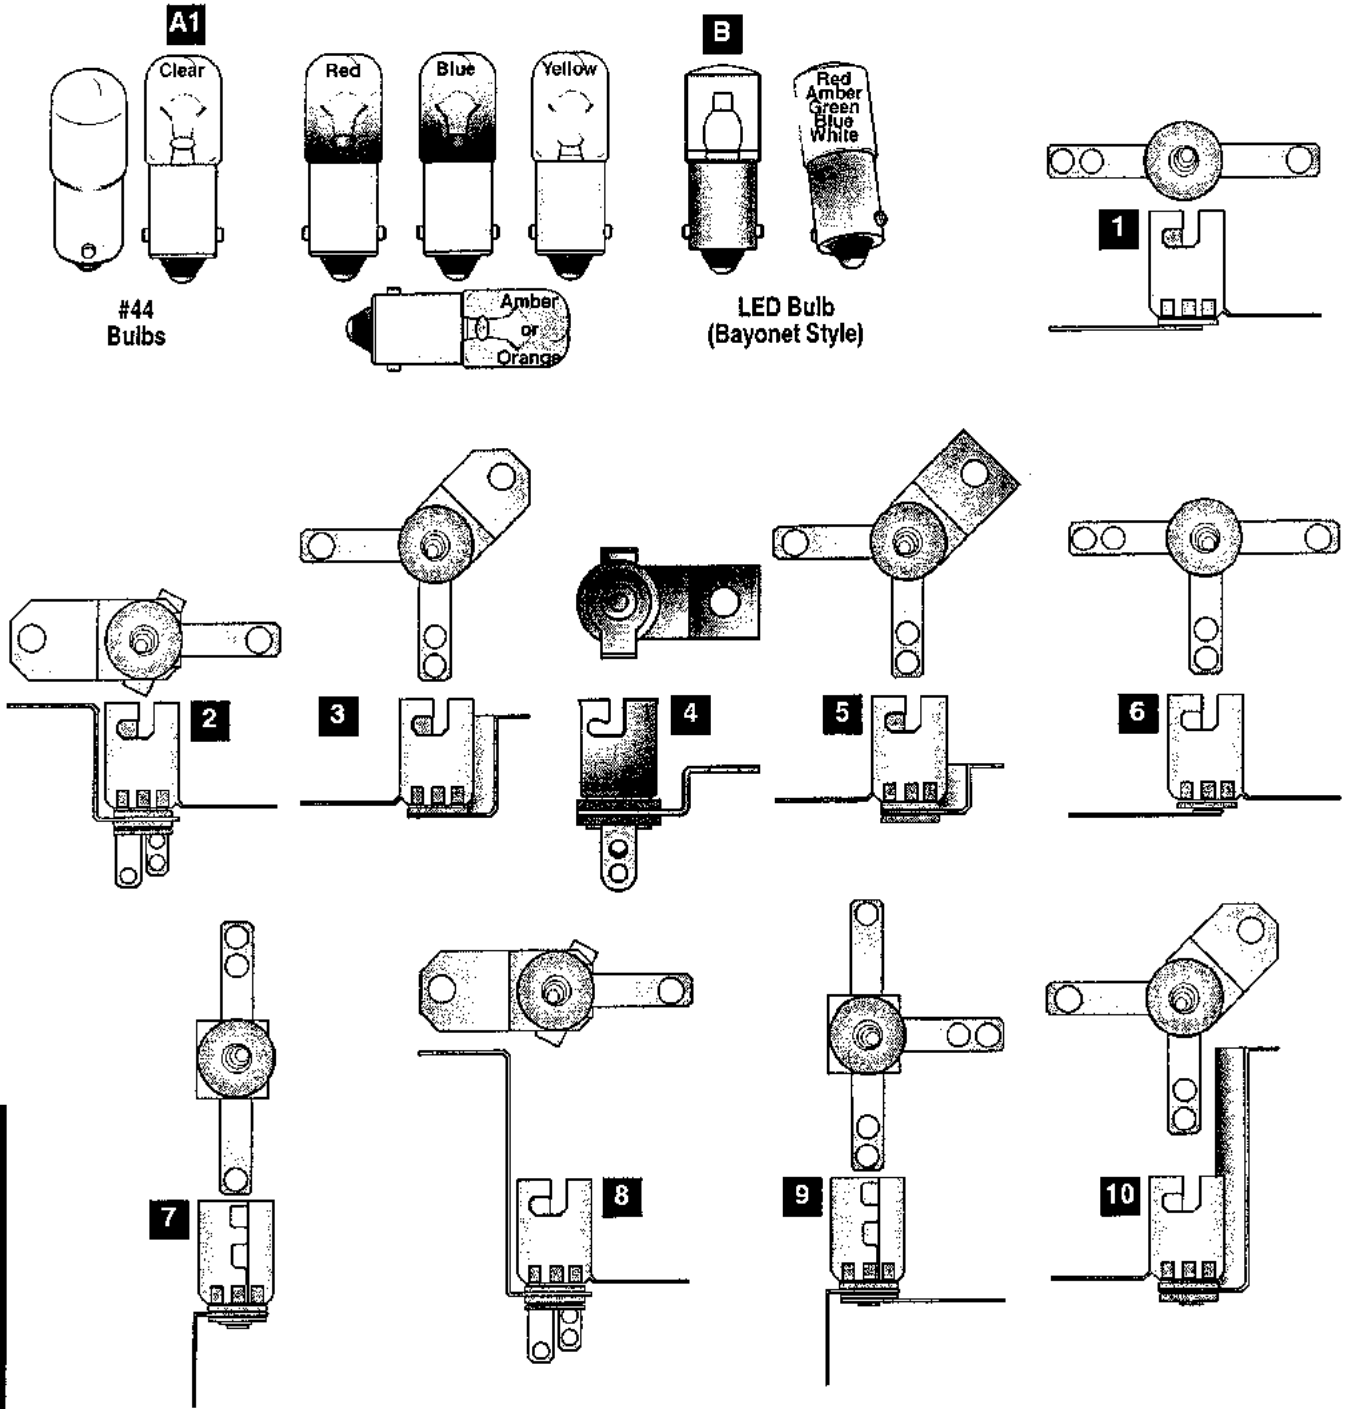

Parts Identification


Nr.	BULBS (#44)	SPI PART Nr.	Nr.	BULBS (LED & #455)	SPI PART Nr.
A	#44 Bulb (Clear) Heavy Filament	165-5000-44-HF	B	LED Module (WHT) (12.8v 20-25mA) Bynt.	112-5023-08
	#44 Bulb (replace -XX w/color below)	165-5053-XX-HF	<i>Item B Note: Different Colors may be available -</i>		
	Item A Note: Amber (165-5053-03-HF); Green (165-5053-04-HF); Yellow (165-5053-05-HF);		Red (112-5023-02); Amber (112-5023-03); Green (112-5023-04); Blue (112-5023-05);		
	Red (165-5053-02-HF); Blue (165-5053-05-HF); Orange (165-5053-07-HF)				

Nr.	SMALL BAYONET SOCKETS	SPI PART Nr.
1	2-Lug Staple Down Socket	077-5000-00
2	3-Lug Stand-Up Socket (Med. Brkt.)	077-5008-00
3	2-Lug Stand-Up Socket (Med. Brkt.)	077-5002-00
4	2-Lug Stand-Up Socket (Short Brkt.)	077-5223-00
5	2-Lug Stand-Up Sckt. (Short Bracket)	077-5002-31
6	3-Lug Staple Down Socket	077-5001-00
7	2-Lug Laydown Socket	077-5003-00
8	3-Lug Stand-Up Socket (Tall Bracket)	077-5009-00
Nr.	SMALL BAYONET SOCKETS	SPI PART Nr.
9	3-Lug Laydown Socket (3 Lugs Flat)	077-5006-00


10	2-Lug Stand-Up Socket (Tall Bracket)	077-5005-00
11	3-Lug Stand-Up Long Shell Socket	077-5013-00
12	2-Lug Stand-Up Lg. Shell Socket (Gls)	077-5031-00
13	1-Lug S-U Lg. Shell Sckt. (Med. Brkt.)	077-5012-00
14	3-Lug S-U Lg. Shell Sckt. (45° Brkt.)	077-5035-00
15	3-Lug Laydown Socket (2 Lugs Bent)	077-5032-00

NOT ALL PARTS LISTED ABOVE ARE USED ON THIS GAME (QUANTITIES PER GAME WILL DIFFER). COMPARE ACTUAL PART ON GAME TO ABOVE DRAWINGS TO IDENTIFY THE PART NUMBER REQUIRED.

Playfield Top & Bot. - Small Bayonet Sockets & Bulbs ■ (Actual Size) † Continued

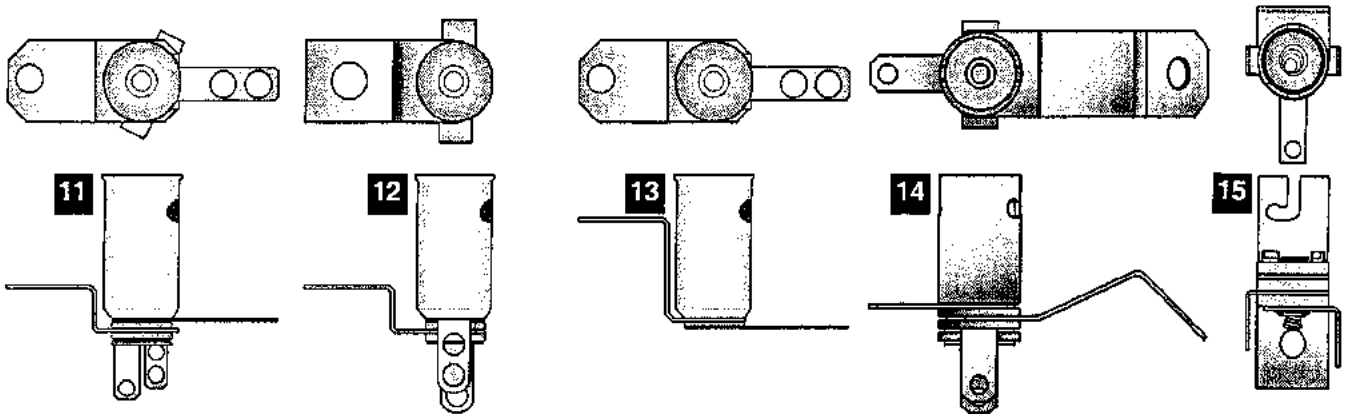

Playfield Bottom - Large Bayonet Sockets & Bulbs ■ (Actual Size) †

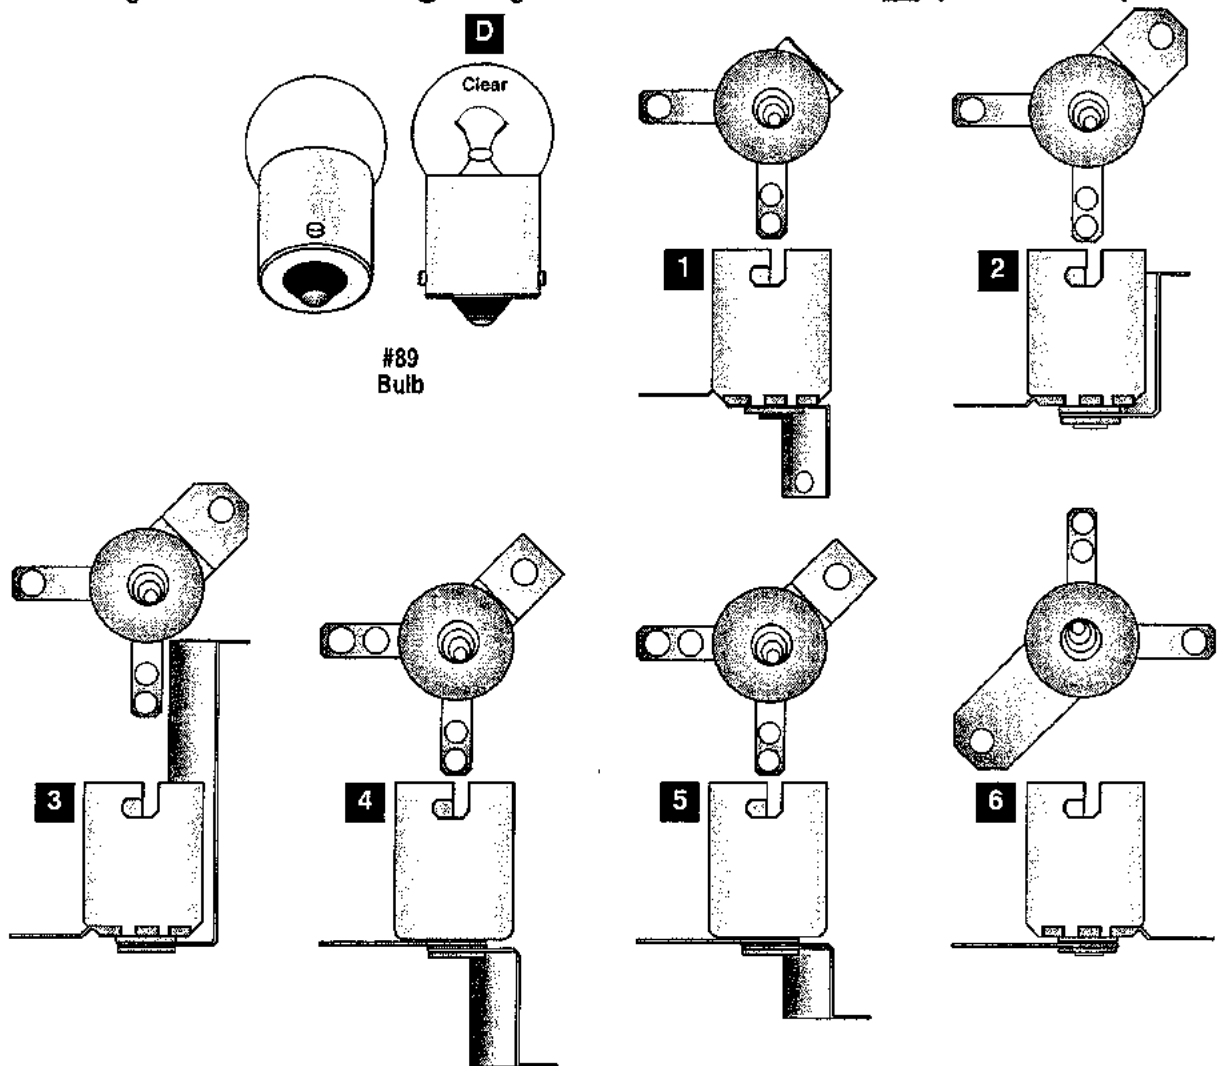


Nr.	BULBS (#89)	SPI PART Nr.		
D	#89 Bulb Heavy Filament	165-5000-89-HF	1	2-Lug Laydown Standard Socket 077-5100-00
			2	2-Lug Stand-Up Short Socket 077-5101-00
			3	2-Lug Stand-Up Long Socket 077-5102-00
			4	2-Lug Stand-Up Rev. Mount Socket 077-5103-00
			5	2-Lug Stand-Up Rv. Mnt. Short Socket 077-5106-00
			6	2-Lug Straight Leg Socket 077-5107-00

Nr.	LARGE BAYONET SOCKETS	SPI PART Nr.
-----	-----------------------	--------------

NOT ALL PARTS LISTED ABOVE ARE USED ON THIS GAME (QUANTITIES PER GAME WILL DIFFER).
COMPARE ACTUAL PART ON GAME TO ABOVE DRAWINGS TO IDENTIFY THE PART NUMBER REQUIRED.



Playfield Top & Bottom - Wedge Base Sockets & Bulbs (Actual Size) †

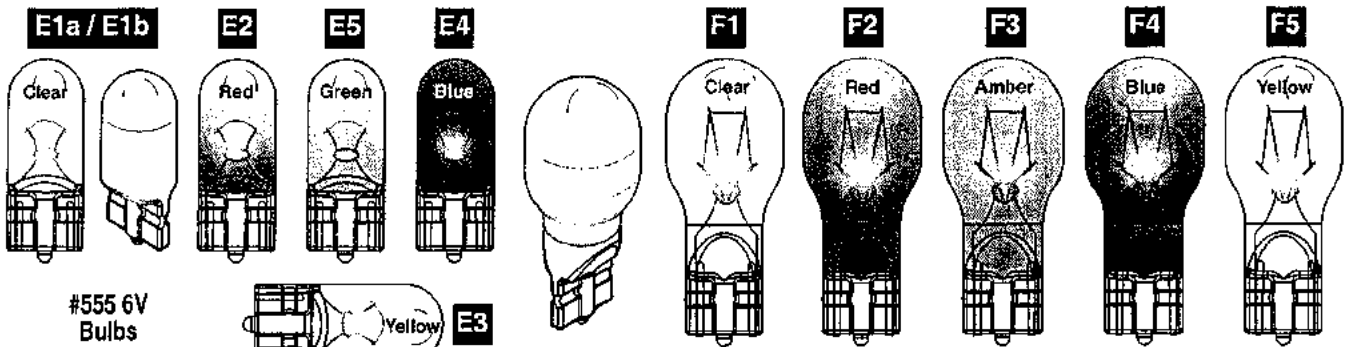



#555 6V Bulbs
#161 12V Bulb

#906 Bulbs


Note: Always replace with same type bulb in original application.

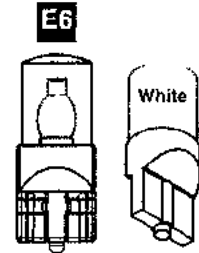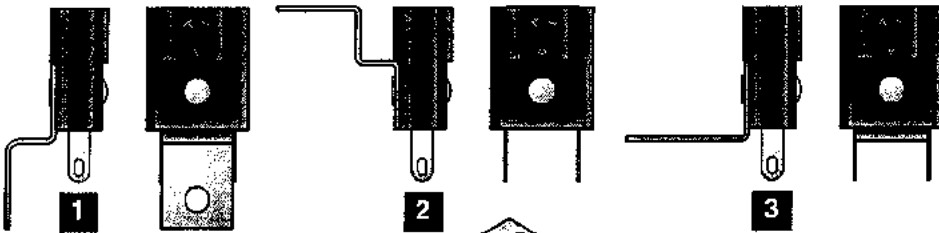


LED Bulb (Wedge Base)

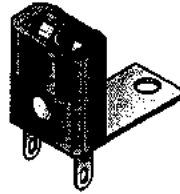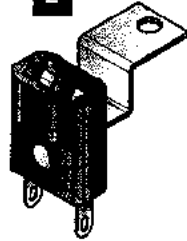



Item 4 Socket does not require brackets. Old stock may include "L" style brackets (each side); do not secure to assembly. Black Wires (Qty. 2) are 12" each.

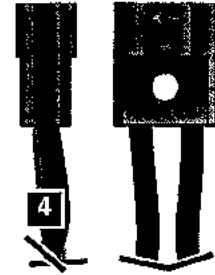


Parts Identification

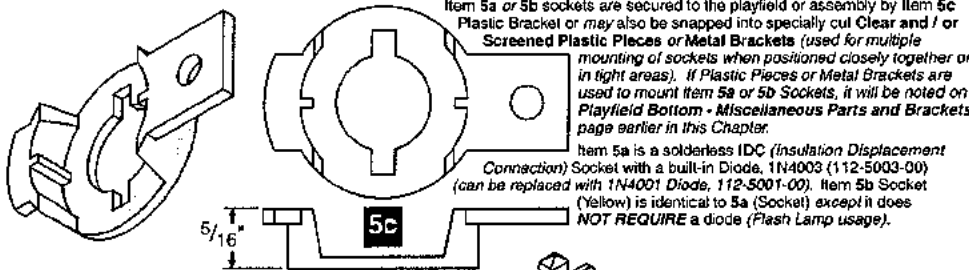

Item 5a is a solderless IDC (Insulation Displacement Connection) Socket with a built-in Diode, 1N4003 (112-5003-00) (can be replaced with 1N4001 Diode, 112-5001-00). Item 5b Socket (Yellow) is identical to 5a (Socket) except it does NOT REQUIRE a diode (Flash Lamp usage).

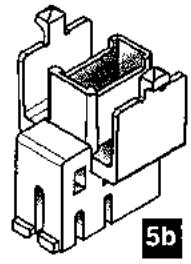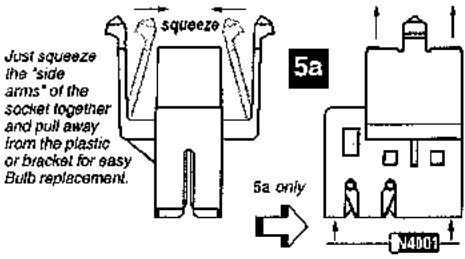

5b is Yellow with No Diode

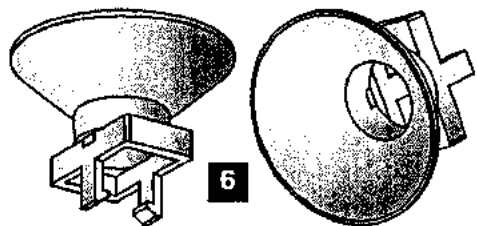


Nr.	BULBS (#555)	SPI PART Nr.	Nr.	BULBS (LED & #906)	SPI PART Nr.
E1a	#555 Wedge Base Bulb (Clear)	165-5002-00	E6	LED Module (WHT) (5v - 6.3v) Wedge Base	112-5024-08
E2-E5	#555 Wedge Base Bulb (Multi-Color)	165-5054-XX	Item E6 Bulb Note:	Typically used with Item 4 Socket in Pop Bumpers.	
Item E2-E5 Bulb Note: Different Colors available (not used in this game) - Red (165-5054-02); Green (165-5054-04); Blue (165-5054-05); Yellow (165-5054-06);					
E1b	#161 12V Wedge Base Bulb (Clear)	165-5032-00	F	#906 Wedge Base Bulb (Clear)	165-5004-00
Item F Note: Different Colors available (not used in this game) - Red (165-5004-02); Amber (165-5004-03); Blue (165-5004-05); Yellow (165-5004-06)					

Nr.	WEDGE BASE SOCKETS	SPI PART Nr.	Nr.	WEDGE BASE SOCKETS	SPI PART Nr.
1	Wedge Base Socket (Laydown)	077-5026-01	5a	IDC Snap-On Socket (Biege)	077-5216-00
2	Wedge Base Socket (Offset)	077-5029-00	5b	IDC Snap-On Socket No Diode (Yel.)	077-5216-01
3	Wedge Base Socket (Laydown GI)	077-5030-00	5c	5/16" Ht. Bracket (White)	545-5760-18
4	W.B. Socket (Bumpers/Special App.)	077-5206-00	6	Light Reflector (Silver Plst.) REF540N	545-5409-01
Note Item 6: Typically used with Item 1 (but will fit on any similar Wedge Base Socket).					

P20 NOT ALL PARTS LISTED ABOVE ARE USED ON THIS GAME (QUANTITIES PER GAME WILL DIFFER). COMPARE ACTUAL PART ON GAME TO ABOVE DRAWINGS TO IDENTIFY THE PART NUMBER REQUIRED.

METALLICA L/E PLAYFIELD PLASTICS

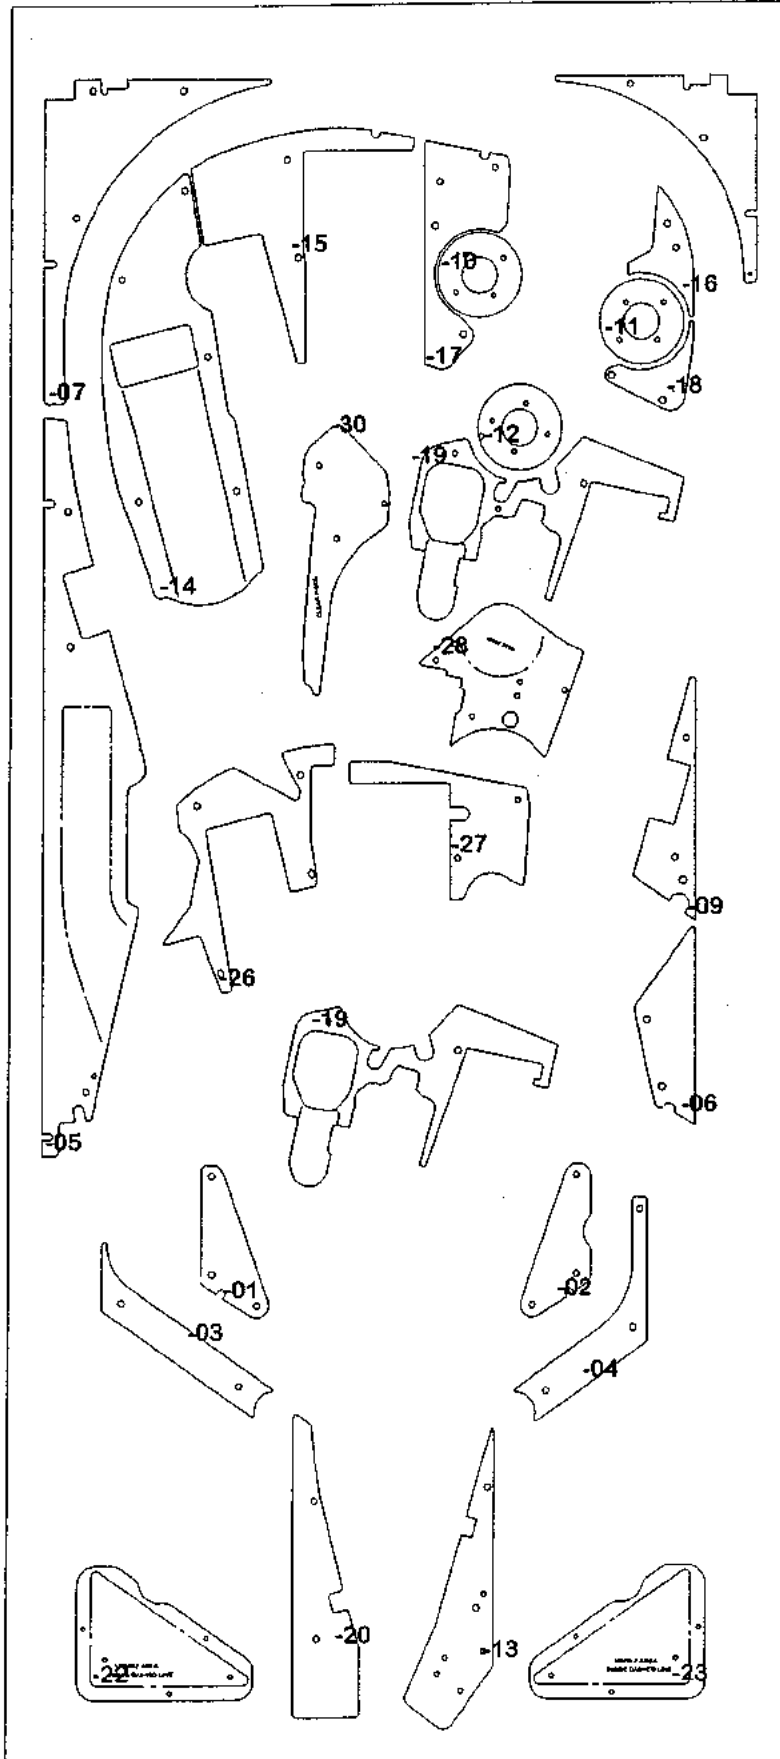

This page is intentionally blank.

Optional Kits available through your Distributor:

Pinball Location Maintenance Standard Kit (for METALLICA Premium Pinball).....502-6002-E3

Standard Kit includes : 8 oz. Novus Wax #2 Fine (Red) (675-0003-01), Cloth, Rubber Rings (used above playfield), Bulbs (Bulb quantities vary and is limited to 25 per type), Fuses (1/per type) and 4 Pinballs. Note: Quanties, sizes and contents subject to change without notice.

Pinball Location Maintenance Deluxe Kit (for METALLICA Premium Pinball) 502-6003-E3

Deluxe Kit includes : Pinball Location Maintenance Standard Kit as described above plus a quantity of Flipper Rebuild Kits. Note: Quantity varies which equals the same quantity of flippers used in this game.

▲ THIS GAME KIT INCLUDES (2) FLIPPER REBUILD KITS ▲

Plastics*Kit (for METALLICA Premium Pinball) 803-5000-E3

Plastics Kit includes: Plastic Sets (830-6187-XX)

Plastics*Kit (for Metallica Pro Pinball).....803-5000-E1

Plastics Kit includes: Plastic Sets (830-6184-XX)

Decals*Kit (for METALLICA Premium Pinball) 802-5000-E3

Decals Kit includes: Decal Set (820-6917-XX) for Pro/Premium/LE

Decals*Kit (for Metallica Pinball Cabinet and Back Box Pro/Premium).....802-5001-E1

Decals*Kit (for Metallica Pinball Cabinet and Back Box Premium 2 /LE).....802-5001-E3

***Attention:** No individual Plastic or Decal can be ordered separately, unless noted otherwise. Plastics & Decals are subject to change without notice during and / or after production. Key Fobs subject to availability and may or may not be included in the plastic set. All designs, shapes & pieces used subject to change without notice. Kit contents subject to change. Service Bulletin(s) will announce any critical changes, if warranted. The last 2-digits shown on plastics or decals are for reference only.

METALLICA LE Parts available through your Distributor:

Flipper Button Assy Orange.....	500-5921-37
Leg Assy Assy Sparkle Silver.....	500-5921-98
Front Molding Sparkle Silver.....	500-6882-02-98
Left Side Armor Sparkle Silver.....	535-9596-98L
Right Side Armor Sparkle Silver.....	535-9596-98R
Pivot Hinge Right Sparkle Silver.....	535-7799-98R
Pivot Hinge Left Sparkle Silver.....	535-7799-98L
Bottom Arch Sparkle Silver.....	535-0645-98
Metallica LE Mirror Backglass.....	830-52E3-00
Cabinet & Back-box Decals sold as a complete set.....	802-5001-E3
part#820-66E3-01 left back-box,820-66E3-02 right side back-box,820-66E3-03 left side cabinet,820-66E3-04 right side cabinet,820-66E3-05 front cabinet	

METALLICA Premium Monster Parts available through your Distributor:


Flipper Button Assy Red.....	500-5026-32
Leg Assy Assy Black.....	500-5921-50
Front Molding Black New Style W/O Hole.....	500-6882-02-00
Left and Right Side Armors.....	535-7297-02
Pivot Hinge Right Black.....	535-7999-01
Pivot Hinge Left Black.....	535-7999-00
Bottom Arch Wrinkle Black Power Coat.....	535-0645-00
Metallica Premium Monster Backglass.....	830-52E3-01
Cabinet & Back-box Decals sold as a complete set.....	802-5001-E3
Consist of the following parts: 820-66E3-01 left back-box,820-66E3-02 right side back-box,820-66E3-03 left side cabinet,820-66E3-04 right side cabinet,820-66E3-05 front cabinet.	

METALLICA Premium Road Case Parts available through your Distributor:

Flipper Button Assy White.....	500-5026-38
Leg Assy Assy Black.....	500-5921-50
Front Molding Black New Style W/O Hole.....	500-6882-02-00
Left and Right Side Armors.....	535-7297-02
Pivot Hinge Right Black.....	535-7999-01
Pivot Hinge Left Black.....	535-7999-00
Bottom Arch Wrinkle Black Power Coat.....	535-0645-00
Metallica Premium Road Case Backglass.....	830-52E2-00
Cabinet & Back-box Decals sold as a complete set.....	802-5001-E2
Consist of the following parts: 820-66E2-01 left back-box,820-66E2-02 right side back-box,820-66E2-03 left side cabinet,820-66E2-04 right side cabinet,820-66E2-05 front cabinet.	

Backbox [S.A.M. System] - Parts

TOURNAMENT PINBALL

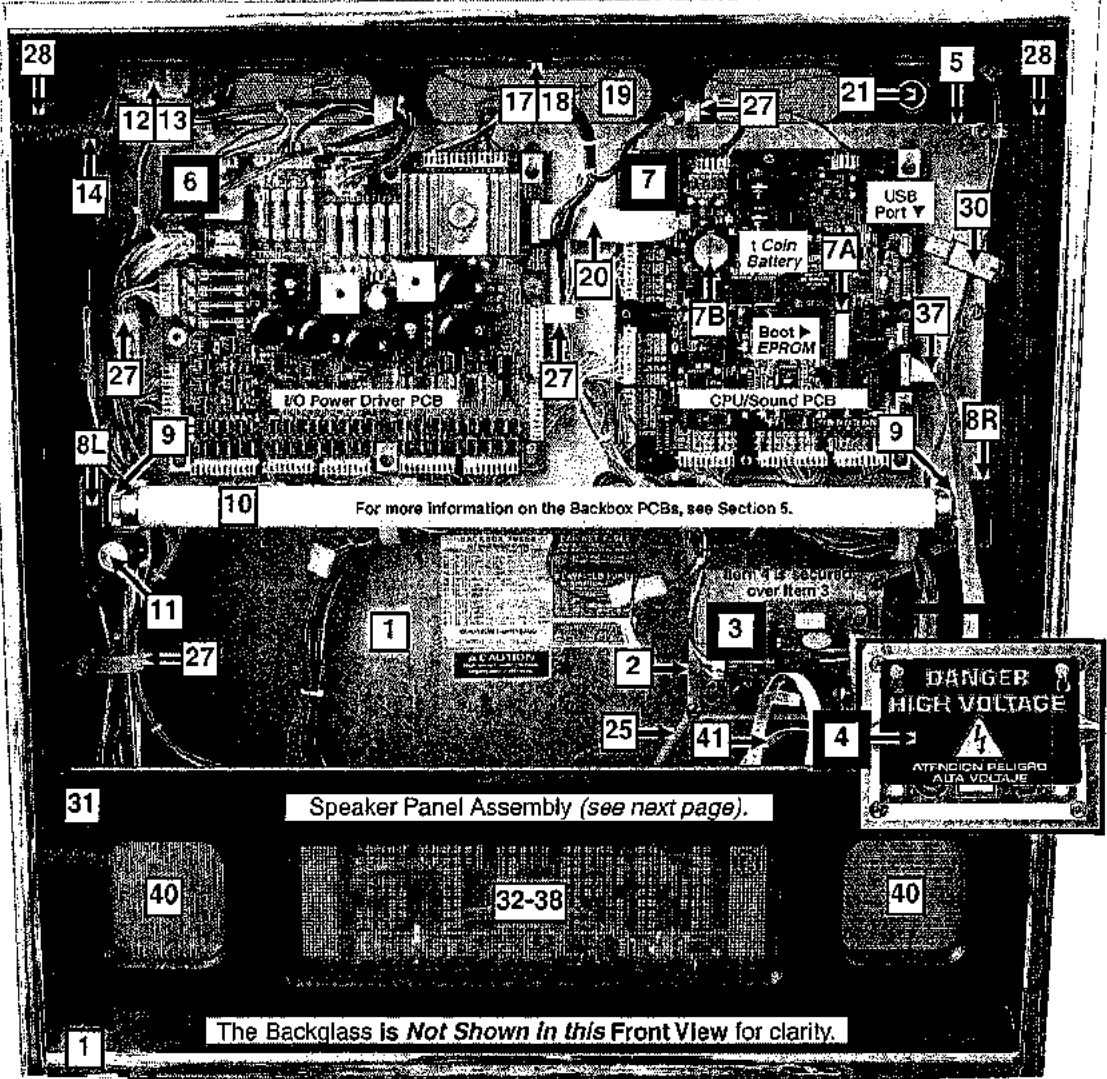

For more information on the Backbox PCBs, see Section 5.

Speaker Panel Assembly (see next page).

The Backglass is Not Shown in this Front View for clarity.

Parts Identification


Nr.	BACKBOX PARTS	QTY.	SPI PART Nr.
1	Backbox METALICA™ (No Parts)	1	525-5631-17
<i>Item 1 Note: Chrome T-Molding is installed and cannot be ordered separately. Fuse Description (820-6384-00) and High Voltage Caution (UL) (820-6092-01 & -02) Decals.</i>			
2	PCB Metal Mounting Plate [Display]	1	535-9769-00
3	Display Power Supply PCB	1	520-5138-00
<i>Item 3 is secured to bottom by: #8-32 X 3/8" SHWH Swg. (Zinc) (Qty. 2) (237-5975-00)</i>			
4	Plastic Cover [DANGER HIGH VOLTAGE]	1	830-6053-00
<i>Items 3 & 4 are secured to top by: 1-1/4" X 3/8" Plastic Spacer Gray (Qty. 2) (254-5000-05) and #8-32 X 1-3/4" SHWH Scr (Zinc) (Qty. 2) (237-5975-28)</i>			
5	PCB Metal Mounting Plate [I/O+CPU]	1	535-9664-00
<i>Items 2 & 5 are secured to Item 1 by: #8 X 1/2" SHWH AB (Zinc) (Qty. 1/hole) (234-5101-00) and #10 Washer 7/32" I.D. X .5" O.D. X 1/16" Thick (Qty. 1/hole) (242-5003-00)</i> <i>Note: Where a Wire Clamp (Item 27) is mounted, a #10 Washer is not required.</i>			
6	I/O Power Driver LED	1	520-5317-00
7	CPU/Sound PCB LE GAMES NEW USB	1	520-5337-00
<i>7A: 8MB EPROM #M27C801-100F1 (960-5016-00)</i> <i>Ordering Note: Programmed EPROM (965-8007-SAM)</i> <i>7B: Coin Cell Battery (CR2430 3V) (600-0644-01)</i> <i>For USB Memory Stick Information, see Item 30 on the next page.</i>			
<i>Items 6 & 7 are secured to Item 5 by: #8-32 X 3/8" SHWH Swage (Zinc) (Qty. 10) (237-5975-00) and 1/4" Sil. Rtn. Spacer White (Qty. 5 [I/O] / Qty. 4 [CPU]) (254-5007-05)</i>			
8L	Fluorescent Light Bracket (Left Style)	1	535-7739-00
8R	Fluorescent Light Brckt. (Right Style)	1	535-7739-01
<i>Items 8L & 8R are secured to Item 1 by: #10-24 X 1-1/4" Carriage Bolt Square Neck (Qty. 2/per) (231-5012-00), #10-24 Keps Nut (Qty. 2/per) (240-5207-00) and 3/4" X 3" Reinforced Strapping Tape (Qty. 1, sold in 12" length only) (626-5040-00)</i>			
9	Fluorescent Lamp Holder (Socket)	2	077-5214-01
<i>Item 9 is secured to Items 8L and 8R by: #6-32 X 5/8" PPH MS (Sems) Zinc (Qty. 1/per) (232-5203-00) Lock-In Floor Bulb with Yellow Socket Clip (Qty. 1/per) (545-6271-00)</i>			
10	Fluorescent Tube 24" (F18TBCW)	1	165-5061-00

Nr.	BACKBOX PARTS	QTY.	SPI PART Nr.
11	Starter - Fluorescent (FS2 Light)	1	165-5011-01
<i>Item 11 is secured to Item 8L by: #4-40 X 1/2" PPH MS (Sems) Zn. (Qty. 2) (237-5813-00)</i>			
12	Ballast Mounting Plate	1	535-8657-00
13	Ballast CU452-W 1/2" Core 120v 60 Hz 13W	1	010-5015-00
<i>Items 12 & 13 are secured to Item 1 by: #8 X 1/2" SHWH AB (Zinc) (Qty. 2) (234-5101-00)</i> <i>>>> CAUTION - VERY HOT" Decal (820-6266-00)</i> <i>EU / UK Only : Ballast, 5/8" Core 50/60 Hz (010-5015-01)</i>			
14	Ground Strap (5")	1	600-5006-05
15*	Roto Lock Male (on Cabinet)	1	355-5006-01
16	Roto Lock Female (R2-0002-02)	1	355-5006-02
<i>Item 16 is secured by: #10-24 X 1-3/4" CBSN (231-5022-00), #10-24 Keps Nut (Qty. 2) (240-5207-00), #10-24 X 2" CBSN (231-5045-00) and #10 Washer 7/32" I.D. X .5" O.D. X 1/16" (Qty. 5) (242-5003-00). See opposite next page.</i>			
17	Lock Mounting Plate	1	535-0072-00
18	Lock 5/8" Barrel, 3/4" L, 1.5" Flat Cam	1	355-5055-00
<i>Items 17 & 18 are secured by: #8 X 1/2" TP Torx T20 Black (Qty. 2) (237-6173-05)</i>			
19	Back Vent Grill 2-1/2" X 18"	3	545-5072-02
20	Ribbon Cable, 20-Pin (3.5")	1	036-5000-350
<i>Item 20 connects the I/O Pwr. Dvr. PCB to the CPU/Sound PCB. For 14 Pin see next page.</i>			
21	Button Hole Plug (Blk) (Happ #52-6214-00)	1	500-6566-00
<i>Item 21 plugs the Access Hole required if using optional BETABrite Sign or Data cables.</i>			
22	Header Sign TOURNAMENT PINBALL	1	545-6133-00
23	Bracket, Tournament Sign (Black)	2	535-0081-02
<i>Item 22 is mounted to Item 23 with #8-32 X 3/8" PPA screw (Qty. 2/per) (232-5303-01) & #8-32 Nylock Nut (Qty. 2/per) (240-5102-00). Item 23 is secured to Item 1 by: #8 X 5/8" PPH (Qty. 2/per) (232-5101-01).</i>			


PARTS TABLE & VIEWS CONTINUED ON THE NEXT PAGE ▶

P4

Backbox [S.A.M. System] - Parts

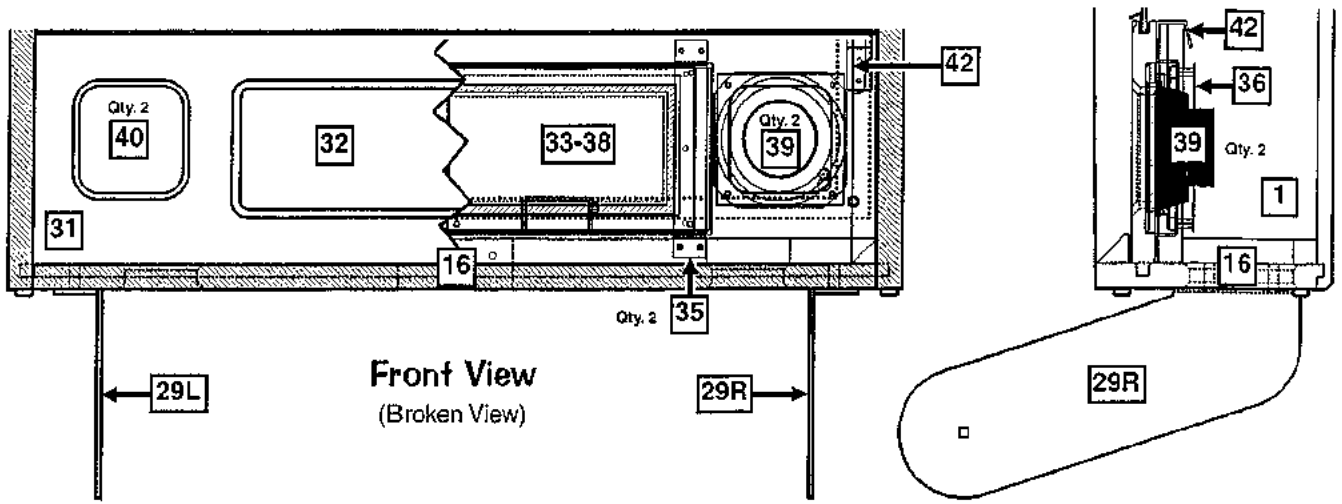

Speaker Panel [S.A.M. System] - Parts

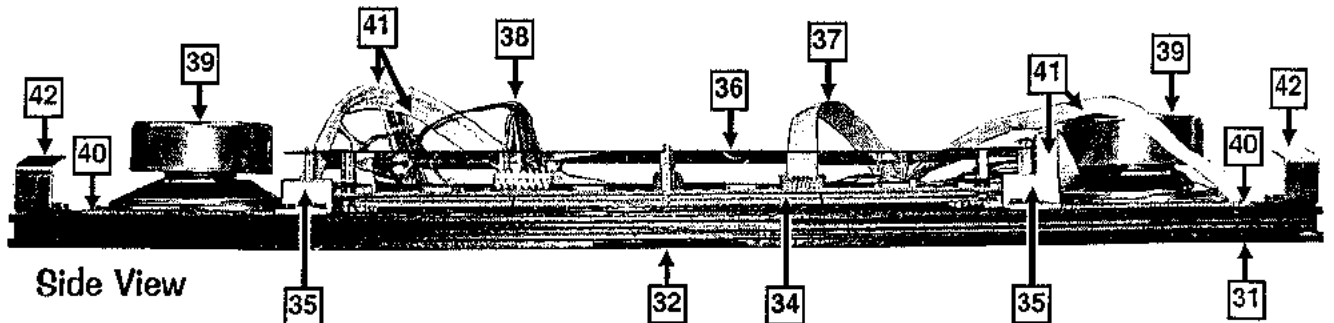

Nr.	BACKBOX PARTS	QTY.	SPI PART Nr.	Nr.	SPEAKER PANEL PARTS	QTY.	SPI PART Nr.
← PARTS TABLE & VIEWS CONTINUED FROM THE PREVIOUS PAGE.							
25	Braided Wire (1-1/2 Feet)	1	600-5001-00	31	Speaker Panel (Black Wood)	1	525-5515-00
Item 25 is secured by: Staple 5/16" (Qty. 23) (631-5000-00)				32	Plastic Shield (Display Front Cover)	1	545-5884-00
26*	Zip Cable Tie (Screw Down Style)	4	040-5005-00	Item 33 is secured to Inside Item 31 by: #6 X 3/8" SHWH AB (Zinc) (Qty. 8) (234-5000-00)			
Item 26 is secured to Inside bot. by: #8 X 1/2" SHWH AB (Zinc) (Qty. 1/each) (234-5101-00)				33*	Foam 3/16" Thick X 1/4" Wide X 12"	6	626-5026-00
27	Clamps (Multiple Sizes)	35	040-5000-XX	Above Item 33 is self-adhesive. Located between Items 32-34. Sold in 12" Lengths only.			
Item 27 secured by: #8 X 1/2" SHWH AB (Zinc) (Qty. 1/each) (234-5101-00) For the following sizes, replace -XX with: 1/4" Double = -23 (Qty. 5); 1/2" Single = -06 (Qty. 3); 3/4" Single = -08 (Qty. 4); 1" Single = -09 (Qty. 1); 1-1/4" Double = -30 (Qty. 1)				34	// EURO ONLY RoHS // 128 X 32 DM PCB	1	520-5052-15
28	Foam 3/16" Thick X 1/4" Wide X 12"	6	626-5026-00	// EURO ONLY RoHS // Dot Matrix Bezel 545-6281-00			
Above Item 28 is self-adhesive. 17.5" strip on each side. Sold in 12" Lengths only.				35	Dot Matrix Display Mounting Bracket	2	535-8368-01
29L	Pivot Hinge Purple (Left Style)	1	535-7999-77	Item 34 is secured to Item 35 by: 3/16" X 3/8" Spacer Gray (Qty. 4) (254-5008-03) and #6-32 X 1/2" SHWH Swage (Serr) Zinc (Qty. 4) (237-6976-03)			
29R	Pivot Hinge Red (Right Style)	1	535-7999-23	36	Plastic Shield (Display Back Cover)	1	830-6040-00
Items 29L-29R are secured to Backbox by: 1/4" X 20 X 1-1/4" C.B. Sq. Neck (Qty. 4) (231-5003-00) and 1/4" X 20 Flange Nut (Qty. 4) (240-5300-00)				37	Ribbon Cable, 14-Pin (33")	1	036-5260-33
Items 29L-29R are secured to Cabinet by: Spacer Hex Nut 1/2" O.D. X 1/4-20 X 1/2" TD (Black) (Qty. 1/each) (254-5042-00), Nylon Spacer (Black) (Qty. 1/each) (242-5084-00), 1/4-20 X 1/2" Carriage Bolt Square Neck (Black) (Qty. 1/each) (231-5072-00) and Washer 1" O.D. X 1/2" I.D. X 1/16" (Black) (Qty. 1/each side, only if required) (242-5087-00)				Item 37 (14-Pin) connects the 128 X 32 Dot Matrix Display PCB to the CPU/Sound PCB.			
30*	Memory Stick USB 1.1+ [Generic] 64MB	1	970-0064-00	38	Display Cable (Wiring Harness)	1	036-5454-01
	Memory Stick USB 1.1+ [Generic] 128MB	1	970-0128-00	// EURO ONLY RoHS // LED Display Adapter Harness 036-5520-00			
Item 30 was not included with your game. Read the inside cover or go on-line for more info. To order with the latest game code copied onto it, add -A3 to the Part Nr. (970-0128-00-A3). File(s) can be downloaded from our website (Files are 25MB or larger, DSL or Fast Modem recommended). Not all manufacturers of Memory Sticks are compatible with our system. Test it out. If it doesn't work properly, return your purchase and order the memory stick through your local pinball distributor. (Stem Pinball Memory Sticks guaranteed compatible) (ASM, REF. 505-6002-A3-A3, Items 1-42 Only, [29-30 not included in assembly])							
39	Speaker (Shld.) 4 x 4" 8Ω OHM MG	2	031-5004-02	39	Speaker (Shld.) 4 x 4" 8Ω OHM MG	2	031-5004-02
40	Speaker Grill (Chrome w/Artwork)	2	535-8081-04	40	Speaker Grill (Chrome w/Artwork)	2	535-8081-04
Items 39-40 are secured by: #8 X 1/2" SHWH AB (Black) (Qty. 4/each) (234-5101-01)				41	Ground Strap (25") [2 per : Items 35 & 39]	4	600-5006-25
41	Ground Strap (25") [2 per : Items 35 & 39]	4	600-5006-25	42	Speaker Panel Hook Bracket	2	535-7009-02
42	Speaker Panel Hook Bracket	2	535-7009-02	Item 42 is secured by: #6 X 1/2" SHWH AB (Zinc) (Qty. 2/each) (234-5101-00)			

Take Note:

* An asterisk (*) indicates item(s) are not noted in the pictorials.



Nr.	BACKGLASS PARTS	QTY.	SPI PART Nr.	Nr.	BACKGLASS PARTS	QTY.	SPI PART Nr.
i*	Glass (Tempered) 25.906" X 19.187" X .125"	1	660-5038-02	iv*	Bottom Plastic Lift Channel - 26"	1	545-6313-01
ii*	Metallica Premium™ Film Art (#E2)	1	830-52E2-00	v*	Plastic Edging (Left/Right) - 18-1/8"	2	545-5018-14
iii*	Top Plastic Channel - 26"	1	545-5018-15	Items i-v are secured to Item i by: 3M Tapes (Double-Sided), 12" (Qty. 1) (626-5080-00) Notes: Only 6" required, sold in 12" lengths only.			

(ASM, REF. 515-5450-00-A9, Items i-v)


Parts Identification

Cabinet - Parts & Switches

For Backbox Parts see the previous two pages.

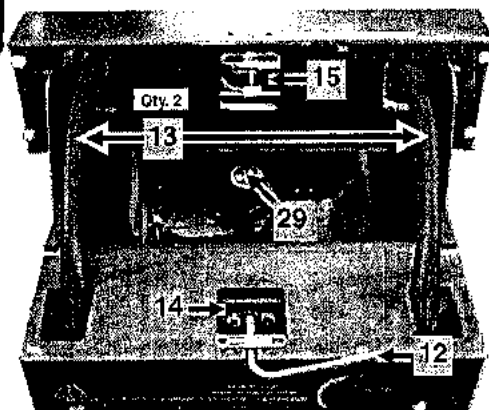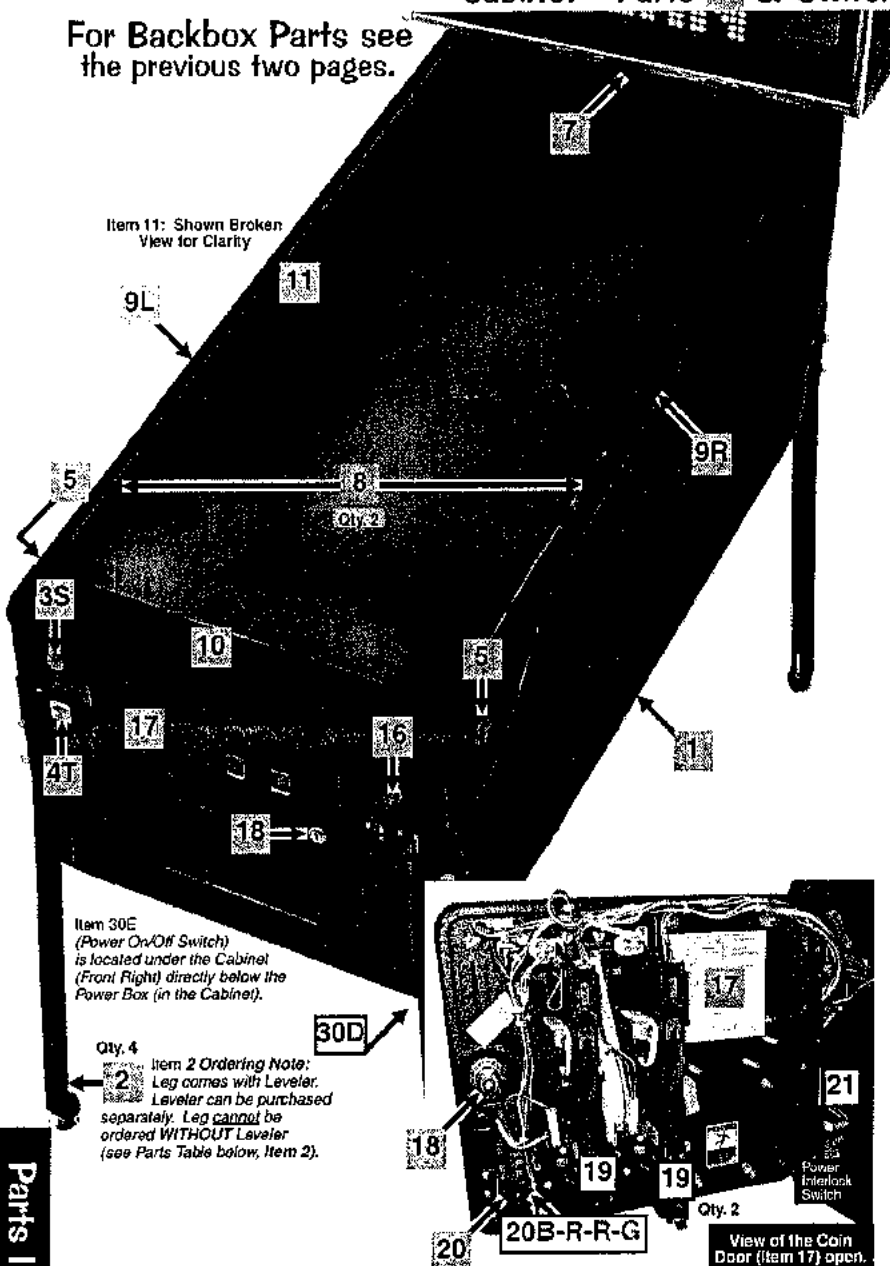


View of the back of the Cabinet with the Backbox in the down position.

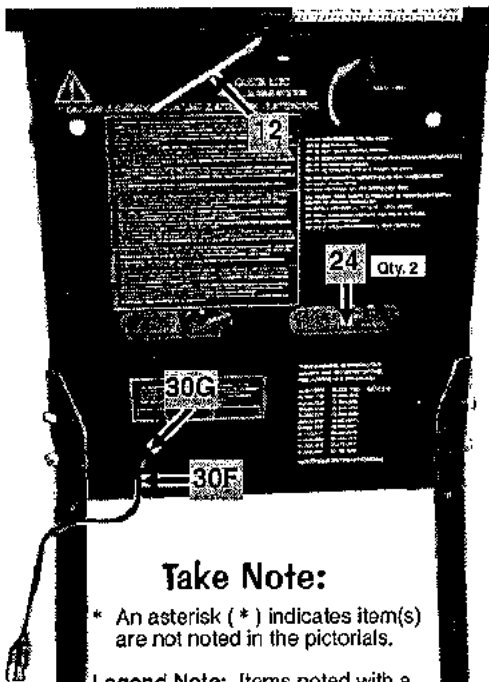

Take Note:

* An asterisk (*) indicates item(s) are not noted in the pictorials.

Legend Note: Items noted with a cyan square are Cabinet Parts. Items noted with a white square are Switches.

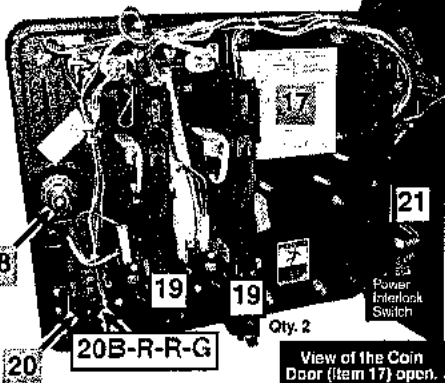




View of the Coin Door (Item 17) open.

Parts Identification

Nr.	CAB. PARTS & SWITCHES	QTY.	SPI PART Nr.
1	Screened Cabinet METALLIC™ (No Parts)		525-5395-15P
2	Black Leg with Leveler Asm. Item 2 is secured by: Leg Bolt Back Plate (535-5703-00) and Leg Bolt 3/8" X 16 X 2-1/2" Hex 5/8" Hd. (2/per) (231-5001-01) Leg Leveler ONLY (3/8"-16 X 3") (500-5017-00).	4	500-5921-50
3S	Start Button (Green Round) with Sw. + Lamp	1	500-6388-44-LED
4T	Tournament Button (Yel. Sq.), w/Sw. + Lamp Item 3S & 4T includes the Switch & Lamp (No Wiring; desolder old wiring where required). Switch or Bulb replacement: \odot TWIST \cup LOCK (-TL) >> NO LAMP-IT << Assembly Parts Included: Microswitch (180-5174-00); #555 Wedge Base Clear Bulb (165-5002-00); If 4T is not desired, use optional Button Plug Black (500-6566-00). Requires 3-Lug Terminal Strip (055-5204-03) and Diodes, 1N4004 (Qty. 2) (112-5003-00) inside cabinet under button(s) for Lamp Operation (Diode for Switch, located on Switch.)	1	500-6587-06-TL
5	Flipper Button (White) Assy (No Sw.) Item 5 is secured by: Pal Nut for Flipper Button (Metal) (Qty. 2/per) (240-5003-01) and Pal Nut inside cabinet secured by: #6 X 1/2" SHWH AB (Zinc) (Qty. 1/per) (234-5101-00) and Washer (Zinc), .187" ID X .875" OD X .048" Thick (Qty. 1/per) (242-5058-00)	2	500-5026-38
6S	Flipper Switch Single Assembly Assembly Parts Included: Flipper Switch Stack Single (Paliney Contact) (180-5160-01) and Capacitor - Ceramic .05 Mfd 25 volt (130-5001-00) Item 6S/6D are secured to Cab. by: #6 X 1-1/4 SHWH AB (Zinc) (Qty. 2/per) (237-5959-00)	2	500-6889-01
6D	Flipper Switch Double Assembly Assembly Parts Included: Flipper Switch Stack Double (Paliney Contact) (180-5164-01) and Capacitor - Ceramic .05 Mfd 25 volt (130-5001-00) Item 6S/6D are secured to Cab. by: #6 X 1-1/4 SHWH AB (Zinc) (Qty. 2/per) (237-5959-00)	0	500-6890-01

Nr.	CAB. PARTS & SWITCHES	QTY.	SPI PART Nr.
7	Rear Glass Channel 20-3/8" Length	1	545-5038-00
8	Plastic Channel 42-5/8" Lg. (Left/Rt.)	2	545-5017-00
9L	Side Armor (Left)	1	535-7297-02
9R	Side Armor (Right)	1	535-7297-02
Items 9L & 9R are secured @ front & side by: Fern Stud 1/4 X 1" Flange Head Black (Qty. 1/per) (237-6116-01); 1/4-20 Flange Nut (Qty. 1/per) (240-5300-00) and #8 X 1/2" T20 Tamper Proof Black (Qty. 5/per) (237-6173-05); @ rear (backbox) by: #10-24 X 1" Sq. Neck Carp. Bolt Black (Qty. 1/per) (231-5021-00) and #10-24 Hex Nut (Qty. 1/per) (240-5202-00)			
10	Front Molding (Black) < NO BUTTON HOLE > Item 10 includes: Self-Adhesive Foam Rubber 3/8" X 3/16" X 20-3/8" (3) (626-5001-00) Item 10 works with item 22 (next page) ONLY	1	515-7495-00
11	Playfield Glass (Tempered) 21" X 43" X 3/16"	1	660-5001-00
12	Hex Key Allen Wrench 5/16"	1	777-0001-00
13	Corrugated Tubing Black 1" x 2.6" Lg. Above Item 13 covers the Cable Wiring Harnesses going into the Backbox from the Cabinet.	1	605-5008-03
14	Roto Lock Male (R2-0055-02) Item 14 is secured by: #10-24 X 1-3/4" Carriage Bolt Square Neck (Qty. 2) (231-5022-00), #10-24 Nylon Stop Nut (Qty. 2) (240-5206-00) and #10 Washer, 7/32" ID X 1/2" OD X 1/16" Thick (Qty. 2) (242-5003-00)	1	355-5006-01
15	Roto Lock Female (on Backbox)	1	355-5006-02
16	Ball Shooter (Plunger) Assembly	1	500-6146-00-04

Cabinet - Parts & Switches Continued

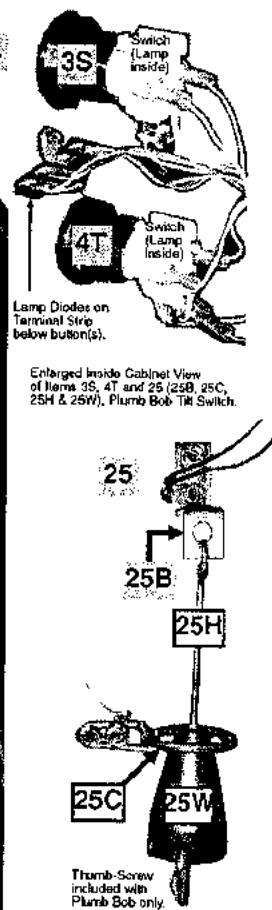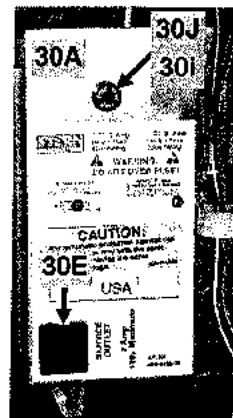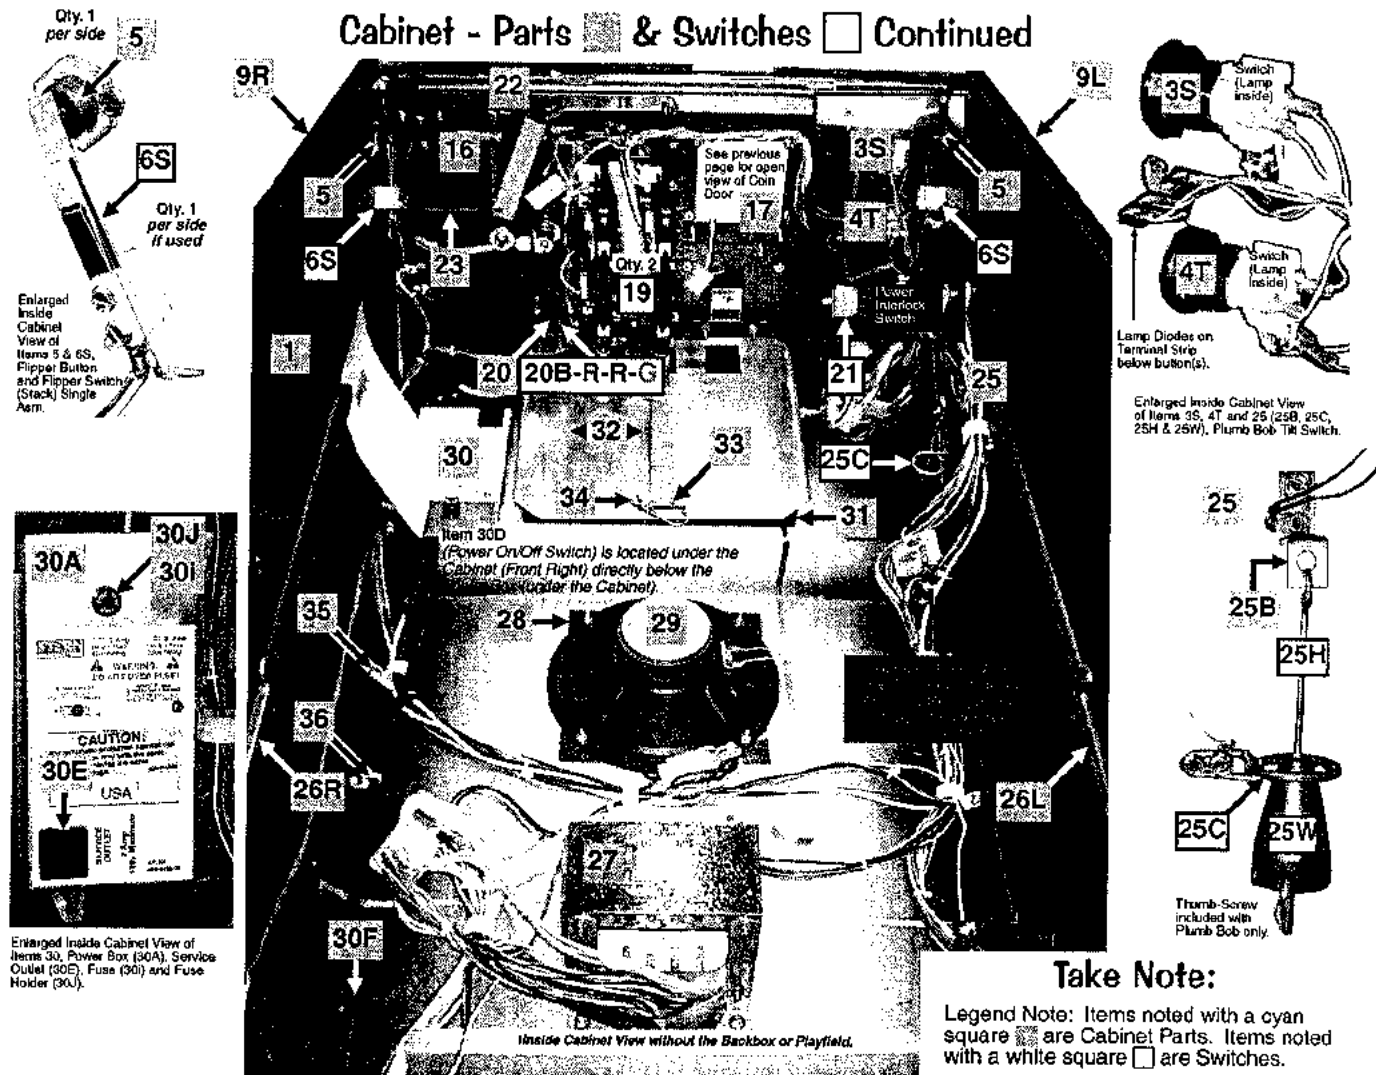


Nr.	CAB. PARTS & SWITCHES	QTY.	SPI PART Nr.	Nr.	CAB. PARTS & SWITCHES	QTY.	SPI PART Nr.
PARTS TABLE & VIEWS CONTINUED FROM THE PREVIOUS PAGE.							
17	Coin Door 2-Cht 5V Up-Strk. 4-Button Bracket	1	501-5018-172	27	Transformer 5.7VAC (with Ballast Winding)	1	010-5012-01
Item 17 is secured by: 1/4"-20 X 1-1/4" Carriage Bolt Square Neck (Qty. 4) (231-5003-00) 1/4"-20 Flange Nut (Qty. 4) (240-5300-00) and End Washer 1/4" I.D. X 1" O.D. (Qty. 3) (242-5008-00). Note: For Coin Door other than USA call Technical Support for SPI Part Nr.				Item 27 is secured by: 1/4"-20 X 5/8" PPH MS (Zinc) (Qty. 4) (237-6854-00) and 1/4" Split Lock Washer (Qty. 4) (244-5000-00)			
18	Lock 5/8" Barrel, 3/4, Flt. Cam	1	355-5055-00	28	Woofers (Speaker) Grill 7" X 7"	1	545-5072-03
Coin Door Switch (USA) (Happ)				29	Woofers 8" or Round 8010 4Ω	1	031-5007-01
19	ALT. SW.: 19C: Coin Door Switch (USA) (Coin Control) (180-5024-00) ALT. SW.: 19J: Coin Door Switch (Japan) (180-5091-00)	2	180-5024-01	Items 28 & 29 are secured by: #6-32 X 1-1/4" Fin Shank Screw (Qty. 4) (237-5883-00) and #8-32 Keps Nut (Qty. 4) (240-5008-00)			
4-Button Bracket (for Service Menu Buttons)				Power Input Box Asm. + Univ. Cable			
20	SWITCH: 20B: Push-Button Service Switch (Black) (180-5192-00) SWITCH: 20R: Push-Button Service Switch (Red) (Qty. 2) (180-5192-02) SWITCH: 20G: Push-Button Service Switch (Green) (180-5192-04)	1	535-6860-04	30A: Power Box (No Parts) Mounting Frame (535-5932-00) 30B*: Line Filter (150-5000-00) 30C*: Varistor TRN159211KM (Domestic) (150-5001-00) or Varistor TRM15G431KM (Euro) (150-5002-00) SWITCH: 30D: On/Off Rocker Switch + Bracket Assembly (515-7085-00) 30D incl.: Switch, APEM R2101C5NBB (180-5001-03) + Bracket (535-8318-00) 30E: Service Outlet (3-Prong / US) (180-5008-01) / International N/A 30F: Line Cord 10' RCJ 3" + Ring Terminal Asm. (515-6566-00) 30G: Recessed (Black) Cup (rear of Cabinet) (545-5122-00) 30H*: Snap Bushing 9/16" (White) (280-5001-01) 30I: Fuse 8 Amp 250V Slo-Blo (Domestic) (200-5000-05) or Fuse 5 Amp 250V Slo-Blo (International) (Qty. 2) (200-5003-00) 30J: Fuse Holder (205-5001-00)			
Ordering Note: Securing hardware for switches included. Decal in kit sold separately.				Universal Cable & Jumper Caps (all voltage variations): See the Yellow Pages, Page y 10.			
21	Power Interlock-Memory Protect Switch Asm.	1	500-5808-05	31	Cash Box Plastic Bottom	1	545-5090-00
Assembly Parts Included: Mounting Bracket (535-8794-00), Power Interlock (Playfield) Switch (180-5136-00) and secured by: #8 X 1/2" SHWH AB (Zinc) (Qty. 2) (234-5101-00).				32	Cash Box Cover (Validator)	1	535-5013-03
22	Front Molding Lockdown Asm.	1	500-6881-00	33	Cash Box Lock Bracket (U-Wire)	1	535-7562-00
Item 22 is secured by: #10-24 X 1-1/4" Carr. Bolt (Qty. 2) (231-5012-00) and #10-24 Keps Nut (Qty. 2) (240-5207-00).				Item 33 is secured by: #8 X 5/8" SHWH AB (Green) (Qty. 2) (234-5102-04)			
23	Lockdown Spring (connected to handle)	1	265-5008-00	34	Large Hair-Pin Clip	1	535-7772-00
Item 23 is secured by: #8 X 1/2" SHWH AB (Zinc) (Qty. 1) (234-5101-00) and #10 Washer, 7/32" ID X 1/2" OD X 1/16" Thick (Qty. 1) (242-5003-00).				35	Clamps (Multiple Sizes)	35	040-5000-XX
24	Grills 2-1/2" X 18" (on Back & Bottom)	3	545-5072-02	Item 35 is secured to Item 1 by: #8 X 1/2" SHWH AB (Zinc) (Qty. 1/each) (234-5101-00). For following sizes, replace -XX with: 3/4" Single = -08 (Qty. 9); 1-1/2" Single = -10 (Qty. 3)			
Plumb Bob Tilt Switch Individual Parts Only Ind. Parts Only				36	Zip Cable Tie (Screw Down Style)	4	040-5005-00
25	SWITCH: 25B: Bracket for Hanger Wire (535-5221-00) 25C: Contact Wire Form (535-7563-01) 25H: Hanger Wire (535-5319-02) 25W: Plumb Bob Weight (535-5029-00) (includes Thumb-Screw)			Item 36 is secured by: #8 X 1/2" SHWH AB (Zinc) (Qty. 1/each) (234-5101-00)			
Item 25B is secured to Cabinet by: #8 X 5/8" SHWH AB (Zinc) (Qty. 4) (234-5002-00).				37†	Meter +12VDC with Bracket Optional	opt. G-0053-013-102	
26L	Slide & Pivot Support Bracket (Left)	1	535-5989-00	† Meters (Diode included) are optional and were not included in this Pinball Machine. Order without the bracket use G-0053-013-102A. More information or Qs? Call Technical Support.			
26R	Slide & Pivot Support Bracket (Right)	1	535-5990-00				
Items 26L & 26R are secured by: #10-24 X 1-1/4" Carriage Bolt Square Neck Black (3/each) (231-5012-00) and #10-24 KEPS Nut (3/each) (240-5207-00)							

Parts Identification


Playfield Top – Miscellaneous Parts

<u>Number</u>	<u>Description</u>	<u>QTY</u>	<u>SPI Part NR.</u>
P/F	Playfield Screened w/ Inserts & No Parts	1	830-5100-E2
P/F	Playfield Complete w/ Inserts & All Parts	1	505-6005-E2
1	Metal Arch Assy. (Pre -BLK-00) (L/E-SLV-98)	1	535-0645-XX
2	Instruction Card	1	755-51E1-12-Y
3	Coin Card	1	755-5400-02-Y
4	Chrome Lamp Reflector	4	545-5409-01
5	Bubble Level Assembly	1	500-6815-00
6	Pinball (Steel) 1-1/16"	4	260-5000-00
7	Shooter Lane Ramp	1	535-8145-00
8	Playfield Hanger Brackets	2	535-8385-00
9	Right Metal Ramp	1	510-7453-00
10	LEFT Metal Ramp	1	510-7452-00
11	Right Wire Ramp	1	515-8652-00
12	Left Wire Ramp	1	515-8653-00
13	Spinner Assembly (Brkt 535-0179-00) (Trgt 515-7088-00)	2	511-5113-00
14	Sparky Assembly	1	500-7274-00
15	Hammer Assembly	1	511-7481-00
16	Snake Head	1	545-7828-00
17	Grave Marker	1	500-9810-00
18	Disappearing Ball Assembly	1	511-7475-00

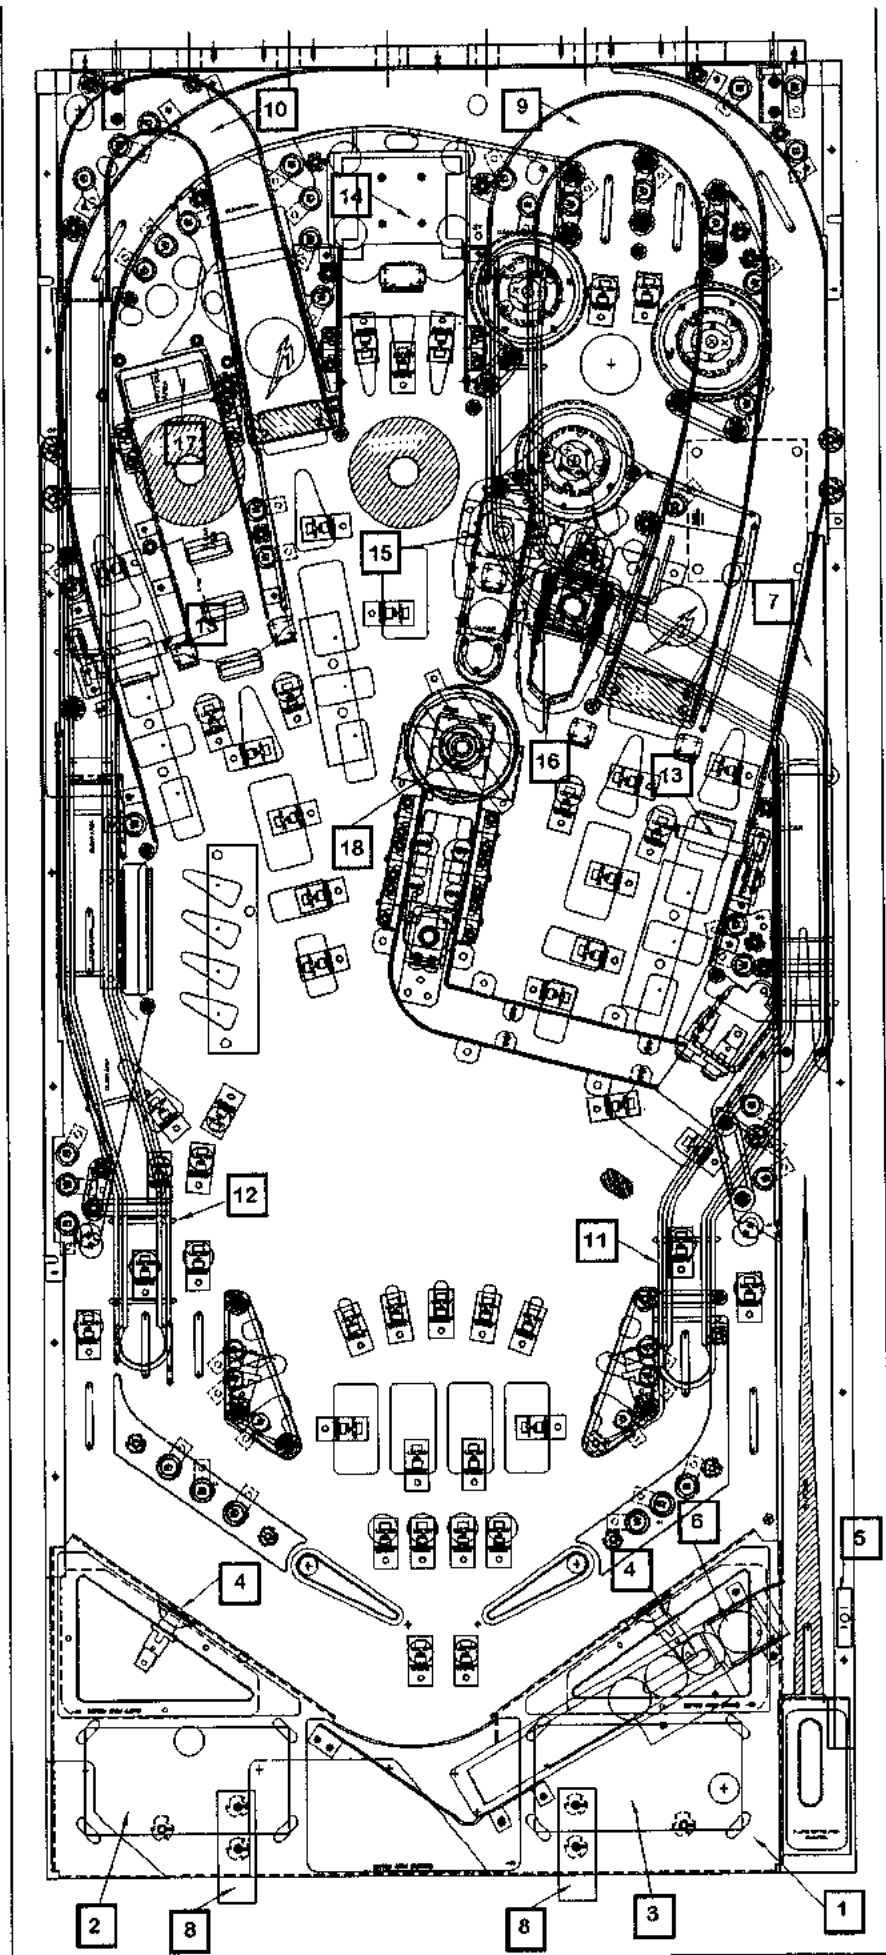


Playfield Bottom – Miscellaneous Parts

<u>Number</u>	<u>Description</u>	<u>QTY</u>	<u>SPI Part NR.</u>
1	FUSE CLIP HOLDER	2	205-5001-01
2	PLAYFIELD SUPPORT SLIDE BRACKETS	2	535-6862-05
3	LED BOARD	1	520-6779-03
4	LED BOARD	3	520-6779-01
5	LED DRIVER BOARD	1	520-5331-00
6	OPTO AMPLIFIER	3	520-5239-01
7	MAGNET PROCESSOR BOARD	1	520-6801-00
8	EDGE SLIDE BRACKET	2	535-5988-01
9	PIVOT PIN SLIDE BRACKET	2	500-5329-03

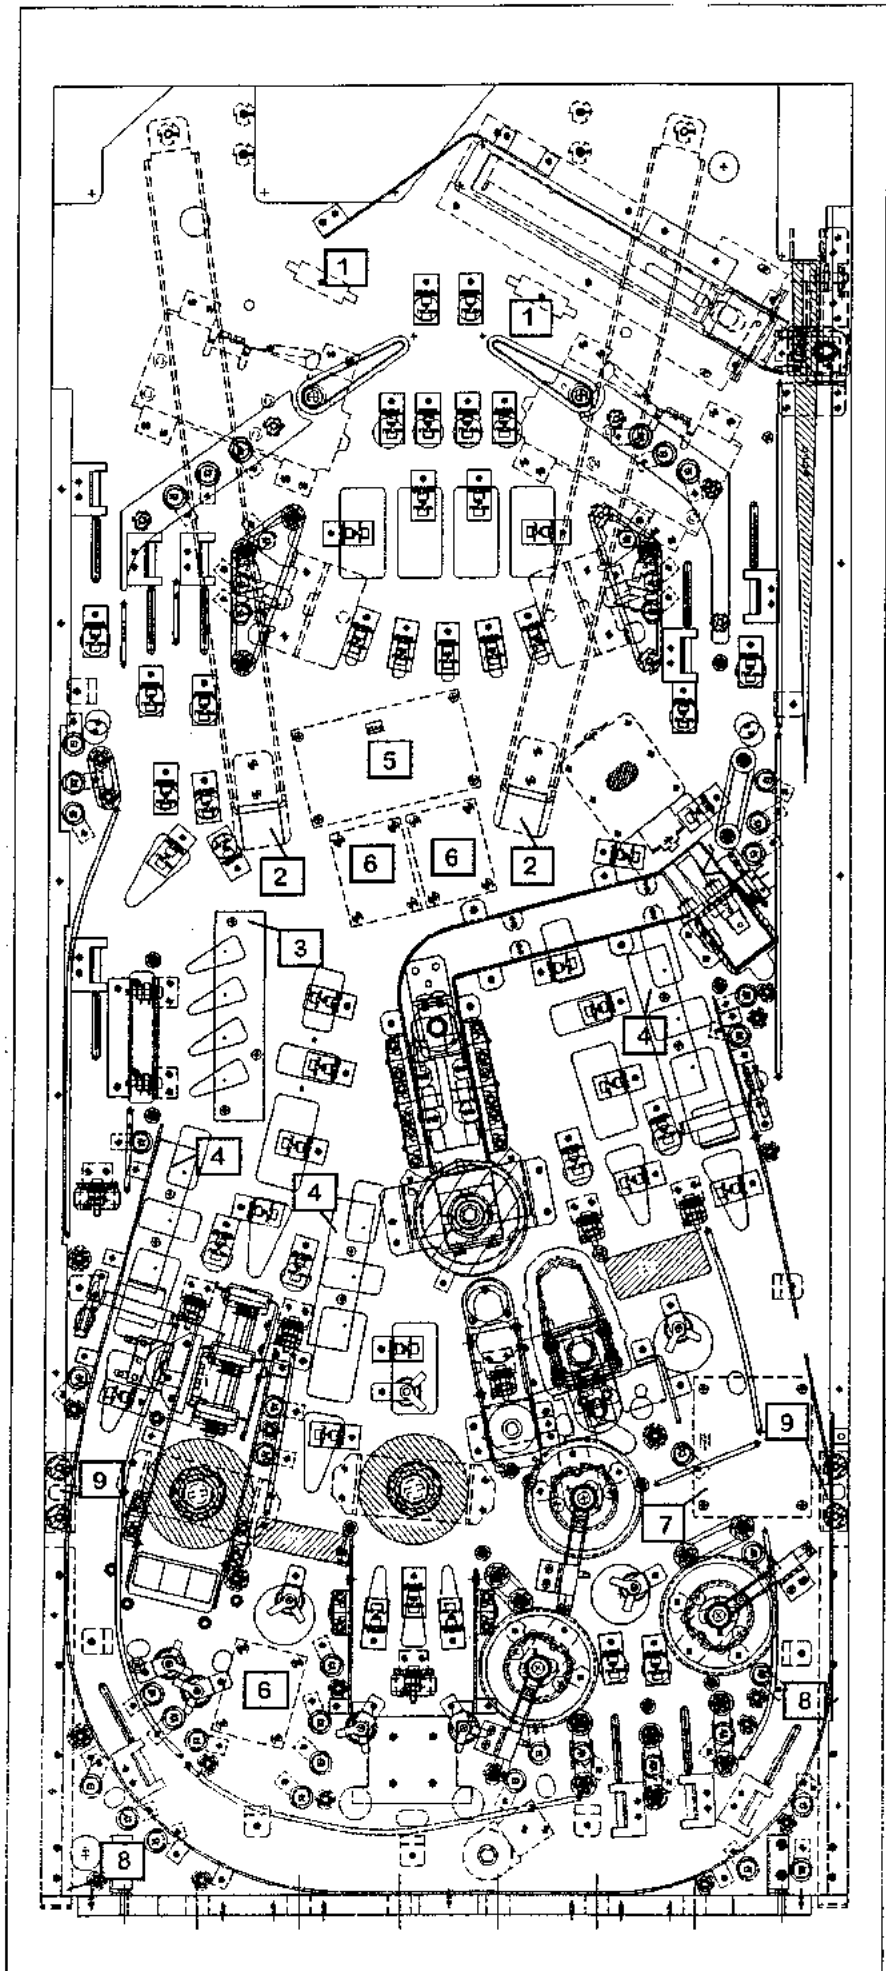


ITEM #	QTY	PART #	DESCRIPTION
1	1	511-7489-00	MINI COIL ACTUATOR ASSEMBLY - ELECTRIC CHAIR
2	1	515-7810-00	ELECTRIC CHAIR
3	3	232-5301-00	SCREW, 8-32 X 3/8" PPH SEMS
4	1	242-5005-00	#6 WASHER
5	1	265-5035-01	SPRING EXTENSION

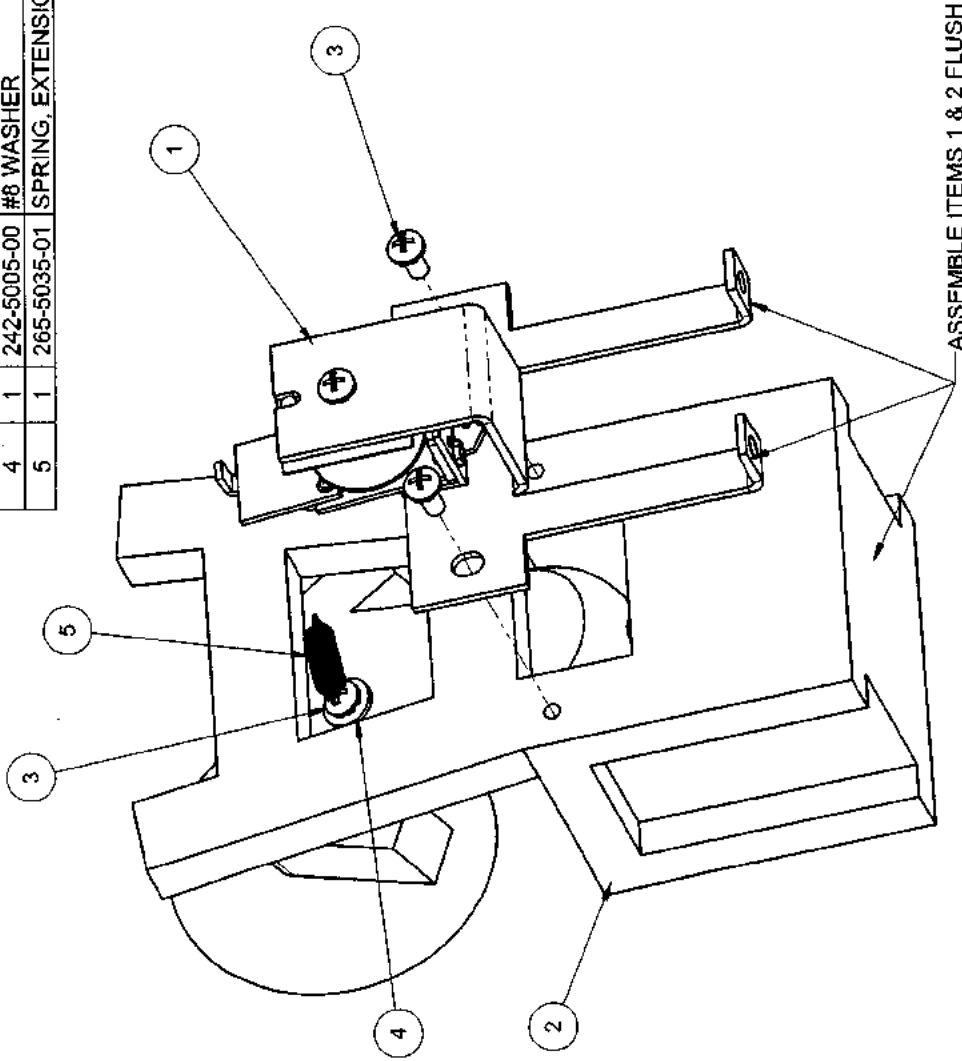


b33

ITEM #	QTY	PART #	DESCRIPTION
1	1	535-0719-00	MINI COIL BRACKET - ELECTRIC CHAIR
2	1	515-9688-00	COIL ASSEMBLY, LEFT, NO DIODE
3	1	232-5301-00	SCREW, 8-32 X 3/8" PPH SEMS

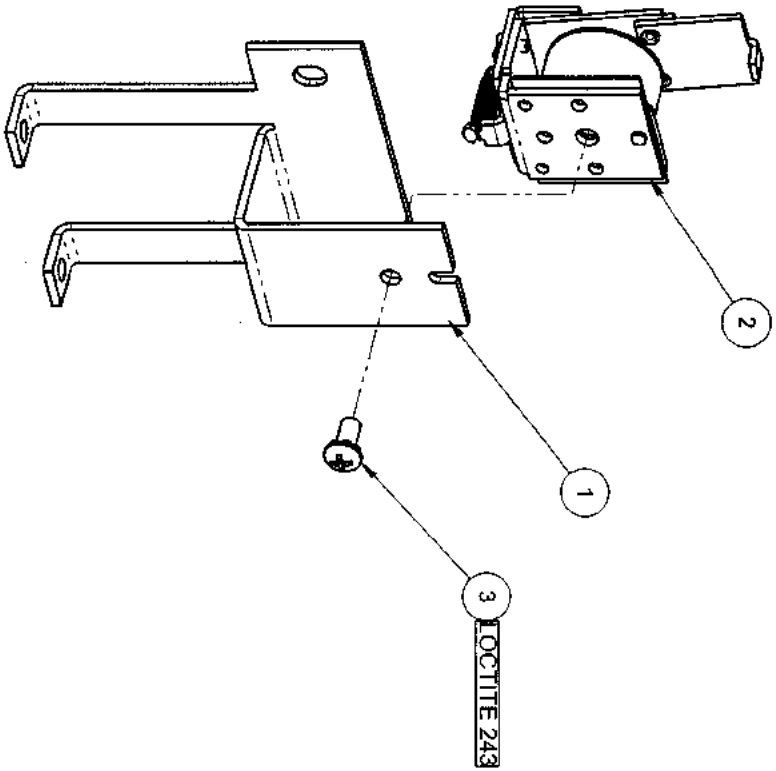

MINI COIL ACTUATOR ASSEMBLY - ELECTRIC CHAIR

511-7489-00

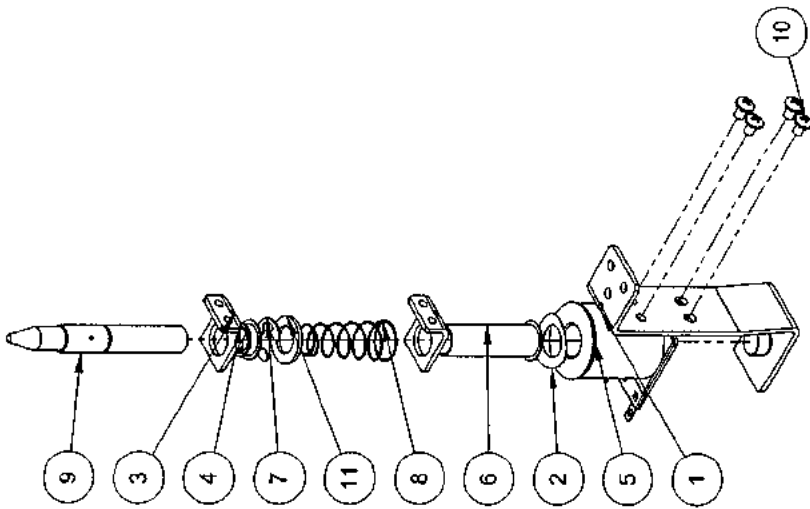

* ITEM NOT SHOWN

ITEM NO.	PART NUMBER	DESCRIPTION	Default Qty.
1	515-7132-00	BALL LOCK MTG. BRKT SUB-ASSY	1
2	269-5002-00	SPRING WASHER	1
3	535-5203-03	COIL RETAINING BRACKET	2
4	545-5418-01	NYLINER - PLASTIC, 7/16"	1
5	090-5004-ND	COIL 27-1500 - NO DIODE	1
6	545-5411-00	COIL SLEEVE	1
7	270-5005-00	RETAINING E-RING, 7/16" SHAFT OD	1
8	266-5020-00	COMPRESSION SPRING-CONICAL	1
9	515-9674-00	DOWN-POST PLUNGER SUB-ASSY	1
10	232-5300-00	SCREW, 8-32 X 1/4" PPH SEMS	4
11	242-5081-00	WASHER - NYLON .75 OD x .44 ID	1
*12	036-5542-00	GENERIC CABLE	1

DOWN POST ASSY


500-9811-00

b35

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	510-7448-98**	BOTTOM ARCH, STEEL W/ SPADE BOLTS - SILVER	1
2	510-5794-22	RIVET ASSY, BUTY #22, JAMES LE / PREMIUM	1
3	510-5794-23	RIVET ASSY, BUTY #23, JAMES LE / PREMIUM	1
4	240-5303-00	4-40 NYLON LOCK NUT	6
5	820-6917-08A	DECAL #8, ARCH CENTER, JAMES LE - E3	1
6	545-5212-04	MYLAR PROTECT STRIP 7-5/8"	2
7	040-5000-03	1/4" CABLE CLAMP	2
99*	036-5594-20-D4	CABLE, ARCH GI	1


* ITEM NOT SHOWN
 ** PREMIUM (E2) USES BLACK ARCH -00

**METAL ARCH ASSEMBLY
 METALLICA PREMIUM / LE
 500-6005-E2/E3/E3A**

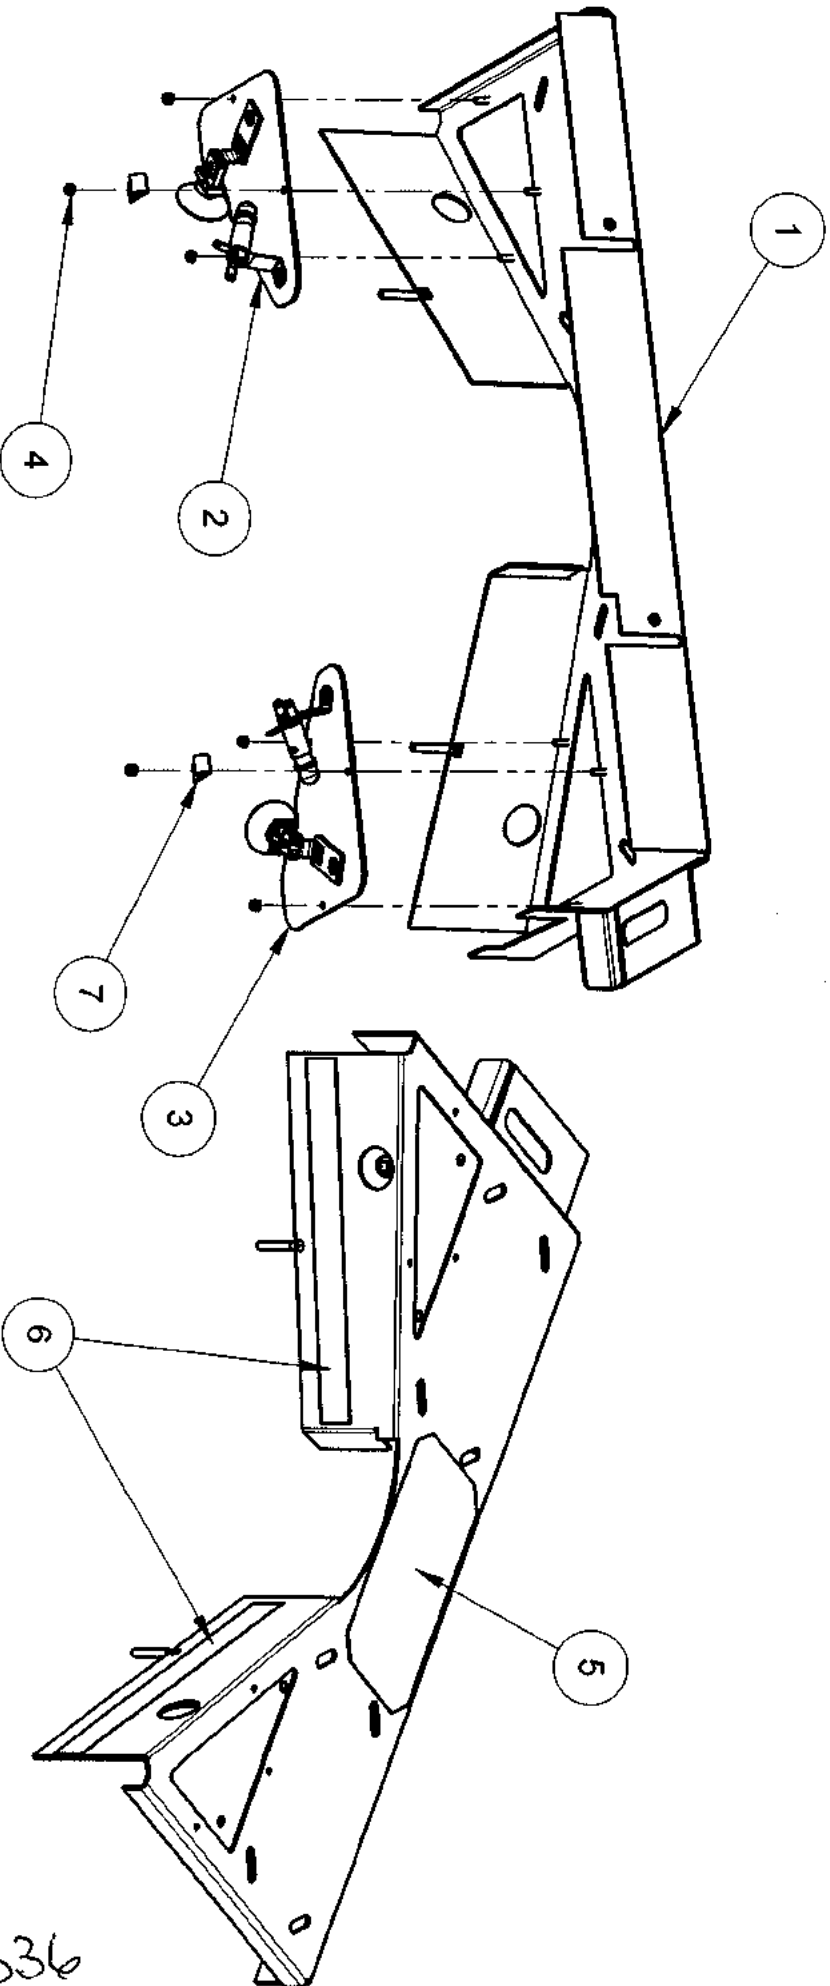


b36

ITEM #	QTY.	PART #	DESCRIPTION
1	1	575-5824/01	BACK PANEL - JAMES
2	6	519-5109/00-1E	SOCKET & BULB ASBY
3	6	519-5223-88A/00	2 LUG SOCKET/TERMINATED ASSEMBLY - WHITE
4	64	234-6006/00	SCREW .89 X .94" HWH
5	2	040-5006/00	1/4" CABLE CLAMP
6	1	030-618/21	BUTY #21 - JAMES L E
7	7	237-5099/00	SCREW .89 X 1/2" PTMA
8	2	242-5099/00	3/16 I.D. X 7/8 O.D. X .048 WASHER
9	1	240-5102/00	8-32 NYLON LOCK NUT
10	1	251-5000/05	NYLON SPACER - BLACK - 3/8 O.D. X .176 I.D. X 1.14"
11	1	237-5011/00	# 6-32 X 1.34" PPH SCREW
NOT SHW	1	008-5598-04-E3	BACK PANEL CABLE - JAMES L E

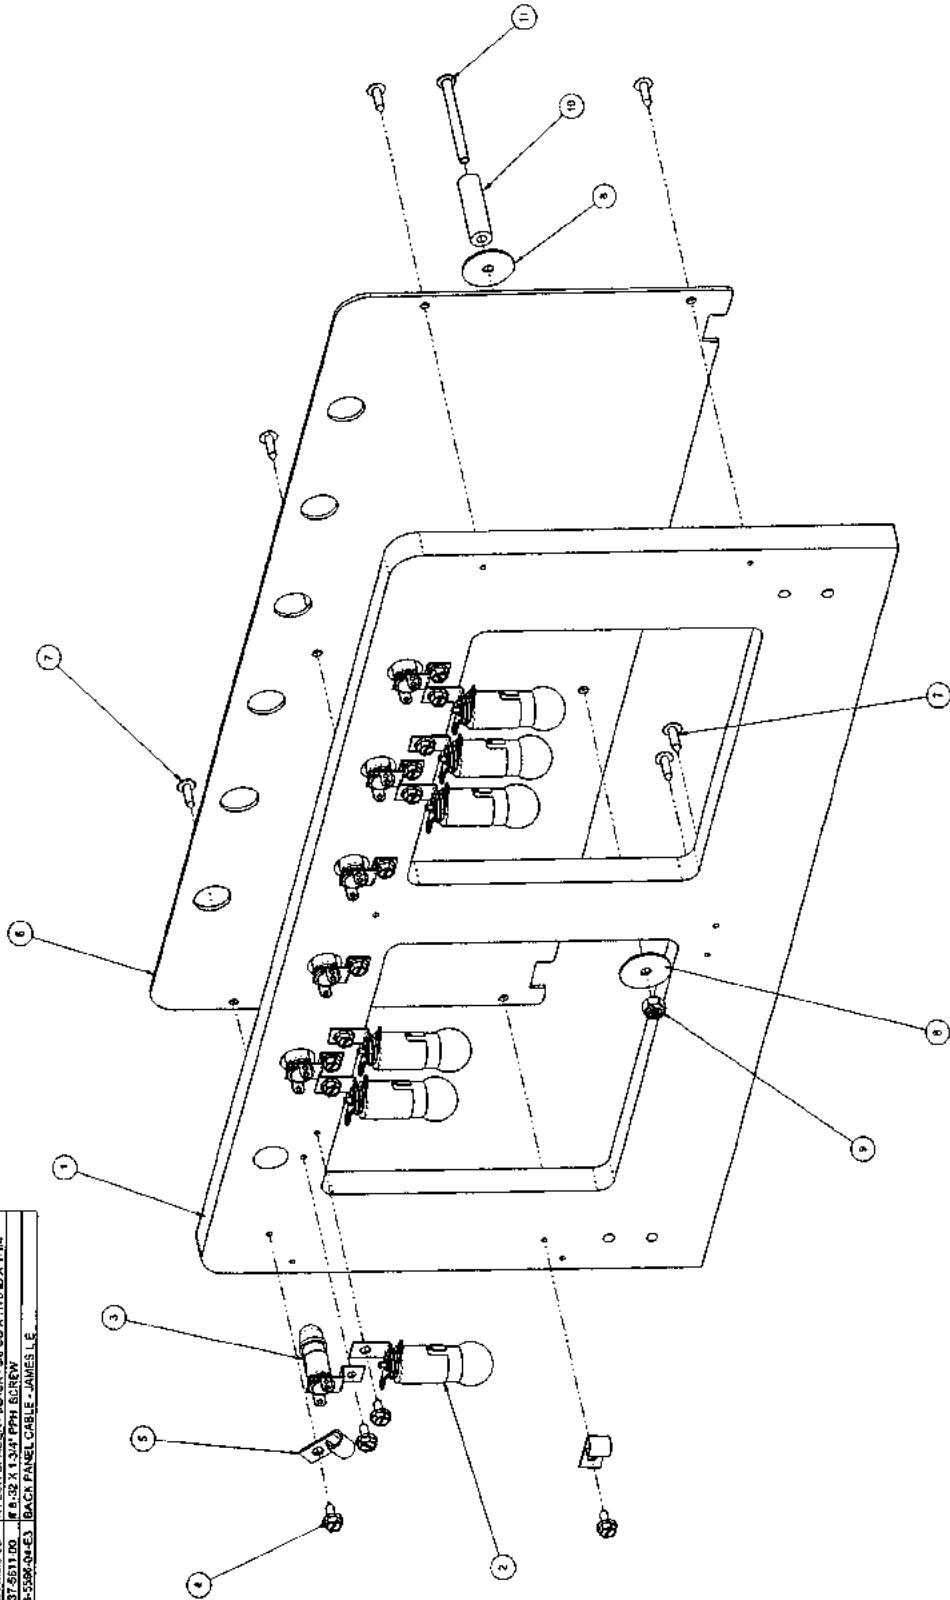

BACK PANEL ASSEMBLY - JAMES LE
500-9806-01

b37

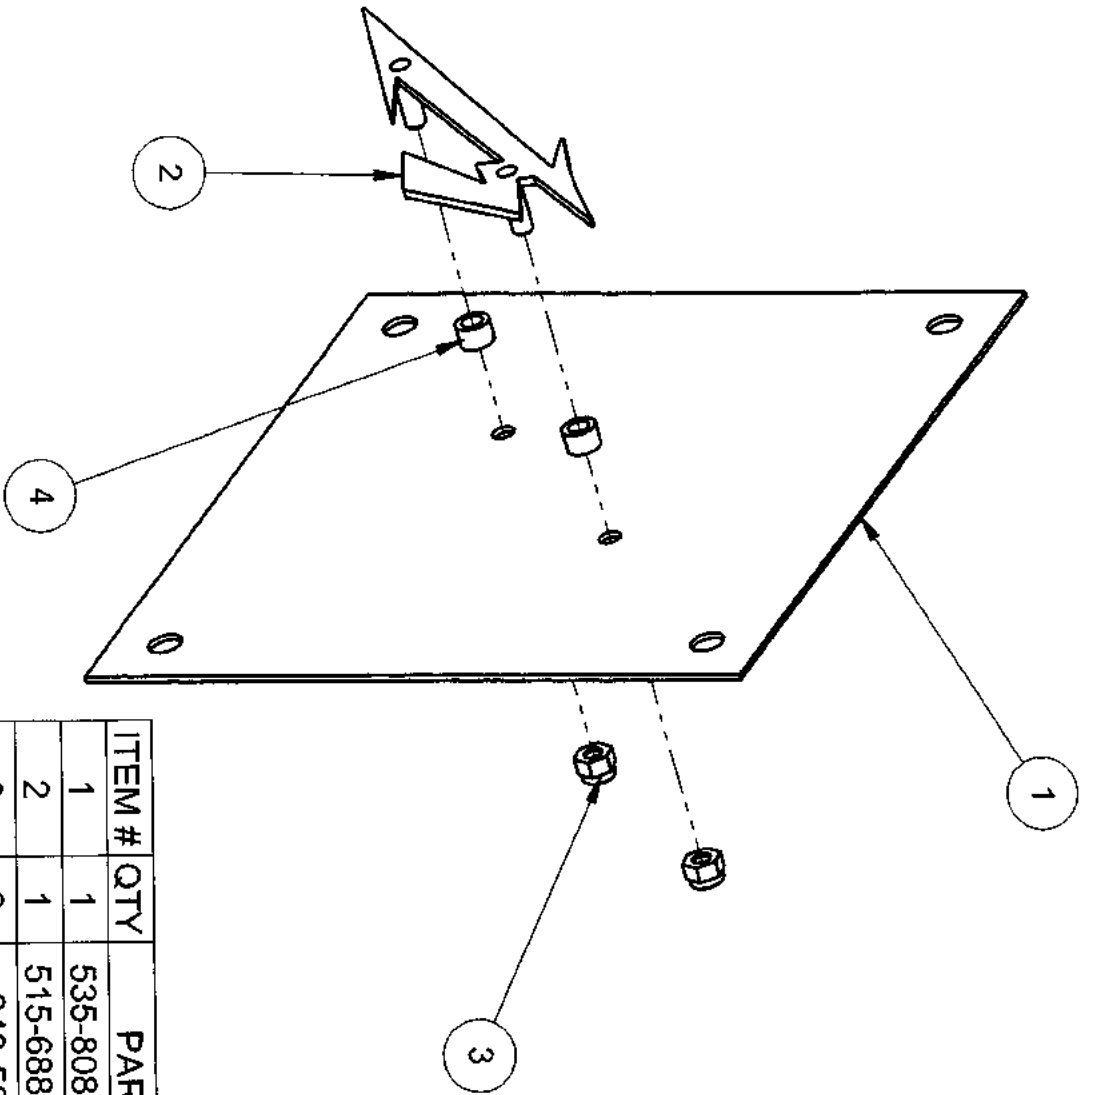

ITEM #	QTY	PART #	DESCRIPTION
1	1	535-8081-04-E3	SPEAKER GRILL - LOGO HOLES
2	1	515-6888-19-E3	LOGO - JAMES L E
3	2	240-5303-00	4-40 NYLON LOCK NUT
4	2	254-5077-00	NYLON SPACER

SPEAKER GRILL ASSEMBLY - JAMES L E/PREMIUM

511-7495-00

b38